



AMHERST / HALIFAX / WASHINGTON

END TABLE

MODEL # AXCAMH-002





DO NOT RETURN

FOR REPLACEMENT PARTS OR OTHER INQUIRIES PLEASE CONTACT US AT:

simpli-home.com/customer-support

PLEASE ENSURE TO HAVE THE MODEL # FROM THE PACKAGING OR INSTRUCTION BOOKLET **IMPORTANT :** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools. May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.


Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.


To avoid dulling of the finish, do not place furniture in direct sunlight.


Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

PRE-ASSEMBLY INFORMATION

MODEL # AXCAMH-002

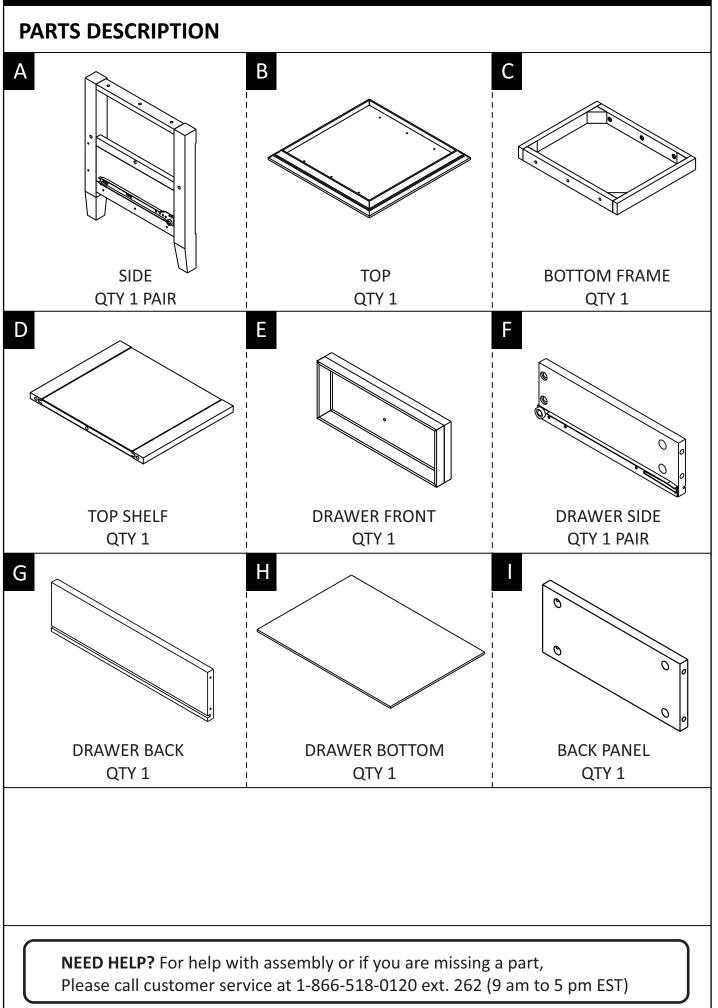

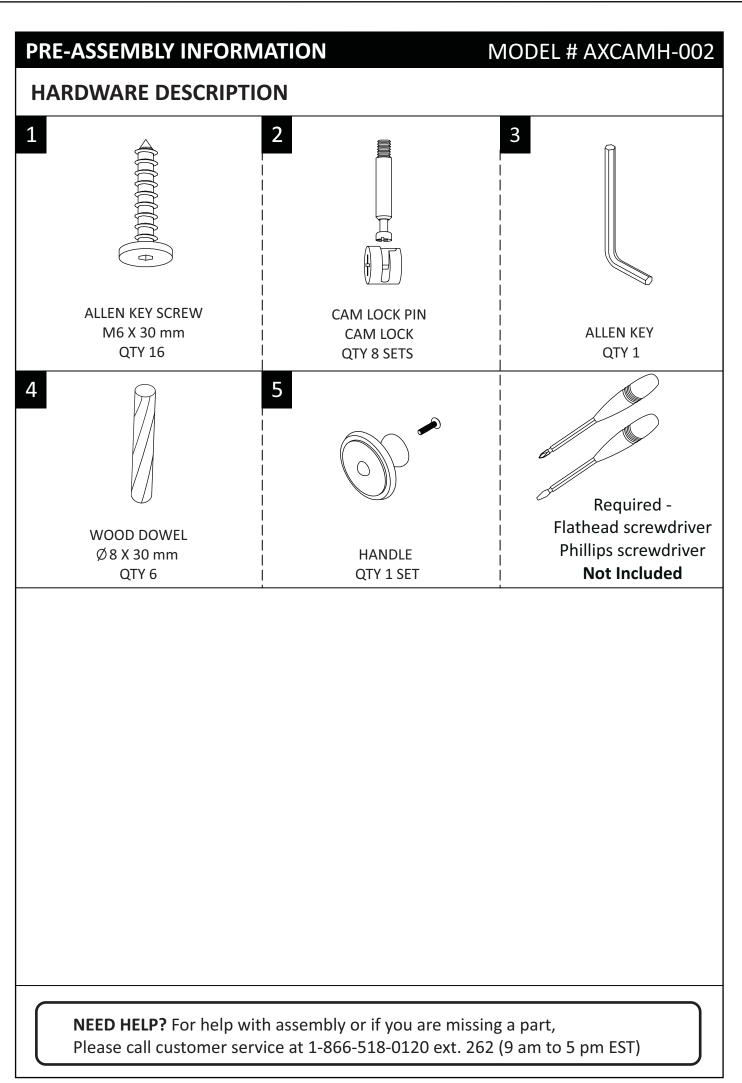


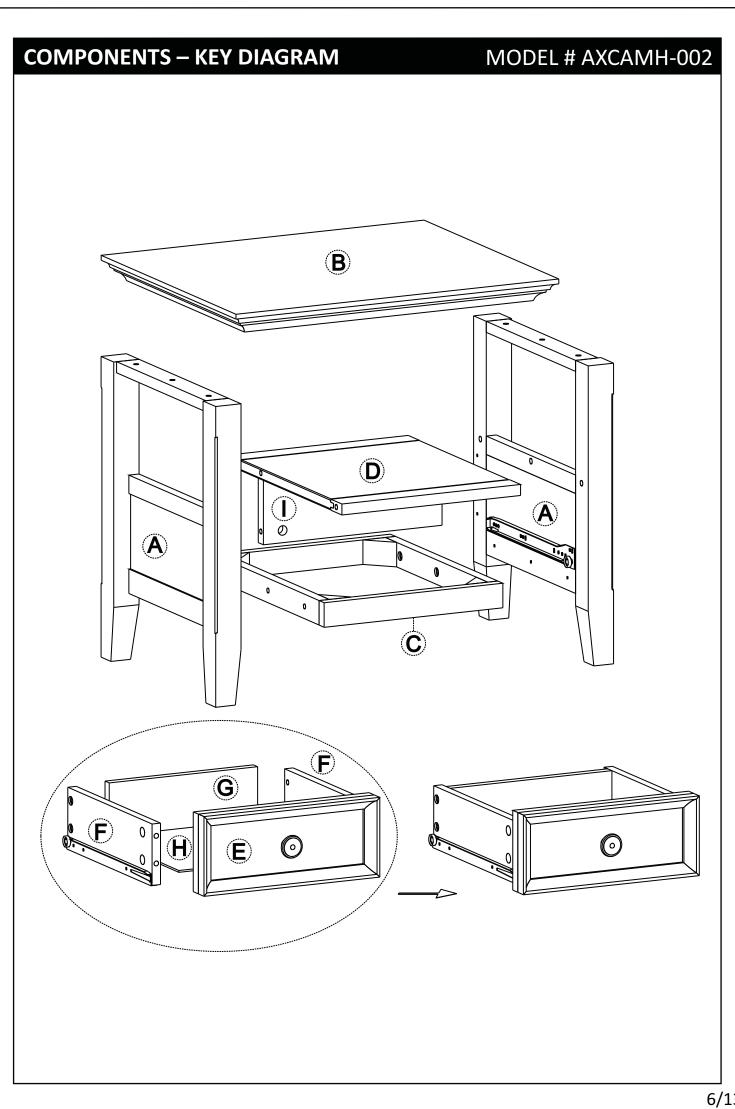

ASSEMBLY


MODEL # AXCAMH-002

STEP 1

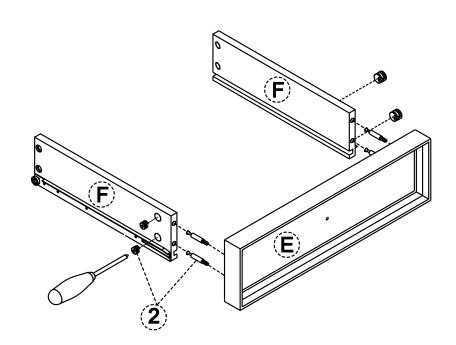

- 1. Attach 4 Cam Lock Pins (2) to back of Drawer Front (E).
- 2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (F).
- 3. Insert 2 Cam Lock (2) into pre-drilled holes on each Drawer Side (F).
- 4. Use flathead screwdriver to secure Cam Locks.


STEP 2

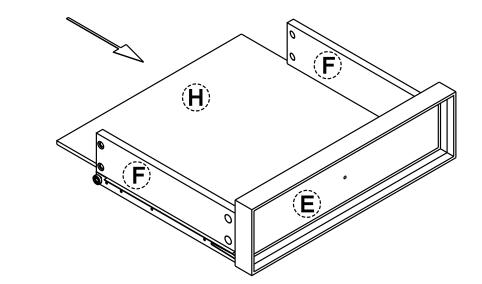

1. Slide Drawer Bottom (H) firmly into slots on Drawer Side (F) and Drawer Front (E).

ASSEMBLY


MODEL # AXCAMH-002

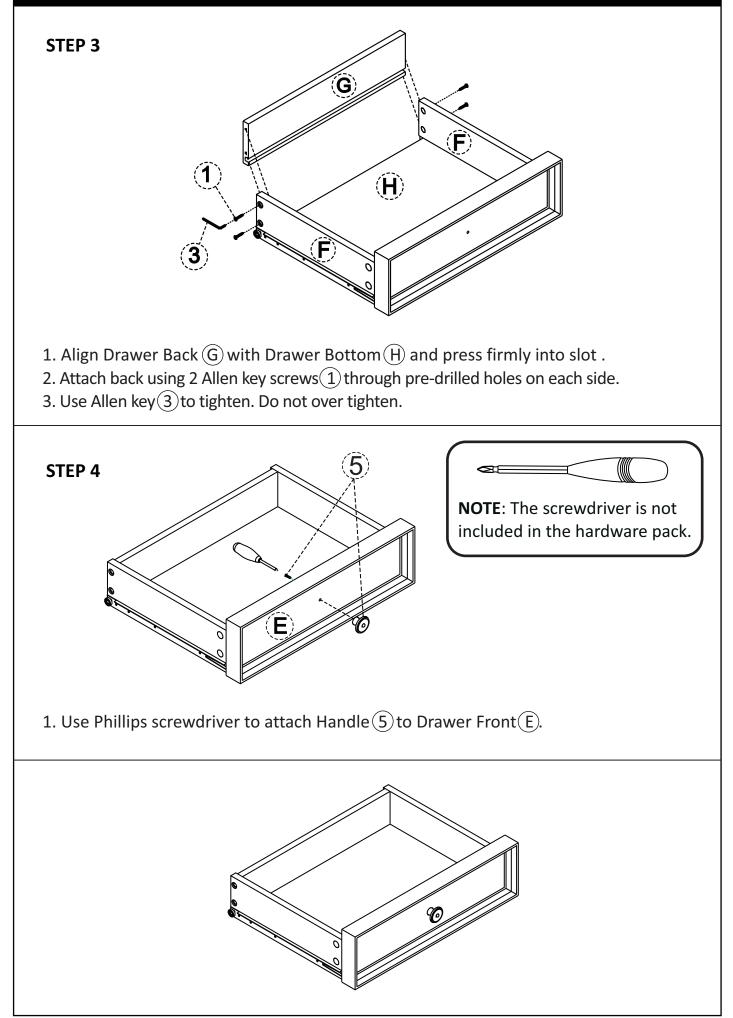

ASSEMBLY

MODEL # AXCAMH-002

STEP 5

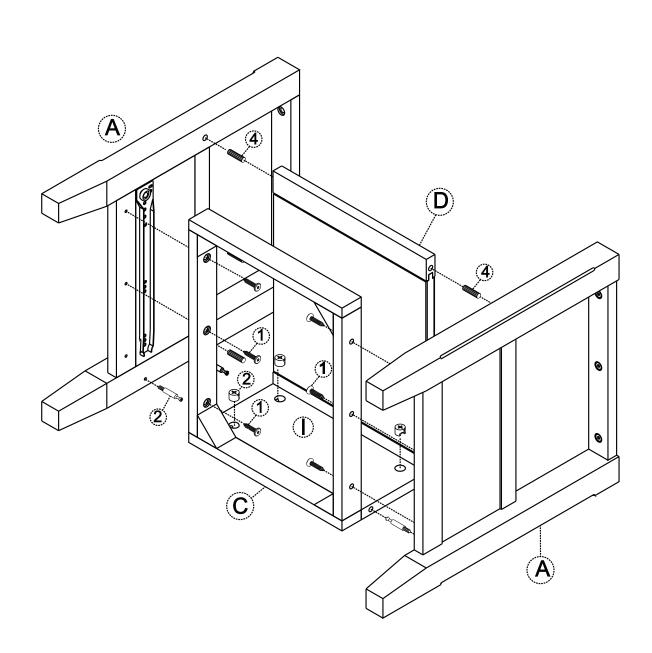

1. Attach 2 Cam Lock Pins (2) and 3 Dowels (4) to each Side (A) using guide holes .


2. Align Cam Lock Pins (2) with pre-drilled holes on Back Panel (1) and Dowels (4) with pre-drilled holes on Top Shelf (D).

3. Insert 4 Cam Locks (2) into pre-drilled holes on Back Panel (1) (2 / each Side).

4. Use flathead screwdriver secure Cam Locks.

5. Insert 6 Allen key screws (1) into pre-drilled holes through centre Bottom Frame (C) into Side (A) (3 screws / each Side).

6. Use Allen key 3 to tighten. Do not over-tighten.

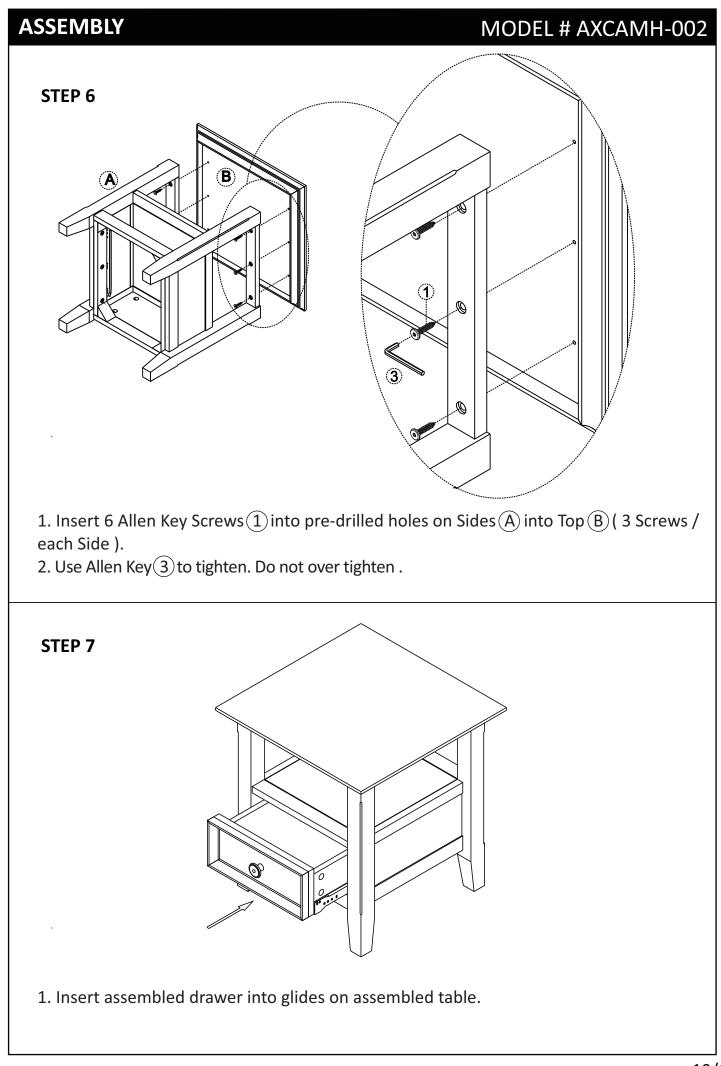



Wynden Hall Home Decor brooklyn + max

WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 5 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavyduty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

PLEASE NOTE: This item is hand-crafted and hand-finished with utmost care. As such, variations and imperfections should be expected and should be welcomed as the natural beauty of the wood.



Wynden Hall HOME DECOR brooklyn + max

Question, problems, missing parts?

Before returning please email Customer Support at simpli-home.com/customer-support

or call Customer Service at 1-866-518-0120 ext. 262 Monday to Friday between 9 am – 5 pm EST

For more information visit us on our website www.simpli-home.com

Like us on facebook www.facebook.com/simplihomefurnishings





brooklyn + max



Upload an image of our furniture in your home with a short review to our facebook page and have a chance to

> Win your choice of any one of Simpli Home furniture pieces Free!!!

www.facebook.com/simplihomefurnishings

(draws monthly – shipping included) (vanities not included)

