





A. HEADBOARD 1PC B. RIGHT LEG 1PC

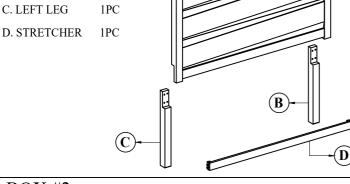


BOX #2

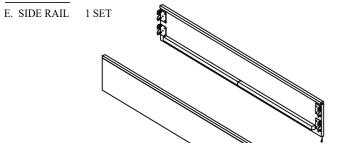

BOX #3

F. FOOTBOARD G. SLAT ROLL 1 PC 1 SET

H. SLAT SUPPORT 5 PCS

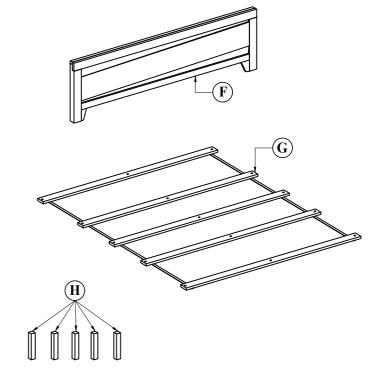

ASSEMBLY COMPLETE



HARDWARE PACKED IN BOX #2


1	ALLEN BOLT (M8X60)	(B)	8 PCS
2	ALLEN BOLT (M6X40)		2 PCS
3	ALLEN BOLT (M8X30)	(a)	16 PCS
4	ALLEN BOLT (M6X35)	(9)	5 PCS
5	SPRING WASHER (M8)	0	24 PCS
6	FLAT WASHER (M8)	0	24 PCS
7	SPRING WASHER (M6)	©	2 PCS
8	FLAT WASHER (M6)	0	2 PCS
9	WOOD SCREW (M4X30)	Annum	10 PCS
10	ALLEN KEY		1 PC

TOOL REQUIRED PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)







STEP 1:

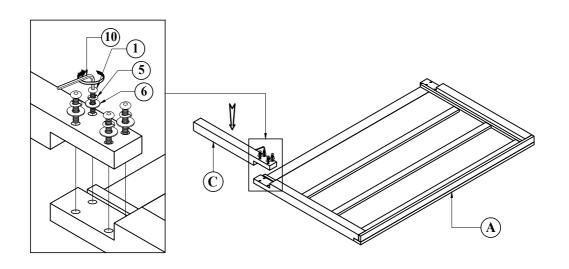


STEP 2:

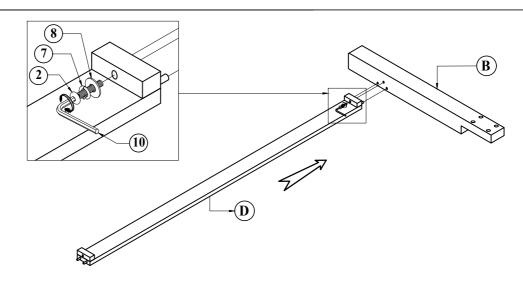


STEP 3:

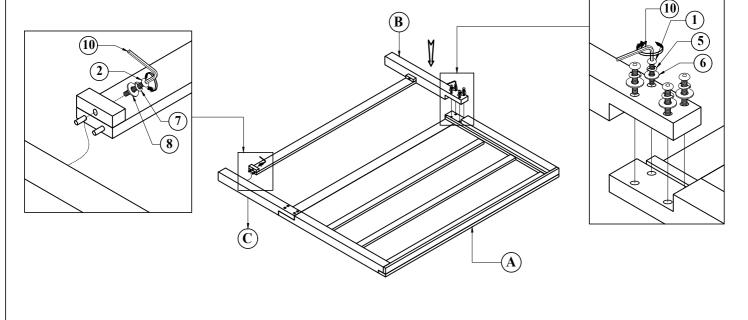



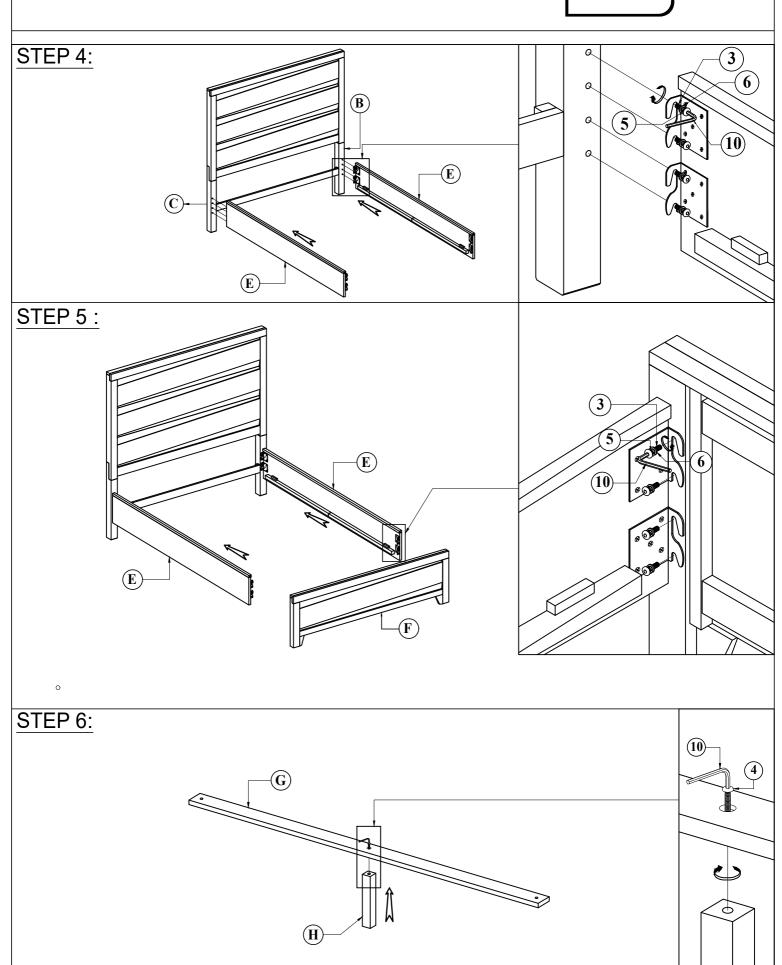



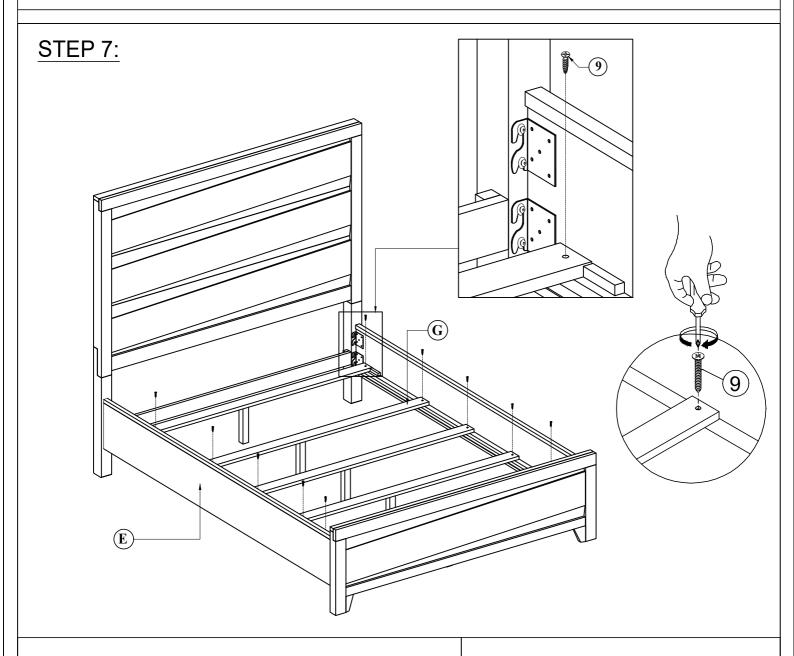


INSTRUCTIONS FOR ADJUSTING LEVELER:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

 Adjust each leveler until each support leg is applying equal, upward pressure on the bed support slat.




MAINTENANCE INSTRUCTION:

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.


 Dragging can damage the leg support.
- Readjust levelers after moving your bed.



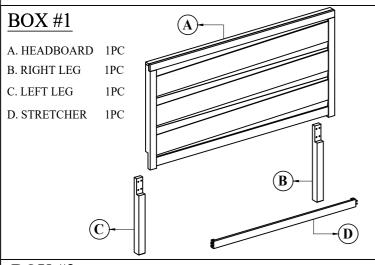


BOX #3

F. FOOTBOARD 1 PC G. SLAT ROLL 1 SET H. SLAT SUPPORT 10 PCS

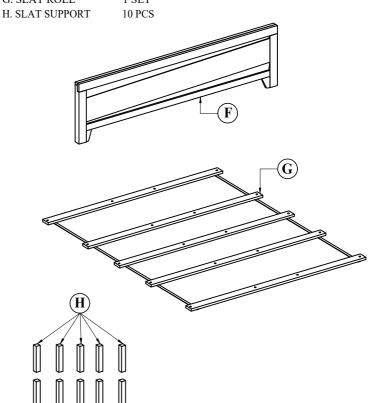

BOX #2 E. SIDE RAIL 1 SET

ASSEMBLY COMPLETE

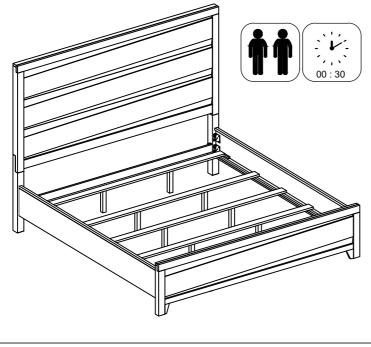

HARDWARE PACKED IN BOX #2


1	ALLEN BOLT (M8X60)		8 PCS
2	ALLEN BOLT (M6X40)		2 PCS
3	ALLEN BOLT (M8X30)	(9)	16 PCS
4	ALLEN BOLT (M6X35)		10 PCS
5	SPRING WASHER (M8)	0	24 PCS
6	FLAT WASHER (M8)		24 PCS
7	SPRING WASHER (M6)	9	2 PCS
8	FLAT WASHER (M6)	0	2 PCS
9	WOOD SCREW (M4X30)	Administra	10 PCS
10	ALLEN KEY		1 PC

TOOL REQUIRED PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)







STEP 1:

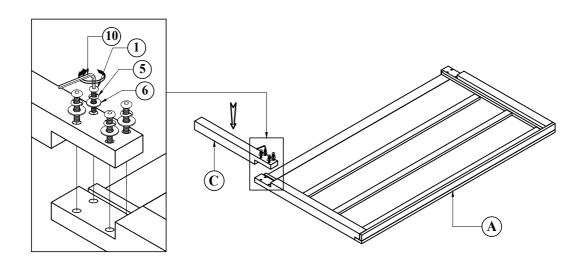


STEP 2:

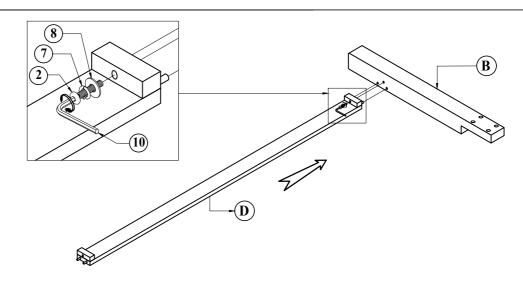


STEP 3:

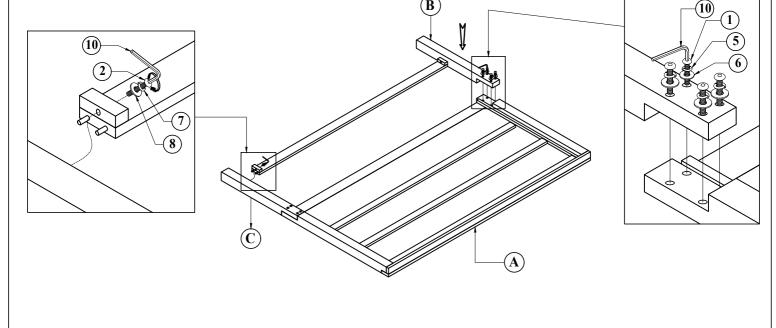



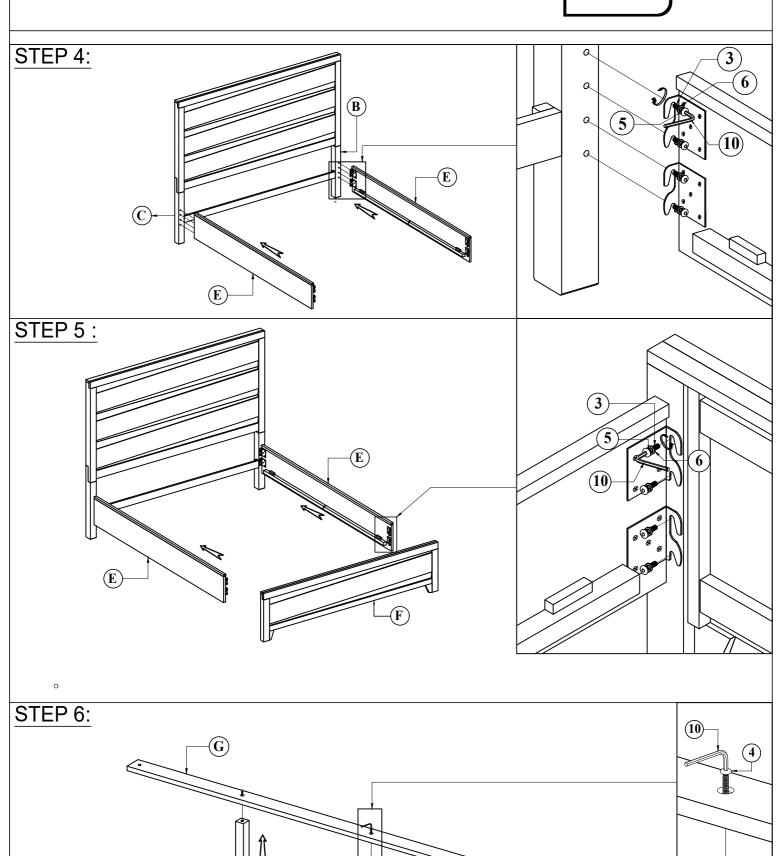



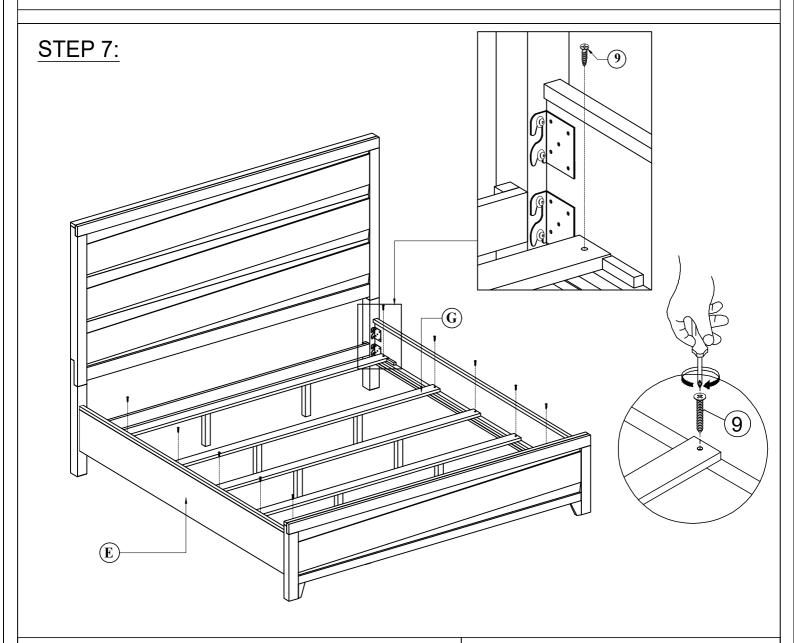


INSTRUCTIONS FOR ADJUSTING LEVELER:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

 Adjust each leveler until each support leg is applying equal, upward pressure on the bed support slat.



MAINTENANCE INSTRUCTION:

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.

 Dragging can damage the leg support.
- Readjust levelers after moving your bed.