



Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>




 

 


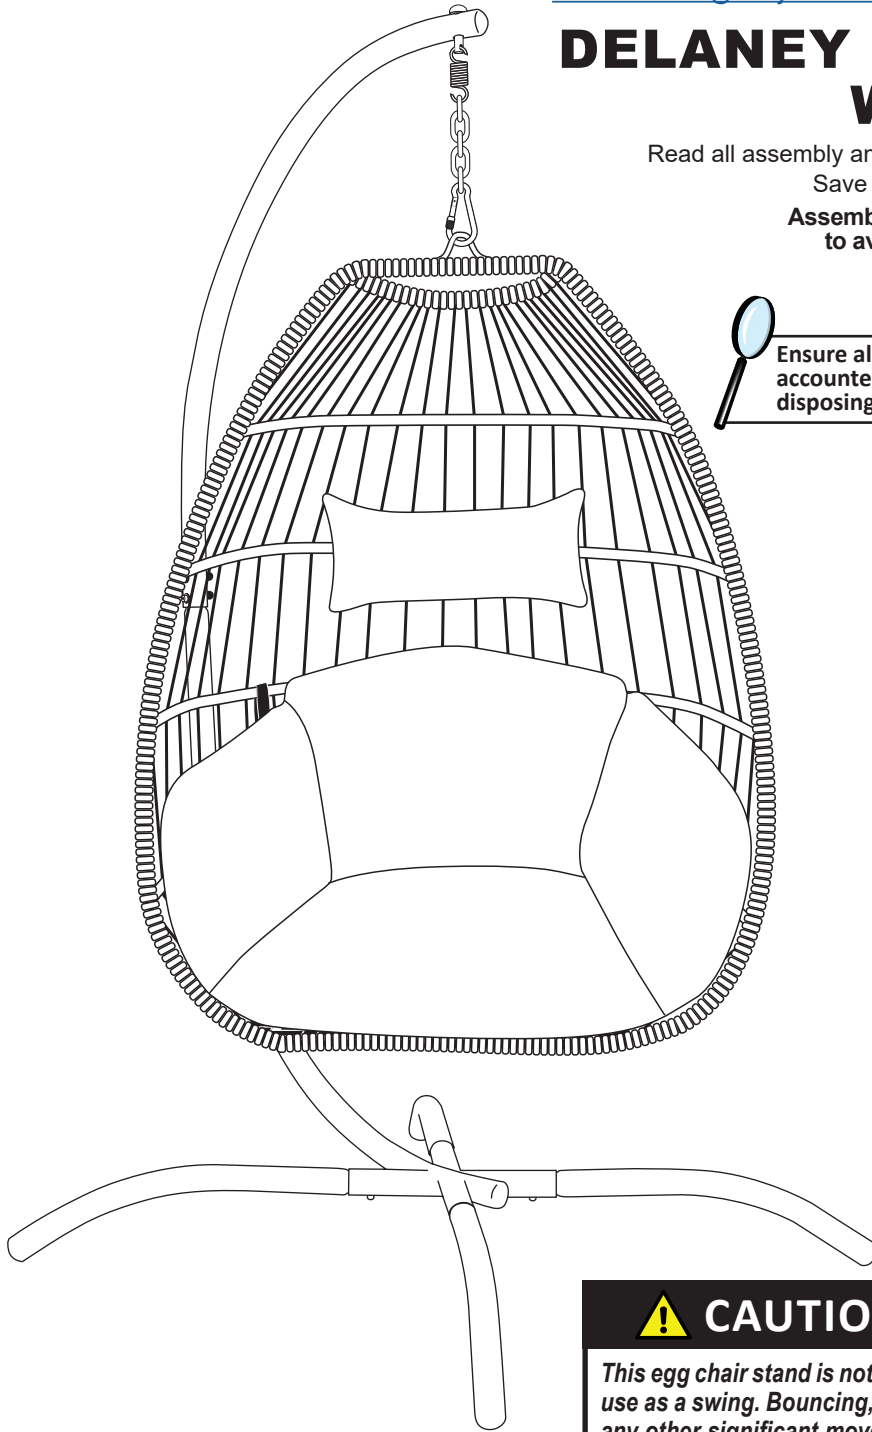


DELANEY HANGING EGG CHAIR WITH STAND

Read all assembly and care instructions carefully before using this product.
Save these instructions for future reference.

 Assemble components on a soft, clean surface to avoid scratching/damaging the finish.

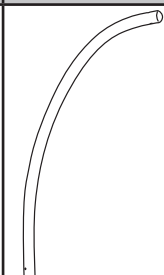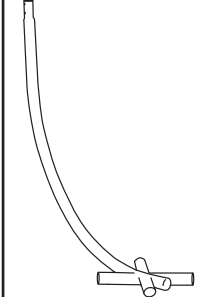

 Ensure all parts are accounted for before disposing of packaging.



No.	PARTS	QTY.
A	 Top Pole	1
B	 Bottom Pole	1
C	 Leg	4
D	 Bolt	4
E	 Washer	4
F	 M8x55MM	2
1	 Egg Chair	1
2	 Cushions	1
R	 Pin	1
S	 Extension Spring	1
T	 Safety Strap	1

⚠ CAUTION ⚠

This egg chair stand is not designed for use as a swing. Bouncing, swinging, or any other significant movements while in the chair may cause serious injury.

This stand must be on a level, stable surface. Make sure the safety strap is attached correctly, and all hardware is securely tightened before each use.

Weight Limit: 265 lbs.


No.	TOOLS (INCLUDED)	QTY.
X	 Hex Key	1
Z	 Spanner	1

⚠ WARNING!

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children away during assembly.


ASSEMBLY

Assembly Tip: Ensure all parts align correctly before fully tightening hardware.

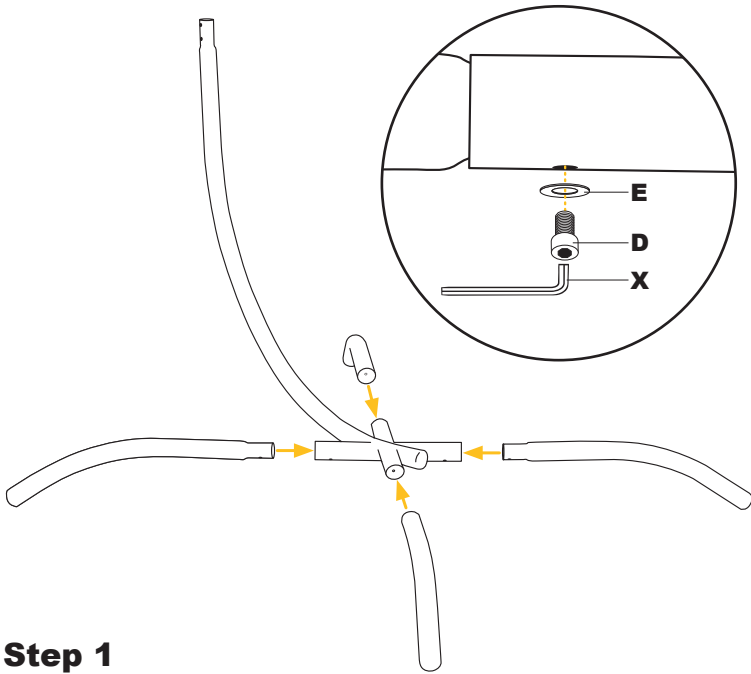


Step 1

Slide Leg (C) into Bottom Pole (B). Align the holes on the underside of each piece. Hand-tighten Bolt (D) and Washer (E). Repeat until all legs are attached. Tighten all bolts using Hex Key (X).

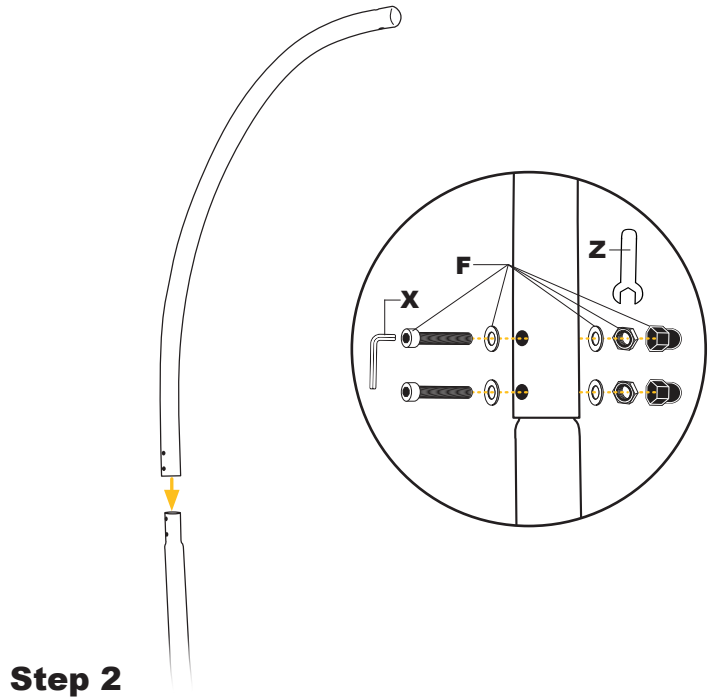


Step 2

Slide Top Pole (A) onto Bottom Pole (B) and align the holes. Secure the poles by hand-tightening M8x55MM hardware (F) through the top holes. Repeat with the bottom holes. Fully tighten the hardware using Hex Key (X) and Spanner (Z). Place the hex nut cap over the lock nut.

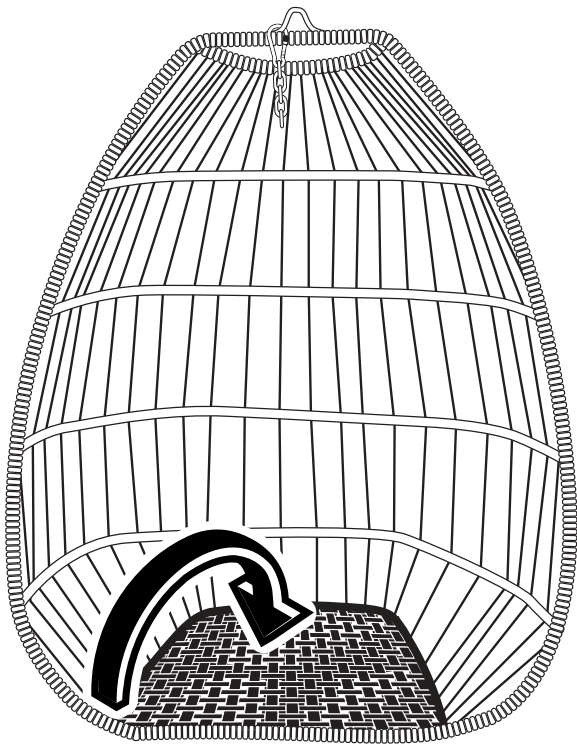

Step 3


Unfold Egg Chair (1) so the seat is flat and the frame bars extend towards the back of the seat.

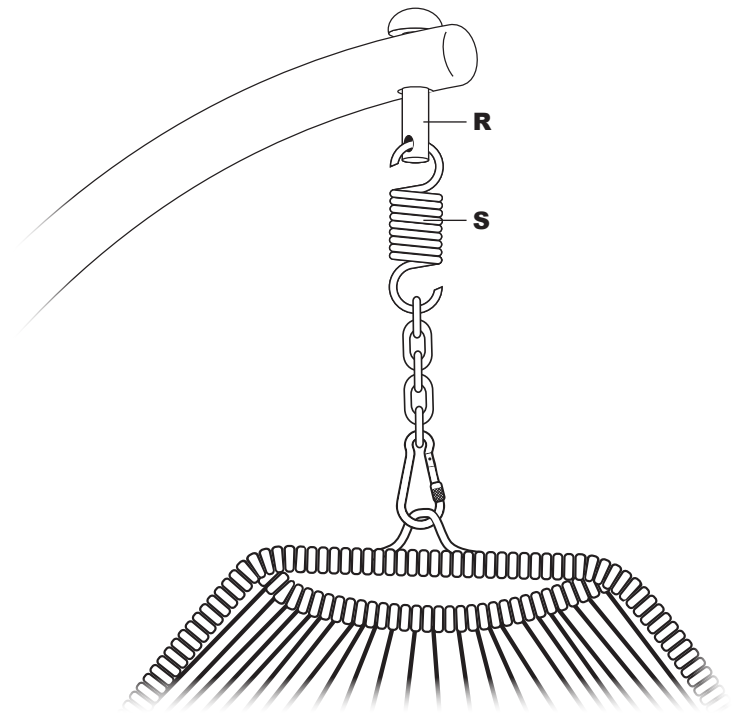

Step 4


Place Pin (R) into Top Pole (A). Insert Extension Spring (S) through the bottom of Pin (R). Hang the chain that is attached to the egg chair onto the extension spring.

NOTE: Only loop the strap around the frame of the chair, as shown.

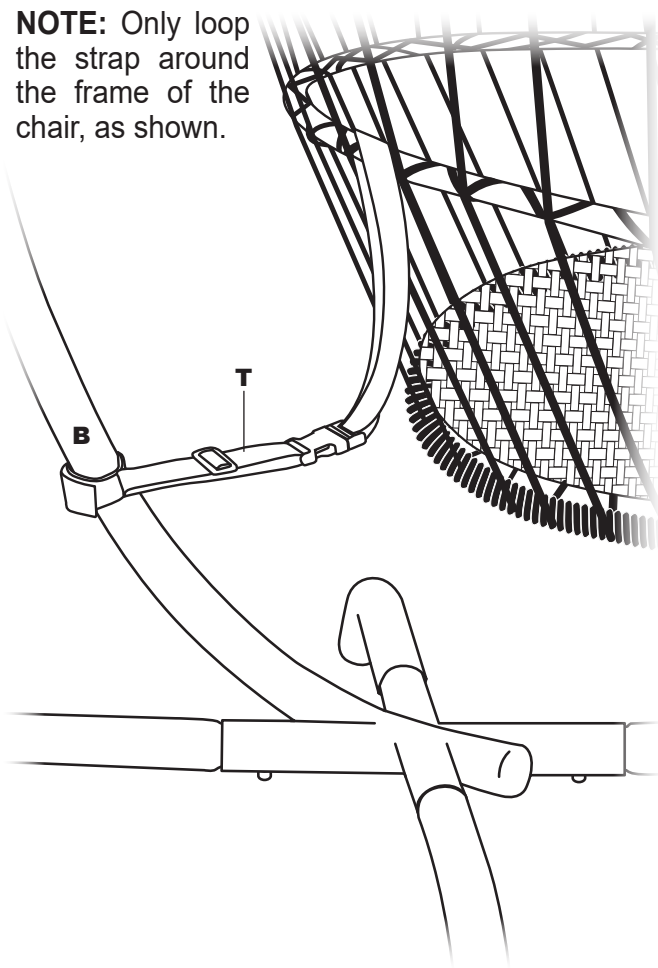

Step 5

Wrap the hook and loop fastener that is sewn onto Safety Strap (T) around Pole (B). Loop the strap around the metal frame of the egg chair and connect the buckles, tighten the strap.

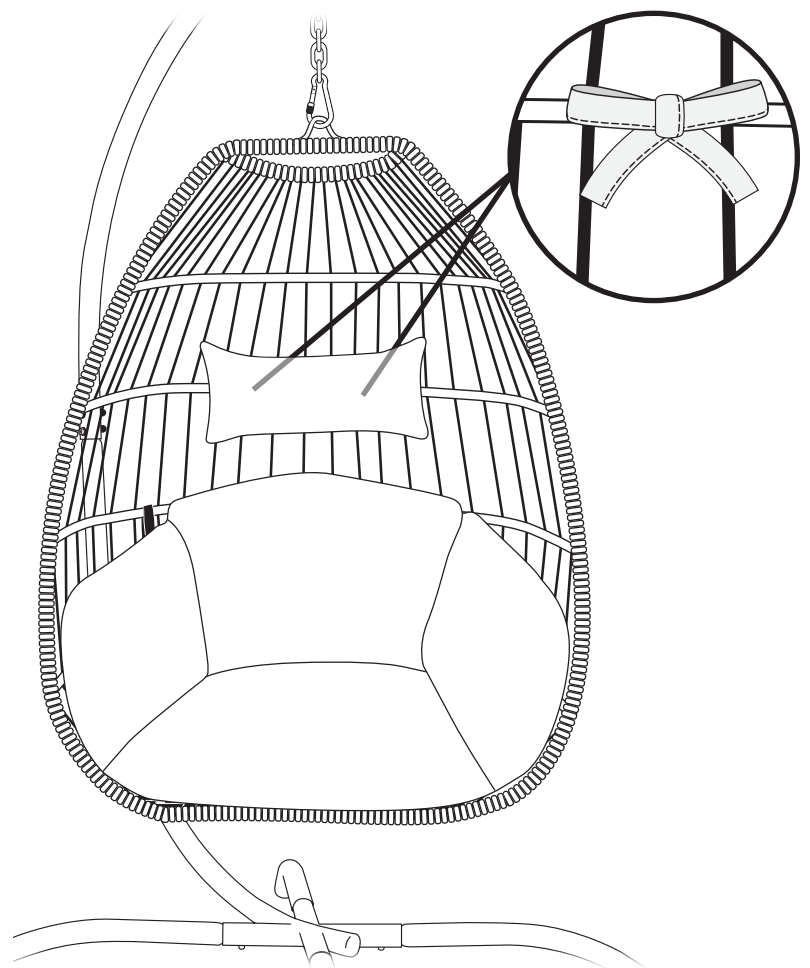

Step 6

Place the seat cushion into the chair and tie the headrest cushion to the chair frame. Do not tie the cushion to the ropes.

USE & CARE

Under normal use, Sunnydaze hammock stands will last for years.

It is important to follow basic use & care tips to prolong the life of your egg chair and stand.


- **SAFE USE:** Do not use this chair for swinging, bouncing, jumping, twisting, or other excessive movements; doing so may cause serious injury, including, but not limited to, the stand tipping over. Do not use the stand without the safety strap; this strap helps keep the chair safely in place while getting in and out of the chair.
- **CHILDREN:** Supervise children at all times. Do not allow children to play on or sleep in hanging chairs.
- **INSPECTION:** Ensure the stand is assembled correctly, the hardware is securely tightened, and the safety strap is buckled before each use.
- **CLEANING:** Use a soft cloth, warm water and mild detergent to wipe down the stand. Dry the stand after cleaning to prevent rust. Wipe cushions down with a damp cloth. For tougher stains, use mild detergent and a soft cloth to scrub gently. Rinse thoroughly and air-dry cushions to prevent mold and mildew growth.
- **SCRATCHES:** The powder coating on the stand is tough and durable, but even under normal use, some scratching is inevitable. To avoid excessive rust, wipe these areas as needed to remove moisture.
- **STORAGE:** Store the chair and stand indoors during winter and inclement weather. Cool, dry locations are best to help prevent damage. Exposure to moisture may cause the stand to rust and could cause mold and mildew growth on the cushions and chair. Prolonged exposure to sunlight will cause the cushions, chair, and stand to fade.

TROUBLESHOOTING

- If the stand feels unstable, make sure it is on a level surface and the feet are correctly and evenly distributed.
- If the stand is making noise when in use, check to make sure all hardware is fully tightened.

! SAFETY STATEMENTS & WARNINGS !

- Do not exceed the weight limit: 265 pounds
- This product is intended to be used by one person at a time.
- Sunnydaze Egg Chair with Stand is not a swing. Do not swing, bounce, jump, twist, or spin in the chair.
- Use care when getting in and out of the chair. When in use, the chair should remain inside the base area at all times. A diagram of the base area is shown on the right.
- The chair must be used with the provided safety strap attached to the chair and to the stand as shown in Step 5.
- Chair Stand must be used with all provided parts. Install all parts in accordance with the assembly instructions and inspect the stand before use.
- Ensure all hardware is securely installed and tightened before each use.
- When securing the chair to the stand with the safety strap, only loop the strap around the frame of the chair, never the ropes.
- Always inspect the stand and hardware for damage before each use.
- Do not allow children to use this product without adult supervision.

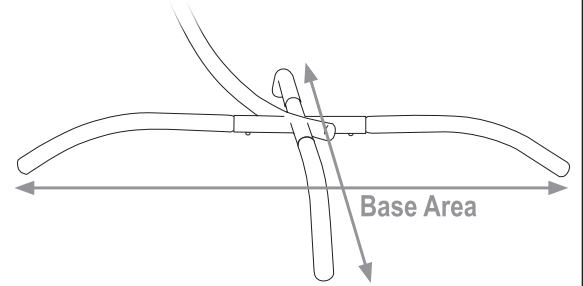

Any modification to the product or failure to follow recommended care will void the product warranty.

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.