homestyles[°]

5530-431


Dresser


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

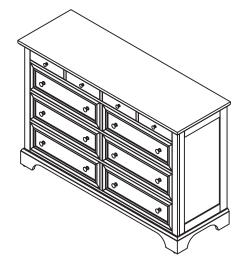

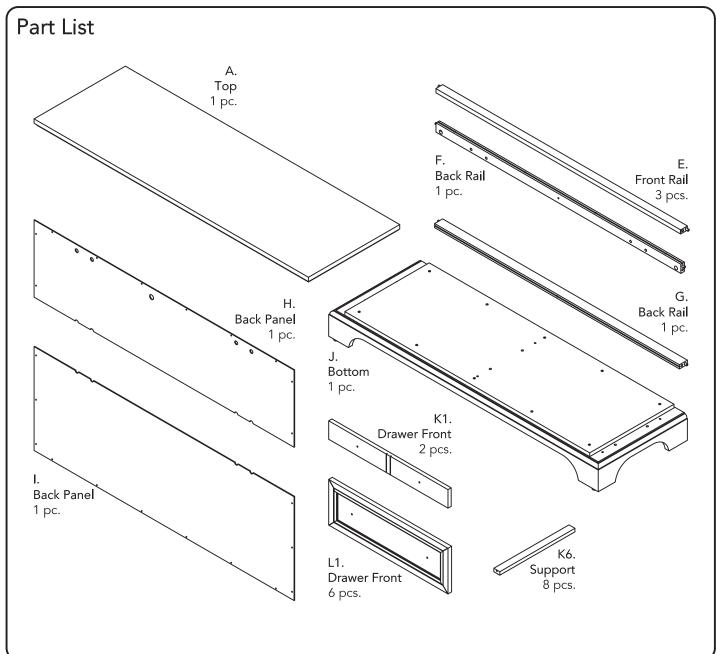

For assembly see instructions in carton 5530-432.



5530-432


Dresser


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

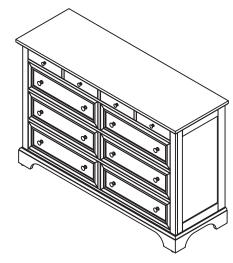

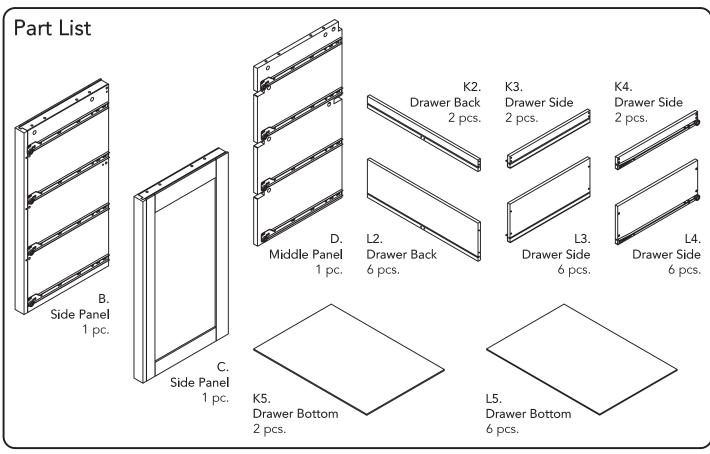

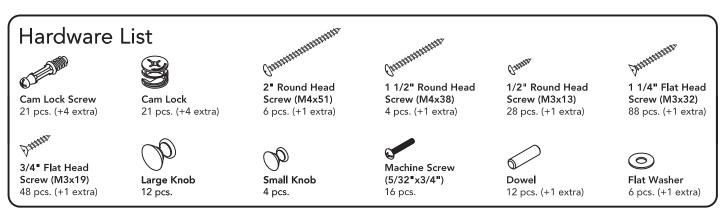

Carton 5530-431 is also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460


Assembly Instructions 2/10

IMPORTANT


- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

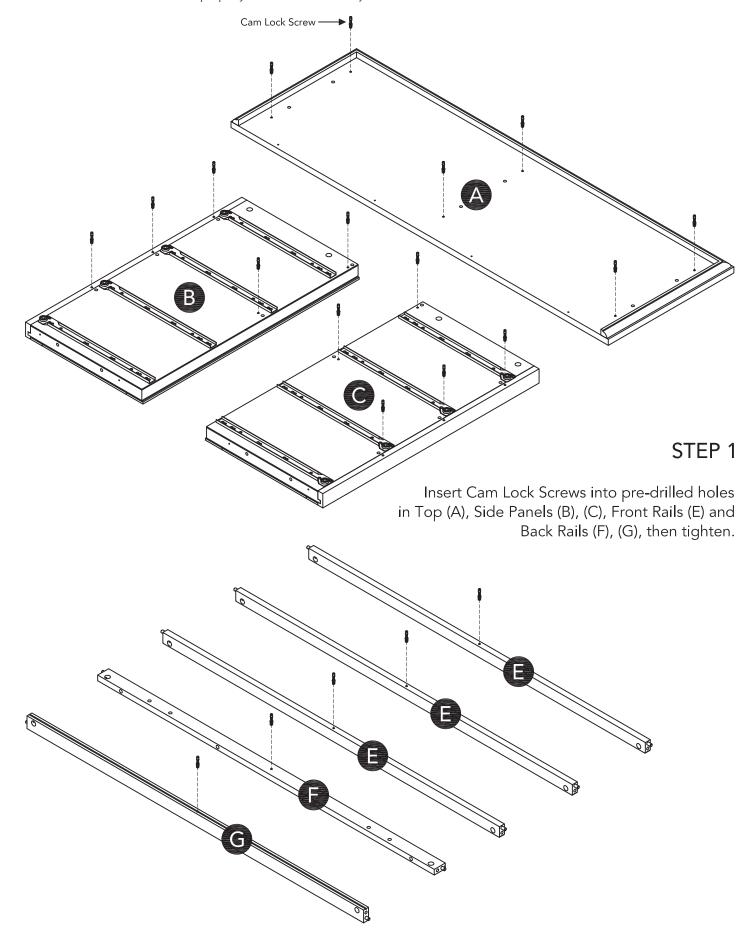

Assembly Instructions 3/10

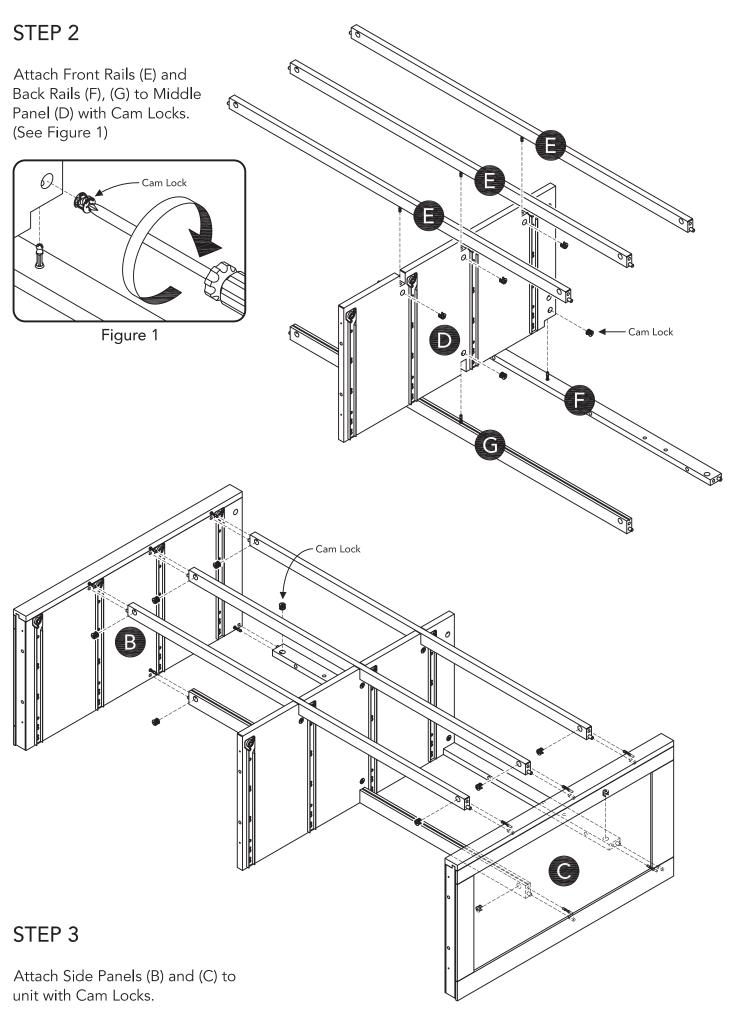

Assembly Instructions 4/10

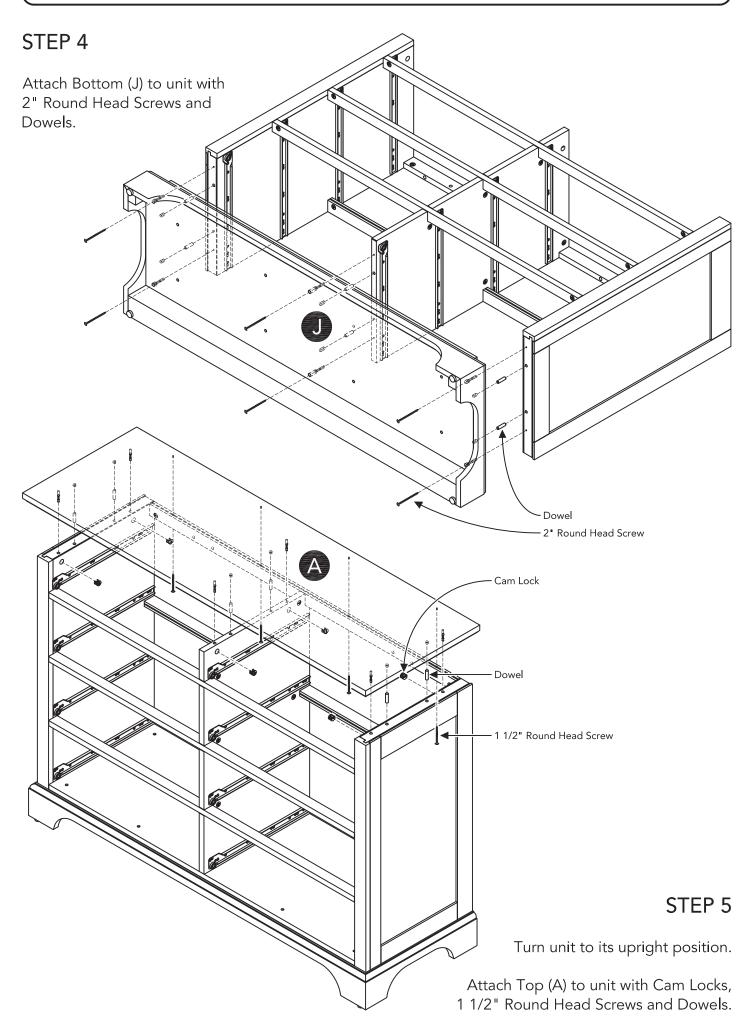

Assembly Instructions 5/10


STEP 6

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 2)

Note: Unit must be level to proceed.

Attach Back Panels (H) and (I) to unit with 1/2" Round Head Screws and Flat Washers.

Note: Unit must be level before attaching Back Panels (M) and (N).

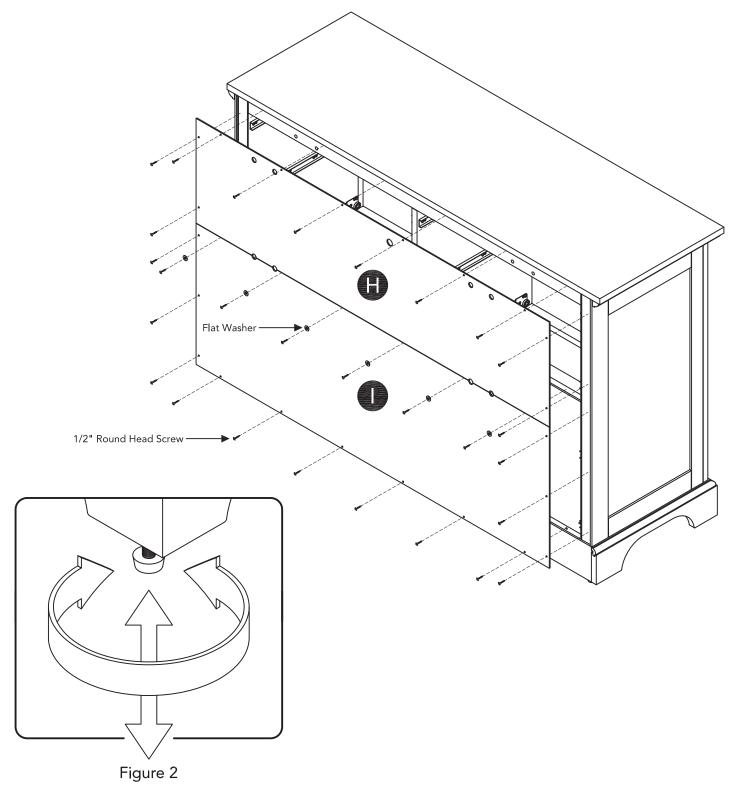

Assembly Instructions 6/10

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 7

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Back Panel (H). (See Figure 3)

Move unit.


Drill a 3/8" hole in wall 2 1/2" below mark.

Insert Anchor into the wall hole and attach Tip-over Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)


Move unit back into place and insert Tip-over Restraint into unit through hole in Back Panel (H). (See Figure 5)

Attach Tip-over Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)



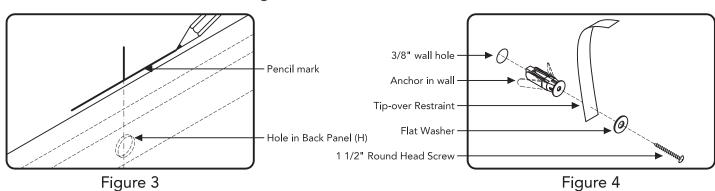





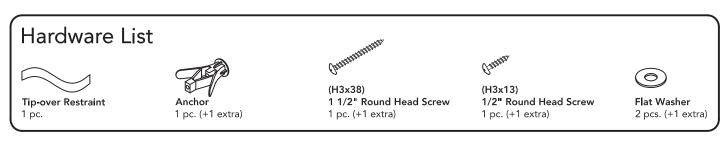

Assembly Instructions 7/10

Drawer (K)

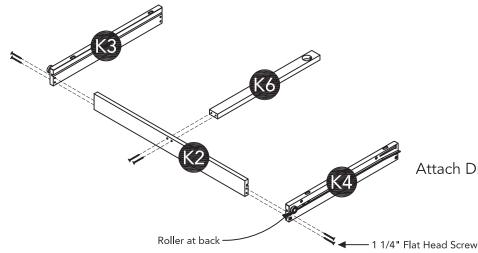

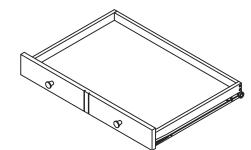


STEP 8


Attach Drawer Sides (K3), (K4) and Supports (K6) to Drawer Back (K2) with 1 1/4" Flat Head Screws.

STEP 9

Insert Drawer Bottom (K5) into groove.

Attach Drawer Front (K1) to unit with 1 1/4" Flat Head Screws.

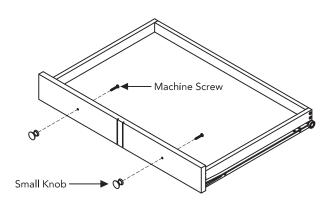


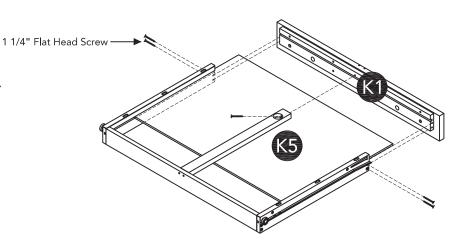

STEP 10


Attach Small Knobs with Machine Screws.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

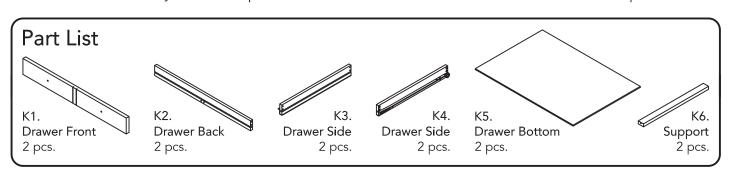

Assembly Instructions 8/10

Drawer (L)

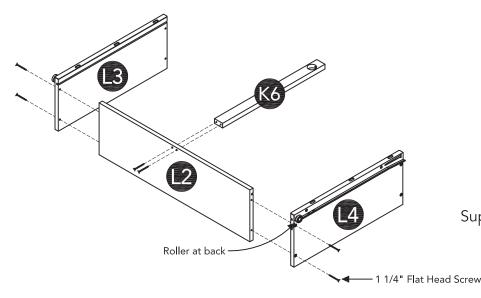

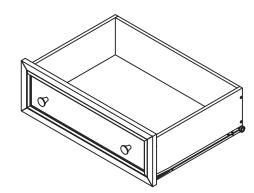


STEP 11


Attach Drawer Sides (L3), (L4) and Supports (K6) to Drawer Back (L2) with 1 1/4" Flat Head Screws.

STEP 12

Insert Drawer Bottom (L5) into groove.

Attach Drawer Front (L1) to unit with 1 1/4" Flat Head Screws.

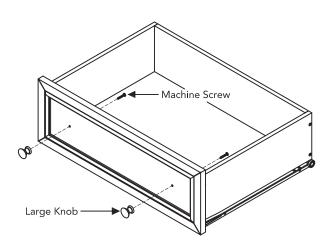


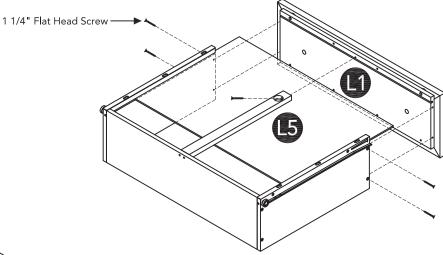

STEP 13

Attach Large Knobs with Machine Screws.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

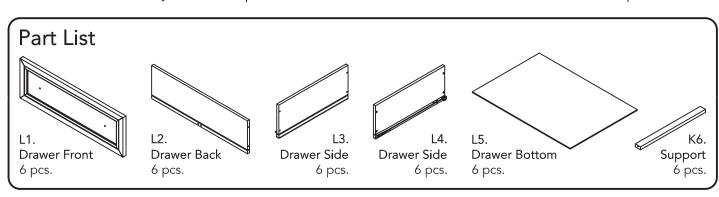

Assembly Instructions 9/10

STEP 14


Loosen slightly screws pre-installed on back of drawer fronts.

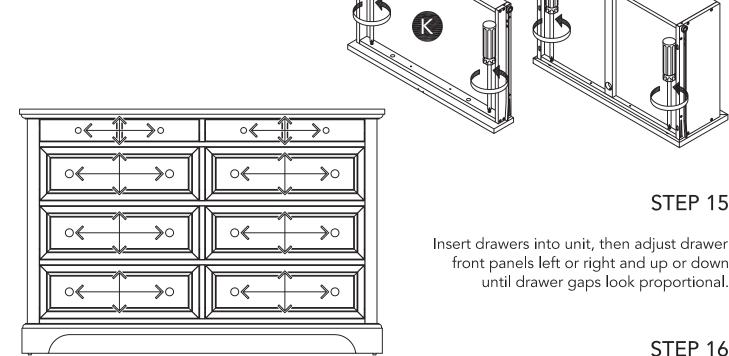

Pull each drawer open slowly, then re-tighten screws from Step 14.

Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.


Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

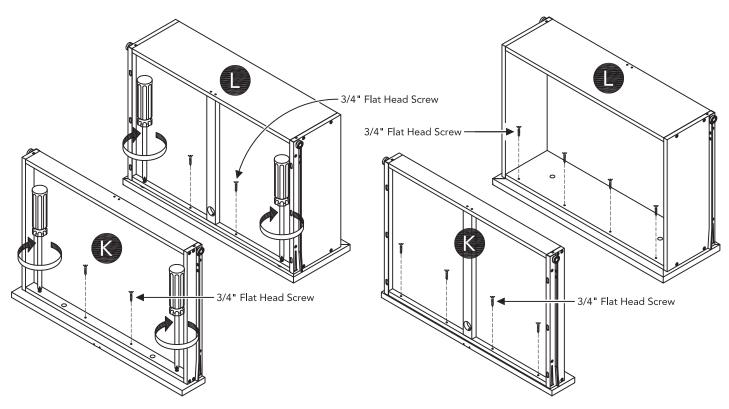

Assembly Instructions 10/10

STEP 17

Slide Drawers (K) and (L) into position.

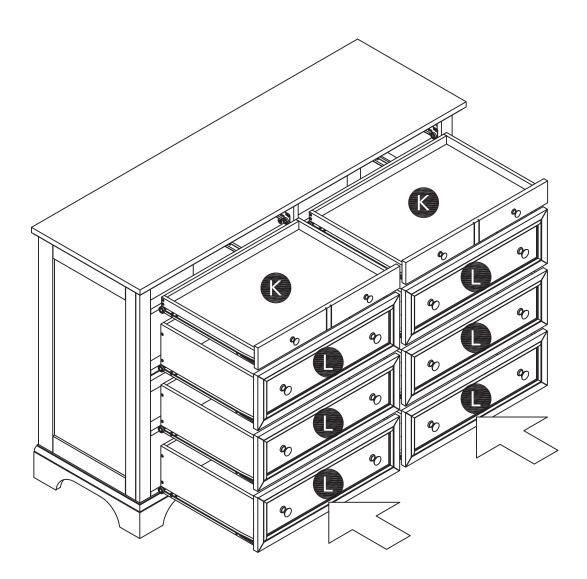

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.