



CLOVER™ / CLOVER™ Sport

Stroller/Travel System

Carriola/Sistema de viaje

STROLLER


Up to 50 lbs (22.7 kg)

Up to 40 in. (101.6 cm)

CARRIOLA

Hasta 22.7 kg (50 lb)

 Hasta 101,6 cm (40 pulg)

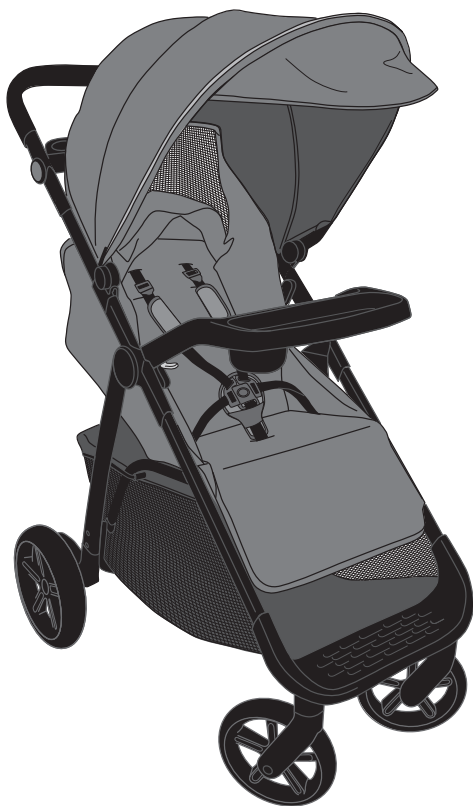

ENGLISH

ESPAÑOL

Read all instructions before assembly and use of product.

KEEP INSTRUCTIONS FOR FUTURE USE.

Lea todas las instrucciones antes de ensamblar y usar el producto.

GUARDE LAS INSTRUCCIONES PARA USO FUTURO.

Table of Contents

Warnings	3
Important Information	6
Identification of Parts.....	7
Features	8
Choosing Mode of Use	10
Assembling Your Stroller.....	11
Using Your Stroller	15
Using your Stroller with Recommended Infant Car Seats	26
Clover Use Configurations.....	28
Care and Maintenance	29
Limited Warranty	29

WARNING! DEATH or SERIOUS INJURY can occur.

Read and follow all warnings and instructions. Failure to do so could result in serious injury or death.

- **Only use Evenflo SafeMax™, LiteMax™ or LiteMax™ Sport infant car seats with this stroller.** Other infant car seats or carriers are not designed to fit the stroller frame and if used with this stroller, may result in serious injury to your child.
- **NEVER** leave child unattended. **ALWAYS** keep child in view while in the stroller.
- Adult assembly required. Take care when unpacking and assembling; contains small parts and some items with sharp edges.
- To prevent a possible choking hazard, remove and discard packing material before using this product.
- Avoid serious injury from falling or sliding out. **ALWAYS** use waist restraint.
- **DO NOT** carry or roll stroller on stairs or escalators with child in it.
- **DO NOT** hang items on handle bar or place them on the canopy as they can tip stroller over and injure child.
- Be sure stroller is fully assembled and locked in unfolded position before using.
- **ALWAYS** exercise care when going over curbs or steps, and never use stroller for anything other than transporting your child. Push stroller at a normal walking pace only; faster strolling can cause a loss of control and injury to the child.
- **DO NOT** place hot liquids in cup holder. Spills can burn you or your child.
- To avoid serious injury from child falling out of stroller, **DO NOT** raise, recline or convert seat to Comfort Mode with child in stroller.
- **DO NOT** use stroller if any parts are missing or broken.
- **DO NOT** allow child to climb on, into, out of, or around stroller.
- **DO NOT** allow child to stand on the footrest. Stroller may tip over and injure child.

WARNING! DEATH or SERIOUS INJURY can occur.

- **DO NOT** carry additional children, goods, or accessories in or on this stroller except as advised in these instructions. The stroller is intended for use with one child and to accommodate only the additional weights in storage as listed in these instructions.
- Care must be taken when folding or unfolding stroller to prevent finger injury to you or your child in hinge areas. Make sure child is not in the seat or near the stroller when folding or unfolding.
- **NEVER** leave stroller on a hill or incline, even with brakes set. Stroller may tip, injuring the child.
- To avoid accidental rolling, **ALWAYS** set brakes when stroller is not being pushed.
- **AVOID STRANGULATION:**
 - **DO NOT** suspend strings or toys from the canopy.
 - **DO NOT** place stroller anywhere near cords from window blinds, draperies, phone, etc.
 - **DO NOT** place items with a string around your child's neck such as hood strings or pacifier cords.
 - If not properly secured, the child may slip into leg openings and strangle.
- When making adjustments to the stroller, **ALWAYS** ensure that all parts of the child's body are clear of any moving parts of the stroller.
- The canopy is not intended to provide UV protection.
- Sharp or heavy objects placed in pockets may cause damage to the stroller, or injury to the child.
- To ensure safety for your baby, please refer to the manufacturer's instructions for the use of your recommended infant car seats and keep all instructions available for reference.
- To avoid stroller instability and tip-overs, **DO NOT** load child tray with over 1 lb (0.45 kg), parent tray with over 2 lbs (0.90 kg) and the main cargo basket with over 10 lbs (4.5 kg).
- **DO NOT** lift stroller by using the infant car seat handle when installed on stroller.

WARNING! DEATH or SERIOUS INJURY can occur.

- Make sure the infant car seat is securely snapped onto the car seat mounts.
- **DO NOT** use Comfort Mode with a child over 6 months of age.
- **ALWAYS** remove child tray when using stroller in Comfort Mode.
- **ALWAYS** thread lower harness strap under webbing when child is in Comfort Mode.
- **NEVER** attach infant car seat with child in Comfort Mode.
- **NEVER** use seat in the Comfort Mode position unless the seat is set up in Comfort Mode as per the instructions.
- **NEVER** use the stroller in any configuration other than what is shown in the instruction manual.

If unable to securely attach the infant car seat to this stroller, remove the car seat and contact **Evenflo ParentLink at 1-800-233-5921 (U.S.A.), 1-937-773-3971 (Canada), or 01-800-706-12-00 (Mexico).**

Important Information

Child Requirements

- Maximum weight: 50 lbs (22.7 kg), Maximum height: 40 inches (101.6 cm)
- **Comfort Mode:** Intended for a child up to 6 months of age.
- **Stroller Mode (in upright position):** Intended for a child who is capable of sitting upright unassisted.

IMPORTANT: Read instructions carefully before use. Save these instructions for future reference. It is very important to assemble the stroller according to these instructions. If you are missing parts, do not use stroller and call **Evenflo ParentLink at 1-800-233-5921 (U.S.A.), 1-937-773-3971 (Canada), or 01-800-706-12-00 (Mexico)** to order replacement parts.

Registration Information


Please register this product so we can reach you if there is a safety alert or recall. We will not sell, rent, or share your personal information. To register your product, please complete and mail the card that came with it or visit our online registration at **www.evenflo.com/registerproduct**.

For future reference, record the Model Number and Date of Manufacture below. You can find this information on one of the rear stroller legs.


Model Number: _____

Date of Manufacture: _____


Identification of Parts

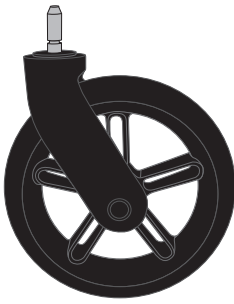


Front Wheel (2)

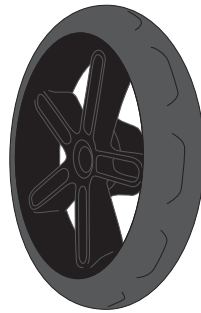 


*One Rear Wheel
(Unassembled)*

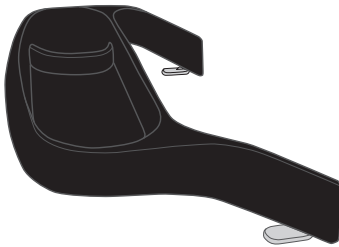 

Child Tray

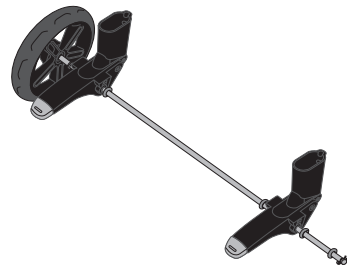 

 *Rear Axle Assembly
(1 Wheel Pre-Assembled)*

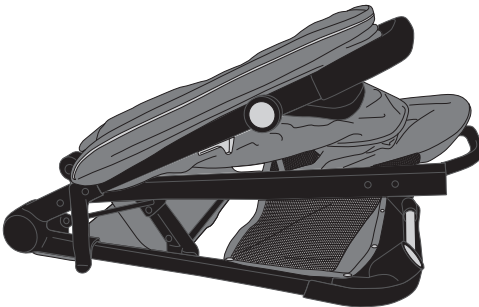


Frame



*Rear Wheel Hub Caps
(1 Cap Pre-Assembled)*

Features

 
FRONT

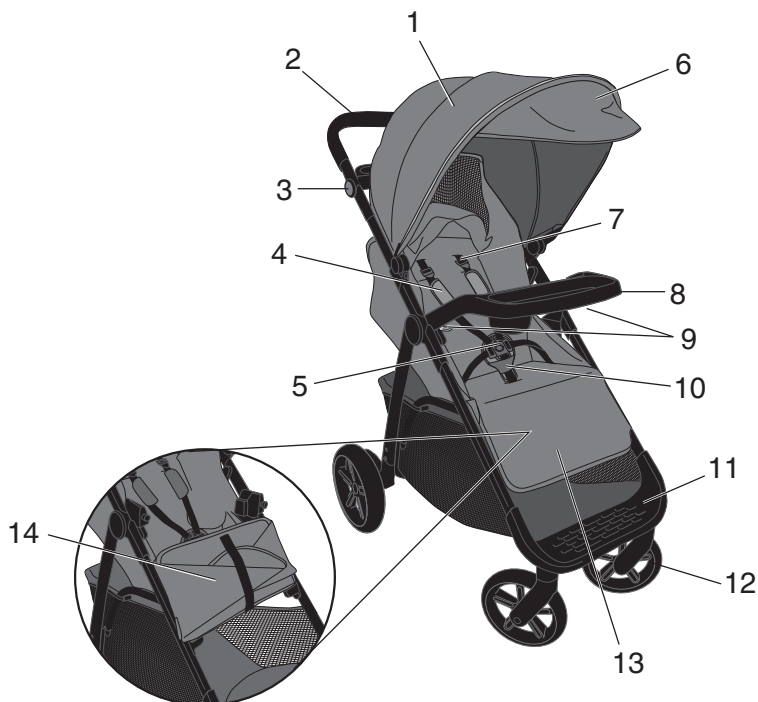

- | | |
|-------------------------------|------------------------------|
| 1. Canopy | 8. Child Tray |
| 2. Parent's Handle | 9. Child Tray Release levers |
| 3. Adjustable Handle Buttons* | 10. Buckle Cover* |
| 4. Harness Covers | 11. Footrest |
| 5. Buckle | 12. Swivel Wheel |
| 6. Canopy Visor* | 13. Leg Rest |
| 7. Shoulder Straps | 14. Comfort Mode Flaps |

*Not all features are available on all models. Styles may vary.

 REAR

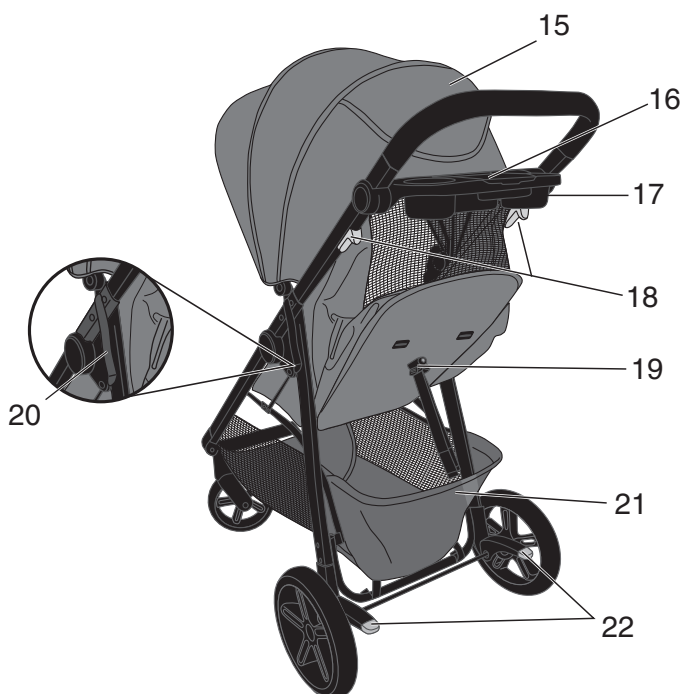

15. Canopy Window

16. Cell Phone Holder*/
Covered Storage*

17. Parent Tray*

18. Fold Release Levers

19. Multi Position Recline
Strap

20. Side Frame Lock

21. Storage Basket

22. Brakes

Choosing Mode of Use

Your stroller can be used in two different modes: Comfort Mode or Stroller Mode.

Your stroller is shipped in Stroller Mode. You will need to follow the instructions completely to make sure you set up your stroller in your preferred mode of use.

After the frame and the wheels have been assembled, you can choose to set the stroller up in **Comfort Mode** (see p. 22) or **Stroller Mode** (see p. 24).



Comfort Mode




Stroller Mode

⚠ WARNING! DEATH or SERIOUS INJURY can occur.

Care must be taken when folding or unfolding stroller to prevent hand or finger injury in hinge areas.


FRAME

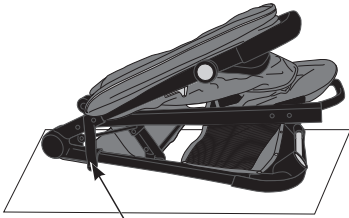


Side Frame Lock

To protect flooring, place a protective covering beneath the stroller during assembly.

Unlatch side frame lock. Continue holding the lock open while unfolding the stroller.

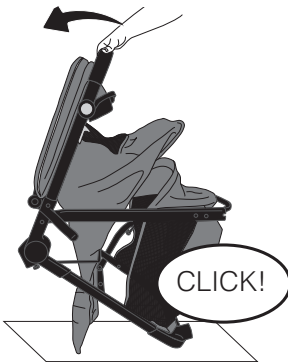


Grab the parent's handle and pull upward until the stroller opens fully with an audible click.

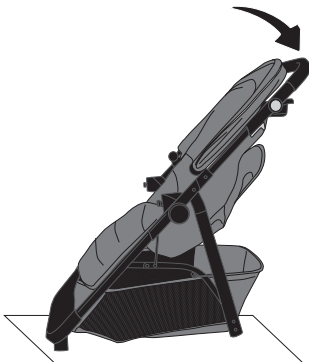

Make sure the stroller locks in the open position by pushing down on the parent's handle.

Assembling Your Stroller


FRONT WHEEL ASSEMBLY

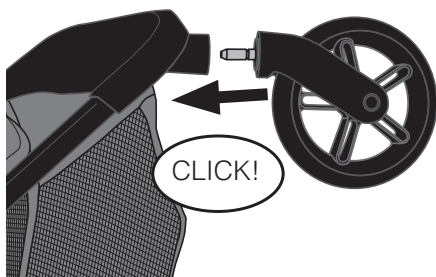


To attach front wheels, turn stroller over so front leg tube is positioned as shown and insert front wheel until it clicks into place. Repeat on other side.

Pull on wheels to make sure both of them are securely attached.

REAR WHEEL ASSEMBLY

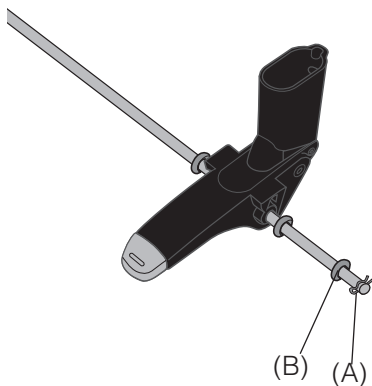


To attach rear wheel, remove the hairpin (A) and one washer (B) from the axle assembly.

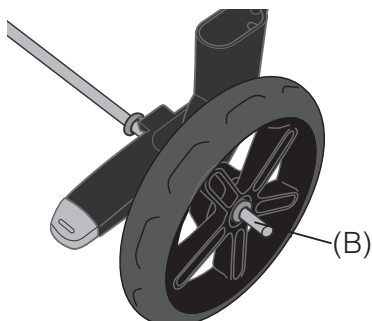


Attach wheel, then re-attach washer (B) to the axle.

Assembling Your Stroller

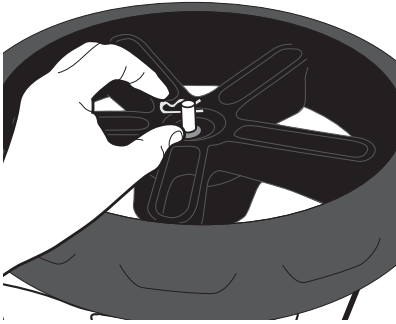


Push straight side of pin through axle hole. Pin will separate around the axle.

NOTE: Use needle nose pliers to hold pin for easier assembly.

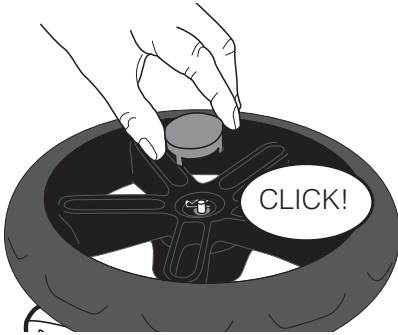

Attach hubcap to wheel until it clicks into place once the washer and hairpin are attached.

Brake levers point toward rear of stroller

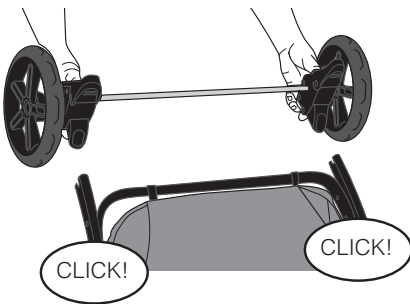

To attach rear wheel assembly to stroller, turn stroller over so back tube is positioned as shown. Push wheels onto rear leg tubes until they click into place.

Pull on wheels to make sure both of them are securely attached.


Assembling Your Stroller

CHILD TRAY




To attach child tray, slide tray onto tabs on both sides of the stroller until they click into place.

Pull up on both sides of tray to make sure it is securely attached.

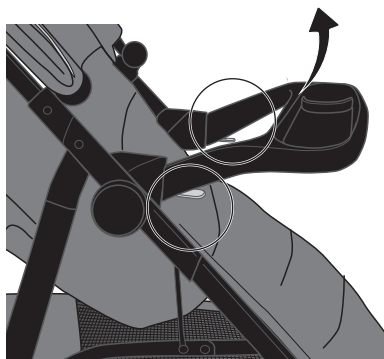


To remove child tray, squeeze levers under both sides of tray and pull up from stroller.


CANOPY

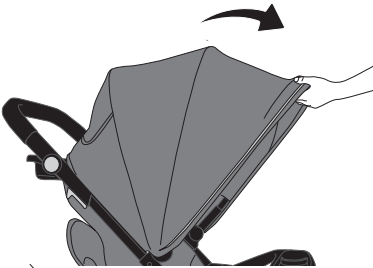


To open canopy, pull forward.

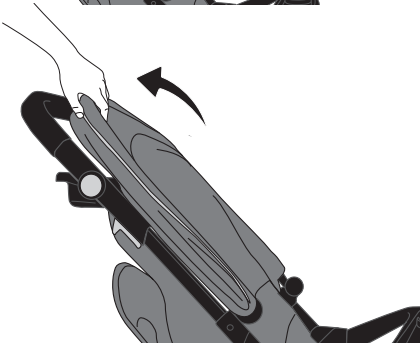

To close, push to the rear of stroller.

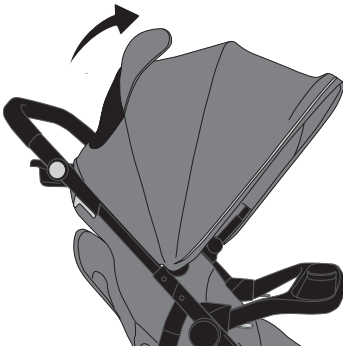

To access canopy window, pull flap forward as shown.

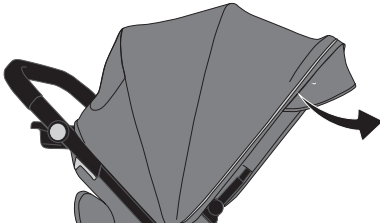


To access canopy visor, if included, pull flap forward as shown.*

*Not all features are available on all models. Styles may vary.


⚠ WARNING! DEATH or SERIOUS INJURY can occur.

Always lock both brakes. Make sure brakes are on by trying to push the stroller.

BRAKES

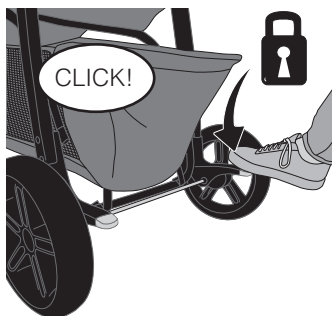


To lock, press lever **DOWN** on both rear wheels.

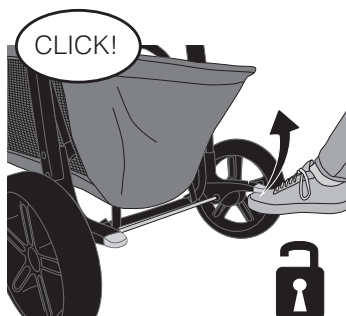


To unlock, pull lever **UP** on both rear wheels.


HARNESS

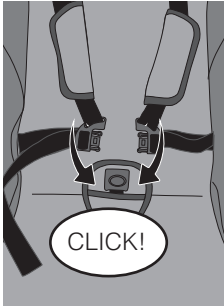

To secure harness, click harness connectors into the center buckle.

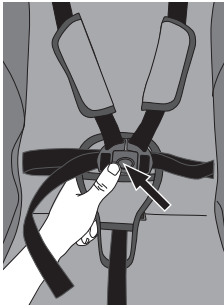


To unlock harness, push the button on the center buckle.

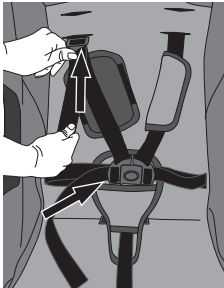

To adjust harness around your child, tighten shoulder and waist straps as shown.


Repeat with other harness strap.

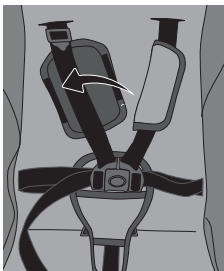

Wrap harness covers, if available, around the harness straps as shown.*

*Not all features are available on all models. Styles may vary.

HARNESS

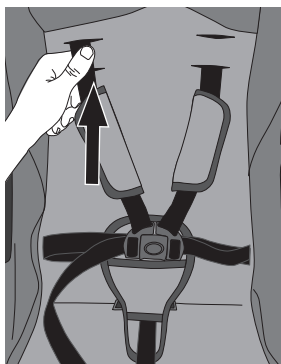


To change shoulder strap height positions, reach one hand behind stroller and push retainer out to the front of the seat then reinsert into the desired set of slots that are closest to your child's shoulder. **MAKE SURE** retainer goes through boards and fabric.

Repeat with other harness strap.


When re-inserting harness straps, **MAKE SURE** to always place harness straps at the same height setting.

HARNESS - COMFORT MODE (NO BUCKLE COVER)

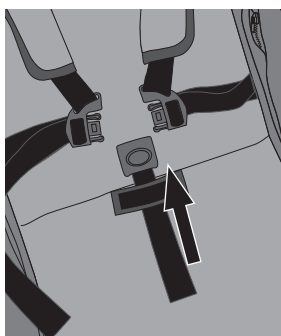


When using buckle strap in Comfort Mode with no buckle cover, adjust buckle strap to highest position and thread under comfort mode webbing.

HARNESS - COMFORT MODE (WITH BUCKLE COVER)

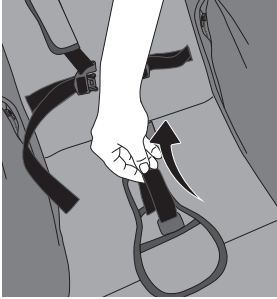


When using buckle strap in Comfort Mode with buckle cover*, adjust buckle strap to highest position.

Flip buckle cover forward and pull buckle strap from top half of buckle cover.

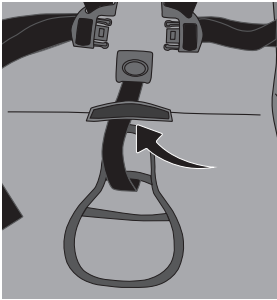

Thread buckle strap under Comfort Mode webbing and rethread through top half of buckle cover.

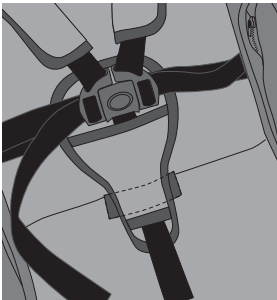

*Not all features are available on all models. Styles may vary.


⚠ WARNING! DEATH or SERIOUS INJURY can occur.

Care must be taken when folding or unfolding stroller to prevent hand or finger injury in hinge areas.


FOLDING STROLLER

IMPORTANT: Stroller cannot be folded in Comfort Mode.

To fold, ensure stroller is in Stroller Mode, close canopy, lock both rear brakes and remove your child.

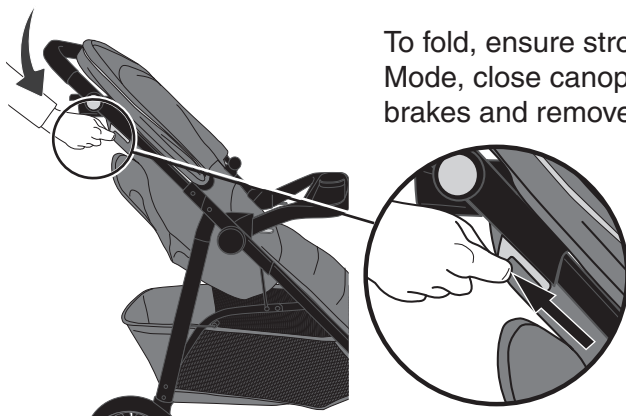


Pull up on levers on both sides of handles as shown.

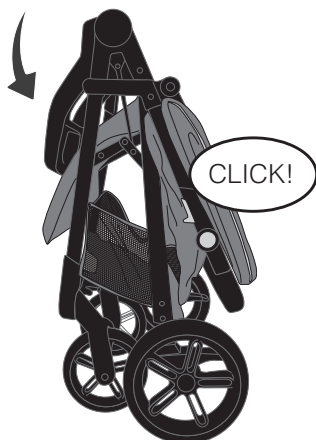


Rotate handles down until the side frame lock clicks into place. Completely fold the stroller in order for the side frame lock to fully engage.

ACCESSORIES*

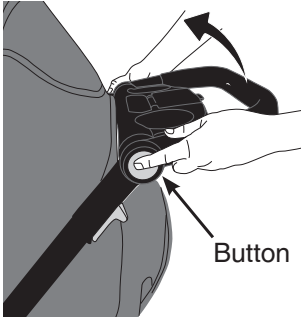


Adjustable Handle

Press adjustable handle buttons on both sides and rotate handle as shown.

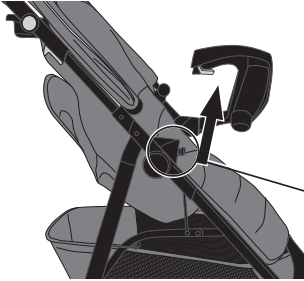


Swivel Child Tray

To swivel child tray, push lever under one side of tray and pull up from stroller.

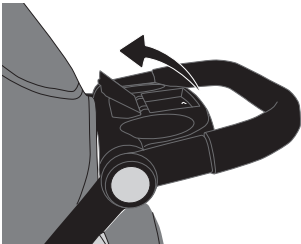

Covered Storage

To access covered storage, pull up center panel of parent tray.

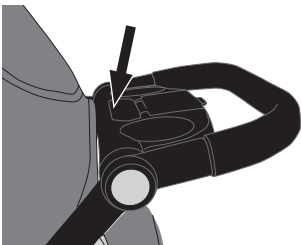


Cell Phone Holder


To access the cell phone holder, place cell phone in parent tray behind covered storage.

*Not all features are available on all models. Styles may vary.


FROM STROLLER MODE TO COMFORT MODE

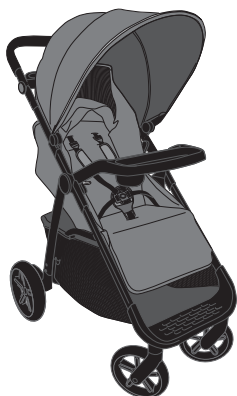

If you are in Stroller Mode as shown, follow these steps to convert to Comfort Mode.

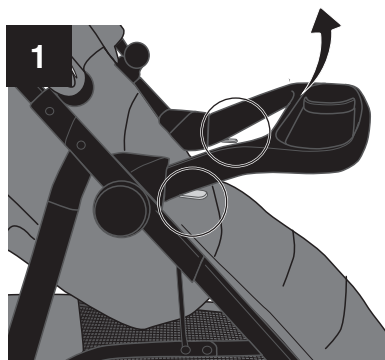


Remove child tray by squeezing levers under both sides of the tray and pull up from stroller.

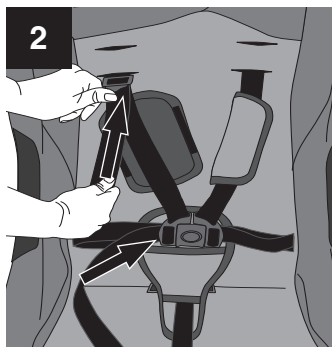


Adjust shoulder and waist strap to desired position. Repeat with other harness straps.


*Not all features are available on all models. Styles may vary.

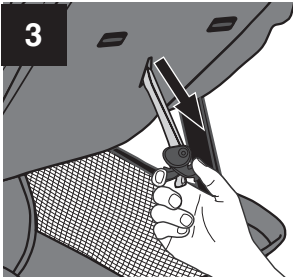


To recline seat, squeeze button and pull down the recline strap on the rear of seat.

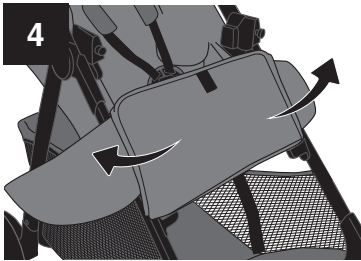

Undo the hook and loop strap beneath leg rest to unfold flaps.

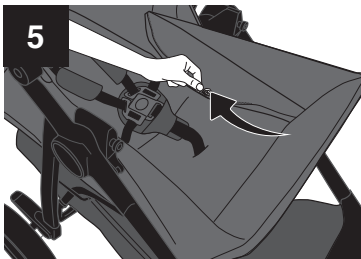

Fully zip Comfort Mode flaps on both sides of stroller.

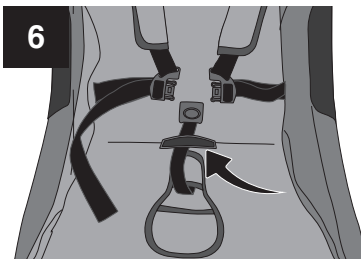


Thread buckle strap through Comfort Mode webbing. See p. 18 for harness adjustment information.

*Not all features are available on all models. Styles may vary.

FROM COMFORT MODE TO STROLLER MODE



If you are in Comfort Mode as shown, follow these steps to convert to Stroller Mode.

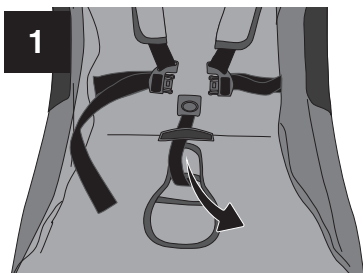


Remove buckle strap from Comfort Mode webbing. See p. 18 for harness adjustment information.



Unzip Comfort Mode flaps from both sides of stroller.


*Not all features are available on all models. Styles may vary.

3

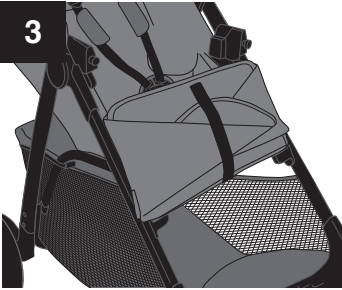

Fold and store flaps beneath leg rest using hook and loop strap.

4

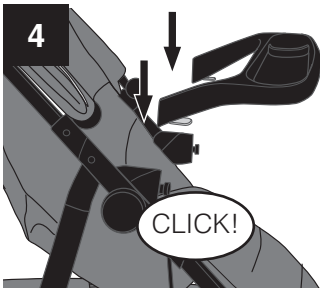

Attach child tray by sliding tray onto tabs on both sides of the stroller until they click into place.


Pull up on both sides of tray to make sure it is securely attached.

5



Adjust waist and shoulder strap height to desired position. Repeat with other harness strap.

6

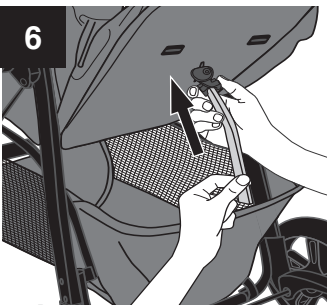


Hold recline strap in one hand, squeeze recline adjuster and push until the seat is in desired position.

Release adjuster and confirm position by pushing on seatback from inside stroller.

⚠ WARNING! DEATH or SERIOUS INJURY can occur.

- Make sure the infant car seat is securely attached into the seat mounts on both sides of the stroller before placing child in the seat.
- **Only use Evenflo SafeMax™, LiteMax™ and LiteMax™ Sport infant car seats with this stroller.** Other infant car seats or carriers are not designed to fit the stroller frame and if used with this stroller, may result in serious injury to your child.
- To ensure safety for your baby, please refer to the manufacturer's instructions for the use of your recommended infant car seats and keep all instructions available for reference.
- **DO NOT** lift stroller by using the infant car seat handle when installed on stroller.
- **DO NOT** use infant car seat without child tray attached.


If unable to securely attach your infant car seat to this stroller, remove the car seat and contact **Evenflo ParentLink at 1-800-233-5921 (USA), 1-937-773-3971 (Canada), or 01-800-706-12-00 (Mexico).**

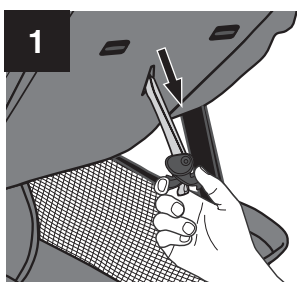

Before inserting infant car seat onto stroller, child tray **MUST** be attached (see p. 14).


To attach infant car seat to stroller seat, fully recline stroller by squeezing button on the recline strap and lowering the backrest.

Using Your Stroller with Recommended Infant Car Seats

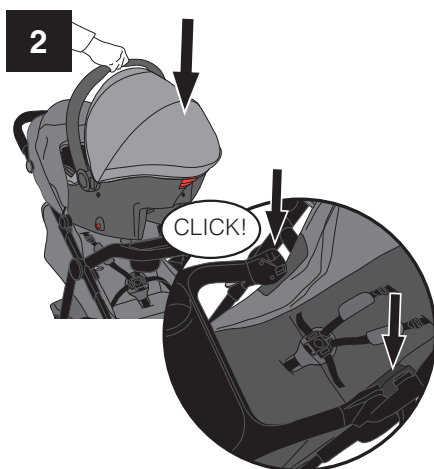


Insert infant car seat into stroller parent-facing until it latches into the infant car seat attachment points as shown.

The infant car seat **MUST** be facing the parent when installed.

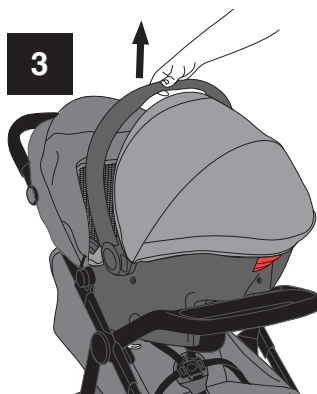

Pull up on the infant car seat to make sure it is securely attached to the stroller.

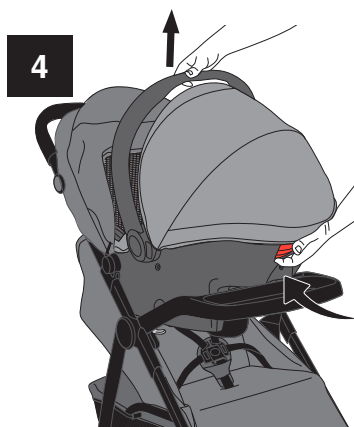


To remove, squeeze handle on rear of seat and pull infant car seat up off of the stroller.

Clover Use Configurations



Comfort Mode

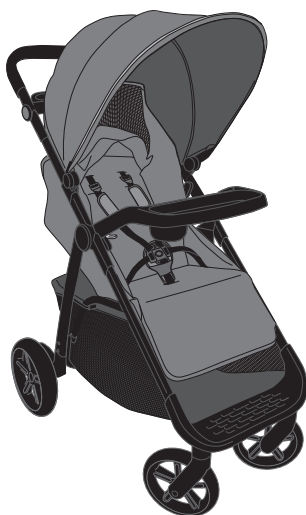

Stroller Mode



Infant Car Seat Mode

Care and Maintenance

- Clean minor spills and stains on cloth or plastic surfaces with cold water and mild soap. Air dry.
- Metal and plastic parts can be wiped clean with a soft damp cloth and dried with a soft cloth. **DO NOT** use abrasive cleaners or solvents.

Limited Warranty

For a period of 90 days from the original purchase of this Product, Evenflo warrants to the original end user ("Purchaser") this Product (including any accessories) against defects in material or workmanship. Evenflo's sole obligation under this express limited warranty shall be, at Evenflo's option, to repair or replace any Product that is determined to be defective by Evenflo and determined to be covered by this warranty.

Repair or replacement as provided under this warranty is the exclusive remedy of the Purchaser. Proof of purchase in the form of a receipted invoice or bill of sale evidencing that the Product is within the warranty period must be presented to obtain warranty service. This express limited warranty is extended by Evenflo **ONLY** to the original Purchaser of the Product and is not assignable or transferable to subsequent purchasers or end users of the Product. For warranty service, contact Evenflo's ParentLink Consumer Resource Center at 1-800-233-5921 or www.evenflo.com.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS HEREBY DISCLAIMED. EVENFLO SHALL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR PUNITIVE DAMAGES OF ANY KIND FOR BREACH OF THE EXPRESS LIMITED WARRANTY ON THIS PRODUCT, OR ANY WARRANTY IMPLIED BY OPERATION OF LAW. OTHER THAN THE EXPRESS LIMITED WARRANTY SET FORTH ABOVE, THERE ARE NO OTHER WARRANTIES THAT ACCOMPANY THIS PRODUCT AND ANY ORAL, WRITTEN OR ANY OTHER EXPRESS REPRESENTATION OF ANY KIND IS HEREBY DISCLAIMED.

ParentLink®

answers. advice. affirmation

- ***www.evenflo.com*** • ***USA: 1-800-233-5921 8 AM – 5 PM E.T.***
 - ***Canada: 1-937-773-3971 • México: 01-800-706-12-00***