

 


Purchase Date: ____/____/____ Order/Customer Reference Number: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

CERAMIC PLANTER



Review all information before using this product. Save this manual for future reference.

FILLING: Lightweight potting soil is recommended.

WATERING: Take care when watering. Over-watering can lead to hardscape and surface damage due to leaks and/or run-off.

MOVING: Always lift the planter when moving it; never drag or slide it. Slowly and gently set the planter down to prevent breakage.

CLEANING: Wipe surfaces with a dry, soft cloth. Do not use chemicals, polish or abrasive materials when cleaning ceramic planters.

WINTER CARE & STORAGE: Avoid extreme temperatures and store indoors during periods of freezing weather. To prevent cracking, empty and/or store indoors during freezing temperatures.

 
Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with the product or it was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of the page. Please have the item number and order information ready to expedite response time.

⚠ WARNING: Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

CERAMIC PLANTER SAUCER

Review all information before using this product. Save this manual for future reference.



LOCATION: For indoor or outdoor use. Only use saucers on a flat, level surface.

PLANTER SIZE: Ensure your planter does not exceed the inner diameter of the saucer.

MICRO-CRACKS: Glazed ceramics are susceptible to micro-cracks. Micro-cracks can happen naturally during the kiln firing process or when stress is put on the glaze and ceramic from an impact. If micro-cracks develop from the surface to the ceramic, water could seep into the ceramic.

PROTECT SURFACES: Keep in mind, every saucer has the potential to "sweat" if left with standing water. If the water collects and becomes trapped underneath the saucer, it could cause damage to the surface below.

Use a protective barrier underneath the saucer to prevent scratches and potential damage from overwatering.

Indoor Use: We suggest using cork pads (not included) under the saucer. Cork pads prevent scratches and act as a barrier if the saucer "sweats".

Outdoor Use: We recommend using an outdoor pot riser, plant caddy, or rubber pot risers beneath the saucer. Not only do these options prevent scratches on surfaces, they also prevent water from becoming trapped under the saucer, which can lead to rot. Having the saucer off the ground also allows for better air circulation, helping to keep the ceramic dry.

WATERING PLANTS: Avoid overwatering plants. If water completely covers the bottom of the saucer or has filled the saucer, empty the saucer. If the saucer "sweats" or has micro-cracks, the water could damage the surface below.

MOVING: Always remove planters (not included) before moving the saucer. Lift the saucer when moving it; never drag or slide it. Slowly and gently set the saucer down to prevent breakage and micro-cracks.

CLEANING: Clean often to prevent scale build-up. Use warm soapy water and a soft cloth to clean the glazed surface. Rinse thoroughly and dry with a soft cloth. Allow saucer to dry completely before placing on surfaces. Never use chemicals, polish or abrasive materials when cleaning glazed ceramic.

WINTER CARE & STORAGE: To prevent cracking, store indoors during freezing temperatures. Avoid extreme temperatures and store indoors during periods of freezing weather.

Any modification to the product or failure to follow recommended care will void the product warranty.

⚠ WARNING: Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.