

88 5530 772

Closet Wall Hanging Unit


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



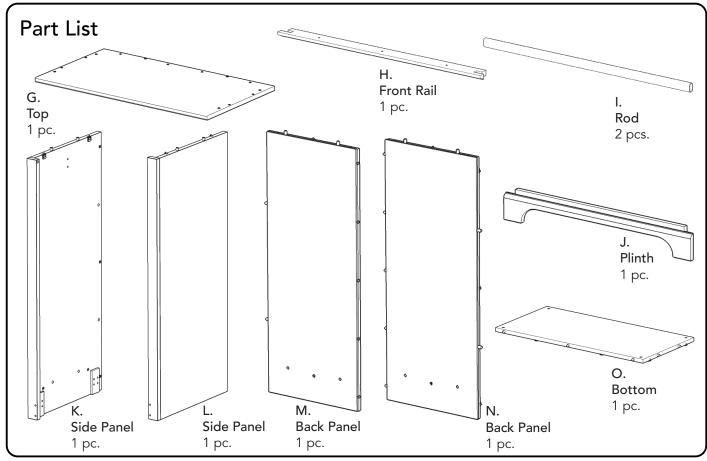

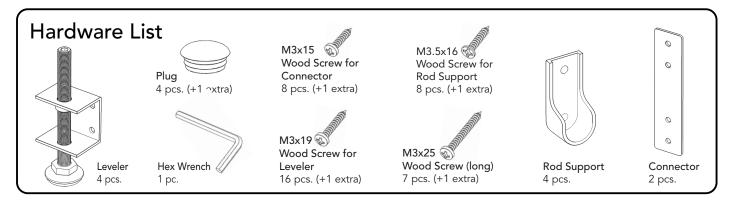

Carton 88 5530 771 is also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/8

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

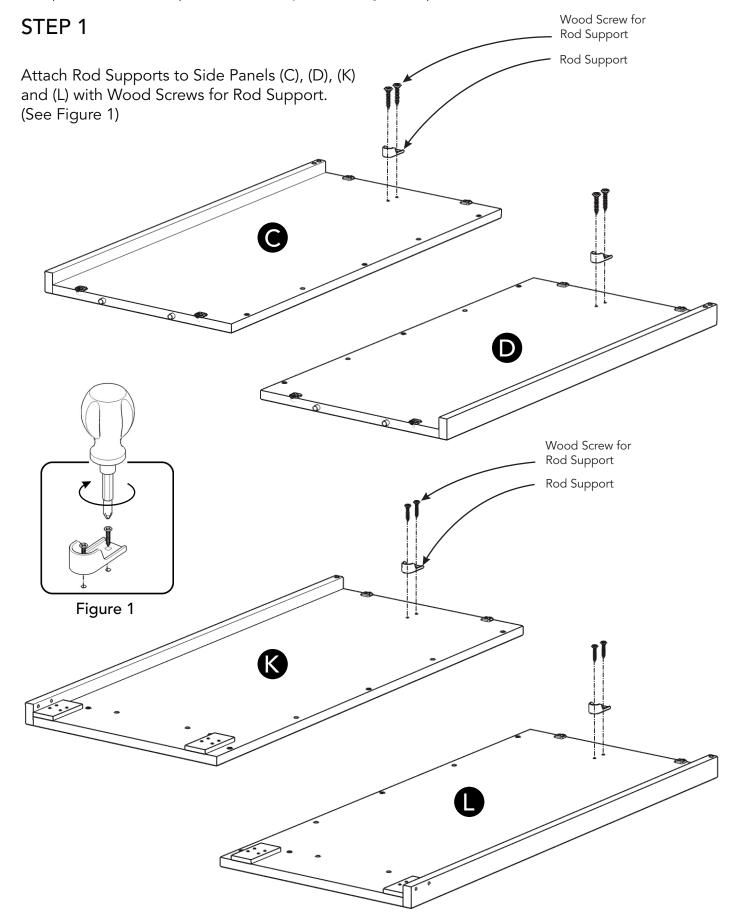

Assembly Instructions 3/8

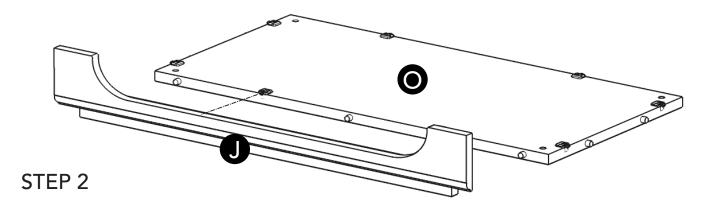

Attach Plinth (J) to Bottom (O), then flip the locks. (See Figure 2)


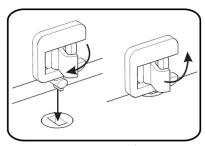


Figure 2

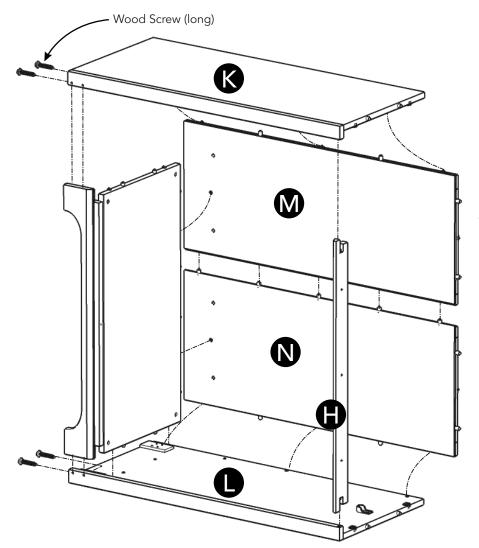

STEP 3


Attach unit to Side Panel (L) with Wood Screws (long), then flip the locks.

Attach Back Panels (N) and (M) to unit, then flip the locks.

Attach Front Rail (H) to unit.

Attach Side Panel (K) to unit with Wood Screws (long), then flip the locks.

Assembly Instructions 4/8

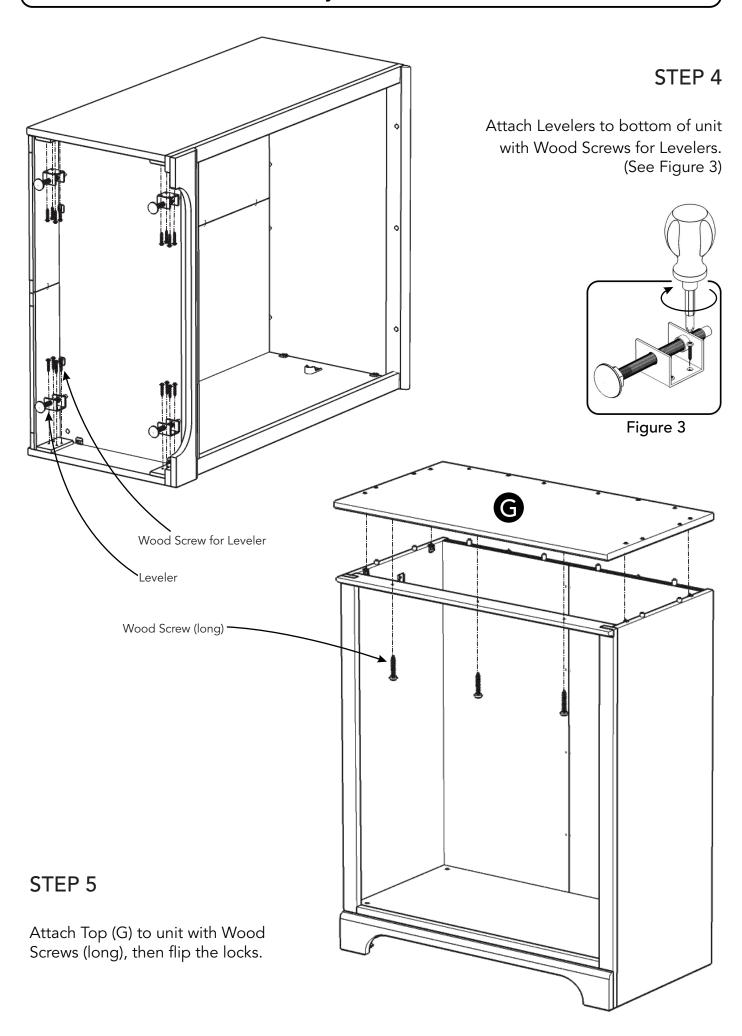


Assembly Instructions 5/8


STEP 6

Attach Back Panels (F) and (E) to Side Panel (D), then flip the locks.

Attach Front Rail (B) to Side Panel (D).

Attach Side Panel (C) to unit, then flip the locks.

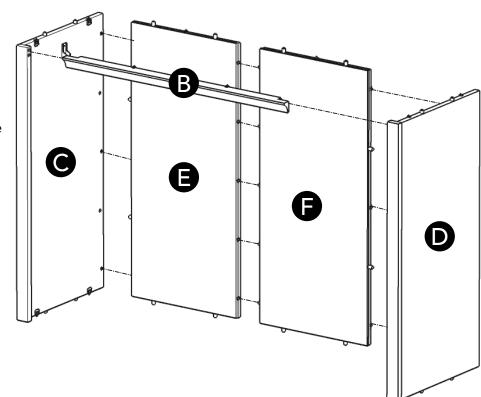

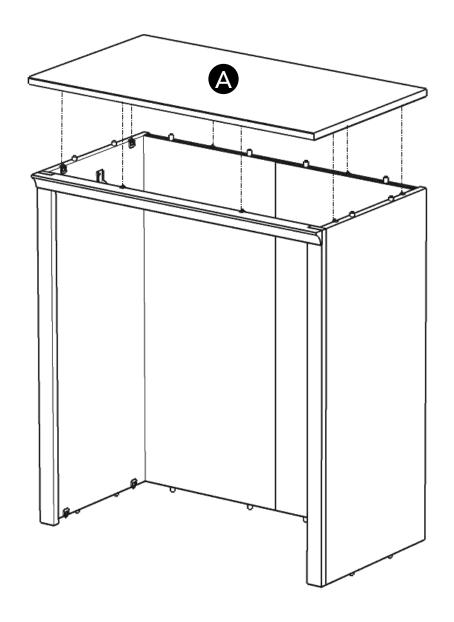


STEP 7


Attach Top (A) to unit, then flip the locks.

Assembly Instructions 6/8

STEP 8

Place top unit onto base unit, then flip the locks.

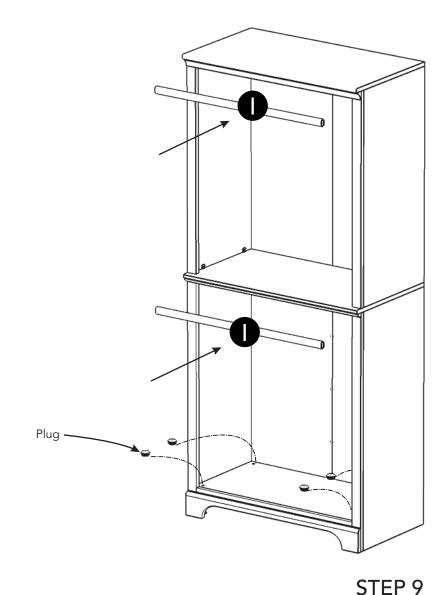

 

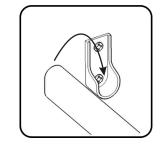


Figure 6

Place unit at desired location.

Note: If assembling multiple Closet Wall Units together, place all units at desired location.

Level the unit(s) by adjusting the adjustable levelers on the bottom of unit(s). (See Figure 4)

Note: Unit(s) must be level to proceed.

Cover all holes with Plugs. (See Figure 5)

Place Rod (I) into position. (See Figure 6)

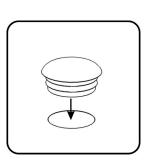


Figure 5

Assembly Instructions 7/8

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 10

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.


Attach Bracket at pre-drilled hole at top of unit with Wood Screw.


Move unit back into place.


If assembling multiple Closet Wall Units together, go to and complete Step 11 now, then return to and complete Step 10.

Slide Tipover Restraint through Bracket on wall and Bracket on unit. (See Figure 7)


Put tie end of Tipover Restraint into lock end of Tipover Restraint and pull until tight.

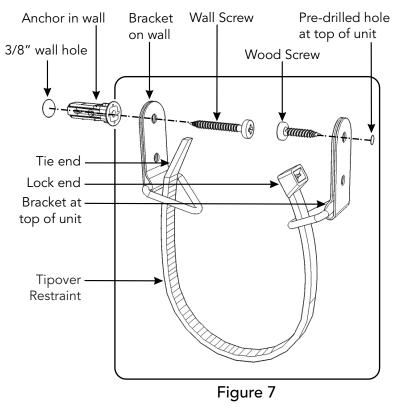

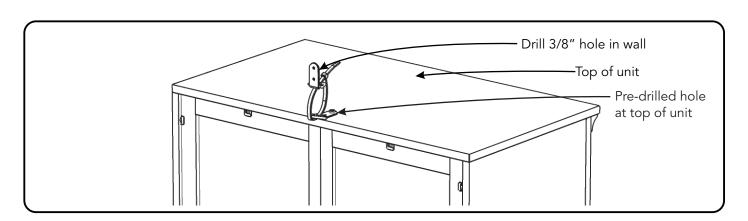

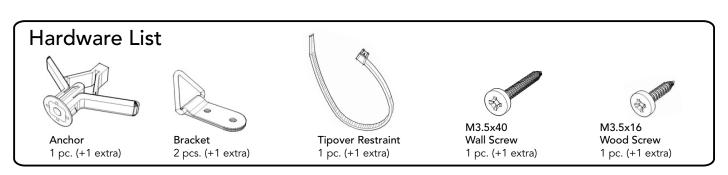

Assembly Instructions 8/8

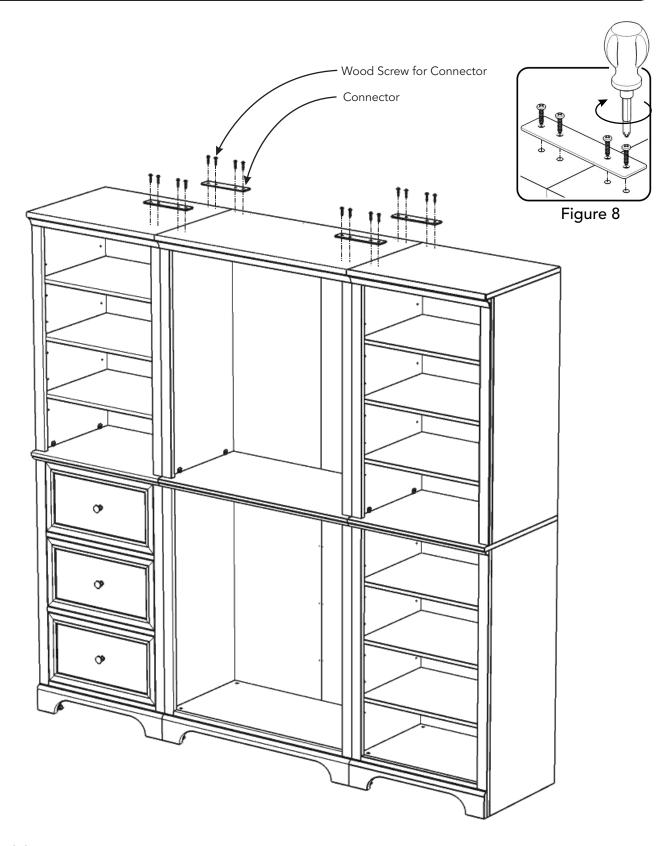

STEP 11

Note: If assembling multiple Closet Wall Units together, complete Step 11.

Attach the top of units together using Connector and Wood Screw for Connectors into the pre-drilled holes. (See Figure 8)

Return to and complete Step 10.

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT

FADING



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT
FINISH DAMAGE

Do not use rubber based placemats.

PREVENT

DISCOLORING



Do not use commercial waxes and polishes.

PREVENT

YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319