

 
## Dresser

## IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

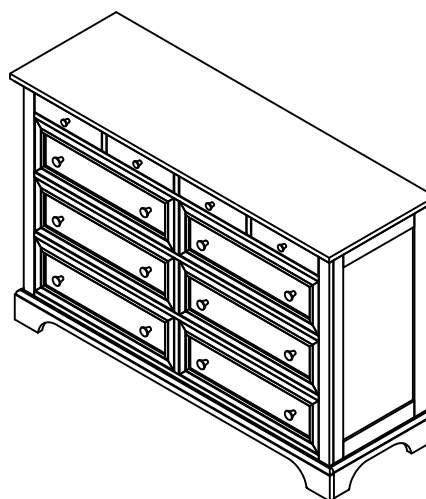

## Part List

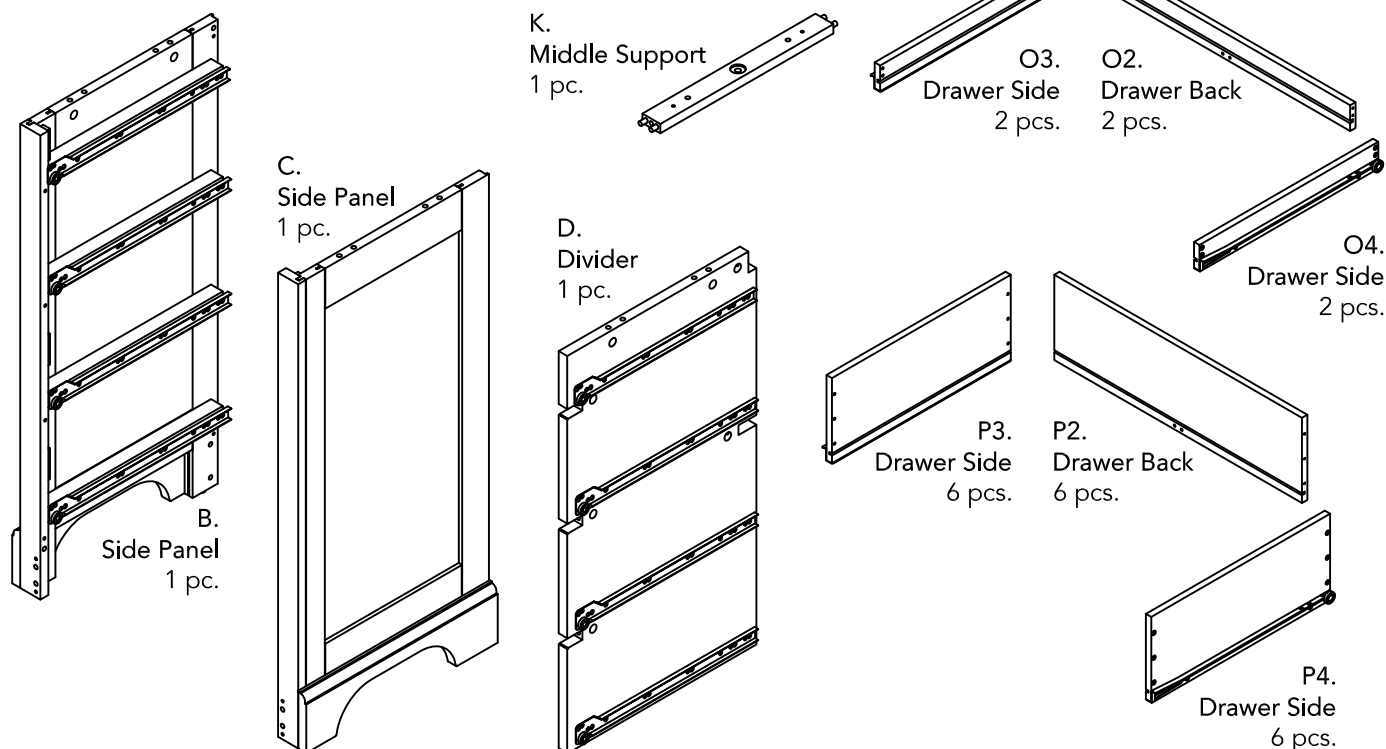 

## Hardware List

 

Cam Lock Screw  
27 pcs. (+4 extra)



Cam Lock  
27 pcs. (+4 extra)



1 1/2" Round Head  
Screw (M4x38)  
4 pcs. (+1 extra)



1 1/4" Round Head  
Screw (M4x32)  
10 pcs. (+1 extra)



1/2" Round Head  
Screw (M3x13)  
28 pcs. (+1 extra)



1 1/4" Flat Head  
Screw (M3x32)  
88 pcs. (+1 extra)



3/4" Flat Head  
Screw (M3x19)  
48 pcs. (+1 extra)



Large Handle  
12 pcs.



Small Handle  
4 pcs.



Machine Screw  
(5/32"x3/4")  
16 pcs.



Wooden Dowel  
12 pcs. (+1 extra)



Flat Washer  
6 pcs. (+1 extra)

Carton 20 05533 0431 is also needed for assembly.



Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

## Assembly Instructions 2/10

  
### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

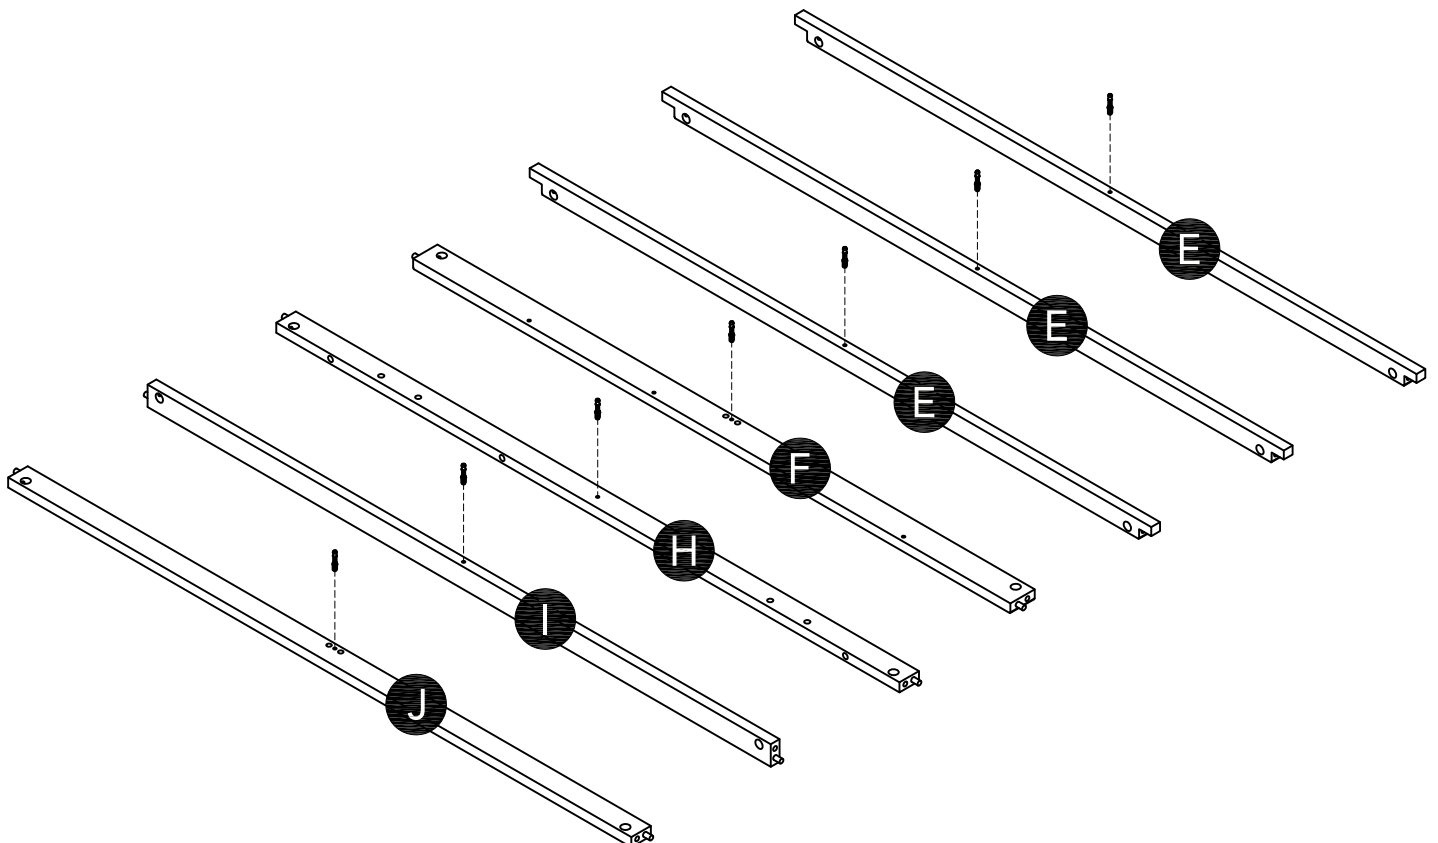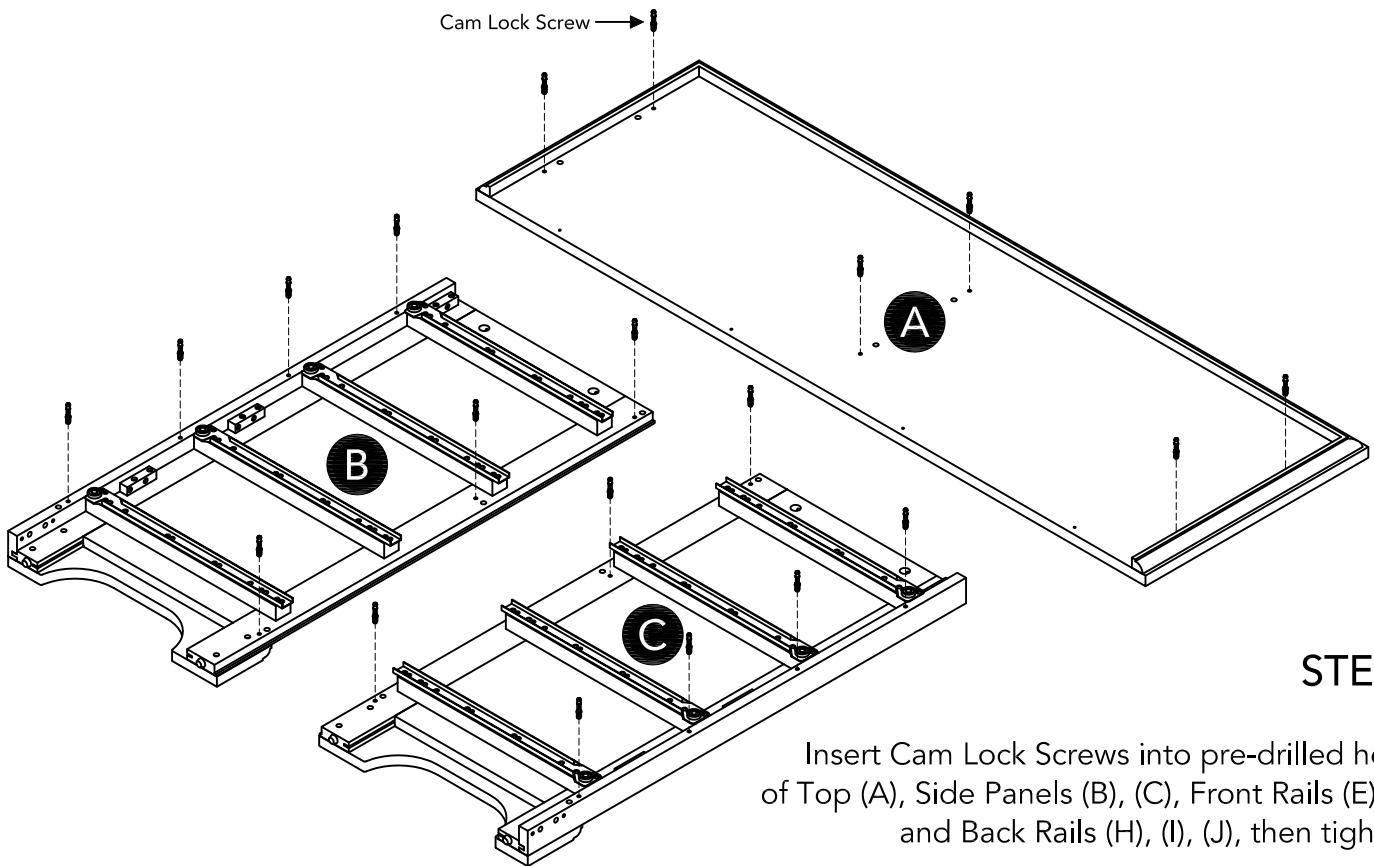

## STEP 2

 Attach Middle Support (K) to Divider (D) with 1 1/4" Round Head Screws and Wooden Dowels.

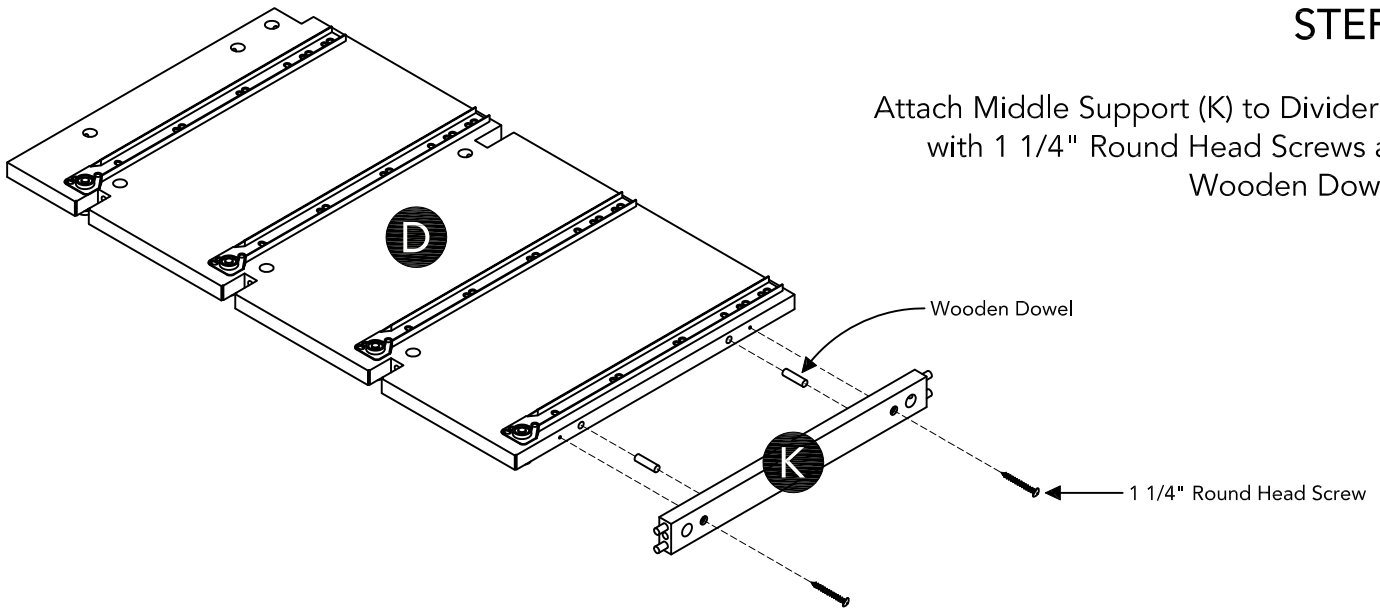

## STEP 3

Attach Front Rails (E), (F) and Back Rails (H), (I), (J) to unit with Cam Locks.  
(See Figure 1)

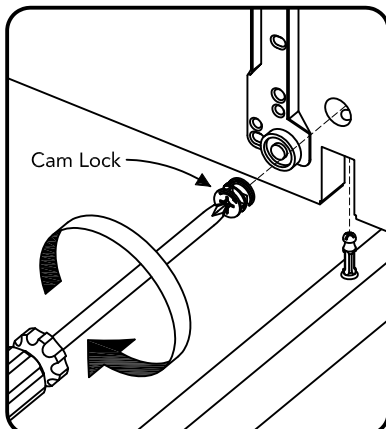 
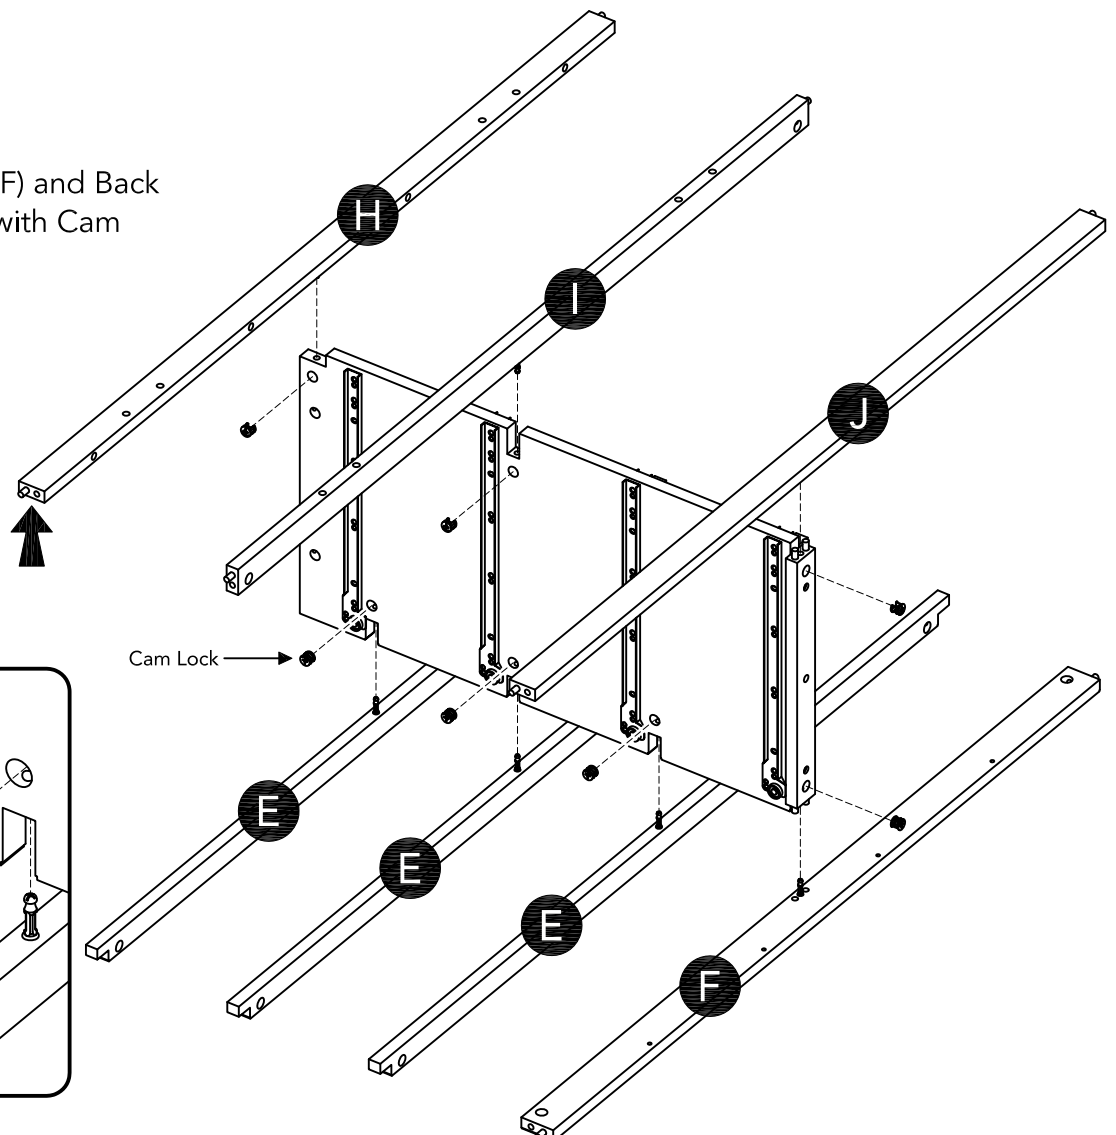 




Figure 1

## Assembly Instructions 4/10
  
### STEP 4

Attach Side Panels (B) and (C) to unit with Cam Locks.

Attach Center Leg (L) to unit.

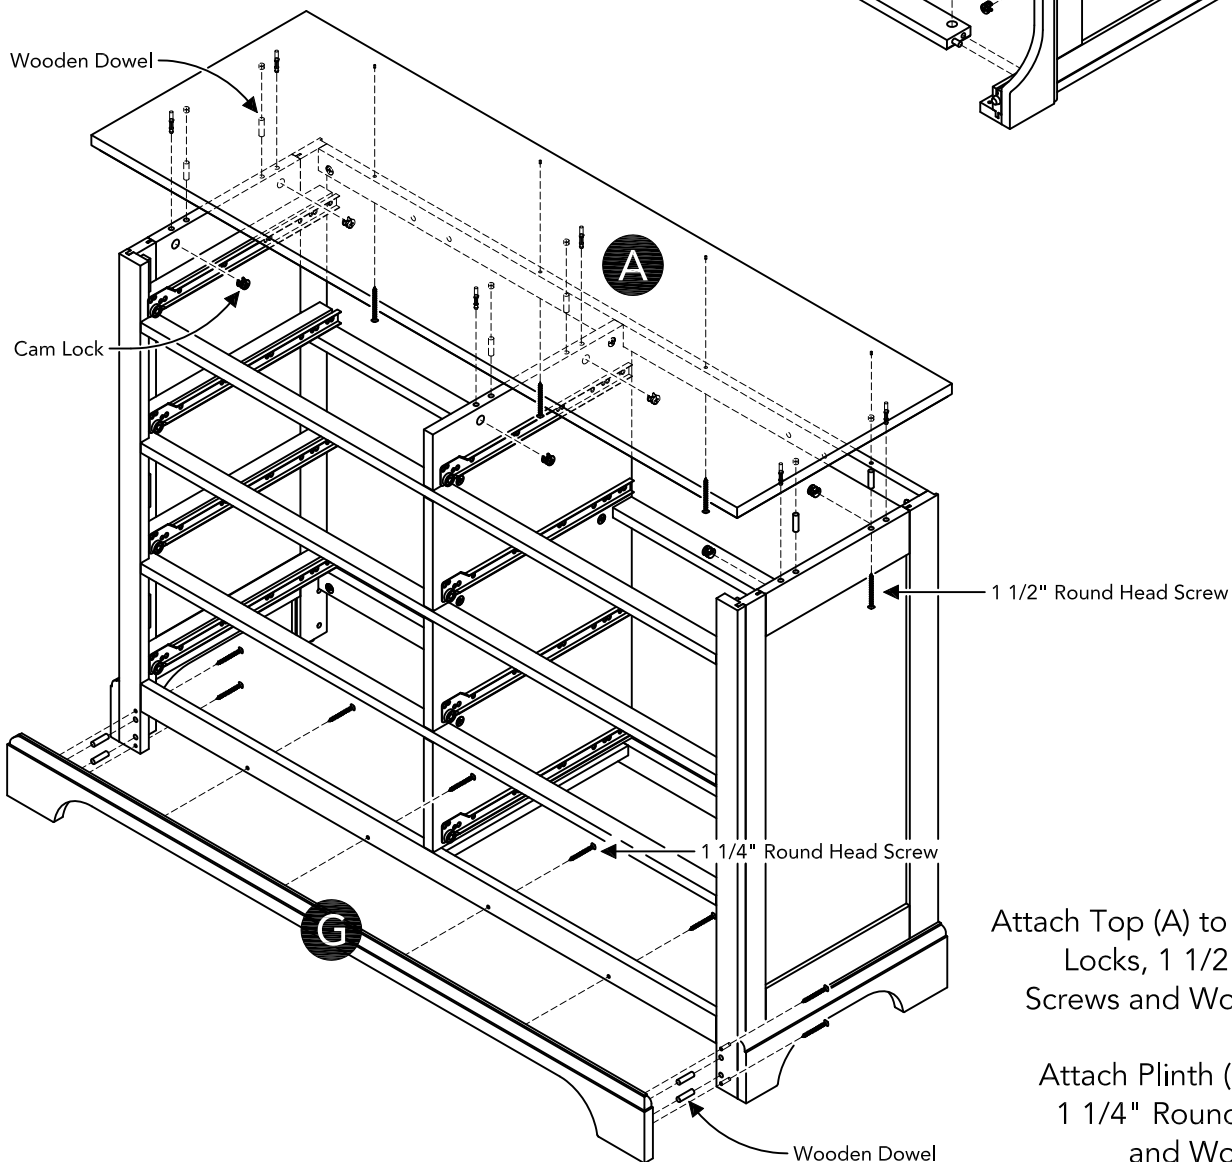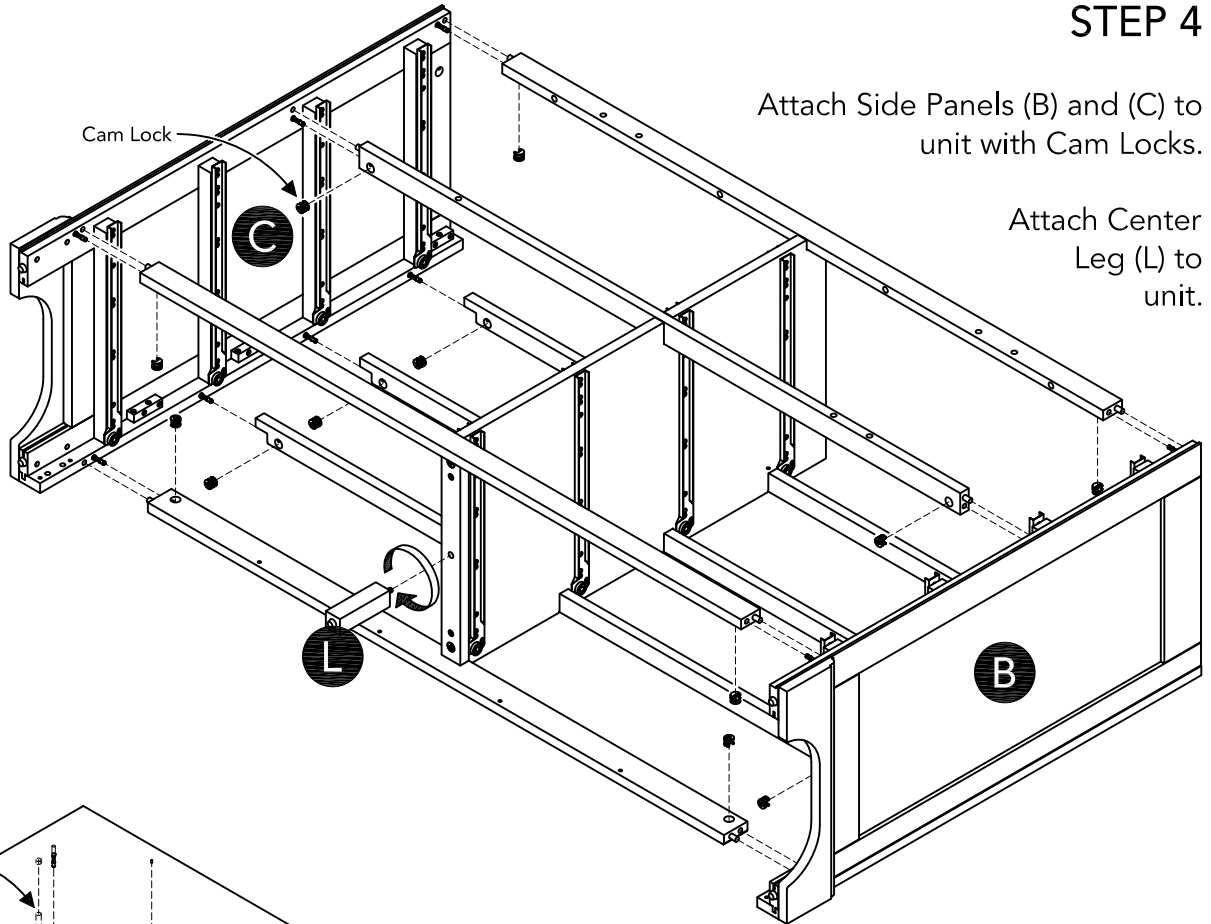

### STEP 5

Attach Top (A) to unit with Cam Locks, 1 1/2" Round Head Screws and Wooden Dowels.

Attach Plinth (G) to unit with 1 1/4" Round Head Screws and Wooden Dowels.

### STEP 6

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 2)

Note: Unit must be level to work properly.

Attach Back Panels (M) and (N) to unit with 1/2" Round Head Screws and Flat Washers.

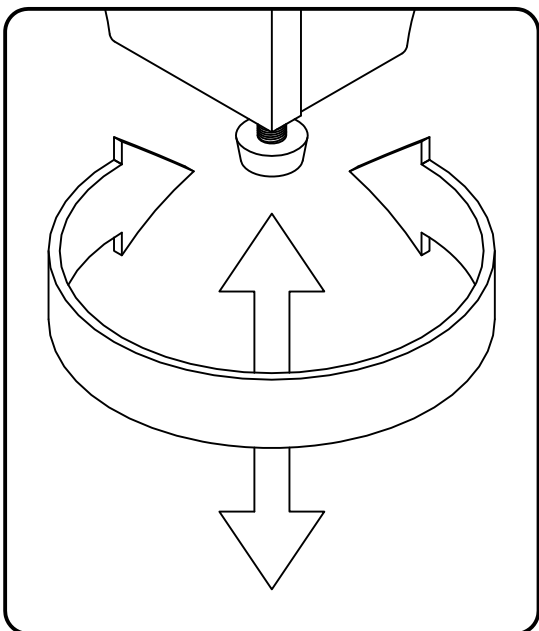 
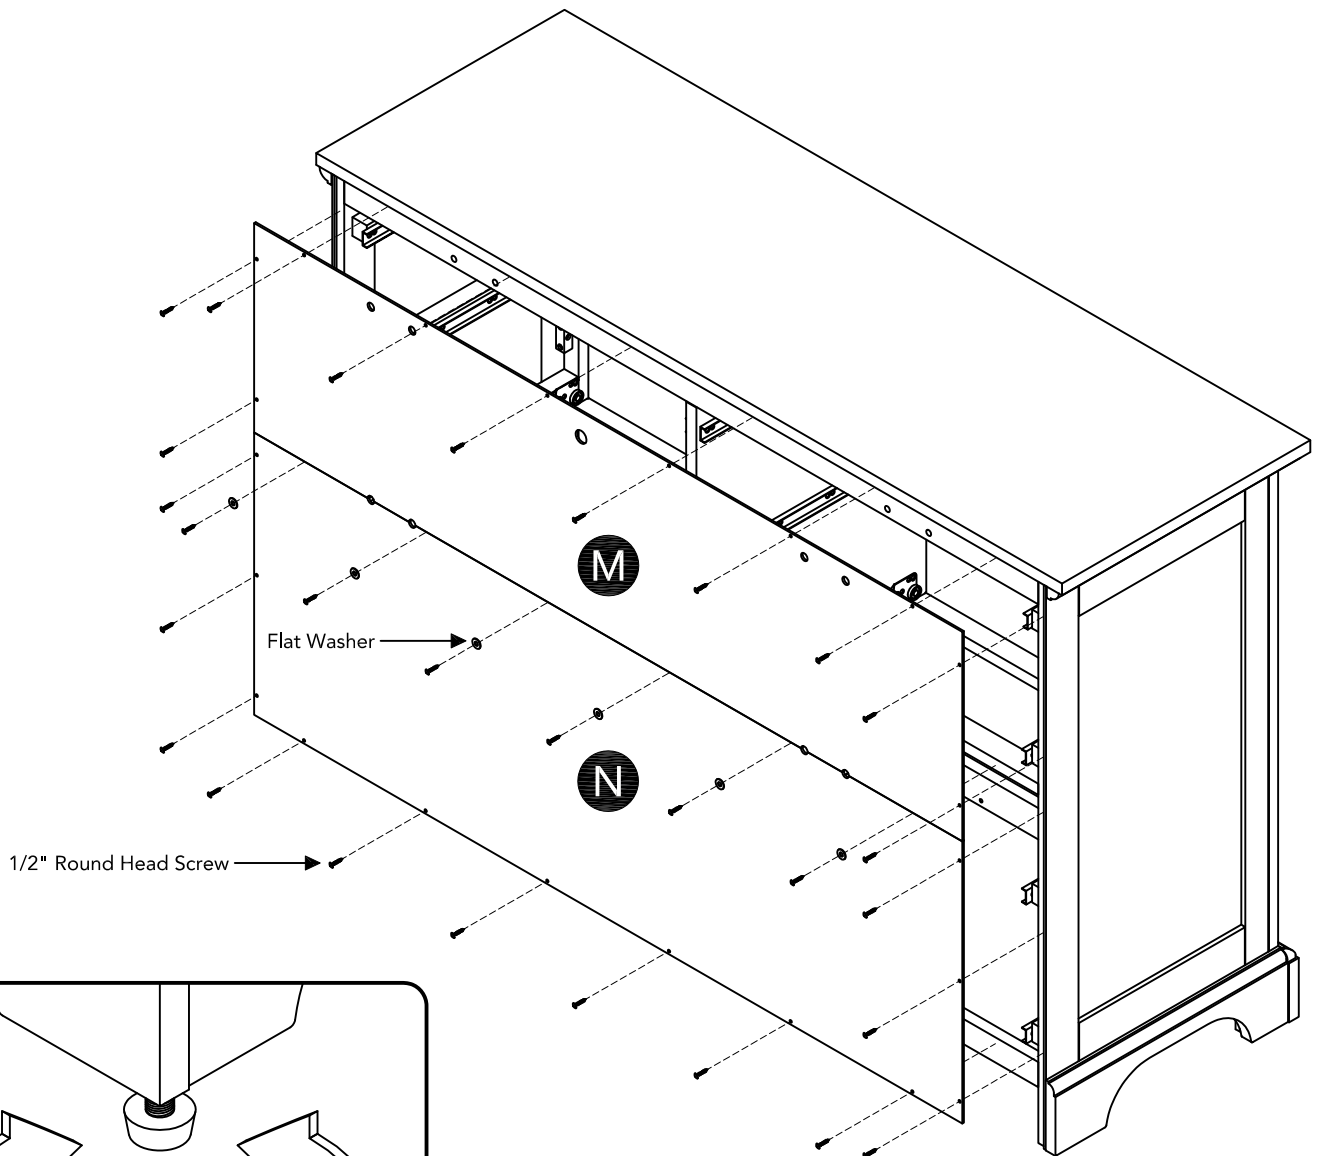 


Figure 2

# Assembly Instructions 6/10

## IMPORTANT

- To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

## STEP 7

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Back Panel (M). (See Figure 3)

Move unit.

Drill a 3/8" hole in wall 2 1/2" below mark.

Insert Anchor into the wall hole and attach Tip-over Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tip-over Restraint into unit through hole in Back Panel (M). (See Figure 5)

Attach Tip-over Restraint to unit with 1/2" Round Head Screw. (See Figure 6)

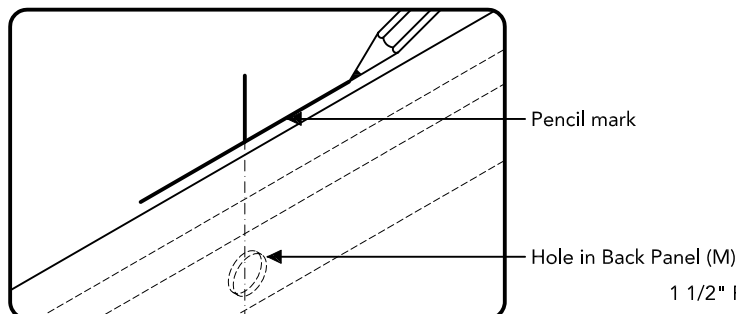 
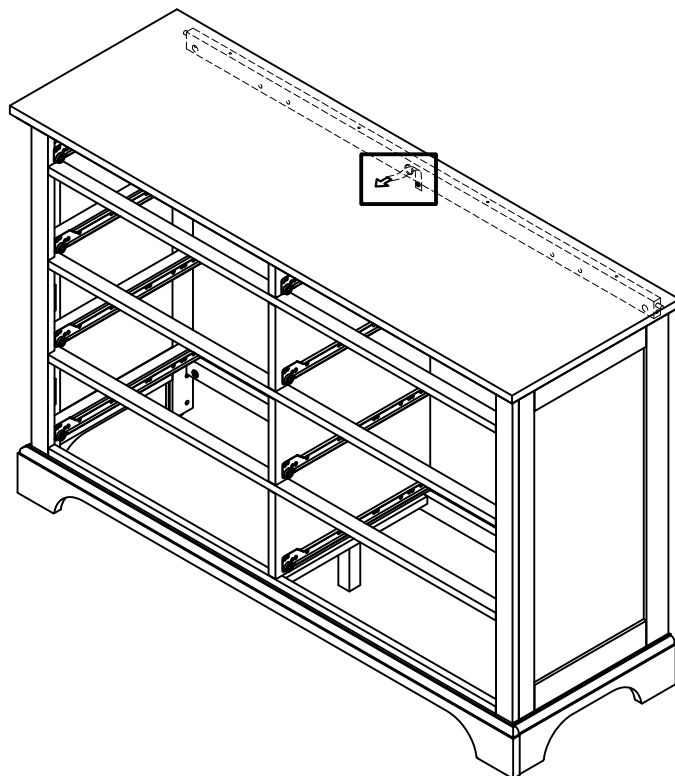 


Figure 3

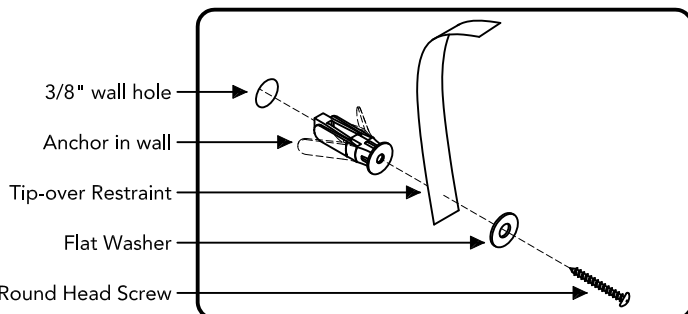 


Figure 4

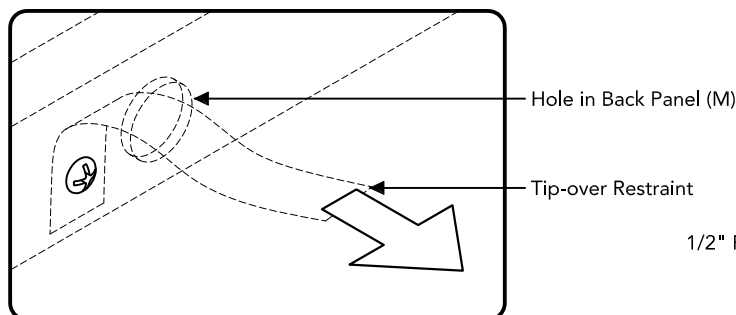 


Figure 5


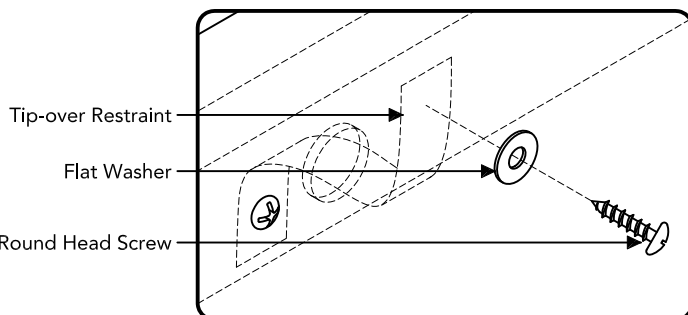 


Figure 6

## Hardware List

 

Tip-over Restraint  
1 pc.



Anchor  
1 pc. (+1 extra)



(M3x38)  
1 1/2" Round Head Screw  
1 pc. (+1 extra)




(M3x13)  
1/2" Round Head Screw  
1 pc. (+1 extra)




Flat Washer  
2 pcs. (+1 extra)

## Drawer (O)

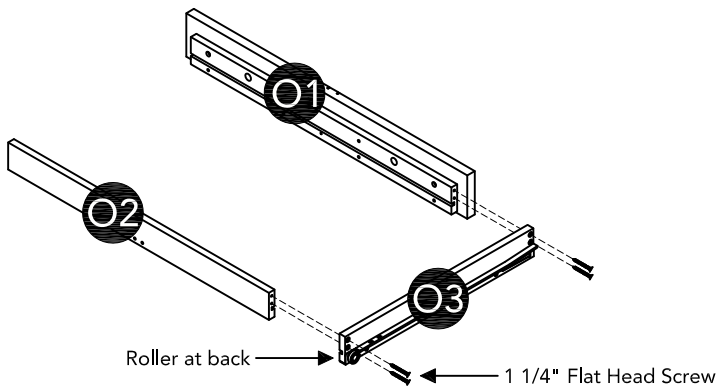 

### STEP 8

 Attach Drawer Side (O3) to Drawer Front (O1) and Drawer Back (O2) with 1 1/4" Flat Head Screws.

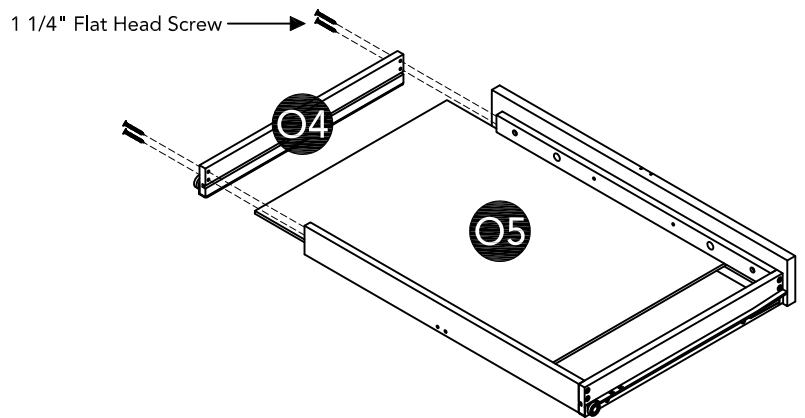



### STEP 9

Insert Drawer Bottom (O5) into groove.

Attach Drawer Side (O4) to unit with 1 1/4" Flat Head Screws.

### STEP 10

  Attach Support (O6) to unit with 1 1/4" Flat Head Screws.



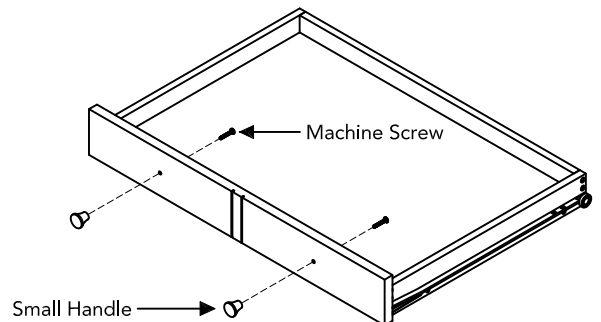
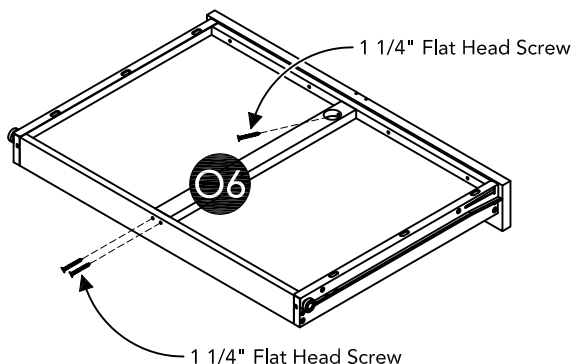


### STEP 11


Attach Small Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.
    
## Part List

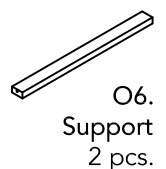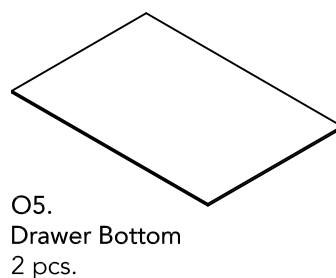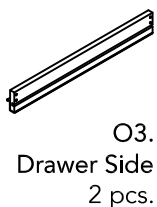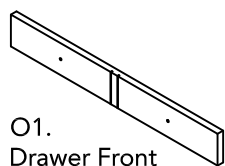

## Drawer (P)

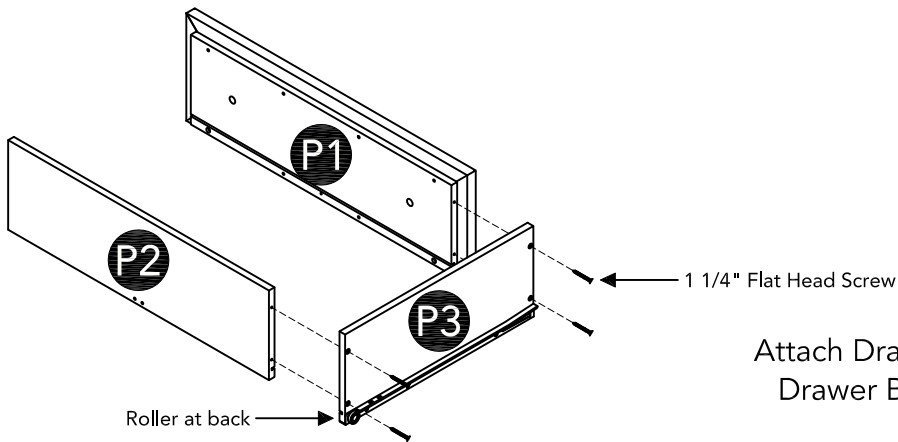 


**STEP 12**

Attach Drawer Side (P3) to Drawer Front (P1) and Drawer Back (P2) with 1 1/4" Flat Head Screws.

## STEP 13



Insert Drawer Bottom (P5) into groove.

 Attach Drawer Side (P4) to unit with 1 1/4" Flat Head Screws.

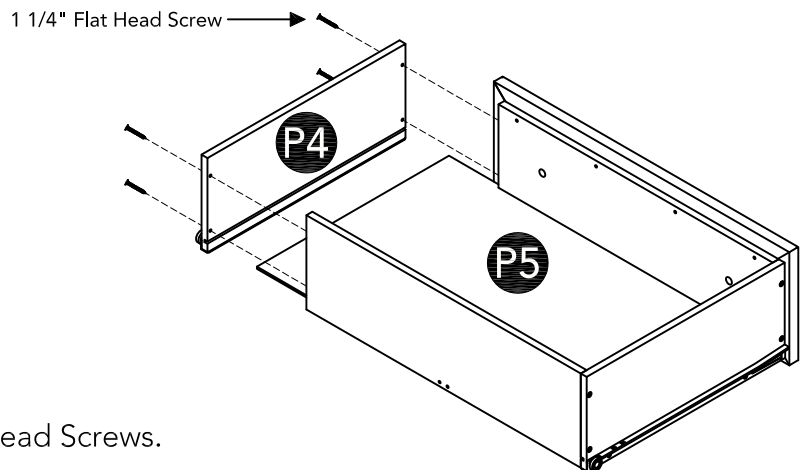

## STEP 14

  Attach Support (O6) to unit with 1 1/4" Flat Head Screws.





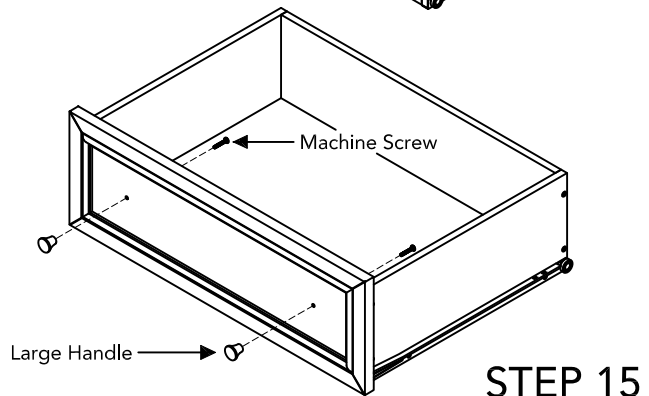
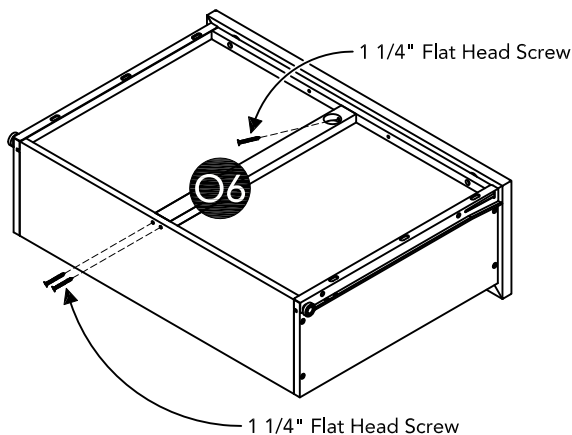


**STEP 15**

Attach Large Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

     
 
## Part List

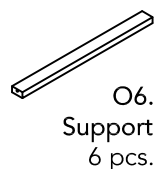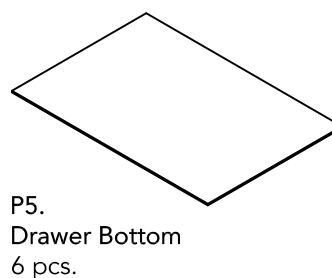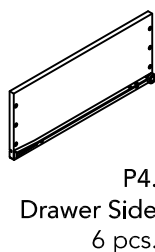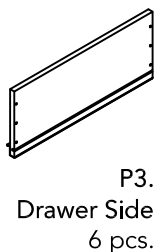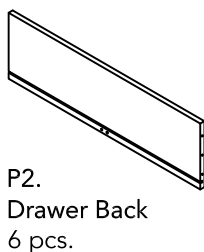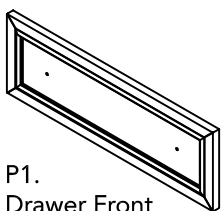



## STEP 16

  Loosen slightly the screws pre-installed on back of drawer fronts.

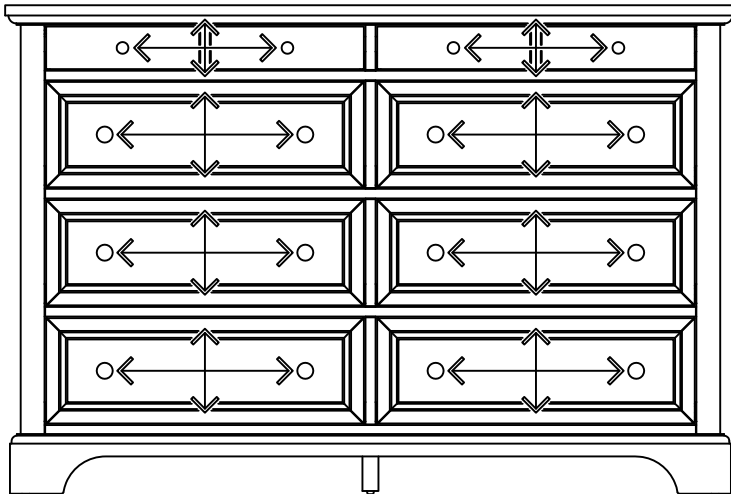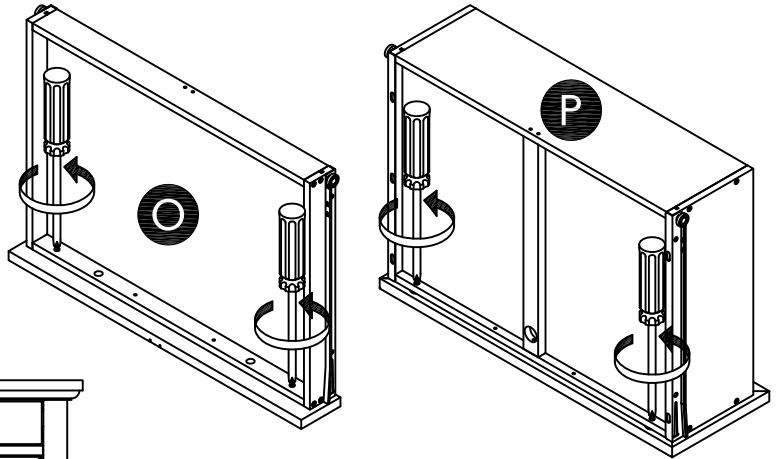

## STEP 17

 
Insert drawers into unit, then adjust drawer front panels left or right and up or down until gaps look proportional.

## STEP 18

Pull each drawer open slowly and re-tighten screws from Step 16.


Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

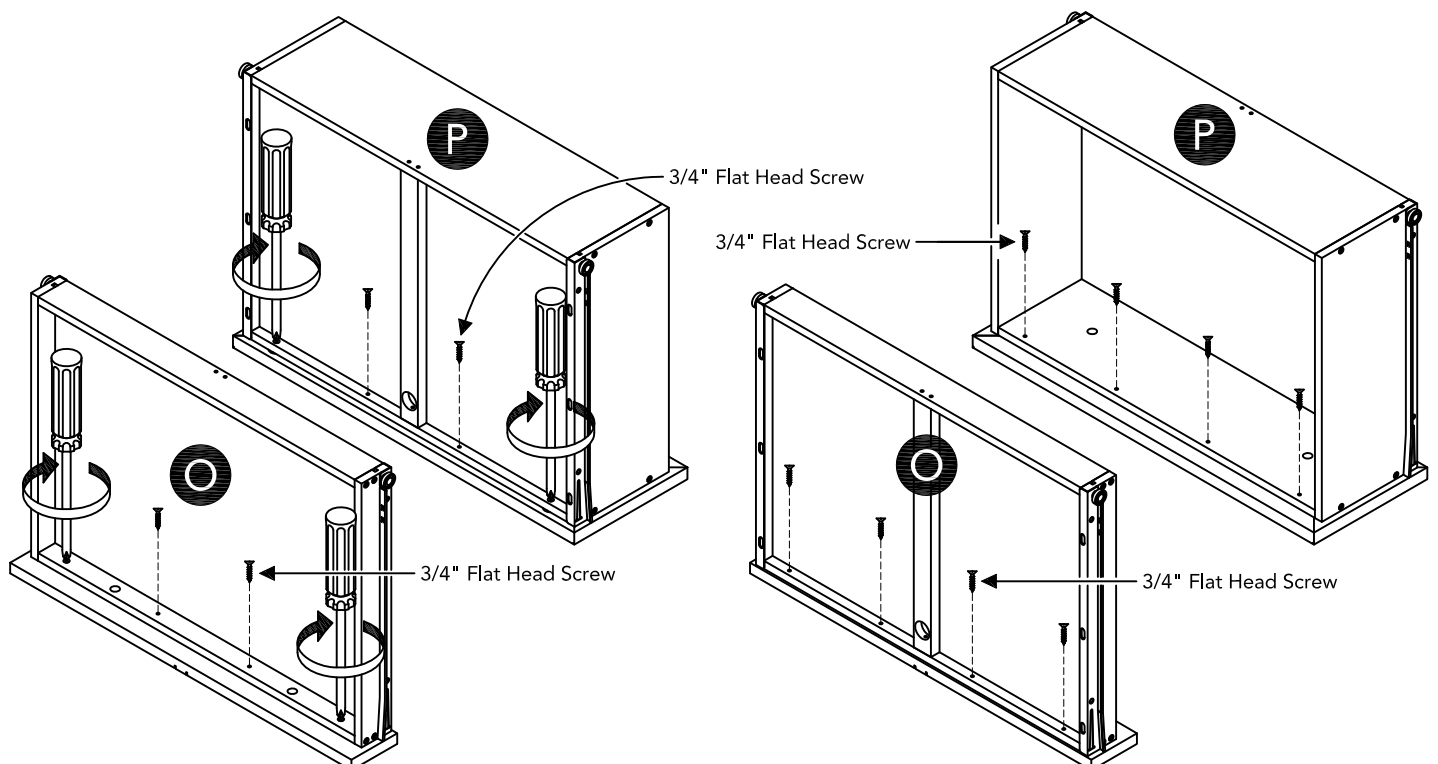

## STEP 19

 Slide Drawers (O) and (P) into position.

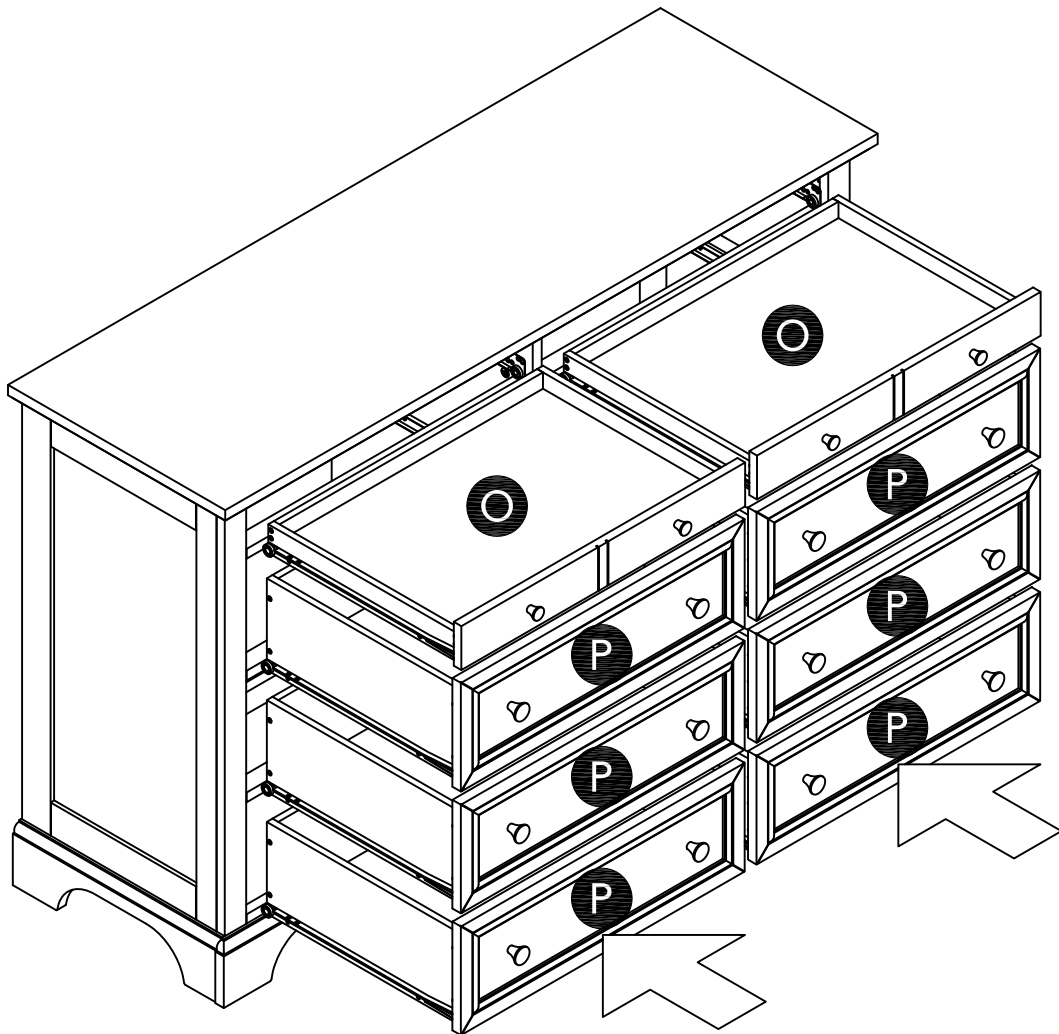

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.

**PREVENT  
CRACKING**



Do not place  
in direct sunlight.

**PREVENT  
FADING**



Do not write  
directly on surface.

**PREVENT  
MARKING**



Do not place hot  
objects on surface.

**PREVENT  
FINISH DAMAGE**



Do not use rubber  
based placemats.

**PREVENT  
DISCOLORING**

 


Do not use commercial  
waxes and polishes.

**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.

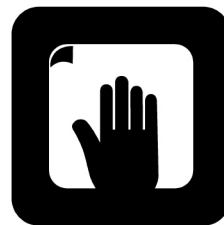

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer-service/replacement-parts](http://www.homestyles-furniture.com/customer-service/replacement-parts)

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319