



# Zepher™ Cotton Candy Machine

Item No: **81011A**

120V~60 Hz, 1080W, 9A



**WARNING ELECTRICAL SHOCK HAZARD.**

**FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**

**WARNING:** Handling the cord on this product may expose you to lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER HANDLING.

Electrical ground is required on this appliance.

1. Do not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
2. Do not use an extension cord with this appliance.
3. Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.

## SAFETY INSTRUCTIONS

1. Plug electrical cord into a certified electrical outlet with a corresponding voltage rating as listed on the machine model labels.
2. Always unplug the electric cord when appliance is not in use and before cleaning, adjusting or maintaining this steamer. Do not operate with a damaged cord or plug or after the machine malfunctions, has been dropped or damaged. Use authorized service for examination, electrical or mechanical adjustment or repair.
3. This equipment will be HOT during use and for a short time after it is turned off. BE CAREFUL. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this appliance. Keep combustible materials away from appliance.
4. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left operating and unattended.
5. This appliance is not intended for use in wet locations. Never locate appliance where it may fall into a water container.

Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock, fire or damage to the appliance.

## ASSEMBLY INSTRUCTIONS



Figure 1

1. Clean all parts of the machine before initial use.
2. Assemble cover and bowl as shown in figure 1.

## OPERATING INSTRUCTIONS

1. Plug unit into a properly grounded 120 volt power supply.
2. Be sure to keep hands and loose clothing away from the spinning head.
3. Fill spinning head with desired amount of sugar floss (1/8 cup = an average cone)
4. Turn on POWER switch to spin head.
5. Turn on HEAT switch.
6. Once the head heats up floss will begin to melt and create cotton candy.
7. Using a paper cone collect the cotton candy from the edges of the bowl in a circular motion.
8. Repeat steps 3-7 until the desired amount of cotton candy has been produced.
9. Turn OFF motor and heat switches when finished making cotton candy.

## CLEANING

1. After a day's use to remove the buildup of sugar in the extractor head you **MUST HEAT UP** the extractor head to remove the screws and lid. Unplug unit. Soak lid in water and wipe head clean with damp cloth.
2. Remove bowl and wash with soap and water. Use wash cloth to wipe clean and let dry.
3. Use a slightly damp, non-abrasive sponge or non-abrasive towel to wipe clean the outside of the unit, wipe with a non-abrasive towel to dry. Do not use excessive water when cleaning this unit

## PARTS LIST

Part #	Description
81001	Heating head
81002	Electrical brush
81003	Motor
81004	On/Off switch
81005	Bowl
81006	Bowl Mount Clamps

Part #	Description
81007	Fuse 5A
81008	Fuse Socket
81009	Belt
81010	Temperature Limiter
81012	Spinning Shaft
81013	Bubble Top Dome



81001 Heating Head



81002 Electrical Brush



81003 Motor



81004 On/Off Switch




81008 Fuse Socket



81010 Temperature Limiter

## Wiring Diagram

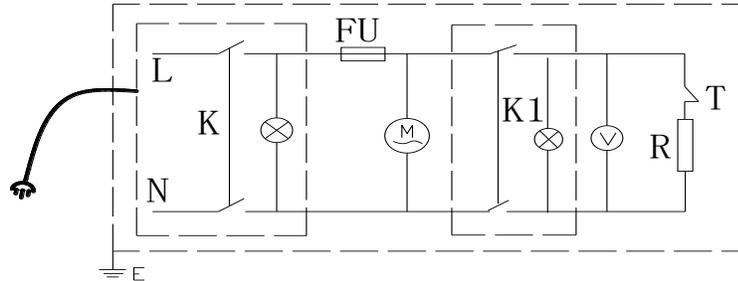

Description	
L	Copper Sheathed Cable
M	80W AC Motor
Fu	Tubular Fuse
K	Main Switch
T	Temperature Limiter
V	0-300V AC Voltage Meter
R	1000W Heating Plate
K1	Heating Switch