

recommended pressure for any inflatable
 • NEVER exceed the manufacturer's
 PERSONAL INJURY CAN OCCUR.
 INFLATING. BODILY HARM OR
 ANY PURPOSE OTHER THAN
 and other inflatables. DO NOT USE FOR
 equipment, air mattresses, beach toys
 tires, bike tires, ATV tires, sports
 • This inflator is designed to inflate car
 receptacles.
 with older 8 Amp cigarette lighter
 rated 15 Amps or higher. Do NOT use
 • For use with any 12V DC power outlet
 harm or injury.
 inflator/vehicle and could cause bodily
 inflator and power cord to overheat.
 overheating can cause damage to your
 A dirty 12 Volt power outlet can cause the
 USE.
 COOL AT LEAST 10 MINUTES AFTER
 • ALLOW THE COMPRESSOR TO
 10 minutes continuously.
 • DO NOT run compressor for more than
 during use.
 operating. Place compressor on ground
 • HOT - Do not hold in hand while
 operating. Place compressor on ground

▲WARNING Read and understand all instructions before use. Failure to follow instructions can result in personal injury and/or property damage. Save these instructions for future reference.

IMPORTANT SAFETY INFORMATION

▲DANGER Danger indicates an imminent hazardous situation which, if not avoided, will result in death or serious injury.
▲WARNING Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
▲NOTICE Notice indicates important information, that if not followed, may cause damage to equipment.
▲CAUTION Caution indicates a potentially hazardous situation which, if not followed, MAY result in minor or moderate injury.
 Notice indicates important information, that if not followed, may cause damage to equipment.

SAFETY GUIDELINES / DEFINITIONS

airTIGHT
12V Heavy Duty Tire Inflator

Model No. 60404

OPERATOR'S MANUAL

Your tire inflator has been engineered and manufactured for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of trouble-free performance.



▲WARNING
 Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain this manual for future reference.

For assistance with this product call 800-426-1262 between 7 a.m. and 4 p.m. Pacific time.

1. Confirm that the power switch on the inflator is in the "O" (OFF) position.
2. To use inflation accessories, screw the desired accessory into the chuck securely.
3. Plug power cord into 12V DC power outlet.
4. Insert the appropriate inflation power outlet rated 15-Amps or higher. Do NOT use with older 8-Amp cigarette lighter receptacles.
5. Turn inflator power switch to "I" (ON) position and inflate to the manufacturer's recommended air pressure.
6. When the object is firm, turn power switch to the "O" (OFF) position. DO NOT OVER INFLATE OBJECTS.
7. To operate light, toggle switch from the "OFF" (O) position to either the "LOW" (l) or "HIGH" (H) positions.
8. Unplug the power cord from 12V DC power outlet.

OPERATING INSTRUCTIONS

- Accurate, easy to read pressure gauge
- Air accessories include: sport ball and raft inflator adapters
- 40 in. High pressure hose length with screw-on chuck
- 9.5 Ft. 12V power cord - Plugs into 12 volt accessory outlet
- Easy on/off switch
- Two setting light switch
- Bright light for emergencies
- Powerful 12 volt, 150 PSI motor

FEATURES

oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvent to clean the inflator. Operate the inflator only with the attachments that are included.
 • USE SAFETY GLASSES. Also use face or dust mask if operation is dusty.
 • Your vehicle's 12 Volt battery must be fully charged to get the best performance from your inflator. If your vehicle's battery is weak, the inflator will not work at its maximum output level.
 • For best results, it is recommended that you operate your inflator with your vehicle's engine running.
▲WARNING: DO NOT RUN VEHICLE ENGINE INSIDE A CONFINED AREA SUCH AS A GARAGE as bodily injury or asphyxiation resulting in death can occur. ALWAYS ALLOW FOR PROPER VENTILATION.
 • Most vehicle 12 Volt power outlets will operate with vehicle ignition off; however, some vehicles require that the ignition be turned on.
 • THIS INFLATOR IS NOT DESIGNED TO FILL AIR TANKS OR AIR SHOCKS.

TROUBLE SHOOTING

- INFLATOR DOES NOT WORK WHEN SWITCHED TO "ON"**
- Power cord may not be plugged in completely. Check the connection.
 - Check vehicle power outlet and power plug terminals for dirt. Use a non-conductive probe, not fingers or metal, to clean.
 - Check vehicle power outlet fuse, which should be a minimum of 15 Amps.
 - Fuse may have blown. Check fuse in power plug adaptor and replace if necessary with one of the same amperage. NEVER replace a blown fuse with a fuse having a higher rating.

- UNIT IS RUNNING BUT TIRE IS NOT INFLATING**
- Check that the air hose connector is attached properly to the tire valve stem.
 - Check for tire leaks or damage, and check air hose for breaks and leaks at fittings.
- INFLATOR FEELS HOT OR RUNS SLOWLY**
- Unit may have overheated. Shut the unit off and allow to cool for 20-25 minutes.
 - NEVER use this inflator for more than 10 minutes continuously.
 - Voltage may be too low. Check condition of vehicle battery.

