

## **E-MOTION ROLERBALL PEN**



- Due to the conical shape of the e-motion Pen, the cap is not designed to post and will not do so 100% of the
- e-motion Rollerball Pens come equipped with a black rollerball refill.
- 1. Remove the cap (1) from the barrel (3) by turning the barrel (3) counterclockwise.
- 2. Remove the front piece (2) by turning the barrel (3) counterclockwise.
- 3. Remove the used refill (4) from the barrel (3).4. Insert a new Faber-Castell Rollerball Refill (4) into the barrel (3).
- 5. Return the front piece (2) to the barrel (3) by turning the barrel (3) clockwise and begin writing.
- 6. When not in use, return the cap (1) to the barrel (3) by turning the barrel (3) clockwise.

**REFILLS** Rollerball: #148783 Black #148784 Blue