


MERANTI WOOD BAR HEIGHT CHAIRS


STR-572

Read all assembly and care instructions carefully before using this product. Save this manual for future reference.

 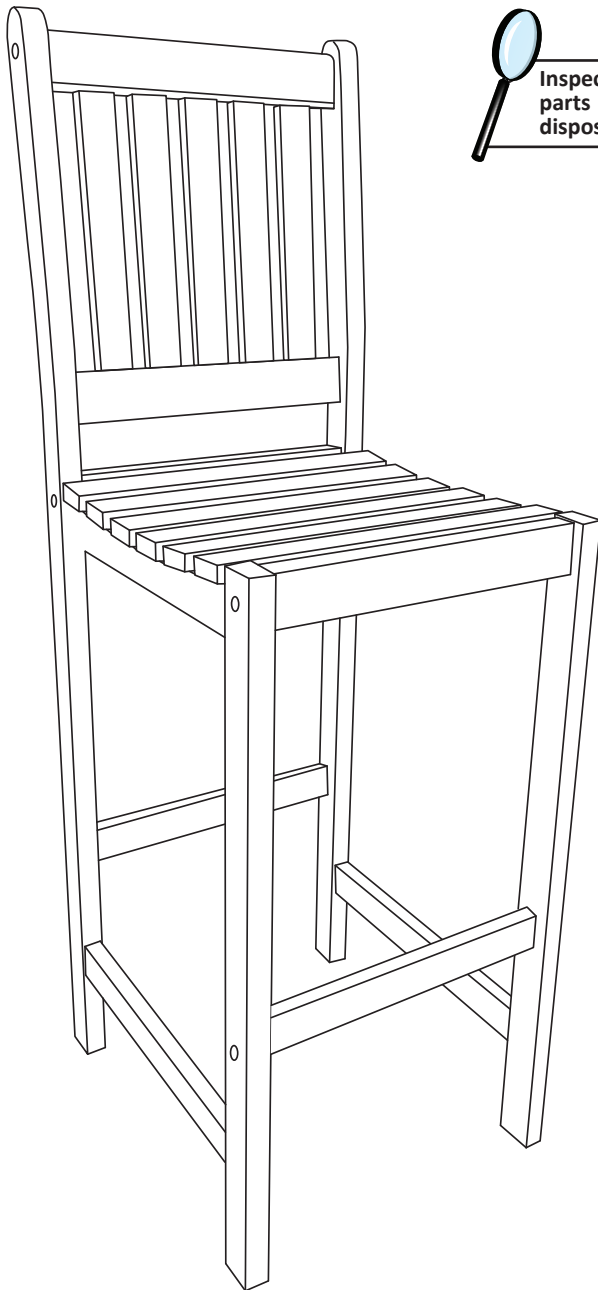




Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

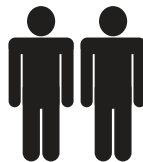
 
 


Inspect packaging to ensure all parts are accounted for before disposing of packing materials.



2-PERSON ASSEMBLY
RECOMMENDED

No.	PARTS	QTY.
A	 Backrest	2
B	 Seat	2
C1	 Right Side Panel	2
C2	 Left Side Panel	2
D	 Leg Bar	4

No.	HARDWARE	QTY.
1	 JCBC M6 x 60mm Bolt with Barrel Nut	20
2	 Barrel Nut Driver	1
3	 Hex Key	1

NOTE: Save the hex key to use in the event hardware becomes loose and needs to be tightened.

! HELPFUL HINT

Do not fully tighten hardware until all components are assembled. If hardware is tightened too soon, mounting holes may not align, and parts may not easily fit together.

ASSEMBLY

Read carefully and understand assembly before beginning.

Do not fully tighten bolts until all components have been loosely assembled.


STEP 1

C1: 1

C2: 1

D: 2

1: 4

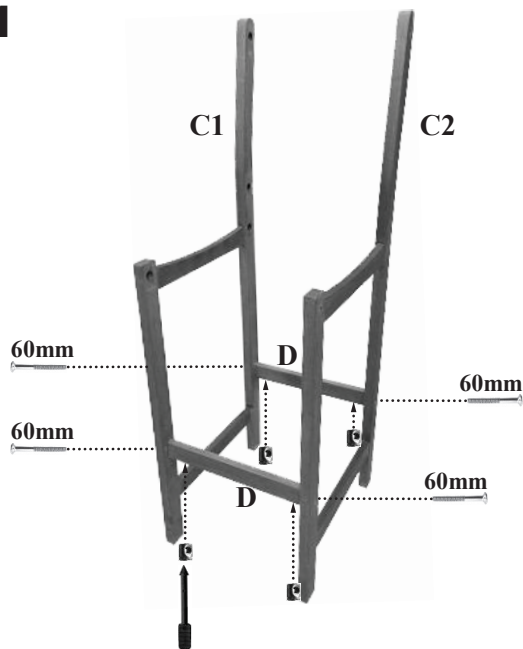


- Insert 2x Barrel Nut into each Leg Bar (D). Use the Barrel Nut Driver (2) to align the barrel nut with the hole on the outside of the leg bar.
- Insert the leg bars into the notches at the bottom of the Right Side Panel (C1) and Left Side Panel.
- Loosely fasten the components by hand-tightening 4x 60mm Bolt (1), ensuring the bolt threads into the barrel nut.

STEP 2

B: 1

1: 2

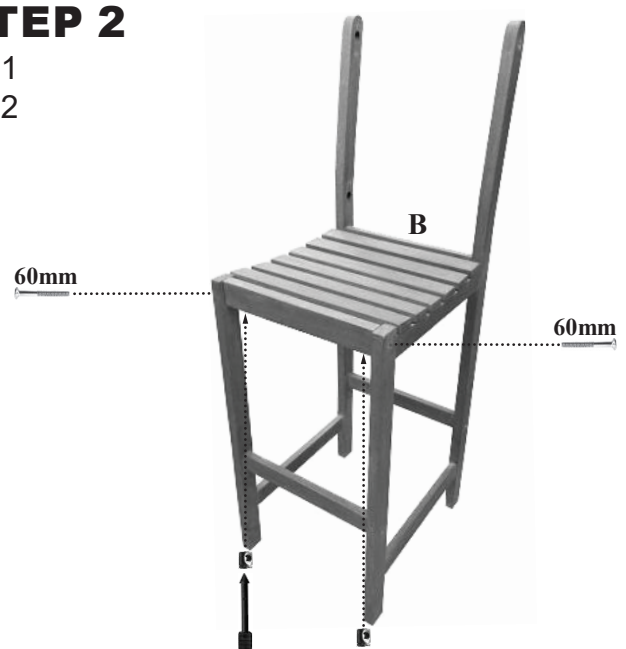


- Insert 2x Barrel Nut into the underside of the front of Seat (B). Use the Barrel Nut Driver (2) to align the barrel nut with the hole on the outside of the seat.
- Align the pegs on the seat with the notches on the inside of the side panels.
- Secure the front of the seat by hand-tightening 2x 60mm Bolt (1), ensuring the bolt threads into the barrel nut.

STEP 3

A: 1

1: 4

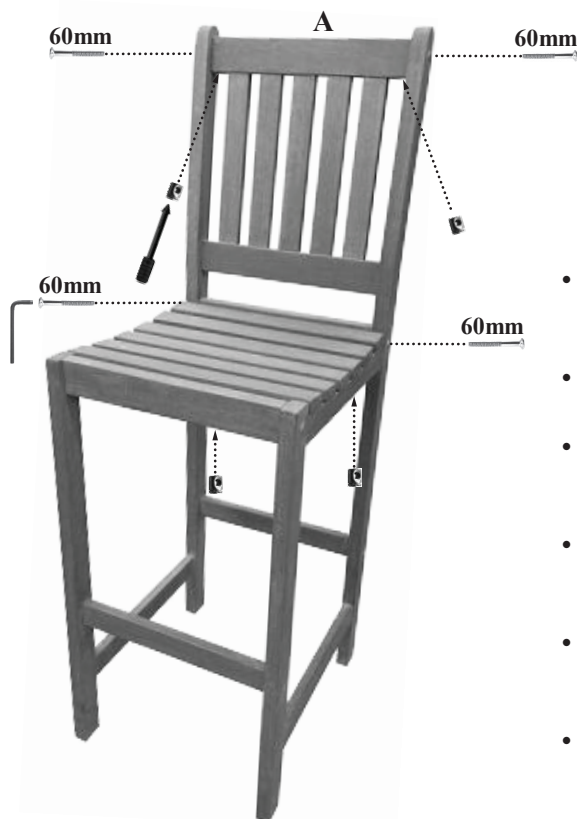

- Insert 2x Barrel Nut into the top of Backrest (A). Use the Barrel Nut Driver (2) to align the barrel nut with the hole on the outside of the backrest.
- Place the backrest between the side panels, ensuring the end of the backrest with the barrel nuts is on top.
- Insert 2x Barrel Nut into the underside of the back of Seat (B). Use the Barrel Nut Driver to align the barrel nut with the hole on the outside of the seat.
- Loosely fasten the backrest by hand-tightening a 60mm Bolt (1) into each side of the top of the backrest, ensuring the bolt threads into the barrel nut.
- Loosely fasten the seat by hand-tightening a 60mm Bolt (1) into each side of the back of the seat, ensuring the bolt threads into the barrel nut.
- Tighten all hardware using Hex Key (3). Do not over-tighten, as doing so may damage the wood.

General Use & Care

SAFE USE: For residential use only. Only use on a flat, level surface. Do not stand on the chair and do not sit on the arms of the chair. Standing on a chair or rocking on the back of the chair may weaken the structure.

MOVING: Always lift furniture when moving it around, never drag it.

INSPECT: Periodically check bolts and tighten as necessary.

EXPOSURE: Over time, sunlight and weather elements may degrade and change the color of natural wood. Avoid leaving wooden furniture in the rain or high-humidity climates as wood expands and contracts with moisture and humidity changes. If this item is not used for extended periods, cover it with a breathable cover or store it indoors.

WINTER CARE & STORAGE: Protect this item from inclement weather, especially ice and snow. Move it to an indoor location that is cool and dry. Covering while in storage is recommended to help prevent dust build-up.

CLEANING: Identify the direction of the woodgrain and wipe dust and debris using a soft, dry cloth. Surface mildew can be washed away using a very mild solution of soap and water and a soft cloth; after drying, oil treatment is recommended.

MAINTENANCE: Left untreated, the wood will turn a silvery gray color. To maintain the appearance, apply a suitable penetrating Wood, Teak or Linseed Oil (not included) twice a year. Bring furniture indoors and allow it to dry for at least 12 days before applying oil. Only apply oil to wooden surfaces. Use a soft cloth or soft brush and carefully apply oil as directed by the wood oil manufacturer.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS OR PROTECTIVE COATINGS.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.