

# METAL DECOR

Please read this document carefully and save it for future reference.



## CAUTION:

## SHARP EDGES USE EXTREME CAUTION

### ⓘ IMPORTANT INFORMATION ⓘ

Each unit is hand-painted metal. Imperfections in the paint, exposed metal, and rust spots are a natural part of the manufacturing process and are not cause for return.

Exposure to outdoor elements will result in erosion of the finish and structure of this unit.

Water and high moisture may cause the paint to chip or peel.

Long-term exposure to sunlight may cause the paint finish to mellow in color, crack and peel.

**The product warranty does not cover damages caused by exposure to outdoor elements.**

### LOCATION

Avoid displaying metal decor in or near high-traffic areas, especially areas where children and pets play.

### CLEANING

Clean metal decor frequently to prevent dust, dirt and debris from building up.

1. Remove loose dust, dirt, cobwebs, and debris with a very soft-bristled brush, like a paintbrush.
2. Use a soft, dry cloth to gently wipe away dirt and debris from larger surfaces. For stuck-on dirt, dampen the cloth slightly and gently wipe soiled surfaces. **Never use cleaners, abrasive materials, or high-pressure sprayers to clean this item.**

### ⚠ SAFETY STATEMENTS AND WARNINGS ⚠

- For decorative purposes only. This item is not a toy.
- Use caution when handling metal decor as some edges may be sharp.
- Store indoors during inclement weather to prevent rust and paint peeling.
- Never use harsh chemicals or abrasive materials to clean metal decor.
- Do not use a pressure washer or high-pressure sprayers to clean this item.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

### ⚠ WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.