




Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested with the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at **833-982-1977**, by email: [customerservice@sunnydazedecor.com](mailto:customerservice@sunnydazedecor.com), or via our contact us page at <https://tiny.cc/SunnydazeContact>

## Assembly Instructions

1. Connect the two ends of LED light cord together and screw over the plastic collar. Push and place the LED light in the water basin.
2. Adjust pump flow as needed. Attach tube to pump. Put in basin.
3. Push the cable with pin into the transformer, plug and screw over the plastic collar.
4. Run the cable through the groove of the access door. Fix the cover properly.
5. Fill the basin with enough water then connect the pump cord to the socket.

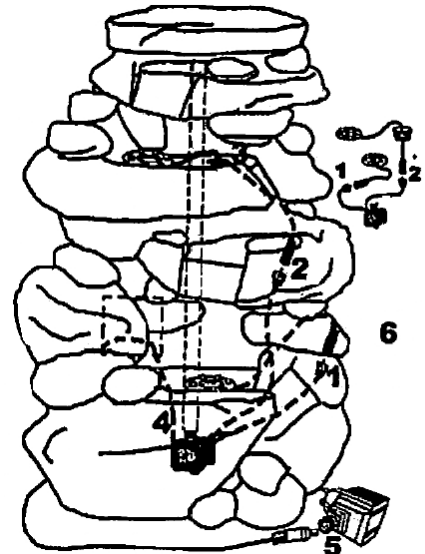

## Important Care Notice

1. Fill the fountain with sufficient water to ensure the pump is well submersed.
2. Clean and top off the water on a regular basis.
3. Always shut off the power before cleaning and maintaining the pump.
4. Never allow the fountain pump to run dry as this will cause damage and invalidate the warranty.
5. It is not recommended to leave the fountain running constantly. It is suggested that the fountain be turned off regularly.

## Winter Care (for outdoor fountains)

1. During winter never allow ice to form in the bowls as the force of the ice forming will crack the bowls. Drain the fountain and store indoors.
2. The pump should be disconnected from the main supply, removed from the fountain, and cleaned in the following way:
  - Remove the inlet cover from the front of the pump, and gently pull out the rotor assembly from the pump.
  - Clean the rotor and the rotor housing unit with water, and then dry with completely.
  - Reassemble the parts and store the pump in a cool dry area.

## Troubleshooting

1. If the pump cannot pump water check if the power is correctly connected or check if sufficient water is inside the reservoir.
2. Check pump and tubing for any obstructions or tears.
3. Remove the cover with the pump flow adjuster on it, and gently remove the level off of the inner cover to reveal the pump and rotor. Carefully check to make sure nothing is broken or jammed.
4. If the pump is running slow. Check the following:
  - The flow control on the body of the pump
  - Ensure the pump is completely submersed.
5. If any abnormal can be heard while pump is in operation, turn off the power supply and check the rotor assembly as follows:
  - Remove the pump cover and rotor plate from the front.
  - Gently take out the rotor assembly from the pump.
  - Rinse the motor assembly and the housing with clean water in order to remove any grit or debris.
  - If any breakage or surface damage is found on the rotor assembly, please contact the manufacturer supplier directly, for any replacement parts.

Over time the paint finish will gradually mellow in color, this is part of the natural weathering process.