




DECOR

SQUARE FIBER CLAY PLANTER WITH LEGS

Read the assembly instructions carefully and follow the care instructions.

Save these instructions for future reference.

Assemble on a soft, clean surface to avoid scratching or damaging the finish.

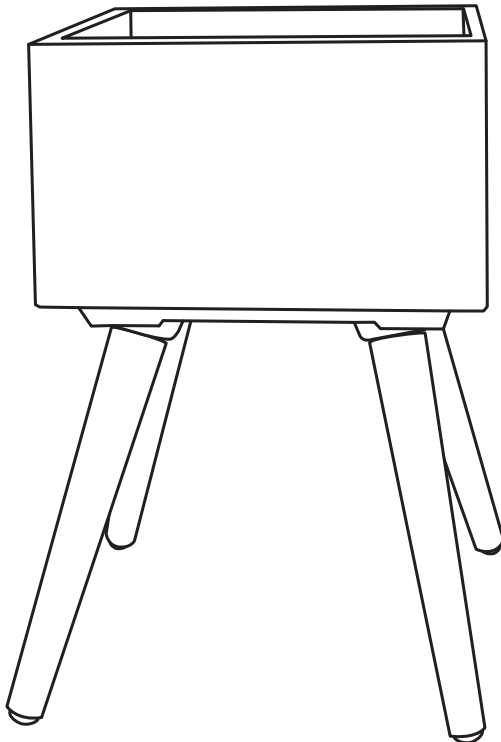

DW185422

11/2020

WARRANTY

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control.

Register your warranty at <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at **833-982-1977**, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

Purchase Date: _____ / _____ / _____

Order/Customer Reference Number: _____

***Write down the purchase date and order information
to help expedite customer service inquiries.***


⚠️ WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

1

ASSEMBLY

Assemble on a soft, clean surface to avoid chipping the planter.

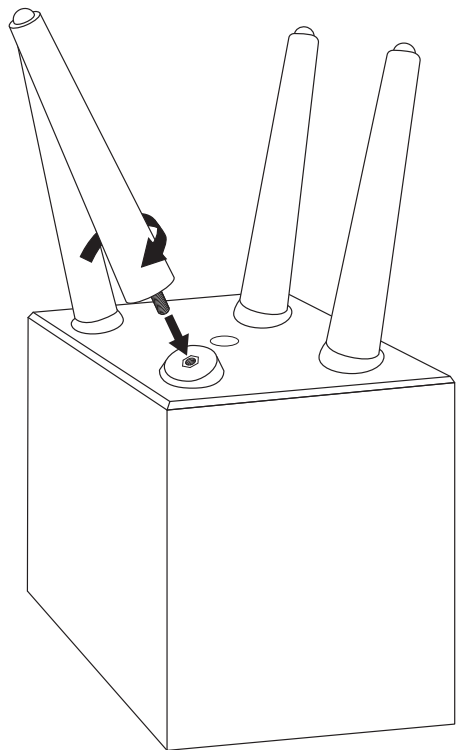

- Gently place the planter upside-down on a soft, clean surface.
- Screw each leg into the threaded holes on the bottom of the planter. Do not over-tighten.
- Insert the plug into the drainage hole (optional).
- Carefully turn the planter upright and gently place it on a flat, level surface.
- Place the filter net over the drainage hole inside the planter to prevent soil loss.

! HELPFUL HINTS

Only use the planter on a flat, level surface.

Make sure all legs are touching the ground before filling the planter. It may be necessary to slightly adjust how tightly each leg is screwed into the planter to ensure the weight is evenly balanced.

USE & CARE

FILLING: Only use lightweight potting soil. Although fiber clay planters are sturdy and durable, cracking can occur when soil retains too much moisture.

WATERING: Take care when watering. Overwatering may lead to hardscape and surface damage due to leaks and/or run-off.

EXPOSURE: Over time, sunlight and weather elements may degrade and change the color of this product.

Avoid exposure to rain as it may damage the wooden legs.

MOVING: Always lift the planter when moving it, never drag or slide it as doing so may cause the legs to break off the planter. Slowly and gently set the planter down to prevent breakage.

CLEANING: Gently brush dust and debris from the fiber clay using a soft-bristle brush. Avoid applying pressure while cleaning, as it may cause the fiber clay to chip and flake.

Wipe wooden surfaces with a dry, soft cloth.

Do not use chemicals, polish or abrasive materials when cleaning any part of this product.

WINTER CARE & STORAGE: Protect this planter from inclement weather, especially ice and snow. To prevent cracking, empty and store indoors during freezing temperatures.

Any modification to the product or failure to follow the recommended care will void the product warranty.