

88 5537 41

 
The Lafayette Chest

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

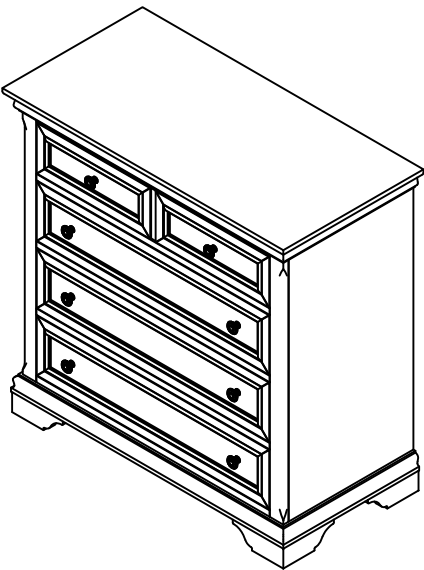

Part List

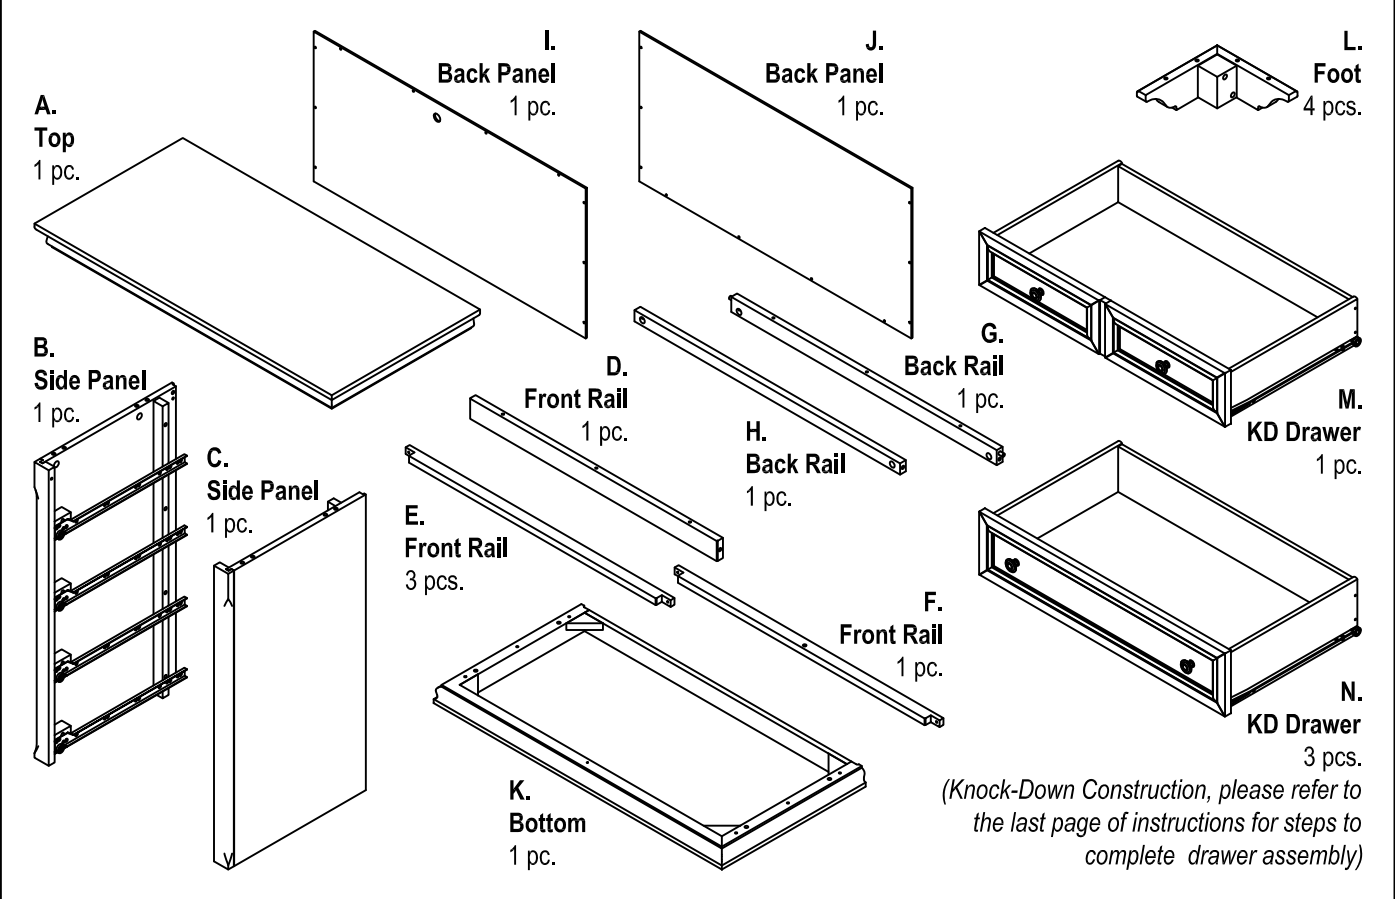 

Hardware List

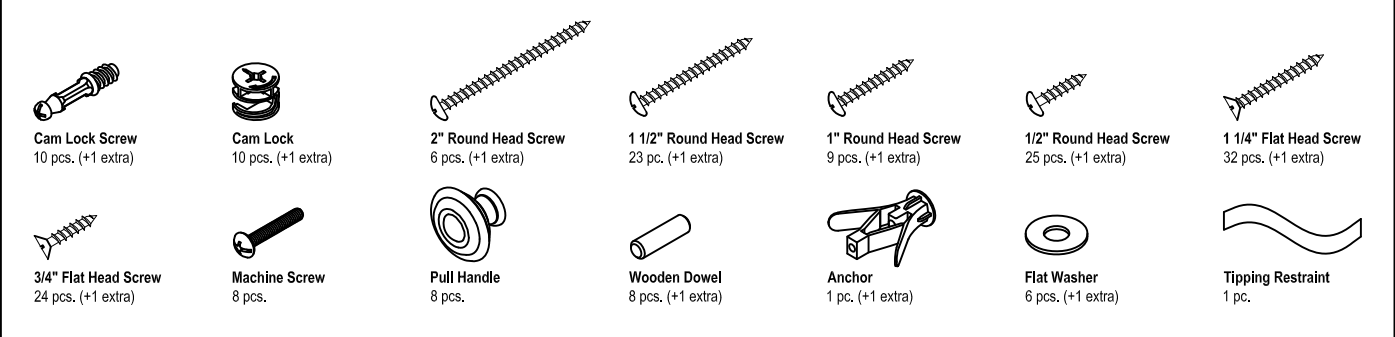 

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/8

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levellers to level.

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panel (B) and (C).

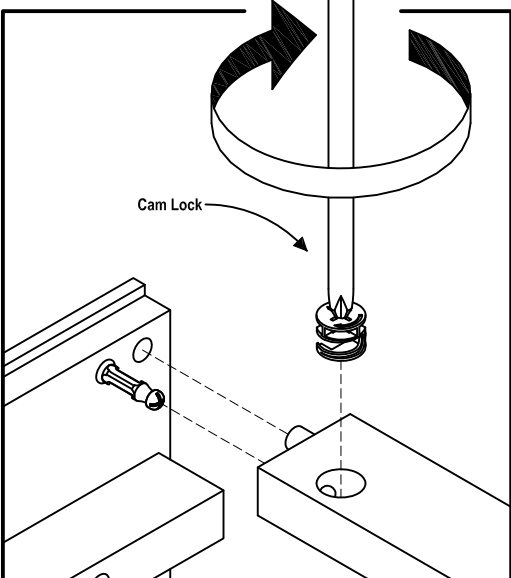 
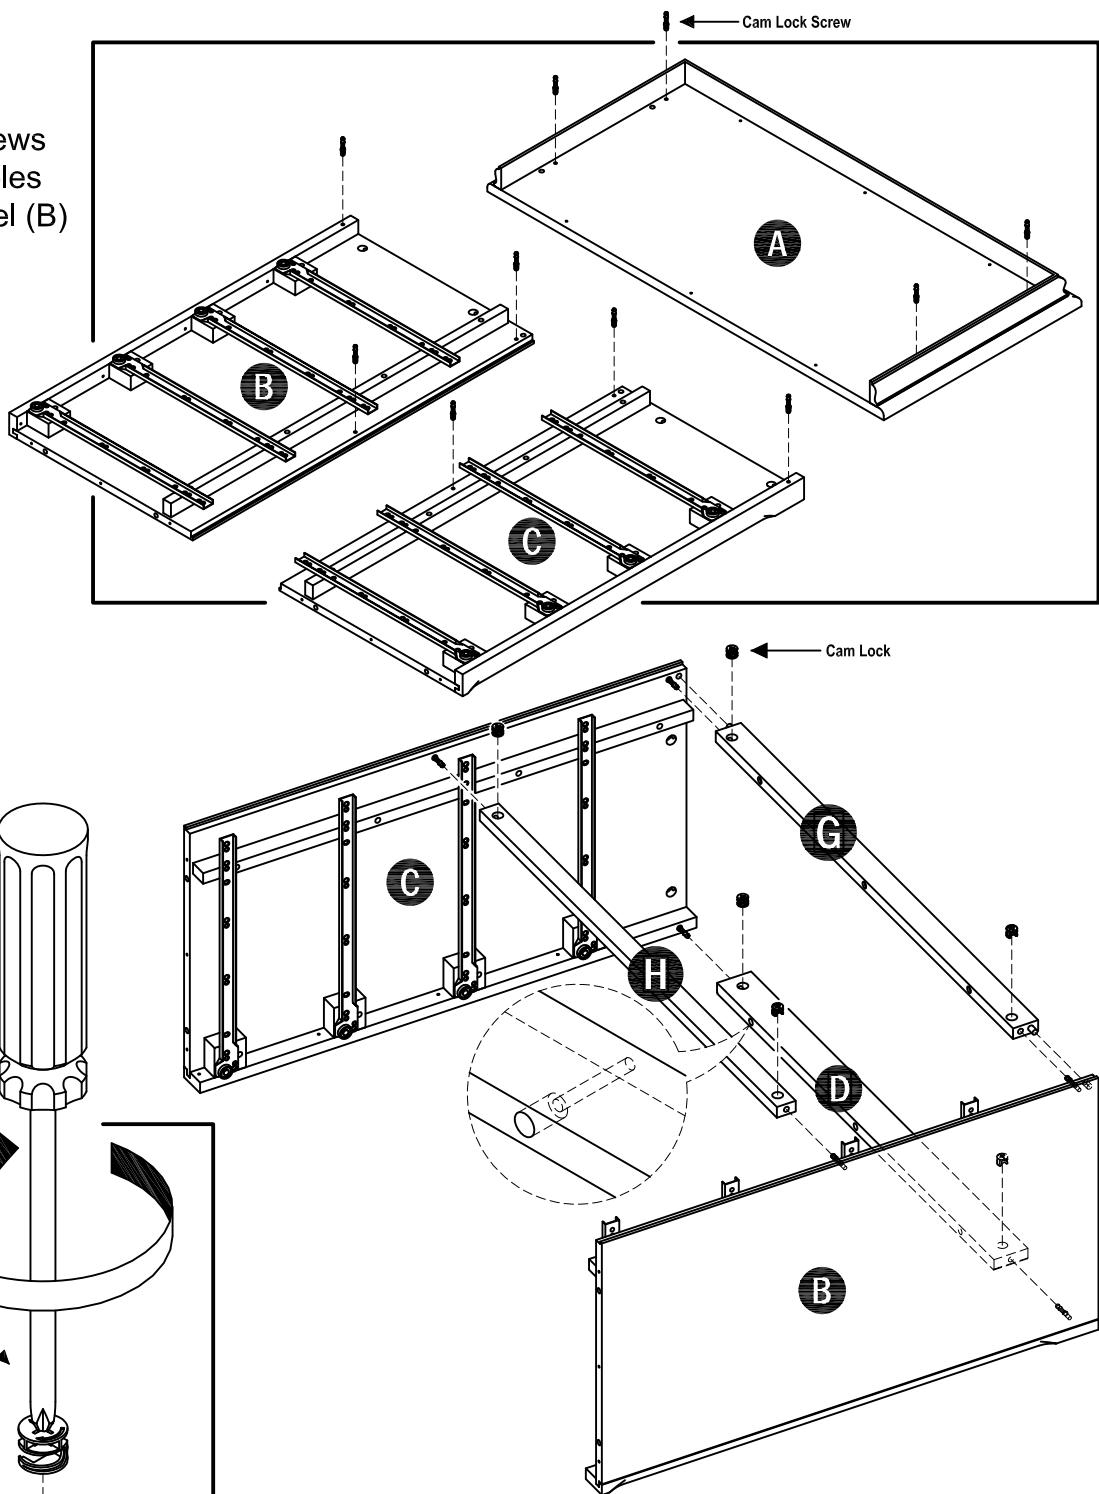 


Figure 1

 
 
STEP 2

Attach Front Rail (D) and Back Rails (G) and (H) to Side Panels (B) and (C) with Cam Locks. (see Figure 1).

Assembly Instructions 3/8


STEP 3

Attach Top (A) to unit using Cam Locks, 2" Round Head Screws and Wooden Dowels.

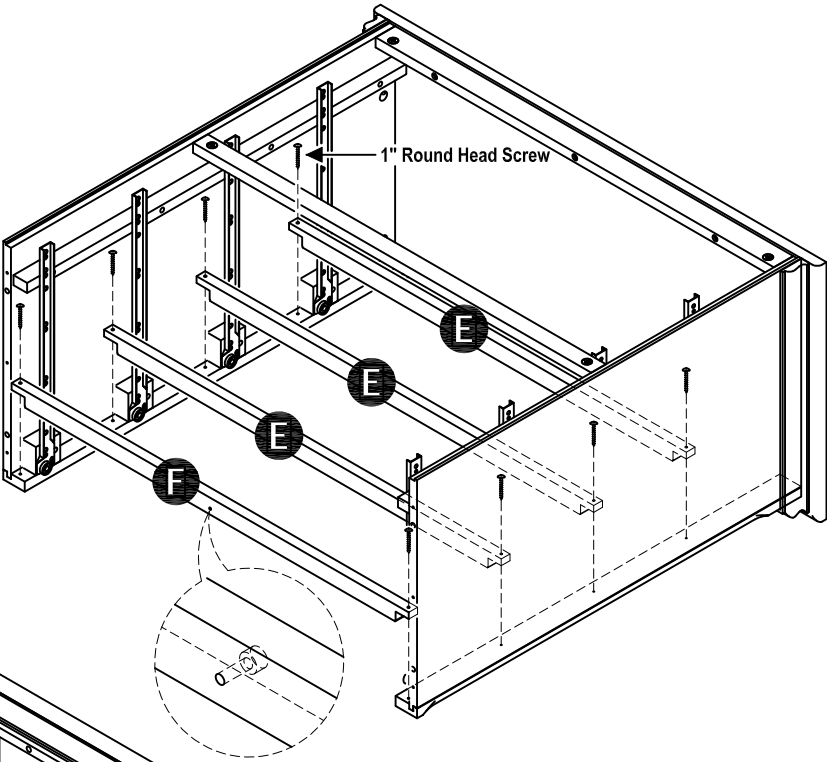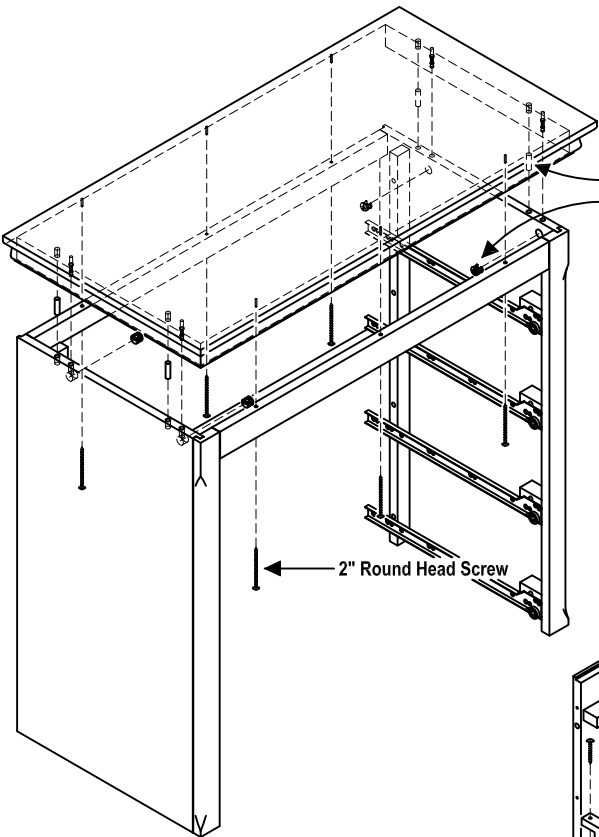

STEP 4

 Attach Front Rails (E) and (F) to unit using 1" Round Head Screws.

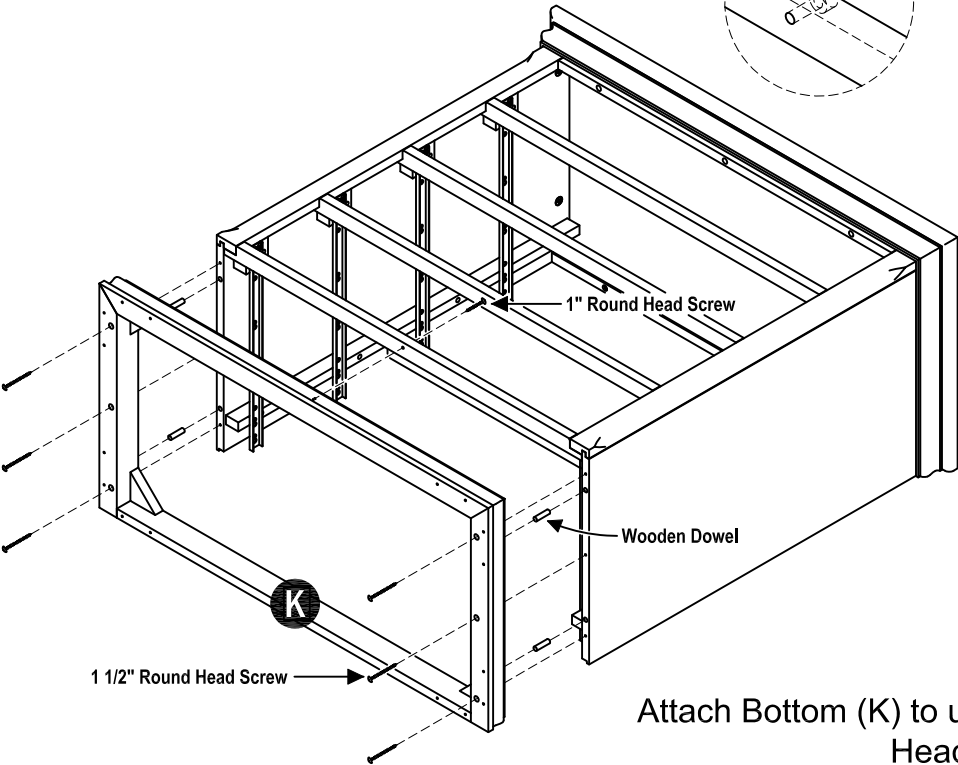

STEP 5

Attach Bottom (K) to unit using 1 1/2" and 1" Round Head Screw and Wooden Dowels.

Assembly Instructions 4/8

STEP 6

Attach Legs (L) to unit using 1 1/2" Round Head Screws.

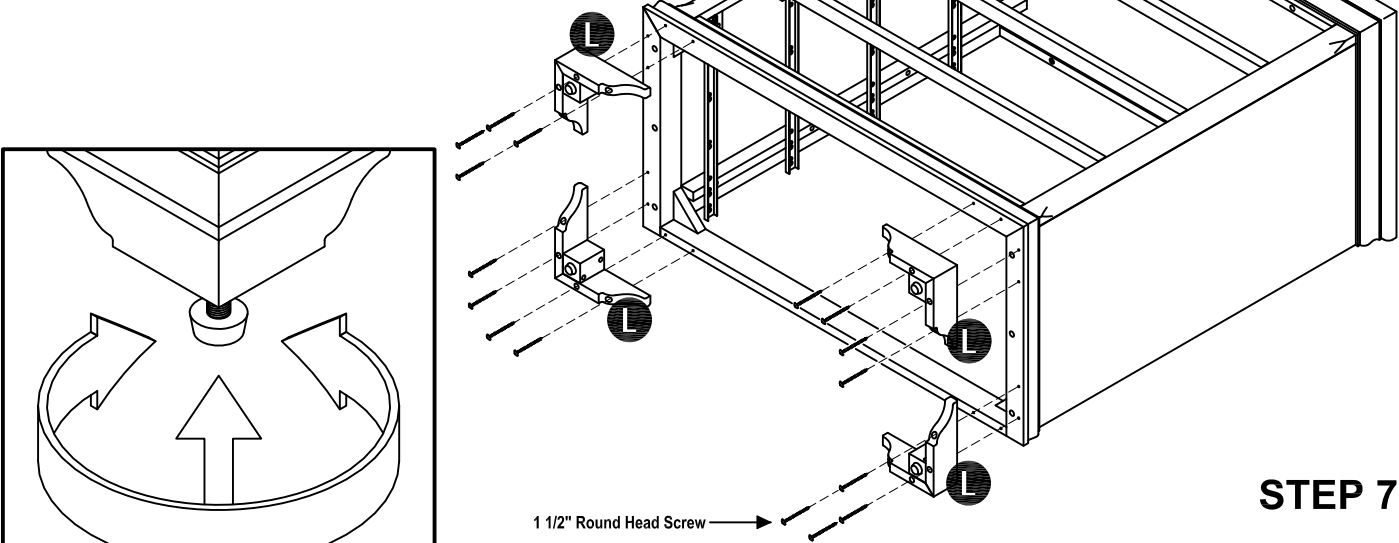 



Figure 2

STEP 7

To level the unit, adjust the adjustable levelers on the bottom.
Note: Unit must be level to work properly.
(see Figure 2)


STEP 9

 Insert drawers (M) and (N) into unit.

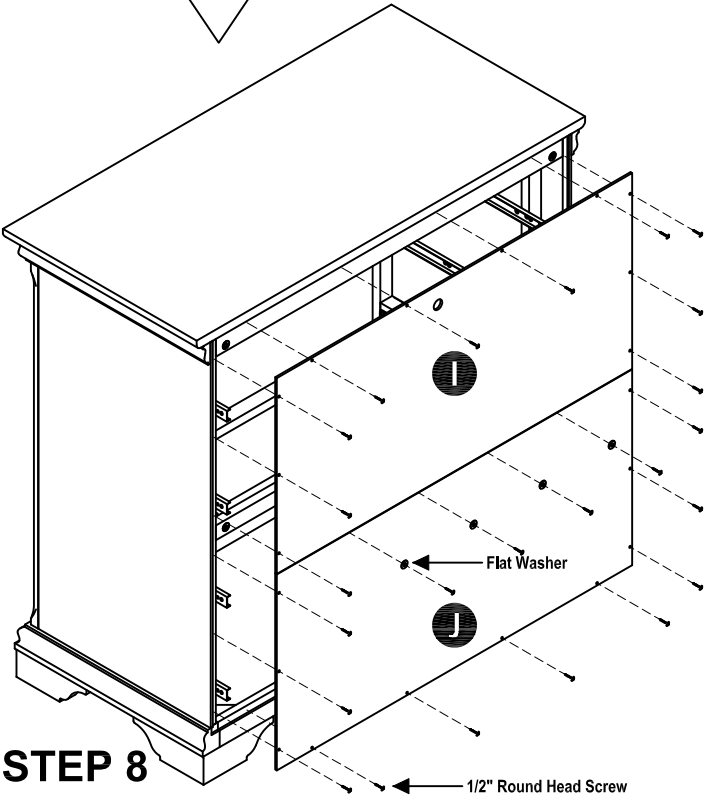

STEP 8

 
Attach Back Panels (I) and (J) to unit using 1/2" Round Head Screws and Flat Washers.
Note: Please make sure unit is level before tightening these screws.

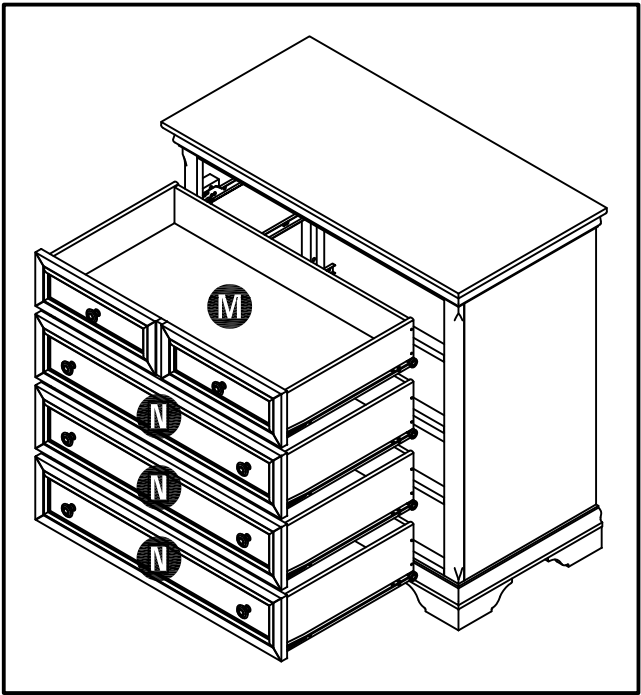


Assembly Instructions 5/8

ATTENTION!

 
For safety reasons, please follow these instructions to prevent the unit from tipping over.

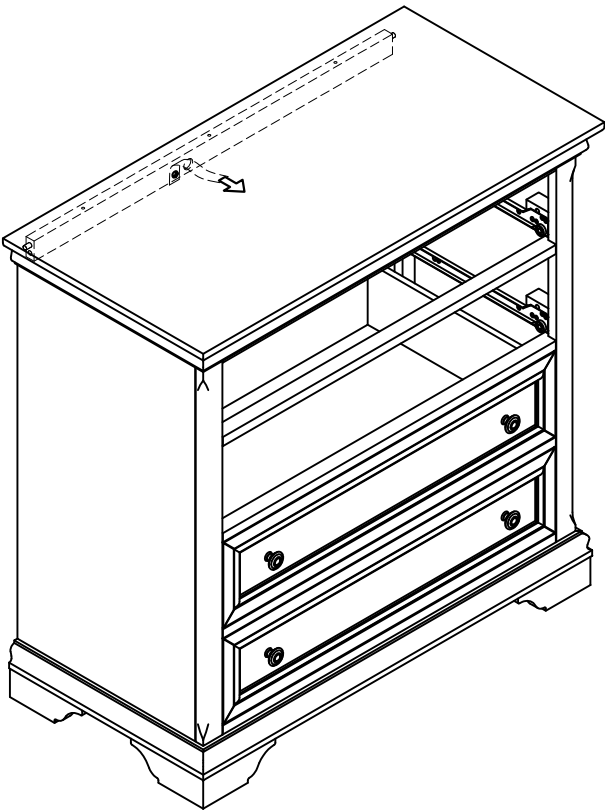


Remove Drawers (M) and (N) from unit.

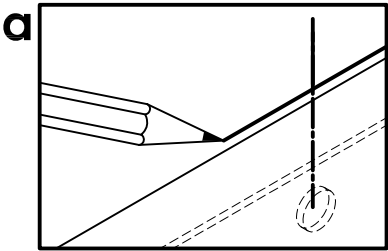 

 
Place the unit on the wall at desired location. Mark with pencil to show the height and center of hole at Back Panel (I).

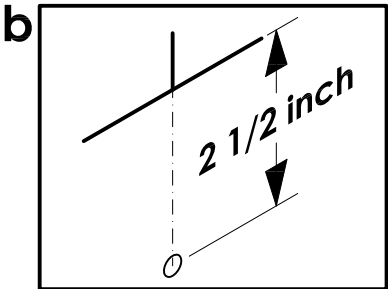

 
Move unit. Drill a 1/2" hole in the wall, 2 1/2 inches down and directly below the mark.

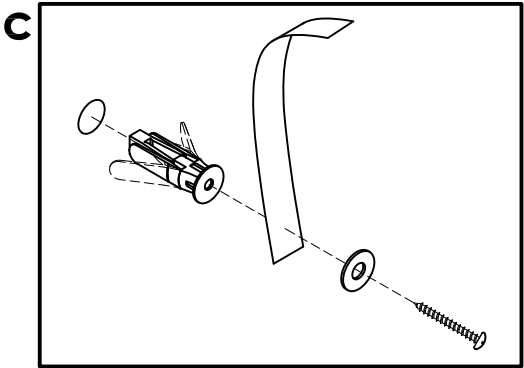

 
Attach Tipping Restraint to the wall using 1 1/2" Round Head Screw, Flat Washer & Anchor.

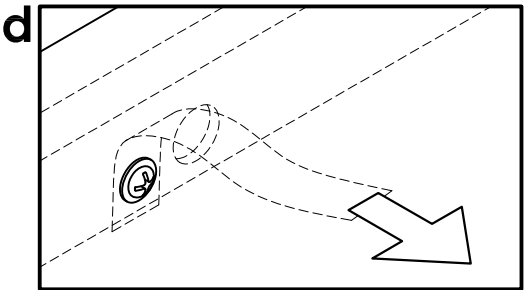

 Insert Tipping Restraint to unit through the hole of Back Panel (I).

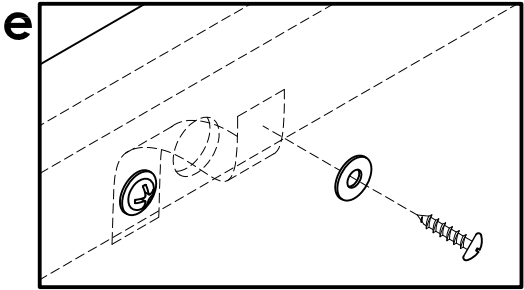


 Screw Tipping Restraint to unit using 1/2" Round Head Screw & Flat Washer.

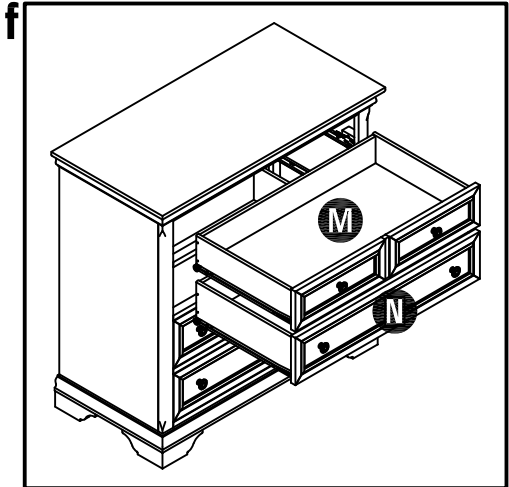

Insert drawers (M) and (N) into unit.

 Drawer (M)

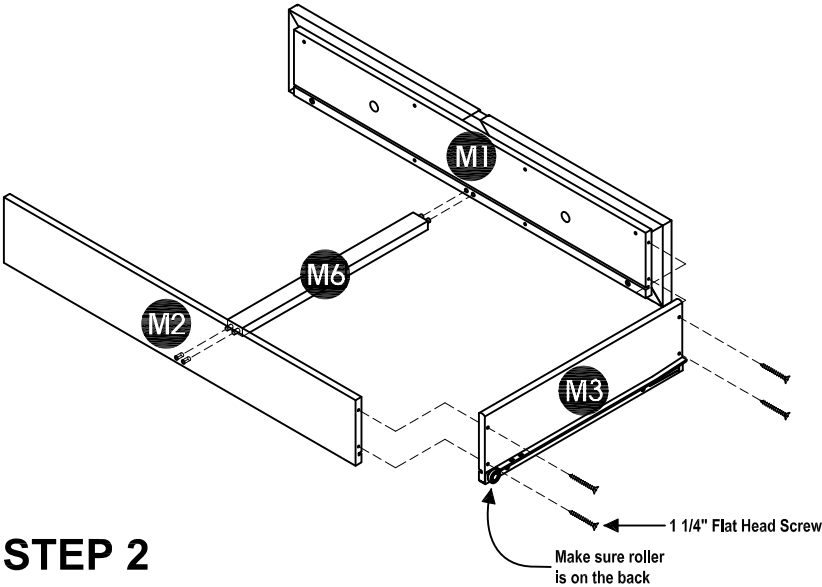

STEP 1

 
 
Attach Base Part (M6) to Front Part (M1) and Back Part (M2).

Attach Side Part (M3) to unit using 1 1/4" Flat Head Screws.

STEP 2

Insert Base Part (M5) into the groove.

Attach Side Part (M4) to unit using 1 1/4" Flat Head Screws.

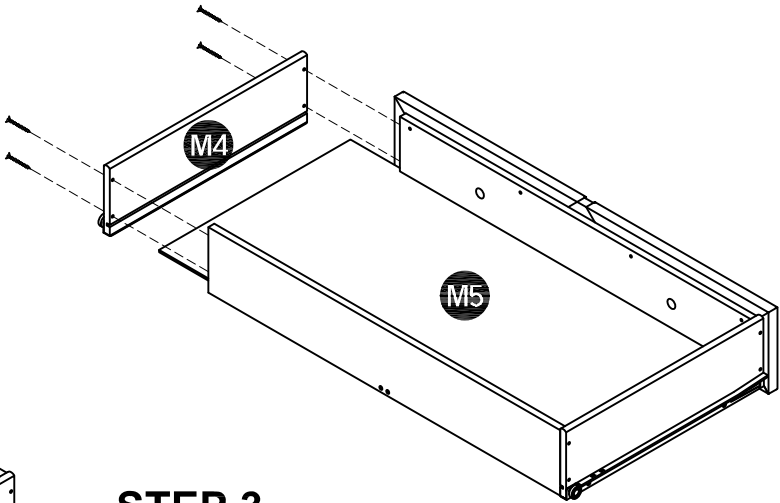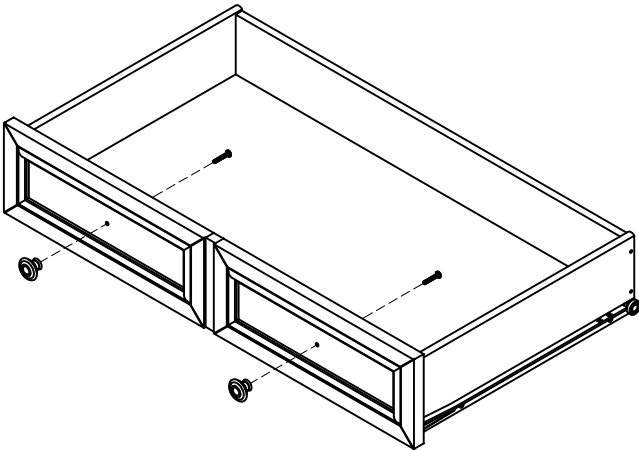


STEP 3

Attach Handle with Machine Screws.

Part List						
M1. Front Part 1 pc.	M2. Back Part 1 pc.	M3. Side Part 1 pc.	M4. Side Part 1 pc.	M5. Base Part 1 pc.	M6. Base Part 1 pc.	


 
Drawer (N)

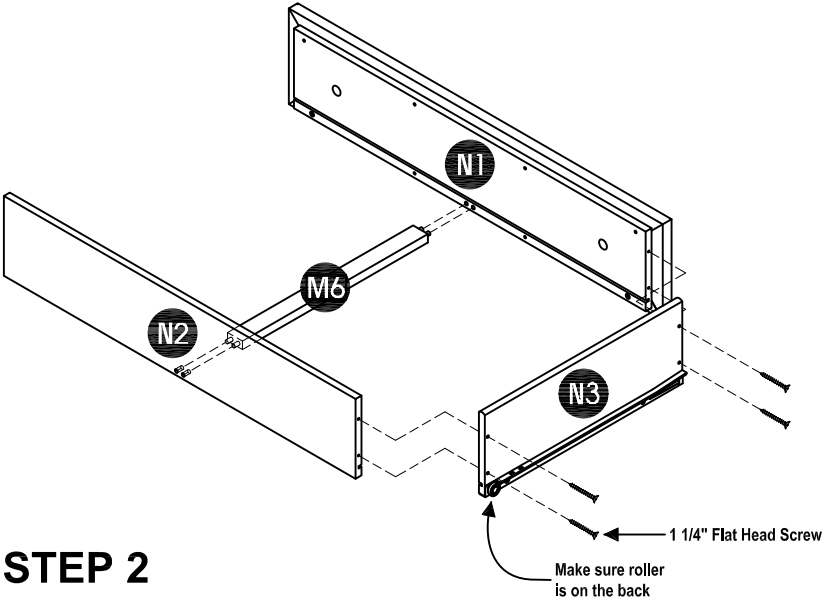

STEP 2

Insert Base Part (N5) into the groove.

  Attach Side Part (N4) to unit using 1 1/4" Flat Head Screws.

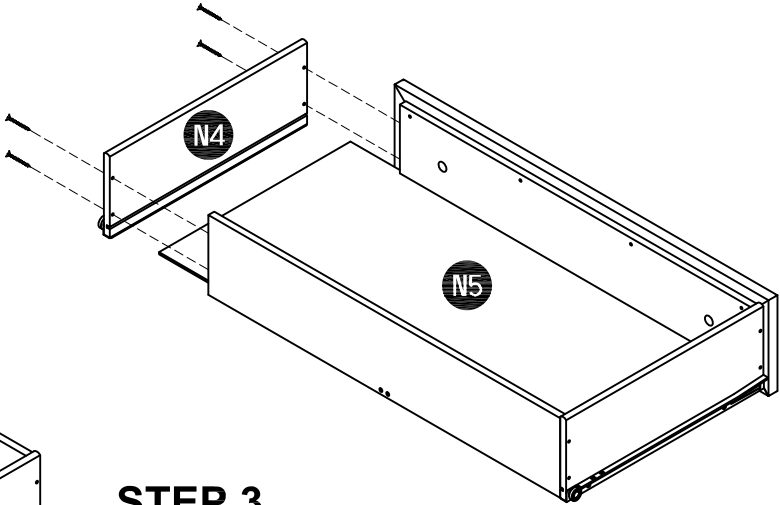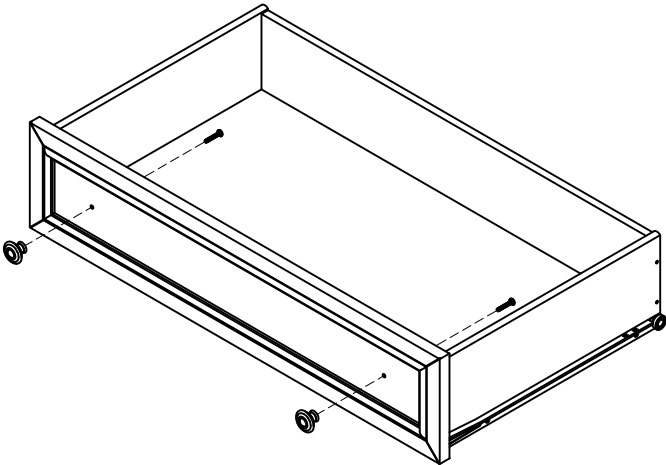


STEP 3


Attach Handle with Machine Screws.

Part List						
N1. Front Part 3 pcs.	N2. Back Part 3 pcs.	N3. Side Part 3 pcs.	N4. Side Part 3 pcs.	N5. Base Part 3 pcs.	M6. Base Part 3 pcs.	

 Assembly Instructions 8/8

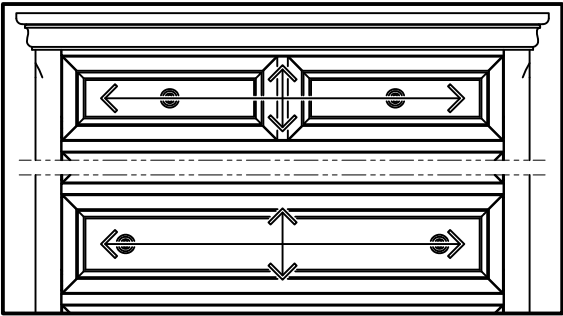

II. IF A DRAWER ALREADY ALIGNS

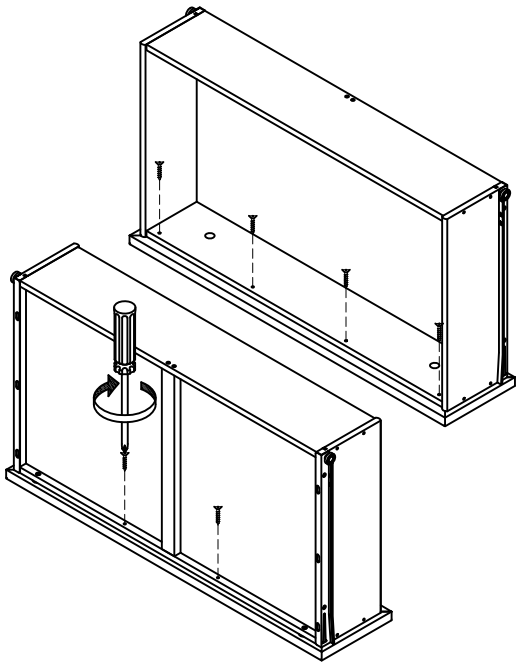 


Pull out drawer slowly. Lock the drawer front panel into position with 3/4" Flat Head Screws.

I. IF A DRAWER DOES NOT ALIGN


STEP 1

 Loosen slightly the lower screws.

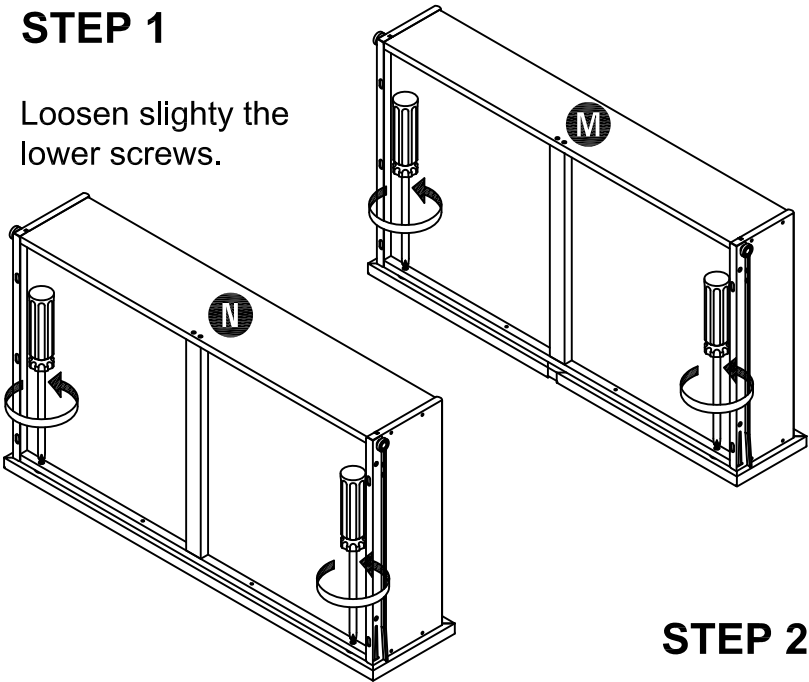

STEP 2

 Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

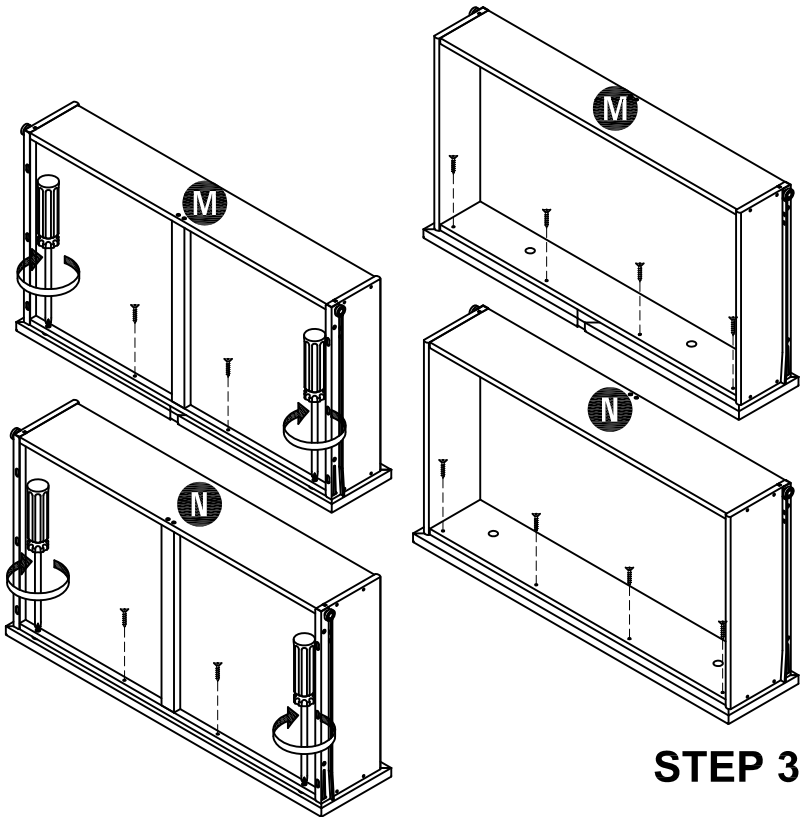

STEP 3

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319