

# CHAIN GLIDER ASSEMBLY INSTRUCTIONS


## Parts List:

### Glider:

- (1) Glider Seat
- (2) Glider Arms with Chain
- (2) 6" Machine Bolts
- (4) 5/16" Standard Washers
- (2) 5/16" Loc Nuts

### Brackets:

- (2) Glider Brackets
- (2) 10" Machine Bolts
- (4) 3/8" Fender Washers
- (2) 3/8" Loc Nuts
- (4) Standard Swing Hangers
- (4) Spring Clips

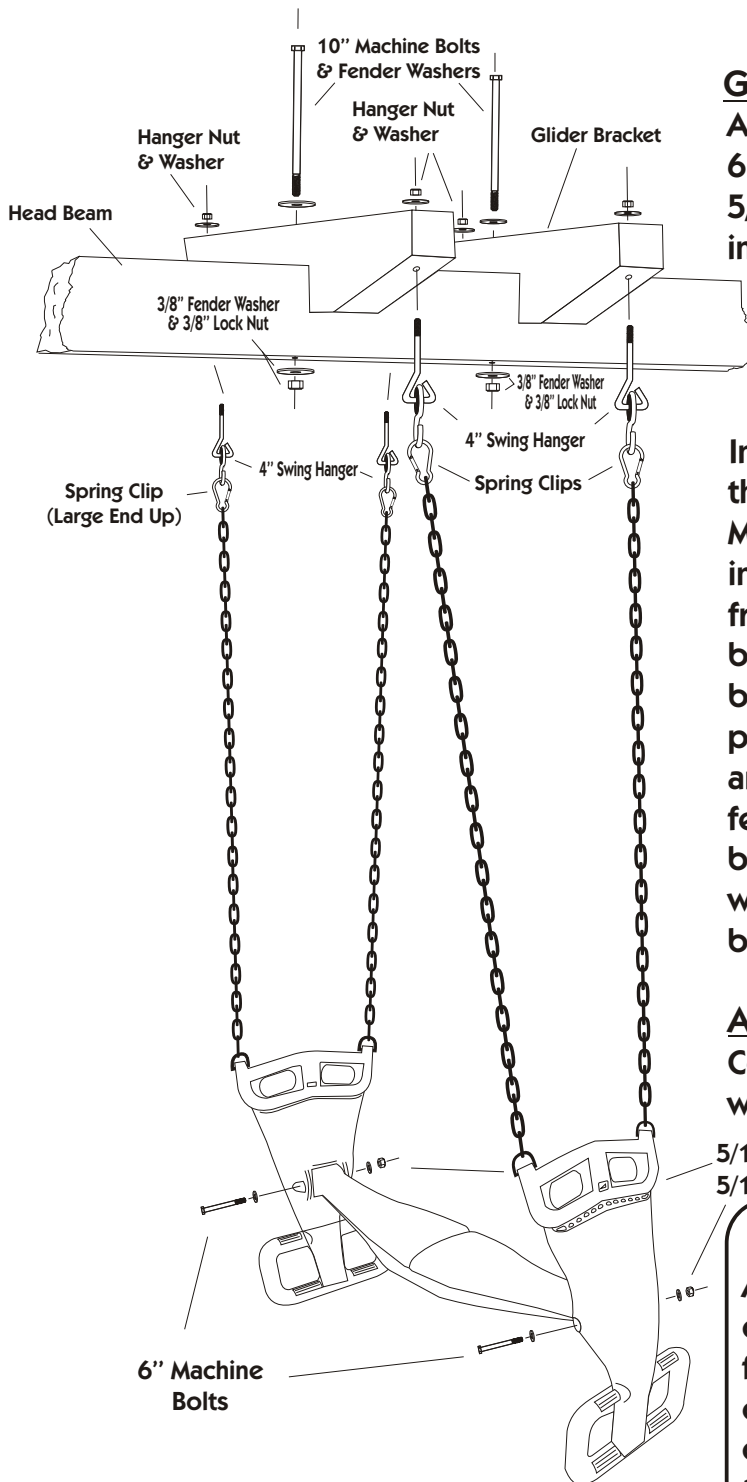

### Glider Assembly:

Attach the glider arms to the seat section with 6" machine bolts, 5/16" standard washers and 5/16" loc nuts. Tighten enough to engage nylon insert but do not over tighten. Glider arms must be able to move back and forth freely.

### Glider Bracket Assembly:

Install 4" swing hangers into the two holes in the wooden glider brackets from the bottom. Make sure the eye of the bolt is pulled slightly into the wood and the nylon bushing moves freely back and forth. Attach the headbeam brackets to the headbeam with 10" machine bolts, 3/8" fender washers and 3/8" loc nuts by placing the brackets on top of the headbeam and inserting the 10" machine bolt through the fender washer and the top of the bracket to the bottom of the head beam. Secure with a fender washer and the lock nut and tighten until the brackets are securely in place.

### Attach Glider to Brackets

Connect the glider chains to the swing hanger with spring clips.

### \*Usage Note\*

After installing the glider, please make your children aware of the "safe use zone" in the front and back of the glider path. The weight of 2 children and the broader arc of the glider can make the swinging force stronger than a traditional belt swing.



## No Kidding Guarantee

**5-Year Warranty** on all Woodplay components and accessories that are not covered under the Limited Lifetime Warranty. Woodplay will repair or replace, at our option, any Woodplay above-ground playset component which fails within five years after the date of delivery as a result of a defect in materials or workmanship. All other qualifications also apply listed under the Limited Lifetime Warranty below.

**Limited Lifetime Warranty** on all Woodplay wooden playset components, swing hangers, swing chains, metal braces, metal rungs, hardware, and our exclusive Super Slide and Alpine Slide. Woodplay warrants to the original retail customer that we will replace any Woodplay wooden playset component suffering structural failure due to warping, rotting, or insect damage. This warranty does not cover knots in the wood, surface cracking or seasonal checking of components. Knots, surface cracking and seasonal checks are a natural characteristic of all wood, including redwood, and will not affect the integrity of your playset. Woodplay warrants to the original retail customer that we will replace any swing hangers, swing chains, metal braces, metal rungs or hardware that fail due to rust or breakage (excludes surface rust). This limited lifetime warranty also applies to our exclusive Super Slide and Alpine Slide. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Woodplay does not assume, or authorize any person or representative to assume for us, any other liability in connection with the sale of our products. These warranties exclude any incidental or consequential damages which may arise from the purchase or use of our equipment. Some states do not allow the exclusion or limitation of consequential damage, so the above limitation or exclusion may not apply to you. This warranty program applies only to the original owner and is limited to residential and noncommercial use of the products. Customer must register the playset purchase at [www.woodplay.com](http://www.woodplay.com) to be eligible for warranty. A copy of the original invoice must accompany all warranty claims. Freight and labor charges are not included. This warranty program does not cover normal wear and tear, or damages resulting from misuse, abuse, vandalism, alteration, acts of God, or assembly and maintenance contrary to our instructions. Woodplay reserves the right to examine photographs and/or the component itself-shipped freight prepaid by the customer prior to potential replacement. Questions about this warranty should be addressed to the **Customer Service Department at 817 Maxwell Ave., Evansville, IN 47711, or call 1-800-WOODPLAY.**

**Special Note:** Woodplay reserves the right to make changes in materials, design, and pricing without notice. See your instruction manual for maintenance requirements. Your child's safety is your responsibility; therefore, you should inspect this equipment regularly for wear and safety.