

INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301

 
1 Stake Front Corners




Secure the front corner anchors by pounding the stakes into the ground with a rock or hard object. Make sure the removable cord is fully tensioned to ensure proper placement.




2 Stake Rear Corners



Pull the rear anchors taut and tension them straight back from the front corners of the tent to create a symmetric trapezoidal area. Stake the rear anchors in place.

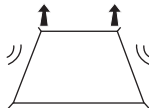

3 Insert and Extend Tarp Pole

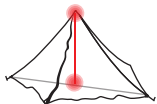

Insert and extend the tarp pole upwards, with the smooth metal end sitting in the reinforced pocket.




4 Stake Vestibule



Stake vestibule and pull firmly on all adjustable anchors to ensure proper tension.



5 Stake Guy-outs (optional)

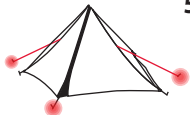

Tie additional guylines to the tent's reflective webbing loops and stake to ground to maximize strength, tension, and wind resistance.



©2018 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

APOLLO™ 3P