



OUTDOOR POLY 3-PIECE SETADIRONDACK — CHAIR WITH SIDE TABLE

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com

FOLLOW, SHARE, & LEARN













PRODUCT REGISTRATION

https://westintrends.com/apps/product-registration



TABLE OF CONTENTS

ASSEMBLY INSTRUCTIONS

Outdoor Poly Side Table	4
Outdoor Poly Adirondack Chair with Cup H	older 9





OUTDOOR POLY SIDE TABLE

(!) CARE & MAINTENANCE

Please keep this instruction for your future reference.


- Be careful when assembling, avoid damaging the painted surface.
- Clean the table with lukewarm water, mild detergent & soft cloth.
- Firmly secure all connections before use. Do not use any part of this item as a step ladder.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please do not exceed the weight limitations of this item.


NO TOOLS REQUIRED



PARTS




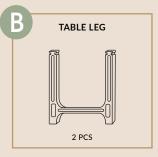

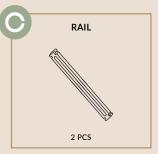

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this table and learn the exact position of each part to be assembled.

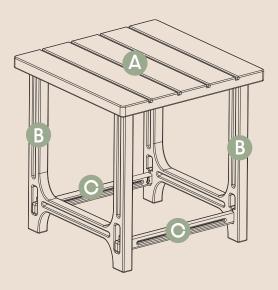


PRODUCT ASSEMBLY




Pick out Part A Table Top and Part B Table Leg from package and assemble as follows.

- 1. Check the mortise in the leg and make sure the open end is facing outside (Figure 1).
- 2. Plug the top tenon of **Part B Table Leg** into the groove in the bottom of **Part A Table Top**. Push the leg towards the edge of table top until the tenon is locked firmly in the groove (Figure 2).

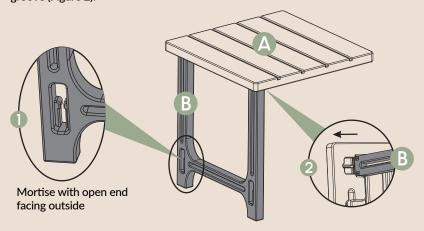

2


Do the same to attach another Part B Table Leg to Part A Table Top.

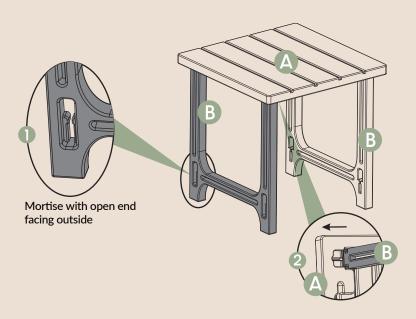

3


Place **Part C Rail** between 2 pcs of **Part B Table Legs**. Make sure the arrows are inside and pointing downward (Figure 1).

Press hard on **Part C Rail** to make the tenons lock firmly into the mortise in the legs (Figure 2).

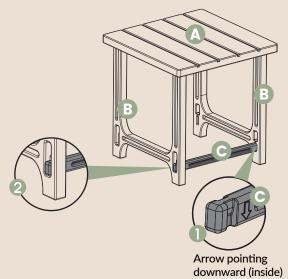




Do the same to attach another Part C Rail between 2 pcs of Part B Table Legs.

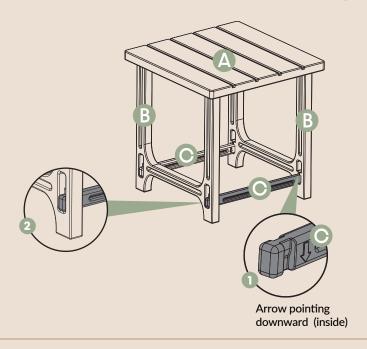



Check and tighten all the connections again to ensure the table is steady enough.

Enjoy the table now.

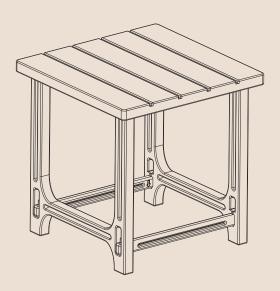





OUTDOOR POLY ADIRONDACKOHAIR WITH OUP HOLDOR

(!) CARE & MAINTENANCE

Please keep this instruction for your future reference.


- Be careful when assembling, avoid damaging the painted surface.
- Clean the chair with lukewarm water, mild detergent & soft cloth.
- Firmly secure all connections before use. Do not use any part of this item as a step ladder.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please do not exceed the weight limitations of this item.

NO TOOLS REQUIRED

1 PC




PARTS

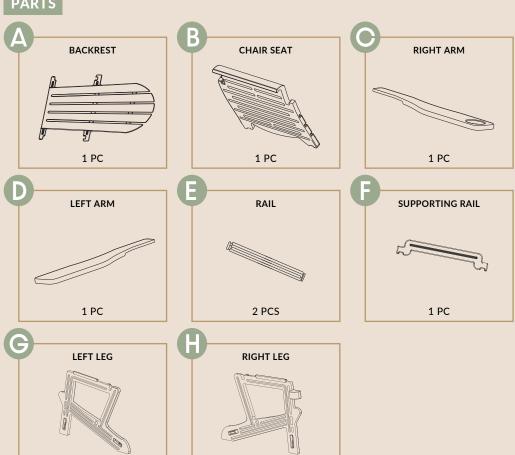

1 PC

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this chair and learn the exact position of each part to be assembled.

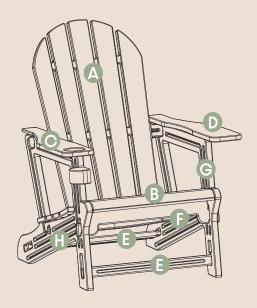


PRODUCT ASSEMBLY



Attach Part H Right Leg to Part A Backrest by following the steps below:

- 1. Place **Part H Right Leg** on flat surface. Make sure the seat holder is facing forward (Figure 1).
- 2. Press the upper bar of the backrest into the positioning slot of the leg (Figure 2).
- 3. Insert the lower bar into the holding position of the leg (Figure 3).

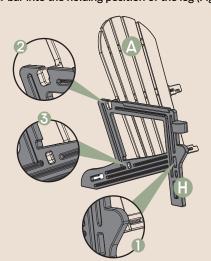



Do the same to attach Part G Left Leg to Part A Backrest.




PRODUCT ASSEMBLY



Insert Part B Chair Seat to the assembled frame until the groove sits in the slot in the legs (Figure 1). Keep the seat angled upwards as below.

Pay attention not to press down the seat at this stage.

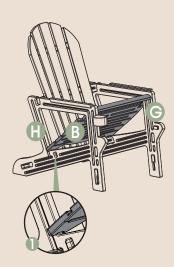


PRODUCT ASSEMBLY



Place **Part F Supporting Rail** between 2 pcs of legs as below. Make sure the tenons with grooves are facing downward (Figure 1).

Press hard on **Part F Supporting Rail** to lock the tenons firmly into the mortise in the legs (Figure 2).

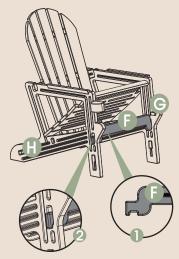


PRODUCT ASSEMBLY



Press the seat down until it is locked on the supporting rail firmly.

Place Part E Rail between Part G Left Leg and Part H Right Leg as below. Make sure the arrows are inside and pointing downward (Figure 1).

Press hard on **Part E Rail** to lock the tenons firmly into the mortise in the legs (Figure 2).

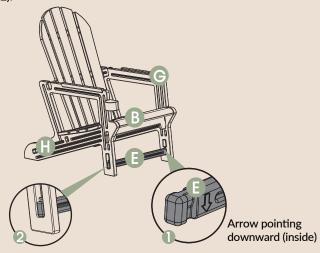


PRODUCT ASSEMBLY



Place another **Part E Rail** between **Part G Left Leg** and **Part H Right Leg** as below. Make sure the arrows are inside and pointing downward (Figure 1).

Press hard on **Part E Rail** to lock the tenons firmly into the mortise in the legs (Figure 2).

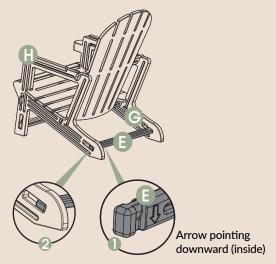


PRODUCT ASSEMBLY




Attach Part C Right Arm to Part H Right Leg by following the steps below.

- 1. Match the groove in Part C Right Arm with the tenon on top of Part H Right Leg and slide the arm horizontally backwards (Figure 1).
- 2. Pull the arm upwards when it moves to the lock. Slide again until the lock is trapped in the groove (Figure 2).

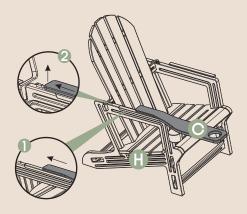



Do the same to attach Part D Left Arm to Part G Left Leg.

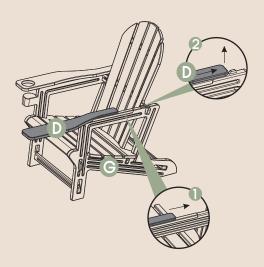

PRODUCT ASSEMBLY



Check and tighten all the connections again to ensure the chair is steady enough.

Enjoy the chair now.



REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

• Not sure how to assemble or missing pieces?
Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #. Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - DO NOT exceed 1500 PSI - this will remove and debris and dirt.