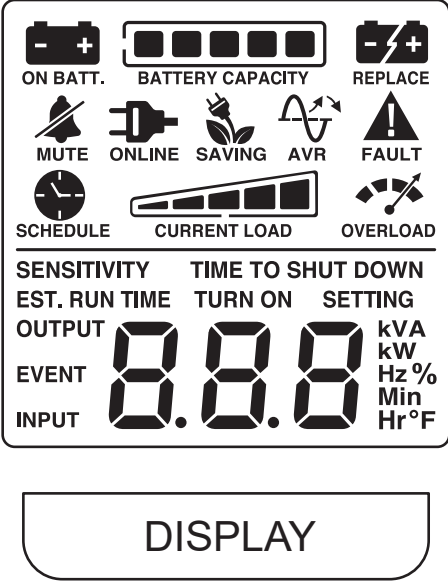
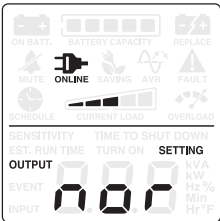
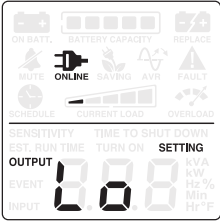
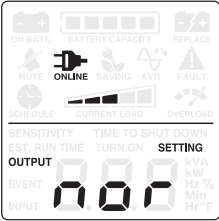
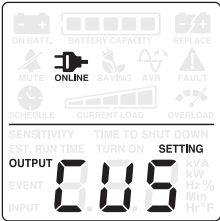
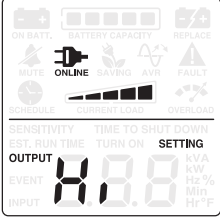
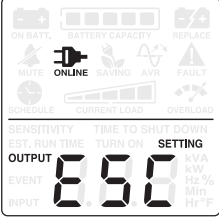
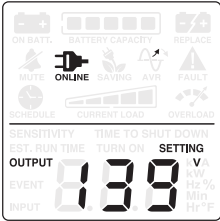
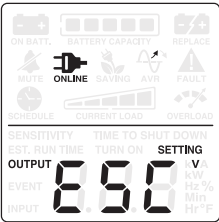
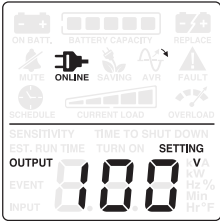
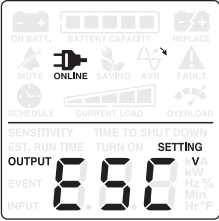
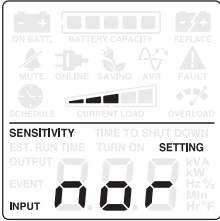
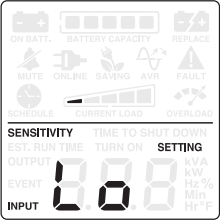
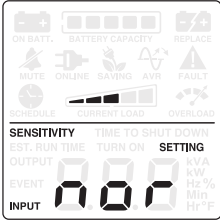
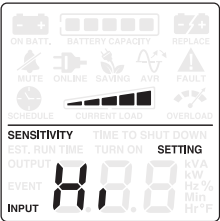
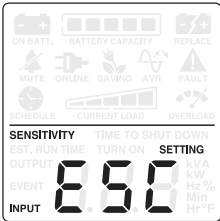
	<p><b>Power On:</b> Press and hold the POWER Button. You will hear a constant tone for 1 second, followed by a short beep. Release the button after the short beep.</p> <p><b>Power Off:</b> Press the POWER button for approximately 2 seconds. You will hear a constant tone for 1 second followed by 2 short beeps. Release the button after 2 short beeps.</p>
	<p><b>Setup Mode:</b> Press and hold the DISPLAY Button for approximately 3 seconds to access the setup mode's 12 functions: Utility Quality, High Transfer Voltage, Low Transfer Voltage, Sensitivity, Low Battery Warning, Self-Test, Non-Critical Load, Buzzer, LCD Sleep, Last Fault Reason, Back to Default Settings, and Back to Status Display. Use the same button to select the functions to configure.</p> <p><b>Select Function:</b> When a function is selected, press DISPLAY Button for 3 seconds to view the options.</p> <p><b>Confirm Option:</b> When an option is selected, press the DISPLAY Button for 3 seconds. After the setting has been confirmed, "SETTING" will stop flashing.</p> <p><b>Escape Option / Function (ESC):</b></p> <ul style="list-style-type: none"><li><b>Option Menu:</b> Select this option and press the DISPLAY Button for 3 seconds to go back to the Function Menu.</li><li><b>Function Menu:</b> Select this function and press the DISPLAY Button for 3 seconds to go back to the Status Display.</li><li>After 30 seconds of no activity, the LCD will leave setup display. The setting will not be confirmed.</li></ul>

Function/ LCD Display	Default	Options		Description
	Normal	Low (97V-144V)	Normal (100V-139V)	Select the voltage quality of the input utility power. If Good is selected, the UPS will go to the battery mode more often to supply the cleanest power to connected devices. If Poor is selected, the UPS will tolerate more power fluctuations and go to battery mode less often.
				
		High (103V-135V)	Escape to Function Menu	"Customized" shows up when Maximum/Minimum output voltage has been adjusted in Advanced Setup Menu.
				
		(Customized)		

Function/ LCD Display	Default	Options		Description
High Transfer Voltage	139V	135V - 144V Escape to Function Menu		In Utility Quality settings, only 3 types of fixed voltage ranges can be chosen. However, you can fine tune the MAX O/P voltage in this function.
				
* ↗ = fine tune the MAX O/P voltage				
Low Transfer Voltage	100V	97V - 103V Escape to Function Menu		In Utility Quality settings, only 3 types of voltage ranges can be chosen. However, you can fine tune the MIN O/P voltage in this function.
				
* ↘ = fine tune the MIN O/P voltage				
Sensitivity	Normal	Low	Normal	If the connected equipment can tolerate more power events (Example: unstable power often associated with stormy weather), select Low Sensitivity. The UPS will go to Battery Mode less often. If the connected equipment is more sensitive to power events, select High Sensitivity. The UPS will go to Battery Mode more often.
				
		High	Escape to Function Menu	
				

Function/ LCD Display	Default	Options		Description
Low Battery Warning		5 mins		The audible alarm will sound and the “ON BATT.” icon will flash when the remaining runtime is less than the value selected.
Self-Test (Battery Test)	No Action	YES		In Line Mode, if Yes is selected, the UPS will perform a self-test.
		Escape to Function Menu		
Non-Critical Load	No Action	Non-Critical Load Disable		Redundant equipment should be connected to the NCL outlets to be powered off early in order to save additional battery runtime for the “Critical Load” to safely shutdown.
		20%-100%		
		Escape to Function Menu		When battery capacity drops below the selected conditional value, the non-critical bank will turn off immediately.
Buzzer	b.on	Buzzer on		“b.on” (Buzzer On): audible alarms are enabled.
		Buzzer off (Mute)		
		Escape to Function Menu		“b.oF” (Buzzer off): audible alarms are disabled. If b.oF is selected, the unit will mute all alarms except for fault or overload condition.

Function/ LCD Display	Default	Options		Description
LCD Sleep	L.on	LCD sleep is on		“L.on” (LCD Sleep is on): In Line Mode, LCD screen will turn off automatically after 1 min of inactivity; in Battery Mode, LCD screen is always on.
		LCD sleep is off		
		Escape to Function Menu		“L.oF” (LCD sleep is off): LCD screen is always on.
Event Reset	No Action	YES		This meter records the number of power outages. If Yes is selected, the EVENT counter will be cleared.
		Escape to Function Menu		
Back to Default Settings	No Action	YES		If Yes is selected, the UPS will be restored to the factory default settings.
		Escape to Function Menu		
Return to Status Display	--			Press the DISPLAY Button for approximately 3 seconds to go back to the Status Display.