


Purchase Date: / Order/Customer Reference Number
--

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email:

customerservice@sunnydazedecor.com, or via our contact us page at https://tiny.cc/SunnydazeContact

# KITCHEN ISLAND CART WITH DRAWERS **DTA-324**

Carefully review assembly and care instructions before using this product. Save this document for future reference. Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

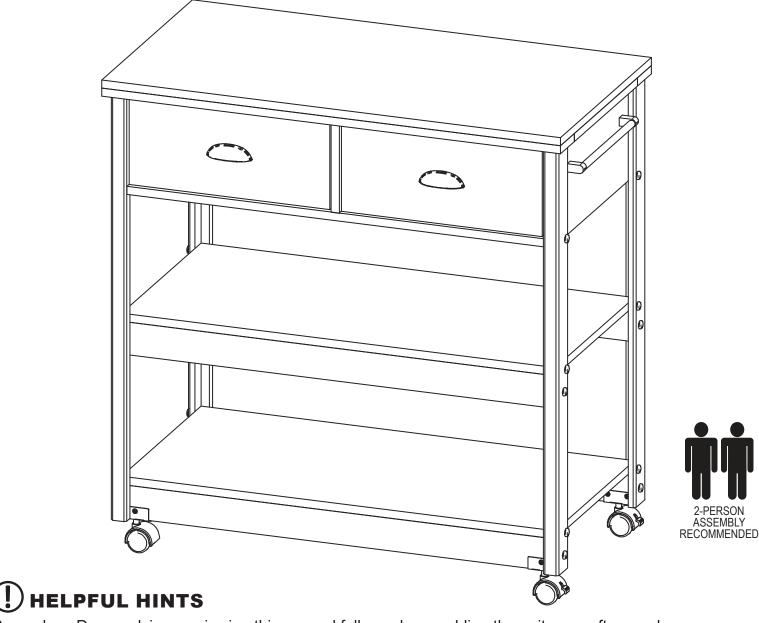



Sunnydaze Decor advises reviewing this manual fully, and assembling the unit soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

# INTRODUCTION

## Read the manual carefully to ensure you fully understand all use, care, assembly, and safety information.



Read this manual carefully and follow the assembly instructions in the order listed. Pay close attention to assembly drawings.



Regularly clean with a clean microfiber cloth to prevent dust accumulation.



Assemble on a soft, flat, clean, and drv surface.

Use a soft, protective barrier when assembling the furniture.

TIP: Use the box carton as a protective layer to separate and protect the parts from scratches and other damage during assembly.



Do not paint the unit.

Do not use abrasive materials or cleaners to clean the furniture: only use a slightly moistened cloth.



Indoor use only.

Do not expose the furniture to



Do not push or drag furniture as doing so may damage the unit.

Only move furniture when it is empty.



heat or humidity.



Always ask for help when moving furniture.



cleaning When nearby furniture, do not allow contact with water or cleaners as it may deteriorate the furniture.



Do not allow metal components to come in contact with water or cleaners as it may cause rust and staining.



Never open more than one drawer at a time.

Place heavier items in the back of the drawers.



inside the furniture.

Do not allow children to play on or

Avoid Accidents - Do not climb, sit

or stand on the furniture.




Keep sharp objects away as they may scratch or damage the unit.


Do not use the furniture as a writing surface without a padded barrier.

# **NOTICE:**

 
Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

# COMPONENTS

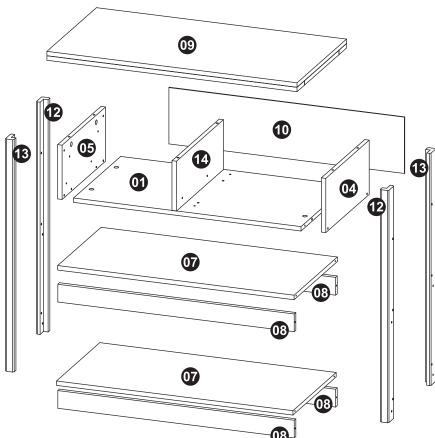

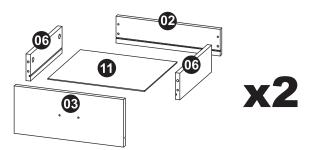





## **⚠** WARNING **⚠**

**CHOKING HAZARD** — This item contains small parts that can be swallowed. Keep children and pets away during assembly.



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.


No.	PART NAME	QTY.	
1	Upper Base Panel		
2	Drawer Back		
3	Drawer Front	2	
4	Right Side Panel	1	
5	Left Side Panel	1	
6	Drawer Side Panel (L/R)	4	
7	Shelf	2	
8	Apron	4	
9	Тор	1	
10	Back Panel	1	
11	Drawer Bottom	2	
12	Right Column	2	
13	Left Column	2	
14	Divider	1	

No.	ŀ	ARDWARE	QTY.
Α		Wood Dowel	10
AZ		Hex Key	1
В		Cam Screw	18
С	€ X	Cam Lock	18
CR1	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Left Slide Track	2
CR2	• 00 00 D 00 0 00	Right Slide Track	2
CR3		Left Drawer Slide	2
CR4		Right Drawer Slide	2
СТ		M3.5x14mm Screw	16
CV		M3.5x30mm Screw	2
D	<b>(4)</b>	M3.5x14mm Flat Screw	12
DF	↔ (••••••••••••••••••••••••••••••••••••	M4x20mm Screw	4
DZ		M5x50mm Confirmat Screw	22
EN		Nail	30
F		M4x25mm Flat Screw	4
FM		Screw Cap	22
G	<b>⊕ ∤</b> mmmmm>	M3.5x25mm Screw	4
Р	<b>(4)</b>	M6x8mm Set Screw	4
P1		Cart Handle	1
P2		Drawer Handle	2
R	66	Connector	4
R1	B	Locking Caster	2
R2	8	Caster	2

### 🛕 IMPORTANT INSTALLATION INFORMATION 🛕


For the stability of the unit, it is important that furniture connectors are installed correctly. See drawings and tips below for proper installation.

#### **Wood Dowel**

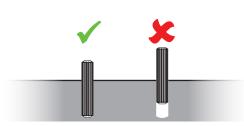


Install wood dowels by gently tapping them into the designated hole using a rubber mallet.

#### **Cam Screw**

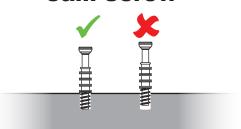


Use a screwdriver to tighten the cam screw until the shoulder is flush with the panel. Do not over-tighten or under-tighten.

#### **Cam Lock**

 


Align the cam lock opening (arrow) with the pre-drilled hole on the side of the panel. Use a screwdriver to adjust alignment as needed.


# **ASSEMBLY**

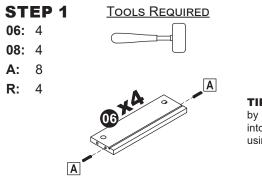




**TIP:** Install wood dowels by gently tapping them into the designated hole using a rubber mallet.

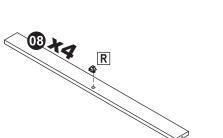


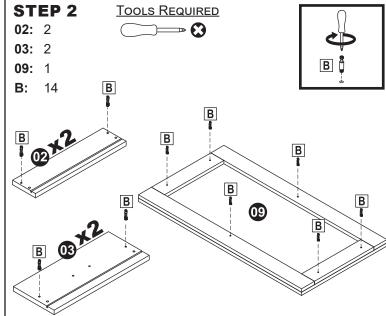


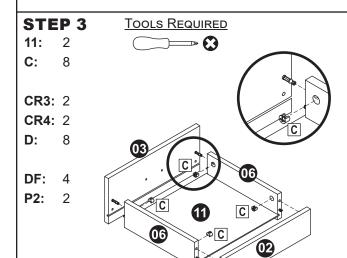




Ensure the drawer slides are installed in the correct direction, as indicated in the drawing.

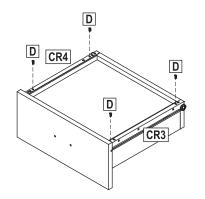

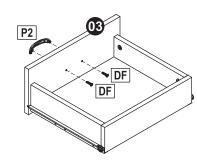


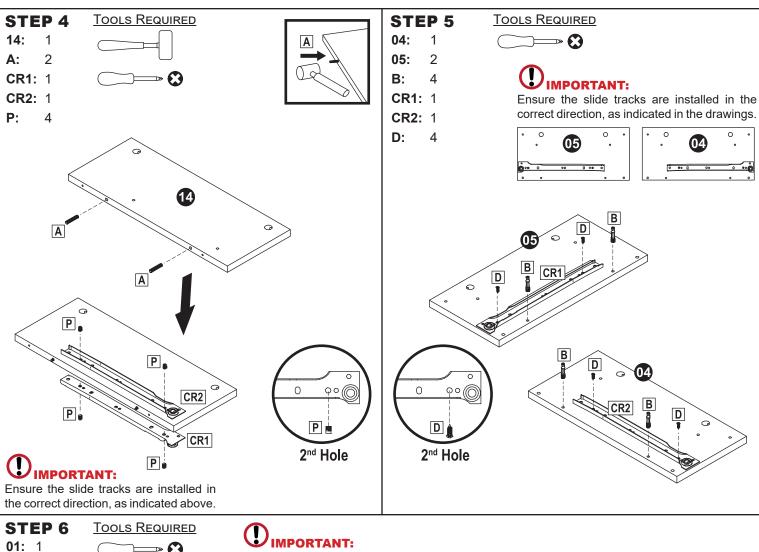




DZ: 2


Ensure the side panels and divider are installed in the correct direction, as indicated in the drawing.

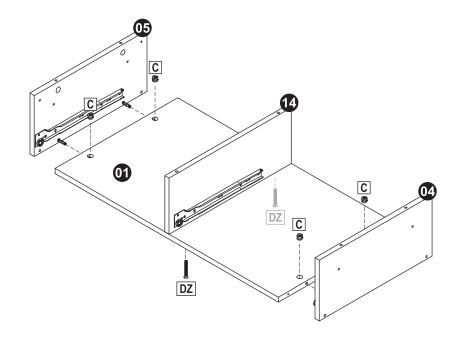

08/2022

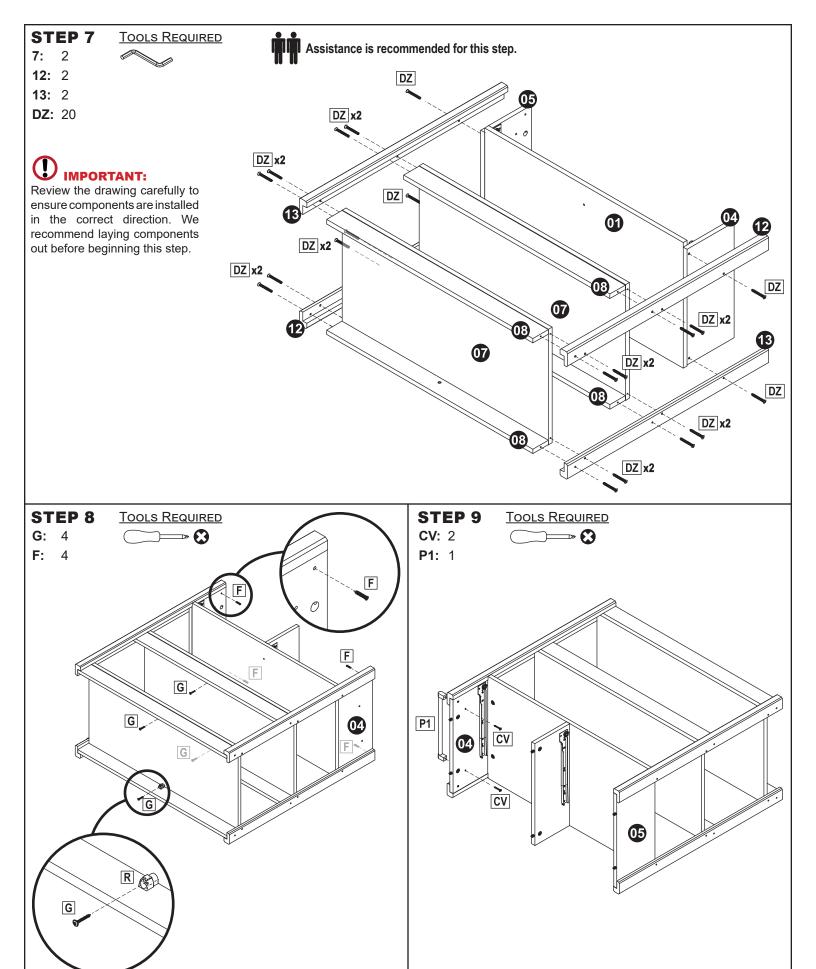





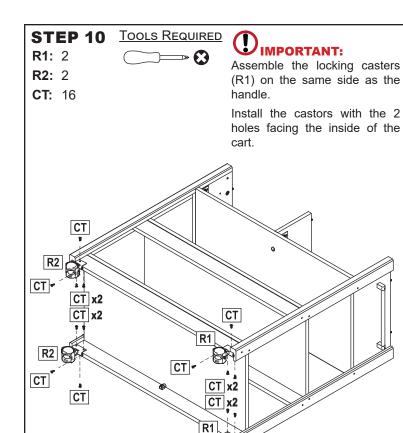



СТ

СТ

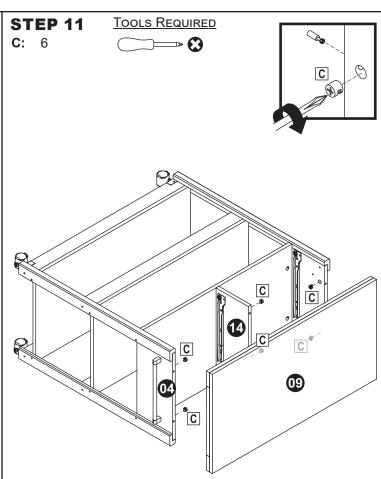

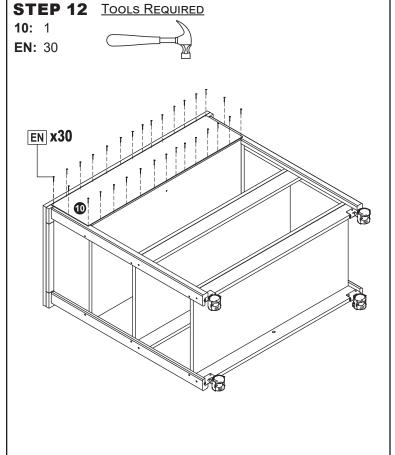

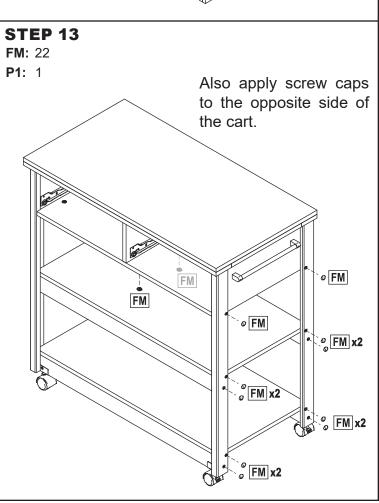

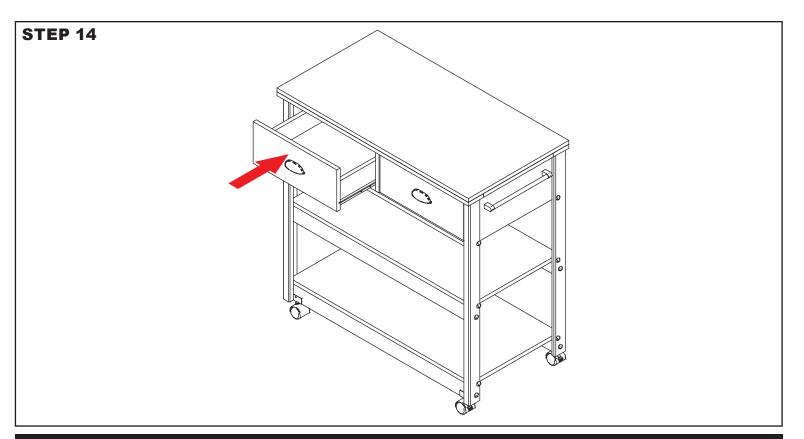

### 🛕 SAFETY STATEMENTS & WARNINGS 🗘

- · For residential use only. Not for commercial or industrial use.
- · For indoor use only.
- Ensure all fittings are tight before use. Periodically check fittings to ensure they remain tight.
- Only use this unit on a flat, level surface.
- Always lock the locking casters when the cart is not being moved.
- · Do not sit, stand or climb on the unit.
- Never allow children to stand, climb, or hang on drawers, or shelves.
- Never put a television on this product.
- Do not place liquids or hot items directly on the furniture.
- · Never use chemical cleaning products or polishes as doing so may damage the finish.
- Do not exceed the weight capacity of the furniture.
- · Do not overload the shelf as doing so may cause it to sag.
- Do not overload the drawers as doing so may cause permanent damage.
- Never open more than one drawer at a time.
- · Do not place the unit in direct sunlight.
- · Avoid placing the unit near heating or cooling vents as forced air is very drying and can damage the unit.
- Do not write on furniture without a padded barrier to protect the surface.

#### Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

## **⚠**WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.