



WRITINK BALLPOINT PEN



- WRITink Ballpoint Pens come equipped with an extra broad, blue ballpoint refill.
1. Remove the front piece (1) from the cap (2) by turning the cap (2) counterclockwise.
 2. Remove the empty ballpoint refill (3) from the cap (2).
 3. Insert new Faber-Castell Ballpoint Refill (3) into the front piece (1).
 4. Return the cap (2) to the front piece and turn cap (2) clockwise to fasten.
 5. Twist the cap (2) clockwise to advance the ballpoint (3) and begin writing.
 6. To retract the ballpoint (3) twist the cap (2) counterclockwise.

Refills Ballpoint: #148780 Fine, Black
#148789 Medium, Black
#148788 Medium, Blue
#148742 Broad, Black
#148743 Broad, Blue
#148794 Extra Broad, Black
#148793 Extra Broad, Blue