

180 BREAKAWAY RIM

MODEL NO. **B2609W**

PRE-ASSEMBLY TIPS

- Read this manual carefully before starting assembly. Read each step completely before beginning each step.
- Do not tighten until instructed to do so. If parts are tightened too soon, parts may not easily fit together. Leave nuts slightly loose until you are instructed to tighten them.
- 3. Save these instructions and your proof of purchase (receipt) in the event that the manufacturer has to be contacted for replacement parts.

TOOLS NEEDED FOR ASSEMBLY:

9/16" Wrench or Ratchet with 9/16" socket Phillips Screw driver Ladder Level

ESCALADE S P O R T S

Please Do Not Return This Product To The Store!

Contact Escalade Sports customer service department at:


Phone: 1-800-USA-GOAL Toll – Free!
Fax: 1-866-873-3536 Toll – Free!
E-mail: basketball@escaladesports.com

Escalade Sports

Physical Location: Mailing Address: (Correspondence Only)

817 Maxwell Ave. PO Box 889


Evansville, IN 47711 Evansville, IN 47706

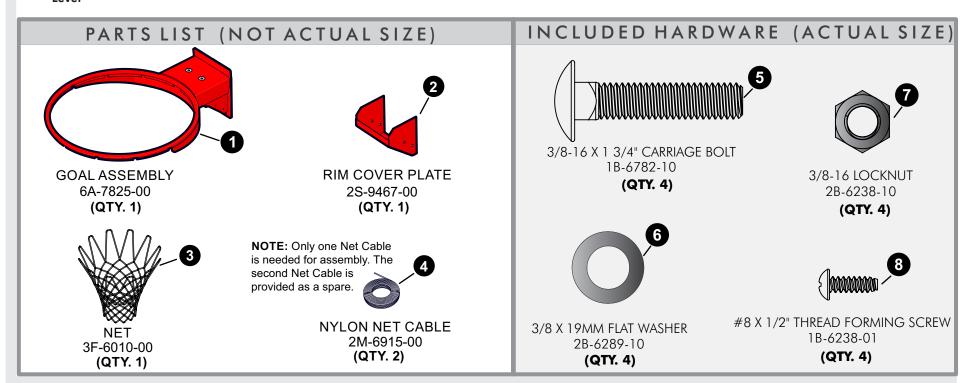





Attaching net to the rim.


- 1. Place the Rim on a table upside down and take note of where the widest opening is located. See Figure 1.
- Insert the Nylon net cable into the first net loop and then into the first cable tube located at the widest opening on the rim.See Detail A and Figure 1.
- 3. Keep feeding the cable until it comes out the other side of the first tube leaving plenty of cable for the second loop in the net. **See Detail B**.
- 4. Insert cable through **second net loop**.
 - A. Then pull the cable back so that the end of the cable is close to the **second cable tube**.
 - B. Insert the cable into the second cable tube. See Detail C.
- 5. Keep working your way up counter clockwise and repeat steps until you feed the cable through all the loops in the net and the cable tubes. Both cable ends should be visible at the widest opening on the rim. Continue to step 6 on the next page.

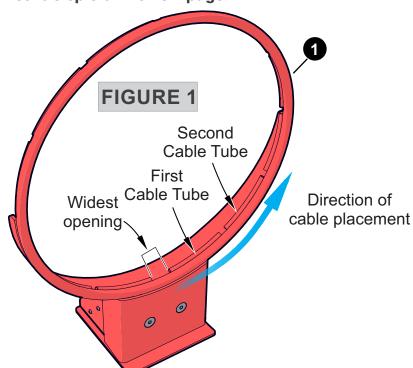

2

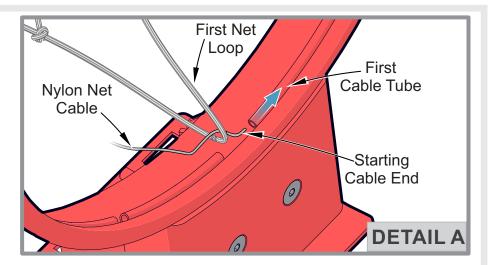


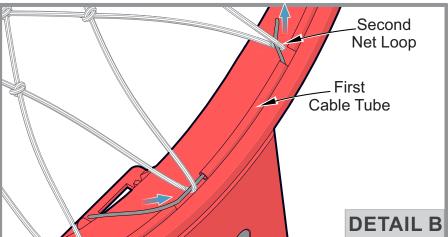


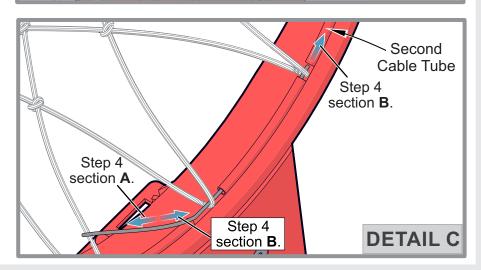

Attaching net to the rim - continued


- 6. Insert the starting cable end through the first net loop and into the first cable tube again until cables are overlapping in the tube. See Detail D.
- 7. To secure the net in place insert the finishing cable end into the last cable tube. See Detail D & Detail E.

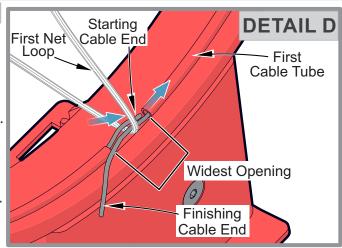

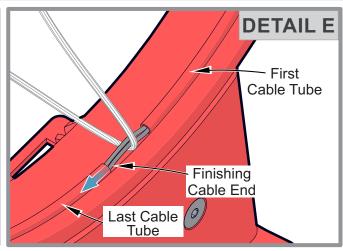

Inserting top Carriage Bolts to top rim slots.

 Insert the top Carriage Bolts (#5) into the carriage bolt holes located at the back of the rim.
 See Figure 2. 2. Slide the Carriage Bolts (#5) in the slot next to the top holes. Carriage Bolts should stay in place to aid installation on the next step. See **Detail A.**

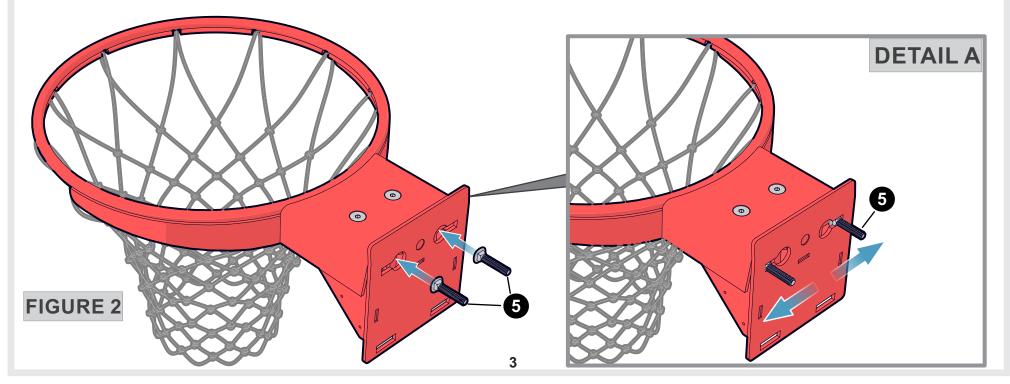





INSTALL RIM EXACTLY AS SHOWN. FAILURE TO DO SO COULD DAMAGE GLASS.

Mounting Goal Assembly to the backboard.

1. Lift the rim up to the backboard with the top Carriage **Bolts** (#5) installed in the previous step and slide them into the holes in backboard as show in **Detail A**. While still holding the rim up from the front reach around behind the rim and attach the Washers (#6) and Nuts (#7). See Detail A & Figure 3.


NOTE: Tighten top nuts (#7) but leave loose enough to level Rim.


2. Insert the two **bottom** carriage bolts and attach washers and nuts. See Figure 3.

NOTE: Tighten bottom nuts (#7) but leave loose enough to level Rim.

- 3. Place Level across the Goal Assembly (#1) and adjust until level. Finish tightening the four (#7) nuts until Goal Assembly is secure.
- 4. Attach Rim Cover Plate 7B with four screws (#8).



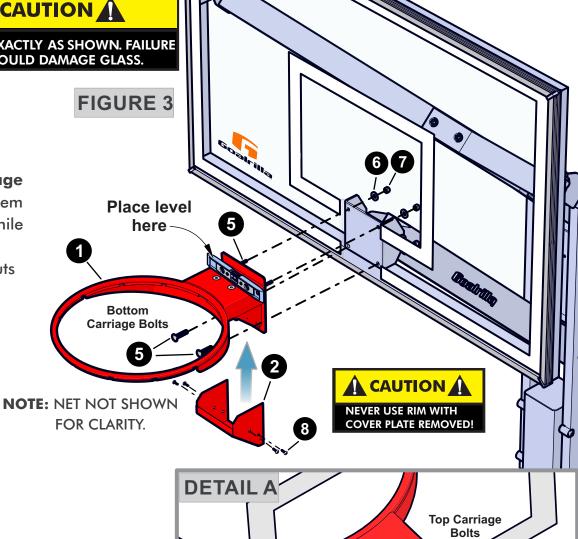

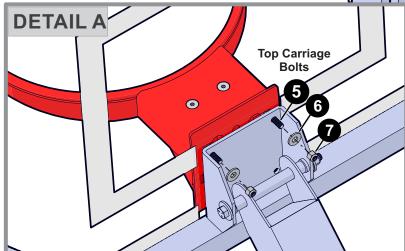

1 YEAR LIMITED WARRANTY

WARRANTY COVERAGE: Escalade® Sports warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL OR WORKMANSHIP.

NOT COVERED BY THIS WARRANTY

• Any merchandise subjected to abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of Escalade® Sports.

Contact Escalade Sports Customer Service department at:

Phone: 1-888-872-4625 Warranty Dept.

Or Write Escalade® Sports at: Escalade® Sports - P.O. Box 889, Evansville, IN 47706 - Attn: Warranty Dept.

Or E-mail us at: basketball@escaladesports.com