

PRE-LIT ARTIFICIAL CHRISTMAS WREATH CXT-347

Read the assembly instructions and follow the care instructions.
 Save this document for future reference.
Save the box to store the wreath.

INSTALLATION

1. Use care to remove the wreath from the box. The wreath is one preassembled piece with lights.
2. Locate the two-prong plug.
3. Before hanging the wreath, ensure it is located close enough to a properly grounded GFCI outlet. If an extension cord is needed, ensure the cord is rated for the location (indoor or outdoor) where the wreath is hung.
4. Hang the wreath on a sturdy hook or nail (hanging hardware not included).
5. Plug the power cord in.



CARE & MAINTENANCE

- Recommended for indoor use.
- Dust gently using a soft cloth or fabric duster. Do not use water, chemicals or solvents to clean.
- Handle lights gently. Do not pull or tug on the light string as it may loosen the bulbs or damage the wire.
- Do not mount or place near gas or electric heaters, fireplaces, candles or any other heat source.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Remove all decorations before storing.
- Always remove the batteries before storage.
- Store in a cool, dry place away from sunlight. Exposure to excessive heat or humidity may damage the wreath.

! SAFETY STATEMENTS & WARNINGS !

- For decorative purposes only. This item is not a toy.
- This seasonal product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or any other heat source.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not use chemicals or solvents to clean the wreath.
- Remove batteries if unit is being stored or if it will not be used for long periods of time.
- Promptly remove expelled batteries. Do not mix old and new batteries. Mixing batteries could cause leakage of the acid inside batteries, damaging the unit.
- Manufacturer is not liable for damage or personal injury caused by improper use, inadequate maintenance or neglect of this product.

Any modification to the product or failure to follow recommended care will void the product warranty.