

Thank you for choosing the SKLZ Accelerator Pro. We are dedicated to providing you with the best tools and instruction possible to help you unleash your athletic potential. If there is anything else we can do to help optimize your training, do not hesitate to send us an email (customerservice@sklz.com) or give us a call (1-877-225-7275).

BEFORE YOU BEGIN:

- Read all setup and usage instructions carefully before using. If the setup and/or instructions are not followed correctly, it could result in injury or damage to the product.
- Athletes under 18 years of age should use only under adult supervision.
- Not suitable for children under 3 years of age.
- Always check for wear and tear before use. If any is found, do not use the product.
- Make sure you have all Accelerator Pro components. Please contact SKLZ customer service toll free at 1-877-225-7275 x 128 if you are missing anything.

ACAUTION:

- When in use, make sure the Accelerator Pro is set up in a clear area to avoid damage to property.
- When using the Accelerator Pro, please have others stay clear of the putting area to reduce risk of injury.
- This product is not suitable for children under 3 years of age.

CARE:

- Do not leave the Accelerator Pro outdoors for extended periods of time.
- Keep away from fire and heat sources.
- Avoid storing the Accelerator Pro in extremely hot or cold environments as this could reduce the life span of the product.

PATENT PENDING

IDEA SUBMISSION


If you have an idea for a new and innovative sports training product, visit SKLZ.com to submit your concept. Some restrictions may apply.

1 YEAR LIMITED WARRANTY

This warranty does not cover damages resulting from accident, misuse, abuse or lost merchandise, and is only valid in the USA. Register your product at SKLZ.com to ensure warranty coverage, and get new product information and special deals from SKLZ. **Questions? Email: customerservice@sklz.com or call toll free: 877-225-7275**


Made in China. © 2015 Pro Performance Sports, LLC. All rights reserved. Manufactured and distributed by SKLZ/Pro Performance Sports: 2081 Faraday Avenue, Carlsbad, CA 92008 U.S.A. SKLZ is a registered trademarks of Pro Performance Sports, LLC., its subsidiaries and affiliates. Product features, appearance, and specifications may be subject to change without notice. Unauthorized duplication is a violation of applicable local and international laws.


IN THE BOX

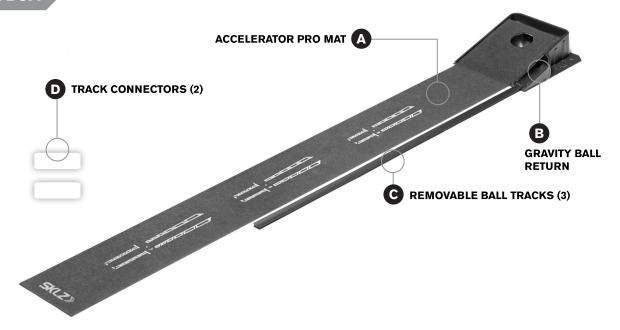

ASSEMBLY

- Remove and unroll the Accelerator Pro mat (A).
 Gravity Ball Return (B) is pre-connected to the mat.
- 2. Connect the Removable Ball Tracks (C) using the connectors (D).
- 3. Connect the assembled Ball Track (C) to the Gravity Ball Return (B).

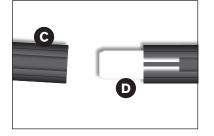

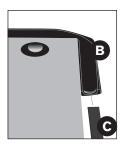

USAGE

SELECTING DESIRED BALL RETURN DISTANCE

User may add or remove ball tracks to ensure the ball returns directly to the desired location: 3', 5', or 7'.

- 1. Attach the first track to the end of the ball return on the mat for a return of 3 feet.
- 2. Attach the second track to the end of the first track for a return of 5 feet.
- 3. Attach the third track to the end of the second track for a return of 7 feet.

PUTTING PRACTICE

- 1. Place ball on the number for the desired distance in feet: 3, 5 or 7.
- **2. ALIGNMENT:** Square the putter face with the squaring lines at desired putt length.
- **3. BACK STROKE:** The back stroke guides indicate the proper distances to take the putter back and prepare your stroke for an accelerated follow through.
- **4. THROUGH STROKE:** The acceleration lines guide the motion for proper forward strokes and acceleration.
- 5. Practice at all different putt lengths, using the back and through stroke guides for the ideal stroke for each distance. Focus on a slow, smooth stroke going back with an accelerating stroke going through.

