

TAC 1354 Clifford Avenue P. O. Box 2940 Loves Park, IL 61132-2940 www.tac.com

Digital, On/Off Thermostat
General Instructions

Application


T200 series thermostats provide temperature control on a variety of heating, cooling and single stage heat pump applications.

The large LCD window displays room temperature including 1/5th of a degree increments indicated by a series of up to 5 dashes. The system heat output cycles on a 1 or 2F degree field selectable differential. The cool output differential is fixed at 2F degrees. The setpoint is displayed and changed by pressing one of the setpoint buttons up or down. Installation is simplified by having all of the field wires mounted to the separate wall plate.

This is a powered thermostat, which must receive 75 mA of power at all times.

Features

- · LCD window display
- Jumper selectable 5 minute time delay for heating and cooling applications
- Mechanical contact for 40°F limit freeze protection (optional)

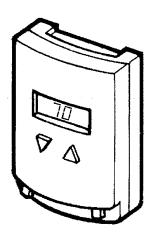

T200 Series

SPECIFICATIONS

Inputs

Power Input: 20 to 32 Vac, 75 mA to 1.2 amps.

Outputs

Electrical:

Battery, Setpoint backup (Energizer 357 or equivalent).

Mechanical:

Operating Differential, Heating 1 or 2F degrees (0.6 or 1.1C degrees), Cooling 2F

degrees (1.1C degrees).

Setpoint Adjustment Range, 50 to 86° F (10 to 30°C).

Material, Rigid vinyl. Finish, Off-white.

Environment

Temperature limits:

Shipping & Storage, -40 to 125°F (-40 to 52°C).

Operating, 40 to 125°F (5 to 53°C).

Humidity: 95% non-condensing. **Shipping Weight:** 0.4 lbs (170 g).

Location: NEMA Type 1.

Table-1 Model Chart.

Model	Control Outputs	Fan Control	System Switch	Changeover	Mechanical Contact	B & O Terminals
T201	Heating Only	None	Heat/Off	None	No	No
T201-FP ^a	Heating Only	None	Heat/Off	None	Yes	No
T204	Cooling Only	On/Auto	Cool/Off	None	No	No
T205	Cooling & Heating	On/Auto	Cool/Off/Heat	Manual	No	No
T205-FP ^a	Cooling & Heating	On/Auto	Cool/Off/Heat	Manual	Yes	No
T207	Cooling & Heating	On/Auto	Cool/Off/Heat	Manual	No	Yes
T207-FP ^a	Cooling & Heating	On/Auto	Cool/Off/Heat	Manual	Yes	Yes

a On T20X-FP (freeze protection) models a relay will provide power to a valve or relay if the thermostat fails.

TYPICAL APPLICATION (wiring diagram)

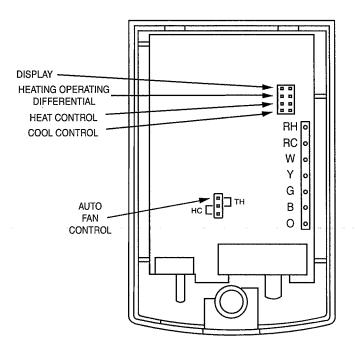


Figure-1 Terminal Identification.

Table-2 Field Selectable Jumper Options.

Feature	Jumpered	Not Jumpered
1. Display	Celsius	Fahrenheit
2. Heating operation differential	2 degrees	1 degree
3. Heat control	No delay	5 minute delay
4. Cool control*	No delay	5 minute delay

^{*} T201, heat only model, only has jumper options 1 thru 3. A fourth jumper location exists but is non-functional in heat only models.

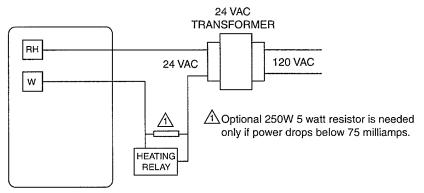


Figure-2 T201 Typical Wiring to Heating System With Single Transformer.


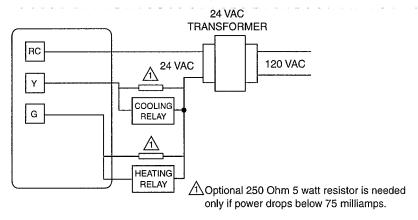


Figure-3 Typical T204 Wiring to Cooling System With Single Transformer.

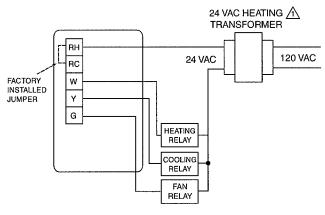

⚠ If one of the secondary sides
of both transformers are grounded,
grounded sides must be connected
together.

Figure-4 Typical T205 Wiring to Heating/Cooling System With Single Transformer.

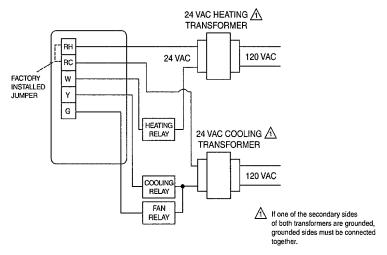


Figure-5 Typical T205 Wiring to Heating/Cooling System With Dual Transformer.

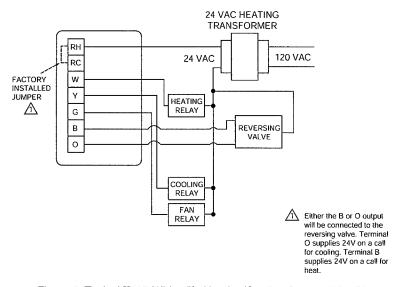


Figure-6 Typical T207 Wiring To Heating/Cooling System With Single Transformer & Reversing Valve.

INSTALLATION Inspection

Inspect the package for damage. If damaged, notify the appropriate carrier immediately. If undamaged, open the package and inspect the device for obvious damage. Return damaged products.

Requirements

- · Tools (not provided)
 - Writer's Note: Need list.
- Training: Installer must be a qualified, experienced technician
- · Other accessories as appropriate

Precautions

General

WARNING

- Electrical shock hazard! Disconnect power before installation to prevent electrical shock or equipment damage.
- Make all connections in accordance with the electrical wiring diagram and in accordance with national and local electrical codes.

VCAUTION -

- Avoid locations where excessive moisture, corrosive fumes, explosive vapors, or vibration are present.
- Avoid electrical noise interference. Do not install near large conductors, electrical machinery, or welding equipment.

Federal Communications Commission (FCC)

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy and may cause harmful interference if not installed and used in accordance with the instructions. Even when instructions are followed, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio and television reception—which can be determined by turning the equipment off and on—the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Canadian Department of Communications (DOC)

NOTE

This class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numerique de la classe B respecte toutes les exigences du Reglement sur le material broilleur du Canada.

European Standard EN 55022

WWARNING

This is a class B (European Classification) product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Mounting

Wiring

Mount the T200 series to a suitable surface. The T200 is shipped with an adapter plate $(4-1/4 \times 4-3/4 \text{ in.})$ that covers the mounting blemishes of a previous thermostat. New installation will not need the adapter plate. Do not mount on a surface that exceeds 125°F (52°C).

NOTE -

- The T200 series is a powered thermostat which must receive 75 mA of power at all times.
- Some systems may require a 250 ohm, 5 watt resistor (included) to be installed across
 the "W" and "C" terminals of the furnace or boiler control board (Figure-2) to assure
 proper current draw for the thermostat. Install the resistor if the thermostat setpoint
 cannot be adjusted, if the heating relay cycles too often (1-15 seconds), or if the heating
 relay will not cycle.
- The T200 series cannot operate with a millivolt automatic self-powered gas heating system unless an isolation relay and a separate 24 Vac transformer are used. Install an isolation relay if the ignition blower runs continuously or if the furnace will not shut off when the thermostat reaches the set temperature. Another symptom is that the furnace may not turn on.

T201

The T201 models are a heat only model with a "HEAT/OFF" system switch and no fan control. Applications include hydronic and radiant floor heating systems as well as gas and electric forced air heating systems. Refer to Figure-2.

T204

The T204 model is a cool only model with a "COOL/OFF" system switch and a "FAN ON/AUTO" fan switch. Applications include direct expansion cooling only systems. Refer to Figure-3.

T205

The T205 models are heat/cool models with manual changeover. The unit consists of a "COOL/OFF/HEAT" system switch and a "FAN/ON/AUTO" fan switch. Applications include hydronic heating and radiant floor heating systems as well as gas and electric forced air heating with conventional air conditioning systems. Refer to Figure-4 and Figure-5.

T207

The T207 models are heat/cool models with manual changeover and B (powered on heat demand) and O (powered on cool demand) terminals. The unit consists of a "COOL/OFF/HEAT" system switch and a "FAN ON/AUTO" fan switch. Applications include all of the T205 applications plus single stage heat pumps and forced air zoning systems that require B and O outputs. Refer to Figure-6.

For field selectable jumper options see Table-2.

For jumper and terminal locations see Figure-1.

Auto Fan Control (HC/TH)

A three-pin jumper (Figure-1) is set to enable the HC or TH mode.

The HC mode is used in electric heat applications to energize the fan relay at the same time the heating relay is energized. The TH mode is used in fossil fuel applications where the furnace, not the thermostat, controls the fan directly. In this application, a call for heat only energizes the heating relay.

Optional Freeze Protection

When the T200 thermostat is ordered with the FP option a limit switch is wired in parallel with the terminals R and W. This will provide power to a heating valve or relay if the thermostat fails. This provides freeze protection to 40°F (4°C) as long as heat is available from the heat source.

CHECKOUT

- 1. Verify jumper pin selections.
- 2. Verify that the T200 is wired correctly to your heating and or cooling loads.
- 3. Confirm that 75 milliamps are available at all times. To measure the current draw connect an ammeter (set to measure milliamps) in series with the heat or cool output. If power value is below 75 milliamps install a 250 ohm 5 watt resistor in parallel across the switched load. Recheck for 75 milliamps. The T200 thermostats must have 75 milliamps to function properly.
- 4. Verify system Heat/Cool/Fan outputs:
 - Heating Connect a voltmeter in parallel across the heat output terminal, W, and common of the power source.
 - Cooling Connect a voltmeter in parallel across the cooling output terminal, Y, and common of the power source.
 - Fan Connect a voltmeter in parallel across the fan terminal, G, and common of the power source.
- 5. The display will show the current room temperature as a number. Up to five dashes will appear under the number. Each dash represents 1/5 of a degree. The thermostats ON/OFF switching is based on whole degrees.

MAINTENANCE

The T200 series requires no maintenance. Replace defective modules.

Regular maintenance of the total system is recomended to assure sustained, optimum performance.

FIELD REPAIR

Replace battery with Energizer 357 or equivalent as needed. Replace any damaged or failed components with functional replacements.

DIMENSIONAL DATA

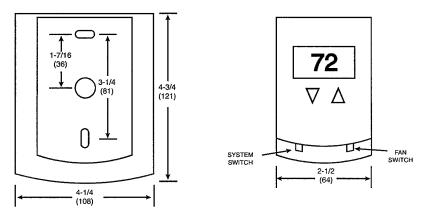


Figure-7 T200 Series Dimensions.


Copyright 2006, TAC
All brand names, trademarks and registered trademarks are the properly of their respective owners. Information contained within this document is subject to change without notice.


1354 Clifford Avenue P.O. Box 2940 Loves Park, IL 61132-2940








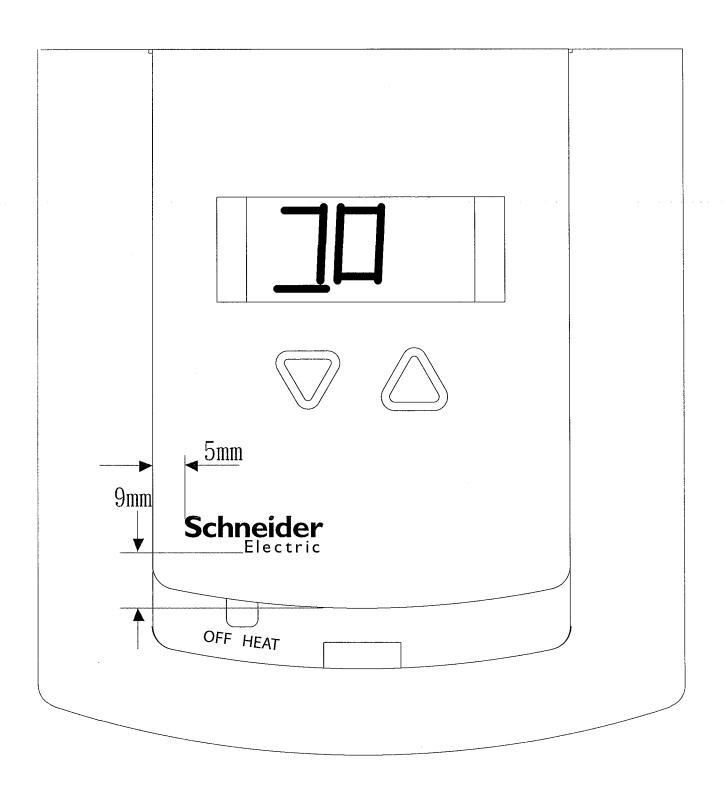

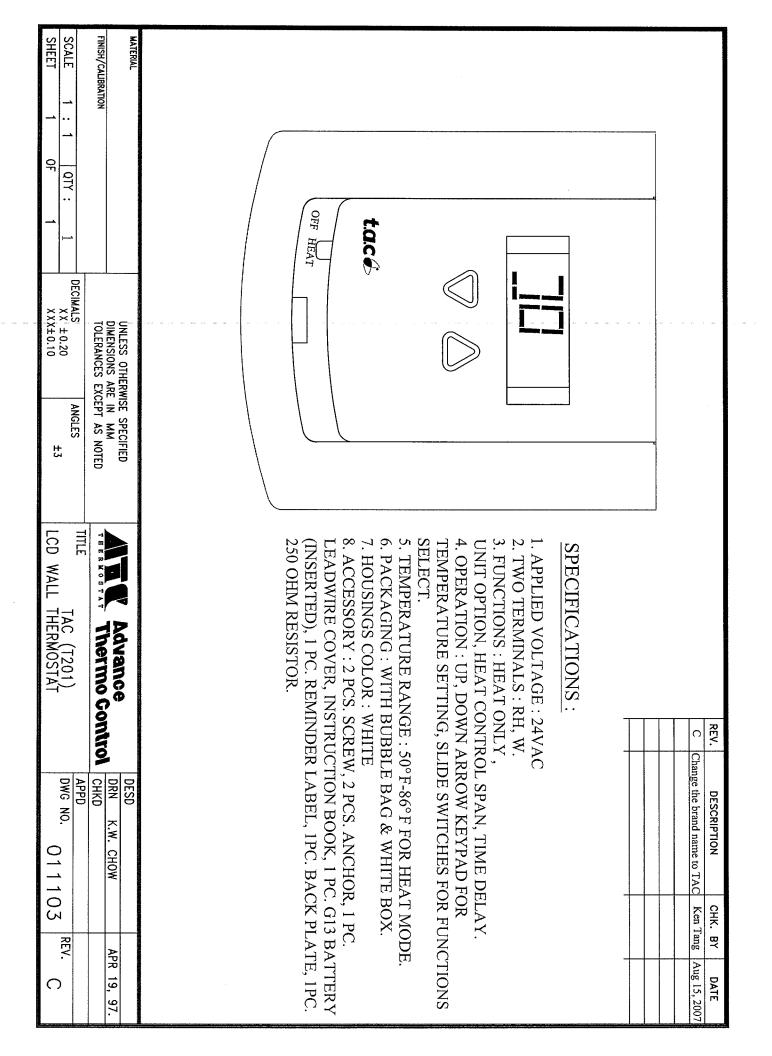

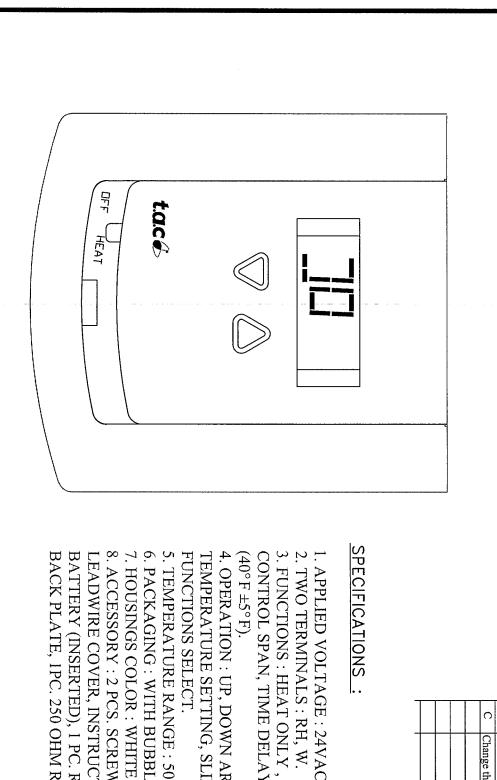

		С	REV.
		C Change the brand name to TAC Ken Tang Aug 15, 2007	DESCRIPTION
		Ken Tang	снк. вү
		Aug 15, 2007	DATE

SPECIFICATIONS :


- 1. APPLIED VOLTAGE: 24VAC
- 2. TWO TERMINALS: RH, W.
- $(40^{\circ} \text{F} \pm 5^{\circ} \text{F}).$ FUNCTIONS: HEAT ONLY, UNIT OPTION, HEAT CONTROL SPAN, TIME DELAY, WITH FREE PROTECTION
- 4. OPERATION: UP, DOWN ARROW KEYPAD FOR TEMPERATURE SETTING, SLIDE SWITCHES FOR
- FUNCTIONS SELECT. 5. TEMPERATURE RANGE: 50°F-86°F FOR HEAT MODE.
- 6. PACKAGING: WITH BUBBLE BAG & WHITE BOX.
- BACK PLATE, 1PC. 250 OHM RESISTOR. BATTERY (INSERTED), 1 PC. REMINDER LABEL, 1PC 8. ACCESSORY: 2 PCS. SCREW, 2 PCS. ANCHOR, 1 PC LEADWIRE COVER, INSTRUCTION BOOK, 1 PC. G13


OTHERWISE SPECIFIED		DESD	-
ONS ARE IN MM		ı	APR 19, 97.
ICES EXCEPT AS NOTED	rmo Control		
ANOI TO	TITLE	APPD	
-		NO.	REV.
H	LCD WALL THERMOSTAT	011099	C
UNLESS DIMENSIC TOLERAN ALS XX ± 0.20 XXX± 0.10	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MM TOLERANCES EXCEPT AS NOTED \$ \$\pmu.0.20 \$\pmu.0.10 \$ \$\pmu.0.10 \$\pmu.0.1	OTHERWISE SPECIFIED ONS ARE IN MM NCES EXCEPT AS NOTED ANGLES ±3 ANGLES LCD WALL THERMOSTAT Advance Thermo Control TITLE TAC (T201-FP) LCD WALL THERMOSTAT	OTHERWISE SPECIFIED ONS ARE IN MM NCES EXCEPT AS NOTED ANGLES \$\frac{1}{\text{11TLE}}\$ \text{Advance}{\text{Thermo Gontrol}} \text{CHKD} \text{DRN} \text{K.W. CHOW} \text{CHKD} \text{CHKD} \text{APPD} \text{APPD} \text{DWG NO.} \text{O11O99}

FINISH/CA

SCALE SHEET

MATERIAL

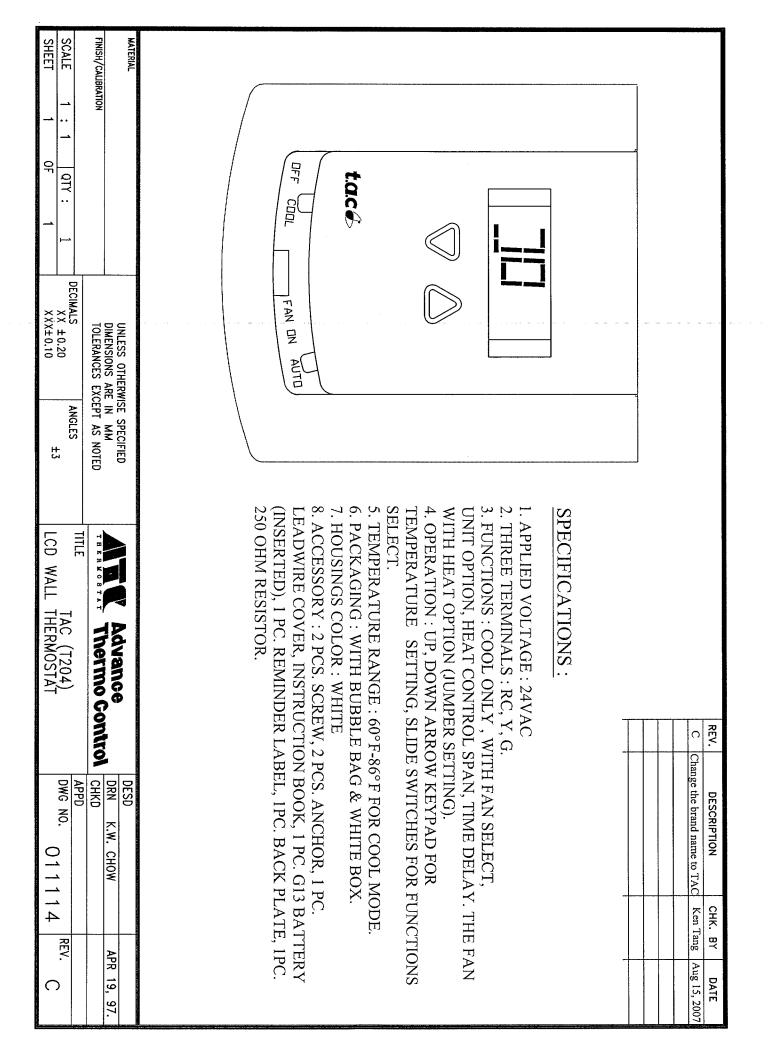

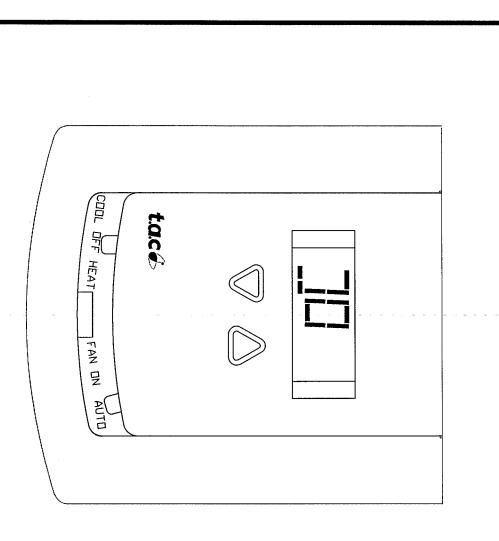

		С	REV.
		Change the brand name to TAC Ken Tang Aug 15, 2007	DESCRIPTION
		Ken Tang	снк. вү
		Aug 15, 2007	DATE

SPECIFICATIONS:

- 1. APPLIED VOLTAGE: 24VAC
- 2. SEVEN TERMINALS : RH, RC, W, Y, G, B, O
- 3. FUNCTIONS: HEAT & COOL, WITH FAN SELECT, UNIT OPTION, HEAT CONTROL SPAN, TIME DELAY. THE FAN
- 4. OPERATION: UP, DOWN ARROW KEYPAD FOR TEMPERATURE SETTING, SLIDE SWITCHES FOR FUNCTIONS SELECT.


WITH HEAT OPTION (JUMPER SETTING).

- 5. TEMPERATURE RANGE : 60°F-86°F FOR COOL MODE, 50°F-86°F FOR HEAT MODE.
- 6. PACKAGING: WITH BUBBLE BAG & WHITE BOX.
- 7. HOUSINGS COLOR: WHITE

 8. ACCESSORY: 2 PCS. SCREW, 2 PCS. ANCHOR, 1 PC

 1 E A DWIDE COVER INSTRUCTION BOOK 1 PC C13
- 8. ACCESSORY: 2 PCS. SCREW, 2 PCS. ANCHOR, 1 PC LEADWIRE COVER, INSTRUCTION BOOK, 1 PC. G13 BATTERY (INSERTED), 1 PC. REMINDER LABEL, 1PC BACK PLATE, 2PCS. 250 OHM RESISTOR.

MATERIAL MATERIAL	UNLESS OTHERWISE SPECIFIED	SPECIFIED MM		Advance	DESD DRN K.W. CHOW	APR 19, 97.
FINISH/CALIBRATION	TOLERANCES EXCEPT AS NOTED	T AS NOTED	THERMOSTAT	Inermo Control	CHKD	
	DECIMALS	ANGIES	TITLE		APPD	
SCALE 1 : 1 QTY : 1	±0.20		TA	TAC (T207))	REV.
SHEET 1 OF 1	XXX±0.10	ΤĴ	LCD WALL TH	ERMOSTAT	011102	C

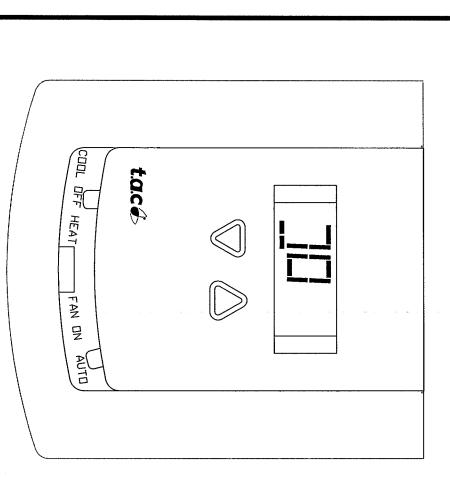

		В	REV.	
		Change the brand name to TAC Ken Tang Aug 15, 2007	DESCRIPTION	
		Ken Tang	снк. вү	
		Aug 15, 2007	DATE	

SPECIFICATIONS:

- 1. APPLIED VOLTAGE: 24VAC
- 2. SEVENTERMINALS: RH, RC, W, Y, G, B, O
 3. FUNCTIONS: HEAT & COOL, WITH FAN SELECT, FREEZE PROTECTION (40° F $\pm 5^{\circ}$ F). THE FAN WITH HEAT UNIT OPTION, HEAT CONTROL SPAN, TIME DELAY, WITH
- 4. OPERATION: UP, DOWN ARROW KEYPAD FOR TEMPERATURE SETTING, SLIDE SWITCHES FOR FUNCTIONS

OPTION (JUMPER SETTING).

- 50°F-86°F FOR HEAT MODE 5. TEMPERATURE RANGE: 60°F-86°F FOR COOL MODE
- 6. PACKAGING: WITH BUBBLE BAG & WHITE BOX.
- . HOUSINGS COLOR : WHITE
- 8. ACCESSORY: 2 PCS. SCREW, 2 PCS. ANCHOR, 1 PC. BATTERY (INSERTED), 1 PC. REMINDER LABEL, 1PC. BACK PLATE, 2PCS. 250 OHM RESISTOR. LEADWIRE COVER, INSTRUCTION BOOK, 1 PC. G13

ERIAL	UNLESS OTHERWISE SPECIFIED		DESD	
DIME	DIMENSIONS ARE IN MM	HANGINGS	DRN K.W. CHOW	APR 19, 97.
SH/CALIBRATION TOLES	TOLERANCES EXCEPT AS NOTED	THEREOSTAT INCITED CONTO	CHKD	
7701110	ANCIEC		APPD	
ALE 1:1 QTY: 1 DECIMALS $XX \pm 0$.	ANGLES	TAC (T207-FP)	NO.	REV.
EET 1 OF 1 XXX±0.10	10 ±3	LCD WALL THERMOSTAT	011108	α


SCAL


SHE

FINISH

MATER

)				FACTORY CONFIGURATION	ÖNF	GUR/												_
	(F1)					JUNP	ER CO	JUMPER CONFIGURATION	NOEV	_	-	١	١	١	-	-	-		
ERE	TAVAGO	CUSTOMER! ATT BIN INSTRUCT. LATEST	אום הד	INSTRUCT.	LATEST		JUMPE	JUMPERED = 1,	_		짂	Ĩ	λLS	쑮	TERMINALS YES/NO	Ŭ	_		P/N REV.
MODEL	LABEL	P/N	2	חותב	TITLE PUBLICATION NOT JUMPERED = 0	ž.	IMULTO	EREO	= 0								_	COMMENS	
						c	15	нвү	HBY CBY G Y RC RH W B O	O	4	SH	RH	*	В	o	-		
T205	SCHNEIDER	T205	011098	TI-205	04/87	0	0 1	-	0	٨	~	~	~	~	z	Z	0	Y Y Y Y N N OPTO-TRAC	Ã
T205-D	DICO	1205	011117	TI-205-D	78/80	٥	-	-	٥	4	┥	₹	4	ᆌ	z	ᅿ	히	Y N N OPTO-TRIAC/SET C	2
T205-FP	SCHNEIDER	T205-FP 011107	011107	11-205	04/97	0	-	0 1 1 0	0	~	≺	٧.	~	~	z	z	0	Y Y Y Y N N OPTO-TRIAC	즛
7205-JCI	CONTROLS	JC-T205	011116	011116 JC-T-205	86/90	-	1 1 1		٥	≺	≺	۲	~	۲.	z	z	0	Y Y Y Y N N OPTO-TRAC	8
T205-RI	ROTH	RIE-HC	011110	011110 TI-RIE-HC	76/03	٥	0	-	۰	≺	≻_	≺	~	~	z	z	0	0 0 1 0 Y Y Y Y N N OPTO-TRIAC	
	1						ĺ			l	ļ	I	I	ı	l	ĺ	ŀ		

 

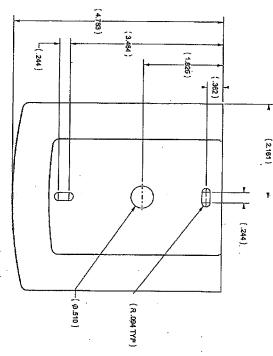

BACK PLATE MOUNTING HOLES FOR REFERENCE ONLY

10-1598 F SCHNEIDER ELECTRIC LOGO, ADD

9-17-10

8-17-0 8-

08-1709 E REV.

REPLACES REV. O. WICHGS I)REM'D ALL INFORMATION NOT PERTAINING TO T205

BY & DATE BY & DATE

SOFTWARE REV: ATC3

- RROW KEYPAD FOR TEMPERATURE SETTING,
- 60'F-36'F FOR COOL MODE, 50'F-36'F JCJ, 15'C-30'C FOR COOL & 10'C TO 30'C FOR HEAT MODE). BLE BAG & WHITE BOX.

- 1) INSERT PACKAGE INCLUDES THE FOLLOWING ITEMS: 2 SCREWS,
 INSERT PACKAGE INCLUDES THE FOLLOWING ITEMS: 2 SCREWS,
 LABOWINE COUTER, (2) NALL ANCHORDS, INSTRUCTION BOOK, (1) REMINDER
 (ABEL, (1) G13 BATTERY (INSERTED), (1) BACK PLATE, (2) 250 OHM RESISTORS.
- CONTROL AND ADAPTER PLATE/HOLDER SHOULD COLOR MATCH AS CLOSE AS POSSIBLE.
- 3) CALIBRATION POTENTIOMETER MUST BE GLUED AFTER CALIBRATION.
- 4) THERMOSTATS ARE SHIPPED (1) UNIT PER WHITE GIFT BOX, TEN UNITS PER SUB-PACKAGE, WITH (4) SUB-PACKAGES PER MASTER CARTON.
- 5) EACH BOX 1:1, 10:1, 40:1 MUST HAVE STICKER LABELING CONTENTS.
- 6) UNITS ARE TO BE SHIPPED WITH BLUE BATTERY INSULATOR INSTALLED.
- B) INSIDE COMPONENT COVER TO BE CLEARLY MARKED WITH HARDWARE AND SOFTWARE REVISION, MANUFACTURING DATE CODE FORMATTED YRWK 7) UNITS TO BE MARKED "MADE IN CHINA" ON INSIDE BASE PLATE SURFACE.
- 9) OPERATIONAL VOLTAGE TO BE 24 VAC ±20% 60Hz.
- 11) UP/DOWN BUTTONS TO BE GRAY PANTONE BC COLOR. 10) BATTERY BACKUP TO LAST (1) YEAR MINIMUM (ENERGIZER 357 OR EQUIV.)
- 12) LOAD CURRENT MAXIMUM 1.5A INDUCTIVE, MINIMUM 0.1A INDUCTIVE. POWER FACTOR WORSE CASE 0.4.
- 3) JUMPER NOMENCLATURE TO BE: C. CISSPLAY), 15 (HEATING DIFFERENT)

 18 Y (HEAT CONTROL), CBY (COOL CONTROL), CBY (COOL TO THE PERED TO
- 15) COOLING DIFFERENTIAL NON-SELECTABLE 2 DEGREES, 14) FAN CONTROL HOATH JUMPERS TO BE "TH" FURNACE CONTROL OF FAN.
- 16) "FP" (MECHANICAL FREEZE PROTECTION) OPTION TO BE 40 "F, BIMETAL PEPI (OR EQUIVALENT).
- 17) SUPPLIER ATC.
- 18) ARTWORK SUPPLIED BY SCHNEIDER ELECTRIC. INK COLORS SHOWN ON EACH DETAIL.

(3)

 INCLUDE DATE CODE ON UNIT USING LAST (2) DIGITS OF YEARWEEK IN WHICH UNIT WAS PRODUCED. PACKAGING INSTRUCTIONS:

2) MANUFACTURE TO DATE CODE BOX (PACKAGING CARTON) WITH SAME DATE CODE AS UNIT.

T205-XXX SRS

RMOSTAT

