


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested with the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at **833-982-1977**, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>



Stone Falls Outdoor Water Fountain – FC-73720

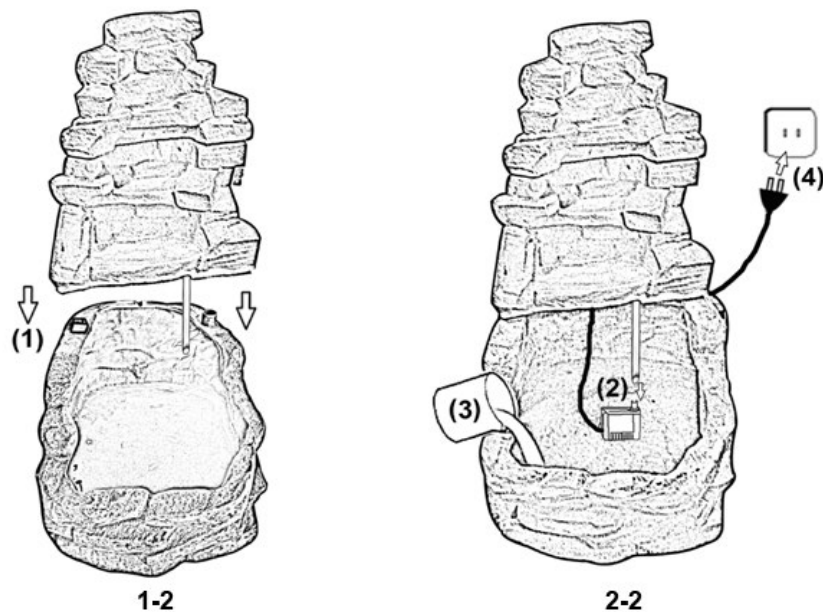

ASSEMBLY INSTRUCTIONS:

Please read the assembly and operating instructions carefully and observe the safety instructions. Keep these details in a safe place for future reference.

Place the fountain on a level surface, away from areas where it is likely to get clogged with leaves and make sure that the cable will reach the socket.

Follow the assembly steps below for this fountain as shown in the illustration above.

Step (1) Set the top to the base.

Step (2) Connect plastic hose to pump outlet.

Step (3) Fill the fountain with enough clean water to assure the pump to work properly.

Step (4) Plug the pump then water will start to flow soon.

- Adjust the pump flow rate to achieve the desired effect and to minimize any splashing. Splashing can occur if the flow rate is too high, or the reservoir is too full. The flow rate can be increased or decreased by moving the flow rate control slider on the pump body. Moving the switch towards '+/ Max.' will increase the flow rate and moving it towards '-/Min' will decrease it. On some type of pumps, flow regulator may be turned clockwise or anticlockwise to adjust.

Troubleshooting

- - TURN OFF THE POWER BEFORE YOU CHECK FOLLOWING - -

If pump does not run --

- (1) Check the circuit breaker, try another outlet.
- (2) Check the water level in the fountain. Running the pump without sufficient water can damage the pump.
- (3) Check the setting of the flow control on the pump and adjust the flow.
- (4) Check the pump discharge and intake for dirt and debris.
- (5) Check the fountain feature tubing for kinks and obstructions.
- (6) The pump might be "air locked". Plug and unplug the pump several times to release the air inside the pump.
- (7) Check and reconnect all the cords and try again.