
GX SERIES SINEWAVE UPS

GX150C2

USER MANUAL

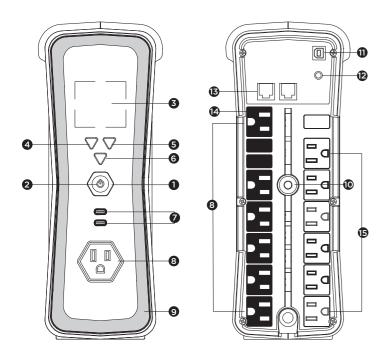

FEATURES

- 1. Power Button
- 2. Power On Indicator
- 3. LCD Display
- 4. Down/Display Button
- 5. Up/Mute Button
- 6. Enter/Setup Button
- 7. USB-C Charge Ports
- 8. Battery and Surge Protected Outlets
- 9. RGB Light Strip
- 10. Circuit Breaker
- 11. USB Communication Port
- 12. Wiring Fault Indicator (red)
- 13. Communication Protection Ports (RJ45)
- 14. Transformer-spaced Outlet with Battery Backup and Surge Protection
- 15. Full-Time Surge Protection Outlets

PRODUCT REGISTRATION

Thank you for purchasing a CyberPower product. Please take a few minutes to register your product at: www.cyberpower.com/registration. Registration certifies your product's warranty. confirms your ownership in the event of a product loss or theft and entitles you to free technical support. Register your product now to receive the benefits of CyberPower ownership

IMPORTANT SAFETY WARNINGS (SAVE THESE INSTRUCTIONS)

This manual contains important instructions that should be followed during installation and maintenance of the UPS and batteries. Please read and follow all instructions carefully during installation and operation of the unit. Read this manual thoroughly before attempting to unpack, install, or operate your UPS.

CAUTION! To prevent the risk of fire or electric shock, install in a temperature and humidity controlled indoor area free of conductive contaminants. (Please see specifications for acceptable temperature and humidity range.)

CAUTION! To reduce the risk of electric shock, do not remove the cover except to service the battery. Turn off and unplug the unit before servicing the batteries There are no user serviceable parts inside except for the battery.

CAUTION! Hazardous live parts inside can be energized by the battery even when the AC input power is disconnected.

CAUTION! The UPS must be connected to an AC power outlet with fuse or circuit breaker protection. Do not plug into an outlet that is not grounded. If you need to de-energize this equipment, turn off and unplug the unit.

CAUTION! To avoid electric shock, turn off the unit and unplug it from the AC power source before installing a computer

CAUTION! To reduce the risk of fire. connect only to a circuit provided with 20 amperes maximum branch circuit over current protection in accordance with the National Electric Code, ANSI/NFPA 70.

CAUTION! Not for use in a computer room as defined in the Standard for the Protection of Electronic Computer/Data Processing Equipment, ANSI/NFPA 75.

CAUTION! Do not dispose of batteries in a fire. The batteries may explode

CAUTION! Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic

DO NOT USE FOR MEDICAL OR LIFE SUPPORT EQUIPMENT! CyberPower

Systems does not sell products for life support or medical applications. DO NOT use in any circumstance that would affect operation and safety of life support equipment, any medical applications or patient care.

DO NOT USE WITH OR NEAR

AQUARIUMS! To reduce the risk of fire or electric shock, do not use with or near an aquarium. Condensation from the aquarium can cause the unit to short out

DO NOT USE THE UPS ON ANY

TRANSPORTATION! To reduce the risk of fire or electric shock, do not use the unit on any transportation such as airplanes or ships. The effect of shock or vibration caused during transit and the damp environment can cause the unit to

INSTALLING YOUR UPS SYSTEM

UNPACKING

Inspect the UPS upon receipt. The box should contain the following:

- (a) UPS
- (b) User's manual (c) USB A+B type cable
- (d) Function Setup Guide (e) RGB Quick Start Guide

PowerPanel software is available on our website. Please visit www. cyberpower.com and go to the Software Section for free download

SUPPORTS ACTIVE PFC POWER SUPPLIES

This CyberPower UPS system supports High Efficiency power supplies with Active Power Factor Correction (Active PFC). Active PFC is used to improve the efficiency of power delivery. The current US Energy Star* Program Requirements for Computers (version 7.1) mandates Active PFC for all power supplies over 100 watts. Additionally, programs such as 80 Plus* are often used to identify high efficiency power supplies with Active PFC

OVERVIEW

The GX150C2 provides complete power protection from utility power that is not always consistent and features 1445 Joules of surge protection. All units provide long lasting battery backup during power outages with maintenance free batteries. The GX150C2 ensures

consistent power to your computer system and includes software that will automatically save your open files and shutdown your computer system during a utility power loss

AUTOMATIC VOLTAGE REGULATOR

The GX150C2 uses Automatic Voltage Regulation (AVR) to stabilize inconsistent utility power voltage to levels that are safe for connected equipment. AVR safeguards hardware and important data files by automatically increasing low utility power to a consistent and safe output voltage while preserving battery power

DETERMINE THE POWER REQUIREMENTS OF YOUR EQUIPMENT

- Ensure that the equipment plugged into the UPS does not exceed the UPS unit's rated capacity. If the rated capacities of the unit are exceeded, an overload condition may occur and cause the UPS unit to shut down or the circuit breaker
- 2. There are many factors that can affect the amount of power that your electronic equipment will require. For optimal system performance keep the load below 80% of the unit's rated capacity.


INSTALLING YOUR UPS SYSTEM - Continued

HARDWARE INSTALLATION GUIDE

- 1. Your new UPS may be used mmediately upon receipt. Howeve after receiving a new UPS, to ensure the battery's maximum charge capacity, it is recommended that you charge the battery for at least 8 hours. Your UPS is equipped with an auto-charge feature. When the UPS is plugged into an AC outlet, the battery will automatically charge whether the UPS is turned on or off.
- Note: This UPS is designed with a safety feature to keep the system from being turned on during shipment. The first time you turn the UPS on, you will need to have it connected to AC power or it will not power up.
- 2. With the UPS unit turned off and unplugged, connect your computer, monitor, and any other peripherals requiring battery backup into the battery power supplied outlets. Plug the other peripheral equipment (eg printer, scanner, speakers, etc.) into the full time surge protection outlets DO NOT plug a laser printer, paper shredder, copier, space heater, vacuum, sump pump or other large electrical devices into the "Battery and Surge Protected Outlets". The power demands of these devices may overload and damage the UPS.
- 3. Plug the UPS directly into a 2-pole, 3-wire grounded receptacle (wall outlet). Make sure the wall branch outlet is protected by a fuse or circuit breaker and does not service equipment with large electrical demands (e.g., air conditioner, copier etc.). The warranty prohibits the use of extension cords, outlet strips, and surge strips in conjunction with the

4. Press the power switch to turn the unit on. The Power On indicator light will illuminate and the unit will "beep"

- 5. If an overload is detected, an audible alarm will sound and the unit will emit one long beep. To correct this, turn the UPS off and unplug at least one piece of equipment from the battery power supplied outlets. Make sure the circuit breaker is depressed and then turn the UPS on.
- 6. To maintain optimal battery charge leave the UPS plugged into an AC outlet at all times
- 7. To store the UPS for an extended period, cover it and store with the battery fully charged. While in storage, recharge the battery every three months to ensure battery life.
- 8. Ensure the wall outlet and UPS are located near the equipment being attached for proper accessibility.

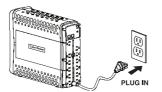

BASIC OPERATION

- 1. Power Button: Used as the master on/ off switch for equipment connected to the battery power supplied outlets.
- 2. Power On Indicator: This LED is Illuminated when the utility power is normal and the UPS outlets are providing power, free of surges and
- 3. LCD Display: High resolution and intelligent LCD display shows all the UPS information using icons and review the "Definitions for Illuminated LCD Indicators" section below
- 4. Down/Display Button: The button can be used to select the LCD display contents including Input Voltage Output Voltage, and Estimated Run Time. Short press the button to scroll down the function menu. Pressing the button for two seconds will keep the LCD display always on or turn the LCD display off while in AC/Utility power mode. For more information about the Down/Display Button, please refer to the Function Setup Guide.
- 5. Up/Mute Button: Short press the button to scroll up the function menu Holding the button for more than two seconds will silence the alarm. For more information about the Up/Mute Button, please refer to the Function
- 6. Enter/Setup Button: Press the button for two seconds to enter the setup menu and then select the functions for configuration. For more information about the Enter/Setup Button, please refer to the Function Setup Guide. 7. USB-C Charge Ports:
- USB-C (upper) Output : 5Vdc, 2.5A Max / 9Vdc, 2A Max / 15Vdc, 2A Max USB-C (lower) Output : 5Vdc, 2.4A Max Total USB Output: 30W Max 8. Battery and Surge Protected Outlets: he unit has seven battery powered and surge protected outlets to ensure

temporary uninterrupted operation of your equipment during a power failure (DO NOT plug a laser printer, paper

shredder, copier, space heater, vacuum cleaner, sump pump, or other large

- electrical device into the "Battery and Surge Protected Outlets." The power demands of these devices will overload and possibly damage the unit.)
- **RGB Light Strip:** There are 12 light bar modes available, allowing you to choose from a variety of colors and effects to personalize your setup. For more information about RGB setup. please refer to the RGB Lighting Quick Start Guide.
- messages. For more information please 10. Circuit Breaker: Located on the back of the UPS, the circuit breaker provides overload and fault protection.
 - 11. USB Communication Port: Allows communication between the USB port on the computer and the UPS unit
 - 12. Wiring Fault Indicator (red): This LED indicator will illuminate to warr the user that a wiring problem exists such as bad ground, missing ground or reversed wiring. If this is illuminated, disconnect all electrical equipment from the outlet and have an electrician verify the outlet is properly wired. The unit will not provide surge protection without being plugged into a grounded and properly wired wall outlet.
 - 13. Communication Protection Ports (RJ45): Bi-directional communication ports provide surge protection to a 10/100/1000 Ethernet connection. *Not for telecommunication (telephone) network.
 - 14. Transformer-spaced Outlet with Battery Backup and Surge Protection The UPS unit has a widely-spaced outlet, so the AC power adapter can be plugged into the UPS without overlapping or blocking adjacent outlets.
 - 15. Full-Time Surge Protection Outlets: The unit has six outlets that provide surge suppression without battery

REPLACING THE BATTERY

Replacement of batteries located in an OPERATOR ACCESS AREA.

- 1. When replacing batteries, replace with the same number of the following battery: CyberPower / RB1290X2 *Each purchase of RB1290X2 includes 2 units of RB1290.
- 2. CAUTION! Risk of Energy Hazard, 24V, maximum 9 Ampere-hour battery. Before replacing batteries, remove conductive jewelry such as chains, wrist watches, and rings. High energy conducted through these materials could cause severe burns.
- 3. CAUTION! Do not dispose of batteries in a fire. The batteries may explode.
- 4 CAUTION! Do not open or mutilate batteries. Released material is harmful to the skin and eyes. It may be toxic.
- 5. CAUTION! A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries: Remove watches rings, or other metal objects. 2) Use tools with insulated handles.

CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.


REMINDER: Batteries are considered HAZARDOUS WASTE and must be disposed of properly. Most retailers that sell lead acid batteries collect used batteries for recycling, as required by local regulations.

BATTERY REPLACEMENT PROCEDURE


- 1. Turn off and unplug all connected equipment. 2. Turn the UPS off and unplug it from the AC power source.
- 3. Turn the UPS on its side.
- 4. Remove the front panel retaining screws located on the bottom of the UPS.
- 5. Slide the front panel completely off of the unit.
- Remove the batteries from the compartment. 7. Disconnect the battery wires from the batteries.


at the same time to ensure maximum life span.


- 8. Place a new battery into the left compartment. Attach the yellow wire to the battery's black terminal and the red wire to the battery's red termina
- 9. Place a new battery into the right compartment. Attach the yellow wire to the battery's red terminal and the black wire to the battery's black terminal Note: Only use new batteries for replacement and both batteries should be replaced
- 10. Put the batteries back into the compartment
- 11. Slide back the battery compartment cover and tighten the retaining screws
- 12. Recharge the UPS for 8-16 hours to fully charge the battery.

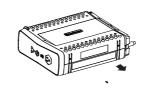



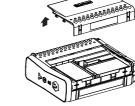


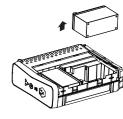

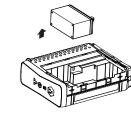



DEFINITIONS FOR ILLUMINATED LCD INDICATORS

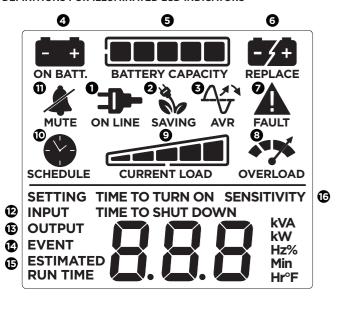

- 1. ONLINE: The UPS is supplying utility power to connected equipment
- ENERGY-SAVING: The UPS in energy-saving bypass mode. See "CyberPower GreenPower UPS™ Technology" section for more information.
- AVR (Automatic Voltage Regulation): This icon appears whenever your UPS is automatically correcting low AC line voltage without using battery power. This is a normal, automatic operation of your UPS, and no action is required on your part.
- 4. ON BATTERY: During a severe sag or loss in utility power, this icon appears and an alarm sounds (two short beeps followed by a pause) to indicate the UPS is operating from its internal batteries. During a prolonged sag or loss in utility power, the alarm will beep rapidly every 1/2 second to indicate the UPS's batteries are nearly out of power. You should save files and turn off your equipment immediately or allow the software to shut the system down.
- BATTERY CAPACITY: This meter displays the approximate charge level (in 20% increments) of the UPS's internal battery. During a severe sag or loss in utility power the UPS switches to battery power, the ON BATTERY icon appears, and the charge level decreases

- REPLACE BATTERY: The icon illuminates when the batteries are not connected well or the batteries are worn out.
- FAULT: This icon appears if there is a problem with the UPS. Press the POWER button to turn the UPS off.

E02: Charger Fault-No Charge (Contact CyberPower Systems for support.)

E11: Battery Overvoltage (Contact CyberPower Systems for support.)

E21: Battery Output Short Fault (Check the status of equipment connected to the UPS and then turn on the UPS again.)

E22: Battery Mode or AC/Utility Power Mode Overload Fault (Unplug at least one piece of equipment from battery outlets and turn the UPS on again.)

- 8. OVERLOAD: This icon appears and an alarm sounds to indicate the battery-supplied outlets are overloaded. To clear the overload, unplug one piece of equipment from the battery-supplied outlets at a time until the icon turns off and the alarm stops.
- CURRENT LOAD: This meter displays the approximate output load level (in 20% increments) of the UPS battery outlets.
- 10. SCHEDULE: Users can setup the schedule to turn on and shut down the computer and UPS through PowerPanel* software. The LCD display will show how much time is left before the UPS will turn back on or shut down.
- 11. MUTE: This icon appears whenever the UPS is in silent mode. However, when there is a problem with the UPS, the alarm will still beep even in silent mode.
- 12. INPUT METER: This meter measures the AC voltage that the UPS system is receiving from the utility wall outlet. The UPS is designed, through the use of automatic voltage regulation, to continuously correct output voltage to connected equipment to a safe 120 voltage output range. In the event of a complete power loss, severe sag, or overvoltage, the UPS relies on its internal battery to supply consistent 120 output voltage. The INPUT voltage meter can be used as a diagnostic tool to identify poor-quality input power.
- 13. OUTPUT METER: This meter measure, in real time, the AC voltage that the UPS system is providing to the computer, such as normal AC line mode, AVR mode, and battery backup mode. (Note: The OUTPUT meter shows the status of the battery backup outlets in terms of load, frequency, and voltage.)
- 14. EVENT: This meter records the number of power outages.
- ESTIMATED RUNTIME: This displays the runtime estimate of the UPS with current battery capacity and load.
- 16. SENSITIVITY SETUP: This meter is also used to setup the UPS sensitivity when you are in the programming mode. If the connected equipment can tolerate more power events (example: unstable power often associated with stormy weather), select Low Sensitivity and the UPS will go to Battery Mode less often. If the connected equipment is more sensitive to power events, select High Sensitivity and the UPS will go to Battery Mode more often.

For more information about functions setup, please refer to the Function Setup Guide.

TROUBLESHOOTING


Problem	Possible Cause	Solution
Circuit breaker button is projecting from the back of the unit.	Circuit breaker has been tripped due to an overload.	Turn the UPS off and unplug at least one piece of equipment. Wait 10 seconds, reset the circuit breaker by pressing the button, and then turn the UPS on.
The UPS does not perform expected runtime.	Battery not fully charged.	Recharge the battery by leaving the UPS plugged in.
	Battery is degraded.	Contact CyberPower Systems about replacement batteries at: cyberpowersystems.com/support.
The UPS will not turn on.	The on/off switch is designed to prevent damage from rapidly turning it off and on.	Turn the UPS off. Wait 10 seconds and then turn the UPS on.
	The unit is not connected to an AC outlet.	The unit must be connected to a 120V 60Hz outlet.
	The battery is worn out.	Contact CyberPower Systems about replacement batteries at: cyberpowersystems.com/support.
	Mechanical problem.	Contact CyberPower Systems at: cyberpowersystems.com/support.
PowerPanel® is inactive (all icons are gray).	The USB cable is not connected.	Connect the USB cable to the UPS unit and an open USB port on the back of the computer. You must use the cable that came with the unit.
	The USB cable is connected to the wrong port.	Check the back of the computer for an additional USB port. Move the cable to this port.
The USB power ports are not providing power to the connected devices.	The USB power port has Over Current Protection design. When the total current of connected devices is over specification, the USB power ports will stop providing power to the connected devices.	Turn the UPS off and unplug at least one piece of device connected to the USB power port and then turn the UPS on.

Additional troubleshooting information can be found under "Support" at www.CyberPowerSystems.com

TECHNICAL SPECIFICATIONS

Model	GX150C2
Capacity	1500VA / 1000W
Nominal Input Voltage	120Vac
Input Frequency	60 Hz +/- 3 Hz
On-Battery Output Voltage	120Vac +/- 5% *Under a test load of less than 60%. When the load exceeds 60%, the output voltage range may exceed 5%.
Max. Load for UPS Outlets (5 Outlets)	1500VA / 1000W
Max. Load for Full-Time Surge Protection Outlets	12 A
On-Battery Output Wave Form	Sinewave
Operating Temperature	+ 32°F to 104° F / 0° C to 40° C
Operating Relative Humidity	0 to 95% non-condensing
Size (W x H x D)	3.9 x 11 x 13.8 in. / 100 x 280 x 350 mm
Net Weight	24.32 lbs / 11.03 kg
Battery Type	Sealed Maintenance Free Lead Acid Battery
Typical Battery Recharge Time	8 hours *Recover to 90% after full load discharge.
Typical Battery Life	3 to 5 years, depending on number of discharge/recharge cycles
Recommended Battery	Sealed Maintenance Free Lead Acid Battery
Safety Approvals	UL1778 / CSA C22.2 No 107.3 / FCC / ICES-003 Class B

SYSTEM FUNCTION BLOCK DIAGRAM

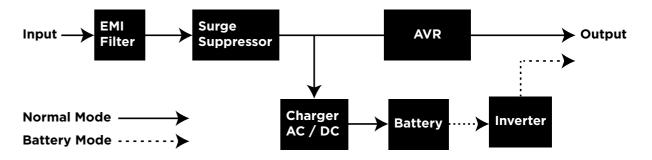


GREENPOWER UPS"
Energy-Saving Technology

CYBERPOWER GREENPOWER UPS™ TECHNOLOGY

Advanced Energy-Saving Patented Bypass Technology

CyberPower's patented GreenPower UPS™ with Bypass Technology reduces UPS energy costs by up to 75% compared to conventional UPS models. Even when utility power is normal, conventional UPS models constantly pass power through a transformer. By contrast, under normal conditions the advanced circuitry of a GreenPower

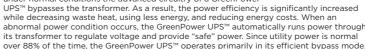

The GreenPower UPS $^{\rm m}$ is also manufactured in accordance with the Restriction on Hazardous Substances (RoHS) directive making it one of the most environmentally-friendly on the market today.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- s connected.

 Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canadian Compliance Statement - CAN ICES-003 (B) / NMB-003 (B)

LIMITED WARRANTY AND CONNECTED EQUIPMENT GUARANTEE

Please visit www.CyberPowerSystems.com for a copy of the Limited Warranty and Connected Equipment Guarantee.

Where Can I Get More Information?

The application of the United Nations Convention of Contracts for the International Sale of Goods is expressly excluded. CyberPower is the warrantor under this Limited Warranty. For further information please feel free to contact CyberPower at:

Cyber Power Systems (USA), Inc. 4241 12th Ave E., STE 400, Shakopee, MN 55379; call us at (877) 297-6937; or submit a web ticket online at cyberpowersystems.com/support.

DISPOSAL

Cyber Power Systems (USA), Inc. encourages environmentally sound methods for disposal and recycling of its UPS products. Please dispose and/or recycle your UPS and batteries in accordance to the local regulations of your state.

The Waste Electrical and Electronic Equipment (WEEE) Directive aims to contribute to sustainable production and consumption by contributing to the efficient use of resources and the retrieval of secondary raw materials through re-use, recycling, and other forms of recovery. The symbol on this product and/or its packaging indicates that the product must be disposed of separately from ordinary household wastes at its end of life. Contact your related WEEE management authority, local office, or your household waste disposal service about information on the recycling drop off site.

BATTERY DISPOSAL

This product contains non-spillable lead acid batteries. The used batteries are considered hazardous waste and must be disposed through recycling. Do not dispose of used batteries with your ordinary household wastes. Dispose of the batteries according to local regulations. Note: Most retailers that sell lead-acid batteries collect used batteries for recycling, as required by local regulations.

△WARNING: This product can expose you to chemicals including Styrene, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

© 2025 CyberPower Systems (USA), Inc.

CyberPower *, the CyberPower logo and PowerPanel* are registered trademarks of Cyber Power Systems (USA), Inc.

All rights reserved. All other trademarks used are property of their respective owners