

# KINGSTON

REPAIR AND MAINTENANCE  
OF BUSHING

THE BUSHING



REPAIRING THE BUSHING

1. REMOVE THE BUSHING FROM THE HOUSING  
2. CLEAN THE BUSHING  
3. REPAIR THE BUSHING  
4. REINSTALL THE BUSHING



REPAIRING THE BUSHING  
1. REMOVE THE BUSHING FROM THE HOUSING  
2. CLEAN THE BUSHING  
3. REPAIR THE BUSHING  
4. REINSTALL THE BUSHING