

KITCHEN  HELPER
Non-Slip Mat





Assembly Instructions

Directions

Step 1. Remove the film backing from the Kitchen Helper Non-Slip Mat.

Step 2. Place the Non-Slip Mat centered on the platform and press firmly to ensure proper contact.

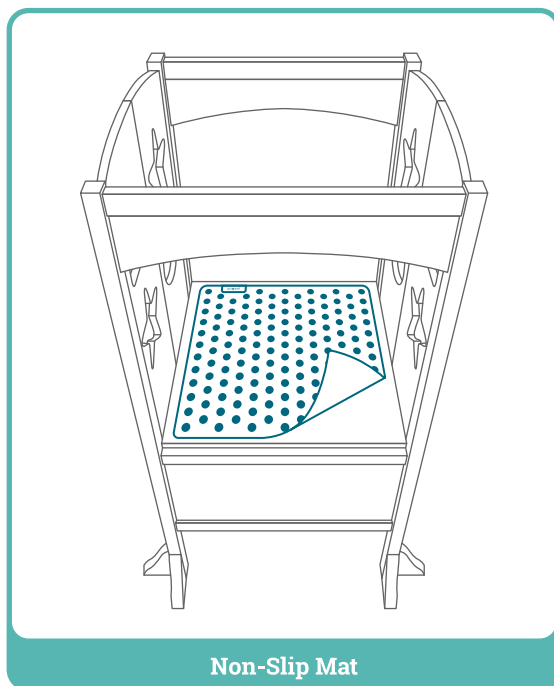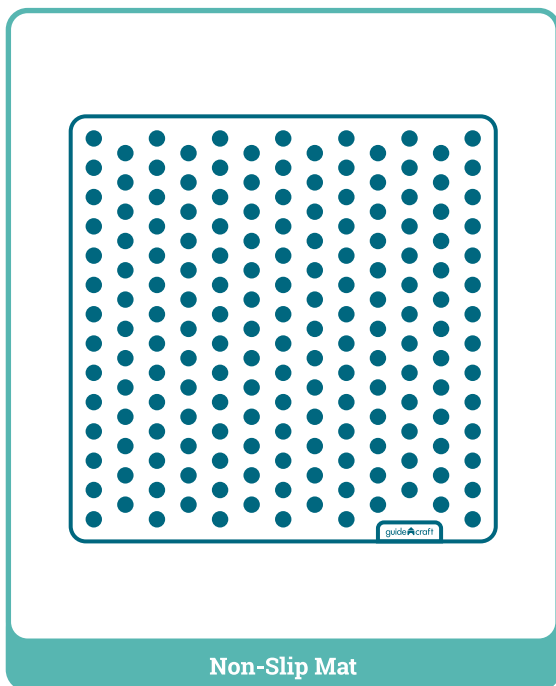

The Kitchen Helper Non-Slip Mat provides an extra layer of security to prevent slipping when using any Kitchen Helper. The Non-Slip Mat is easily removed and cleaned. Intended for ages 2+.

NOTE: If the Kitchen Helper platform becomes dirty or dusty, the Non-Slip Mat will not adhere to the platform. Always keep the bottom of the mat and the platform clean and free of dirt or dust. Check frequently to ensure the mat is firmly in place.

Care Instructions

To clean your product, remove the Non-Slip Mat from your Kitchen Helper and rinse using cold water and mild soap. Dry with a clean towel. Do not launder or put into a dishwasher. Once completely dry, reposition onto your Kitchen Helper.

Customer Service

In the US or Canada, for questions regarding this product, contact customer care at (800) 524-3555.

WARNING

Never leave a child unattended in the Kitchen Helper. Adult supervision required at all times. Adult assembly required.