

**TO CLEAN:** Wash before first use. Disassemble parts before cleaning. Top rack dishwasher safe or wash in warm water using mild liquid soap and rinse thoroughly with clean water.

**TIP:** Use straw brush to clean inside the straw and the silicone spout.

**WARNING:** To prevent burns, **DO NOT** use with hot liquids. To prevent injury, do not allow child to walk or run

while using. Inspect regularly and discard immediately if signs of cracks, tears, or excessive wear appear. Prolonged contact with some liquids, other than water, may cause tooth decay. This product is not a toy. Do not allow child to play with it. Always use with adult supervision.

**IMPORTANT:** Bottle may spill if shaken, squeezed, or held upside down. Multiple

washings may reduce leak-proof performance. Bottle is designed to be used with milk, water, or juices that don't contain pulp. **DO NOT** use with carbonated beverages or fatty foods such as soups, vegetable oil, butter, etc. **DO NOT** use in microwave oven. **DO NOT** boil, sterilize, or allow to become frozen.

The logo for 'the first years' features the word 'the' in a small, lowercase font above 'first years' in a larger, bold, lowercase font. A stylized graphic of three dots is positioned to the left of the word 'first'.

**COOLCORE™  
INSULATED  
WATER BOTTLE**