



 
Purchase Date: ____ / ____ / ____ Order/Customer Reference Number: _____

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

COOKING GRATE

Review all information before using this product. Save this manual for future reference.



CARE & MAINTENANCE

SAFE USE: Follow all safety statements and warnings.

Only use on a flat, level surface.

Do not move the grill during use.

This product is only to be used by adults with developed comprehension and motor skills.

The cooking grate will become extremely hot while in use. Always use heat-resistant gloves and utensils when cooking with this product.

Prolonged contact with high heat may cause the grate to warp or sag.

CLEANING: Clean the grilling grate after each use – after the coals have died out, brush off any loose particles on the warm (not hot) cooking grate using an appropriate grill cleaning brush or crumpled aluminum foil.

EXPOSURE & MAINTENANCE: Store indoors when not in use. Ensure the unit is completely cool and cleaned before storing. If you feel heat when your hand is close to the metal, the grate is too hot to store. Store in a cool, dry, indoor location. Although the high-temperature coating is tough and durable, it may chip or flake over time. Manufacturer is not liable for damage resulting from general use, misuse, and/or environmental conditions.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

! SAFETY STATEMENTS & WARNINGS !

- Always supervise children and pets when they are in proximity of this product.
- This unit becomes very hot when in use. Ensure the unit is completely cool before cleaning or moving.
- Always use heat-resistant gloves and utensils when cooking with this product.
- Never leave unit unattended while hot or in use.
- DO NOT USE CHEMICAL-BASED CLEANERS as this may damage the product and/or ignite a flame during the next use.

Any modification to the product or failure to follow recommended care will void the product warranty.

*If you experience issues or the product was damaged during transit,
please contact our customer service team through one of the methods mentioned at the top of page 1.
Please have the item number and order information ready to expedite response time.*

! WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.