
 



## PEDESTAL BASE FOR PREMIERE POPCORN MACHINES

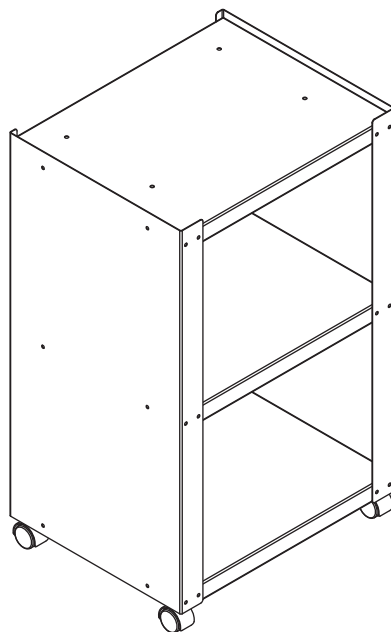


### CONTENTS




1 x Left Side Panel

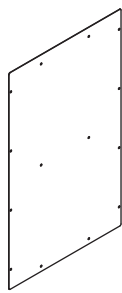

1 x Panel  
with Decal

 

1 x Right Side Panel

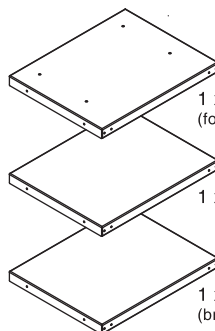

1 x Top Shelf  
(four holes on surface)

1 x Middle Shelf

1 x Bottom Shelf  
(brackets for casters)



4 x Casters



38 x Screws



4 x Bolts




4 x Wing Nuts

**DO NOT TIGHTEN SCREWS UNTIL FULLY ASSEMBLED**

### **1 ATTACH SIDE PANELS**


- Attach the **left and right side panels** to the **top shelf**, **middle shelf**, and **bottom shelf** with **screws**.
- Continue to secure the **left and right side panel** with additional **screws** from the front.

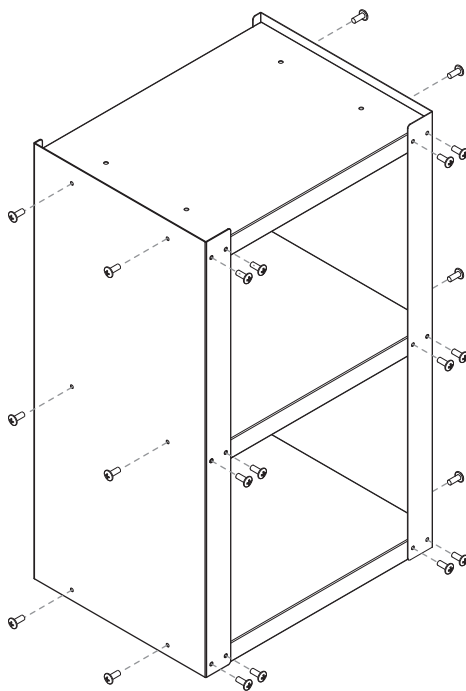

DO NOT TIGHTEN SCREWS UNTIL FULLY ASSEMBLED


## 2 ATTACH PANEL WITH DECAL

- Attach the **panel with decal** to the pedestal with **screws**.

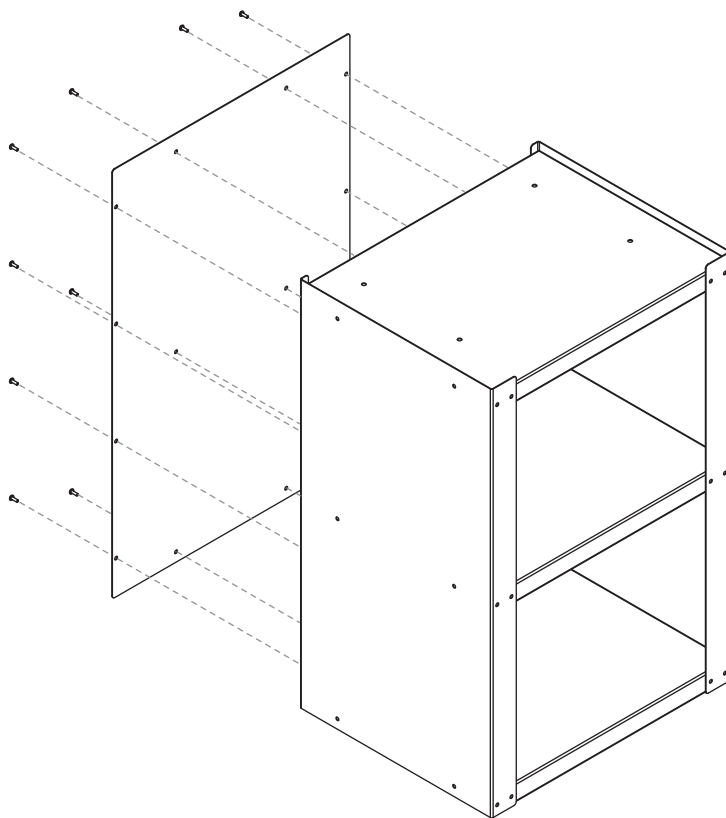

**3 ATTACH CASTERS**

- Twist the **casters** to the **bottom shelf**.

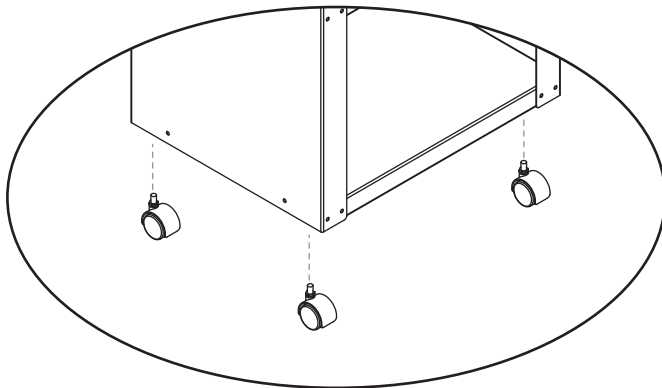

**4 FINAL CHECK**

- Stand the pedestal upright on a level surface/floor.
- Ensure casters are touching the floor evenly.
- Firmly tighten all screws to ensure they are secure.

**5 SECURE THE POPCORN MACHINE**

- Place the popcorn machine on top of the pedestal.
- Open the popcorn machine and remove the drop door and clean out tray.
- Locate the holes on the bottom of the popcorn machine and secure to the pedestal with **bolts** and **wing nuts**.

