

 
Pedestal Desk

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

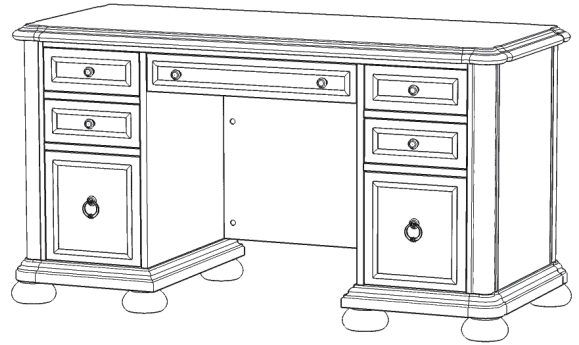


Part List



 A.
Top
1 pc.

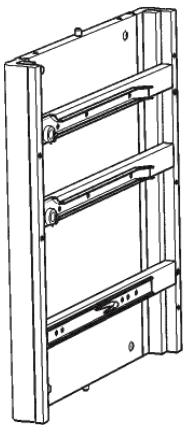

 
D.
Side Panel
1 pc.

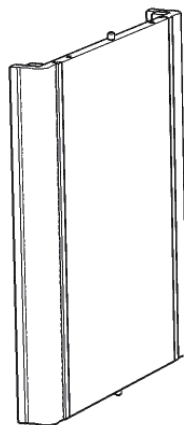


E.
Side Panel
1 pc.



 F.
Middle Panel
1 pc.

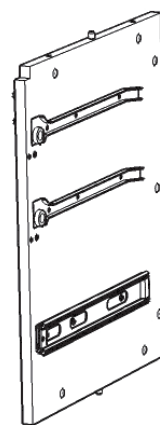

 G.
Middle Panel
1 pc.

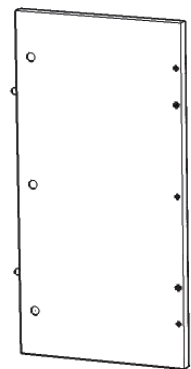

J.
Back Panel
2 pcs.

Hardware List



Cam Lock Screw
45 pcs. (+1 extra)



Cam Lock
45 pcs. (+6 extra)



M3x12
Wood Screw
6 pcs. (+1 extra)



 
M4x32
Machine Screw
8 pcs.



M3x16
Wood Screw (short)
24 pcs. (+1 extra)



Knob
6 pcs.



M3x25
Wood Screw (long)
56 pcs. (+1 extra)



Handle
2 pcs.

Carton 20 05502 0182 is also needed for assembly.

 
Tool(s) required for assembly: Phillips screwdriver, Level

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/8

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- The unit must be level to work properly. Use the included adjustable levelers to level.

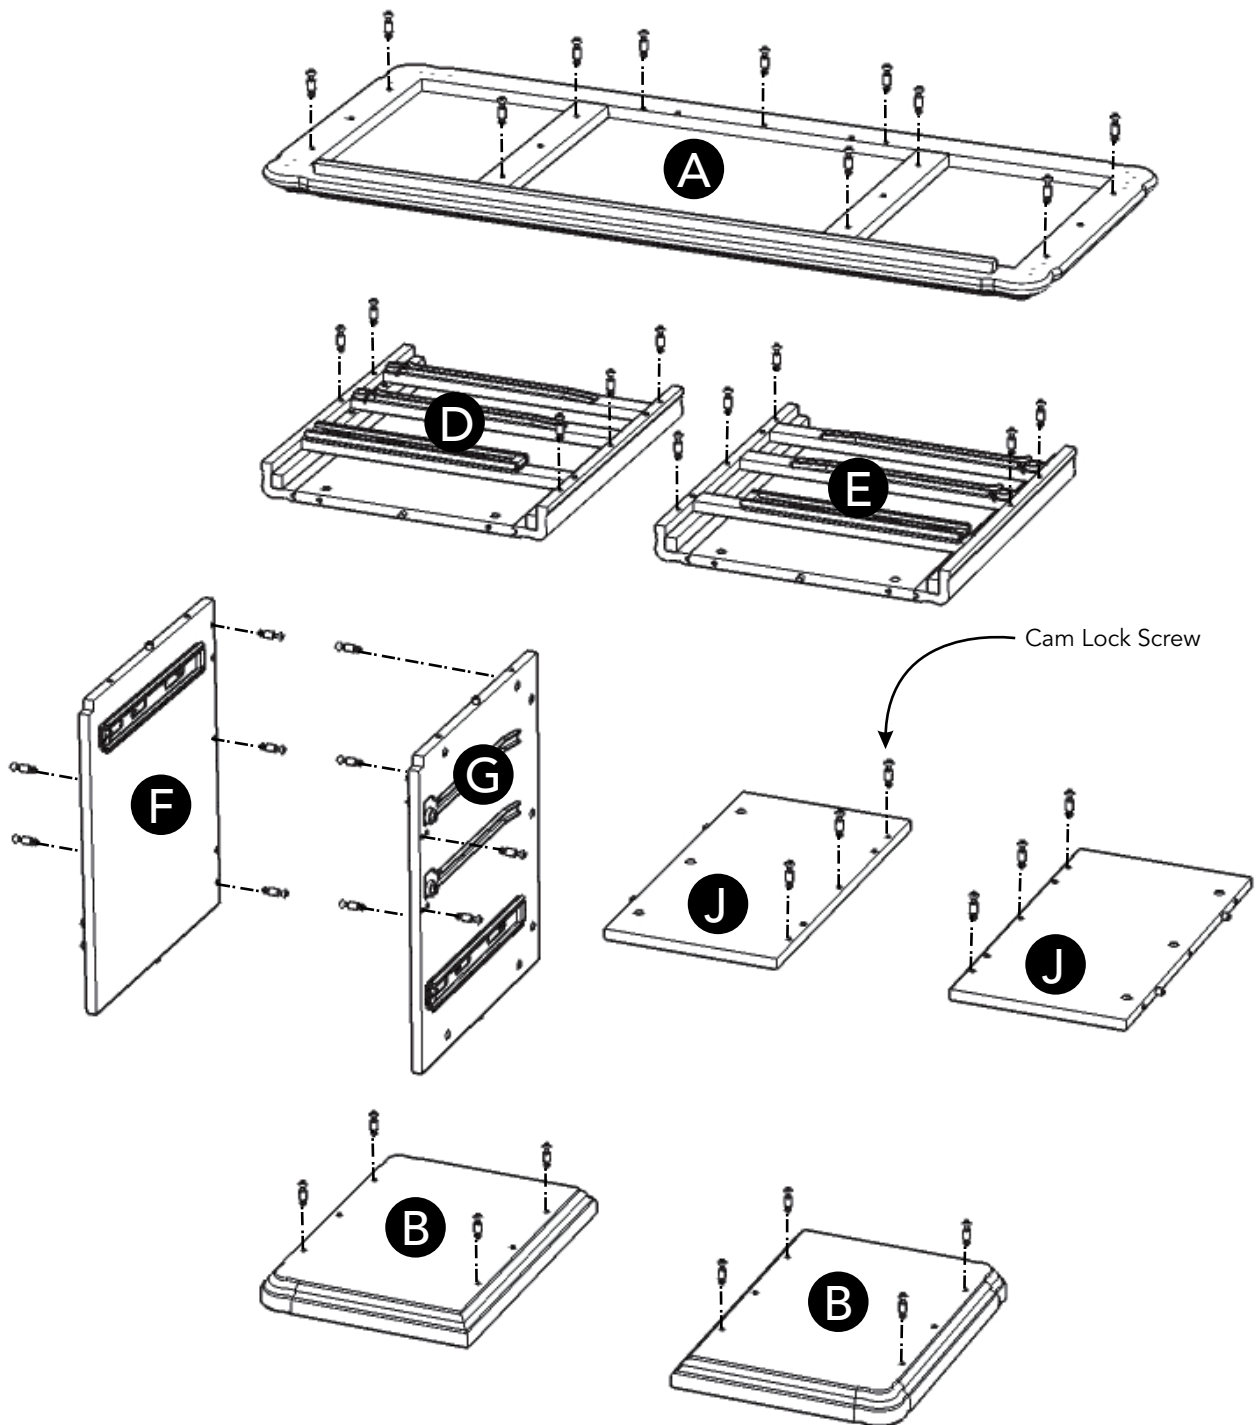

STEP 1

Place Top (A), Bases (B), Side Panels (D), (E), Middle Panels (F), (G), and Back Panels (J) on a soft cloth.

Insert Cam Lock Screws into pre-drilled holes in Top (A), Bases (B), Side Panels (D), (E), Middle Panels (F), (G), and Back Panels (J), then tighten. (See Figure 1)


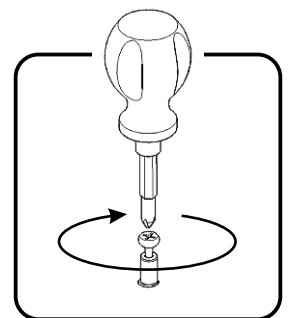 


Figure 1

STEP 2

Attach Feet (C) to Bases (B).

 Turn units over to their upright position.

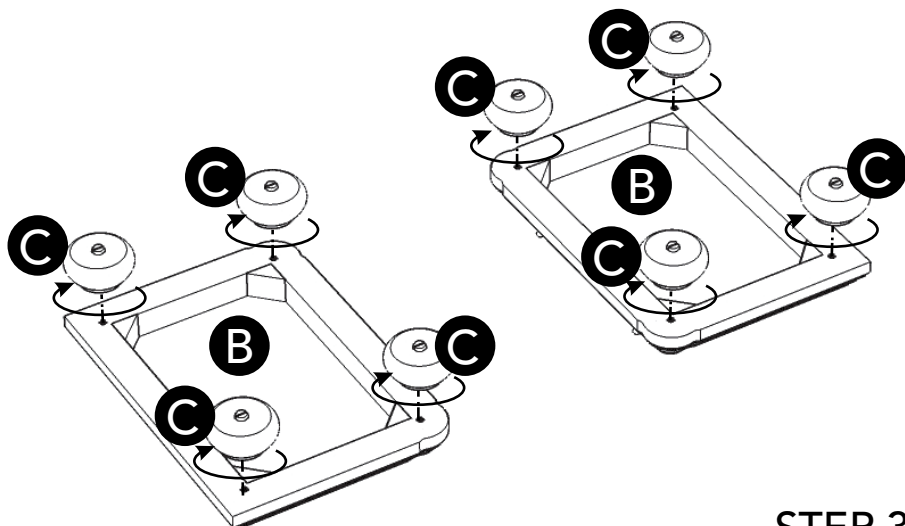

STEP 3

Attach Middle Panel (F) to Back Panel (J) with Cam Locks. (See Figure 2)

Attach Rails (H) to unit with Cam Locks.

Attach Side Panel (D) to unit with Cam Locks.


 
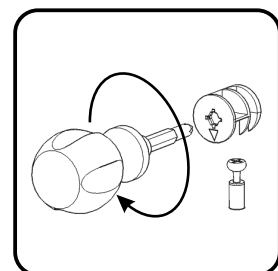 


Figure 2

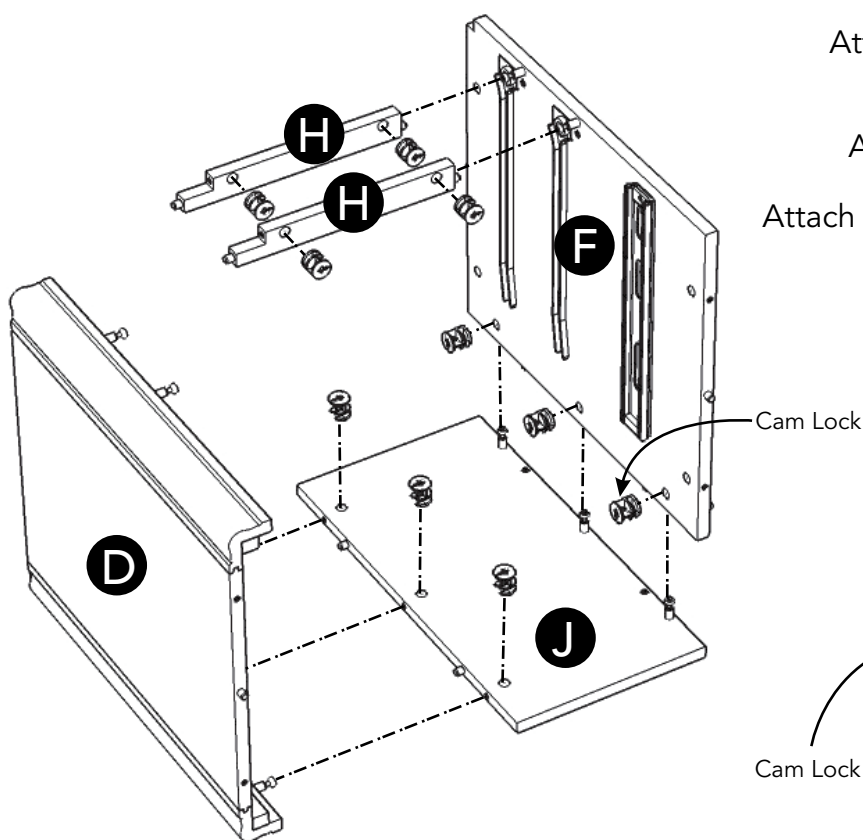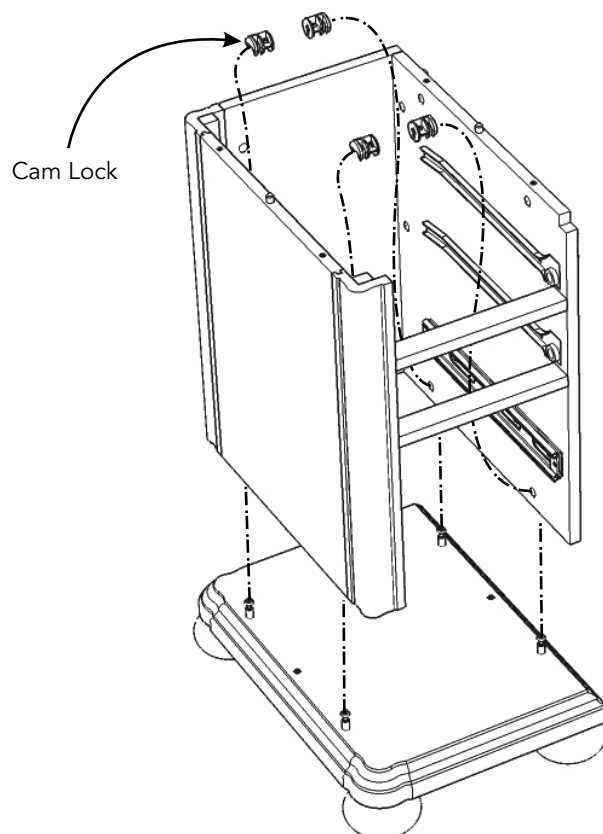 

STEP 4

Attach unit from Step 3 to unit from Step 2 with Cam Locks.

 
Assembly Instructions 4/8

STEP 5

Attach Middle Panel (G) to Back Panel (J) with Cam Locks.


Attach Rails (I) to unit with Cam Locks.

Attach Side Panel (E) to unit with Cam Locks.

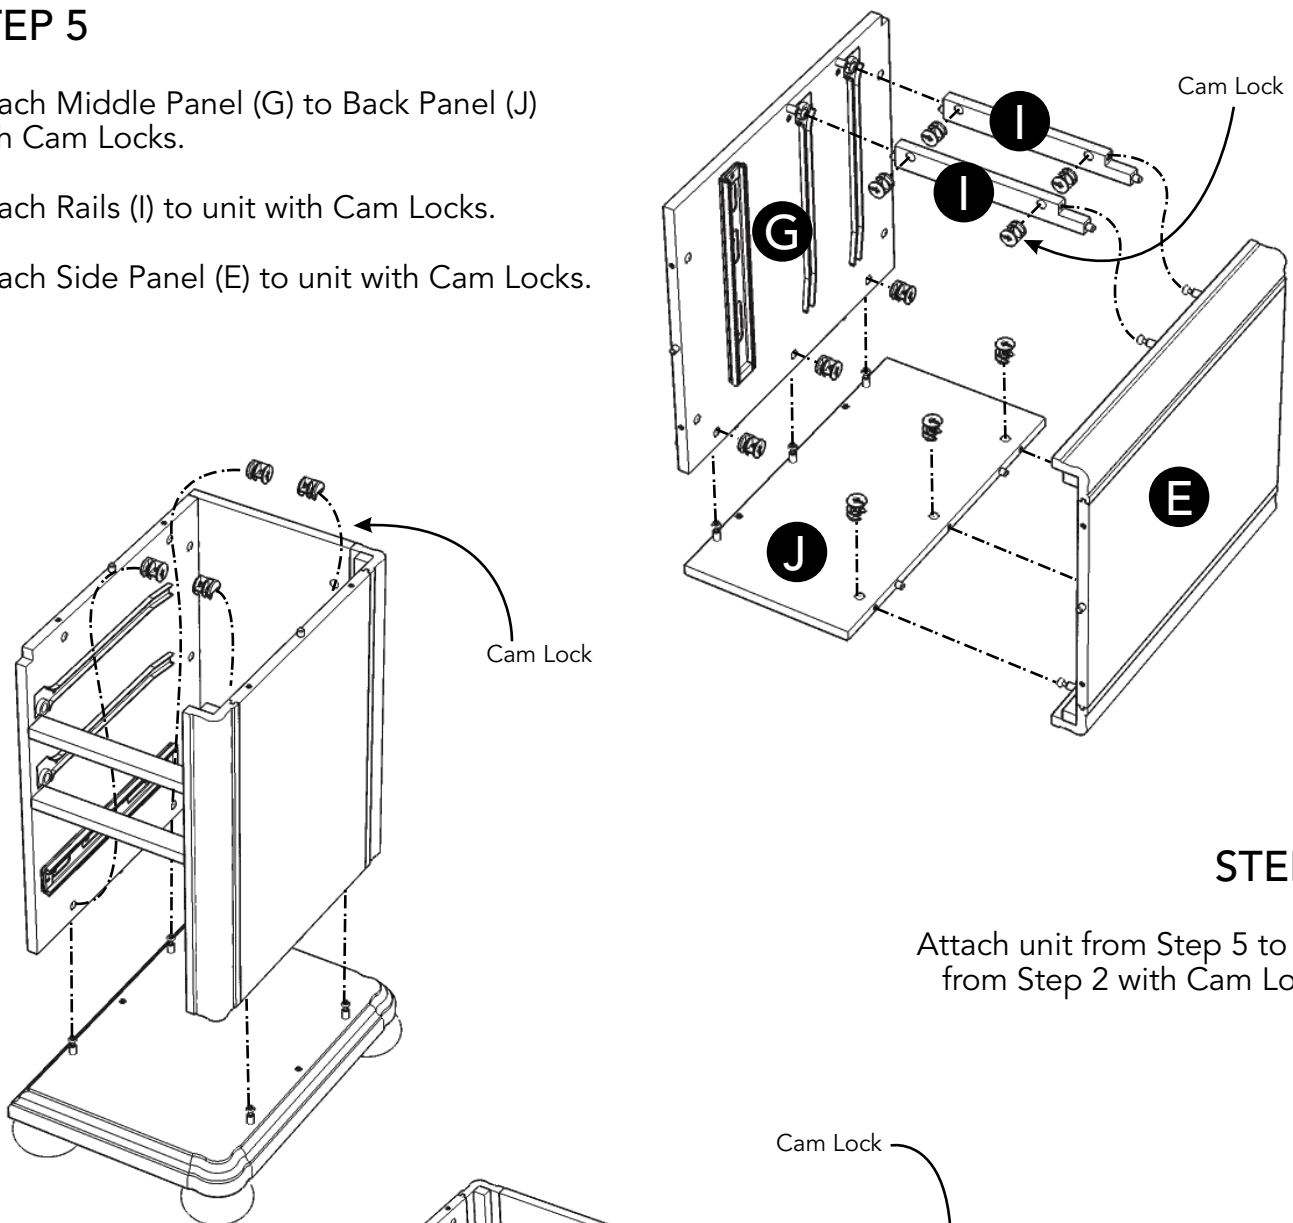

STEP 6

 
Attach unit from Step 5 to unit from Step 2 with Cam Locks.

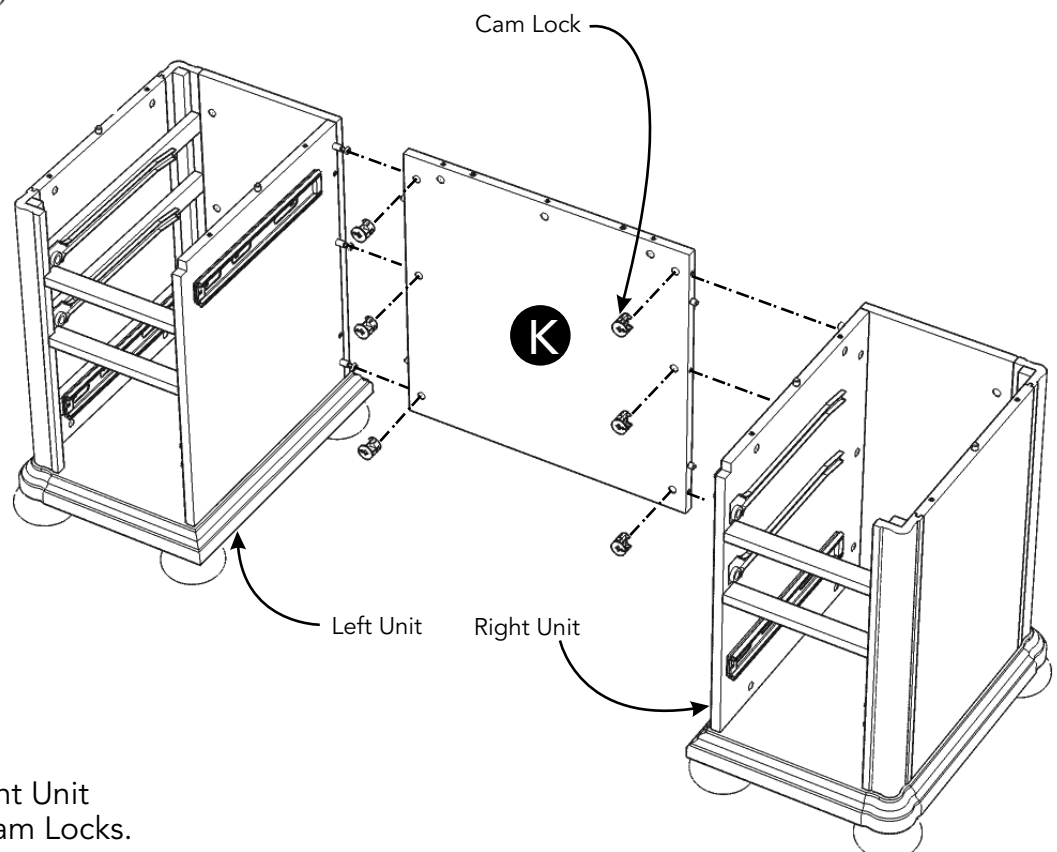

STEP 7

Attach Left Unit and Right Unit to Back Panel (K) with Cam Locks.

 Assembly Instructions 5/8

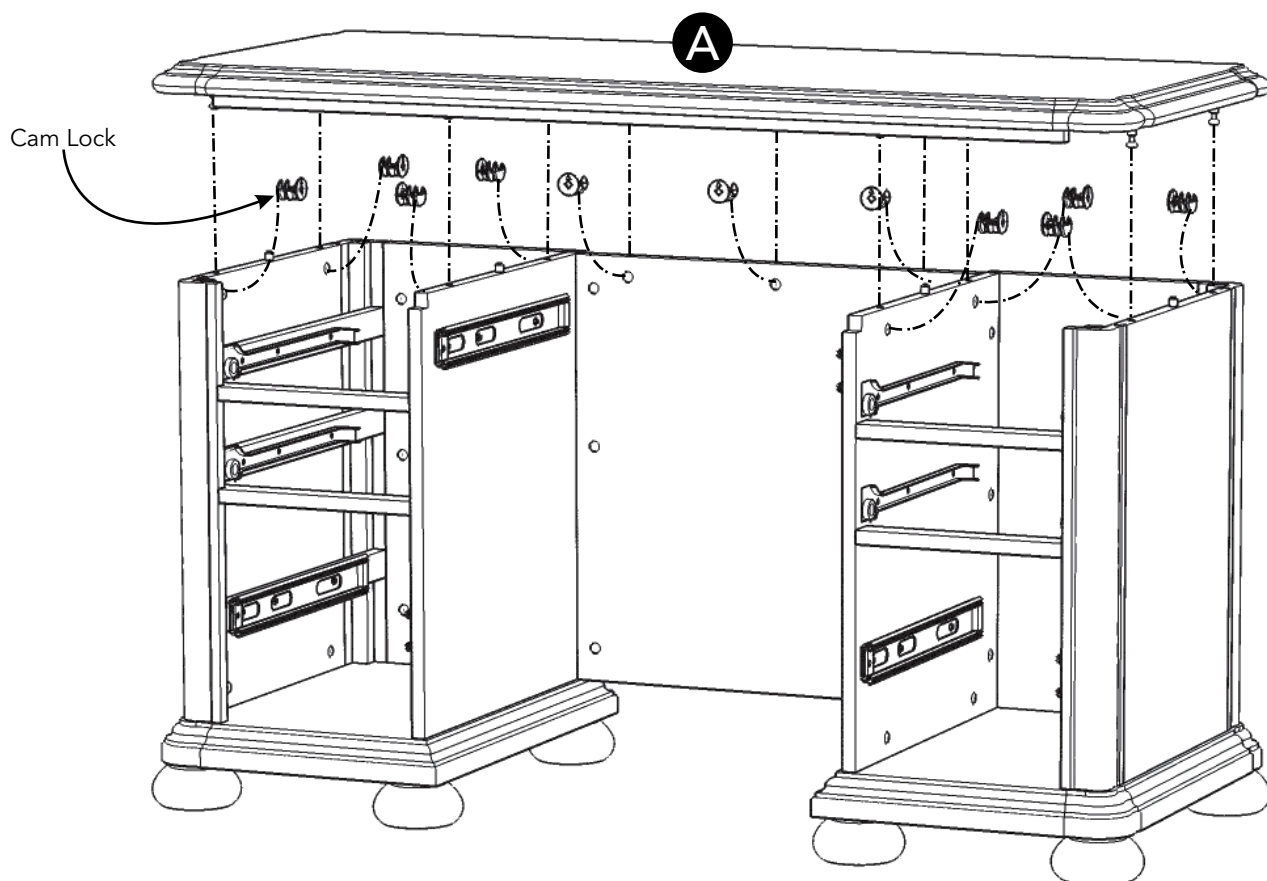

STEP 8

Attach Top (A) to unit with Cam Locks.

Level unit by adjusting the adjustable levelers on bottom of unit.
(See Figure 3)

Note: Unit must be level to proceed.


 
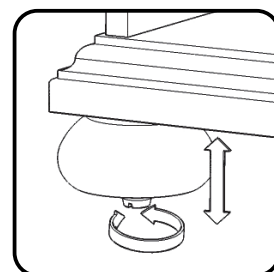 


Figure 3

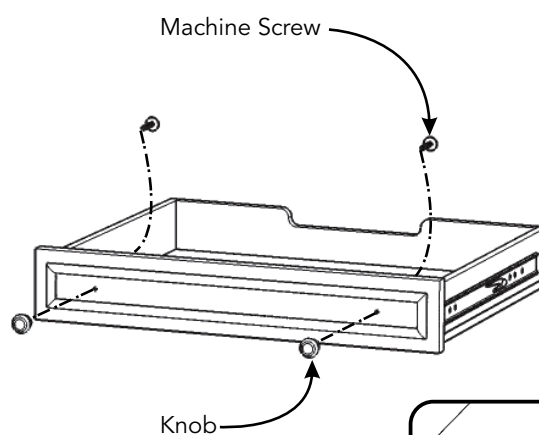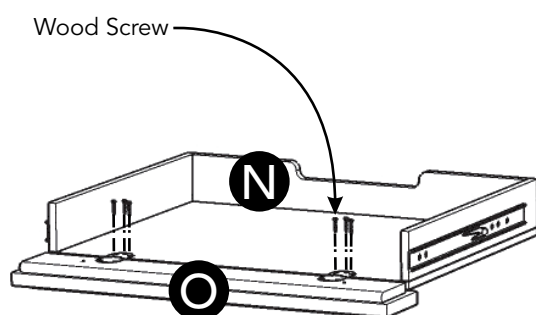 

STEP 9

Attach Keyboard Front (O) to Keyboard (N) with Wood Screws.
(See Figure 4)

Attach Knobs to keyboard with Machine Screws.


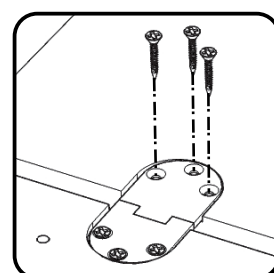 


Figure 4

Assembly Instructions 6/8

 Drawer (L)

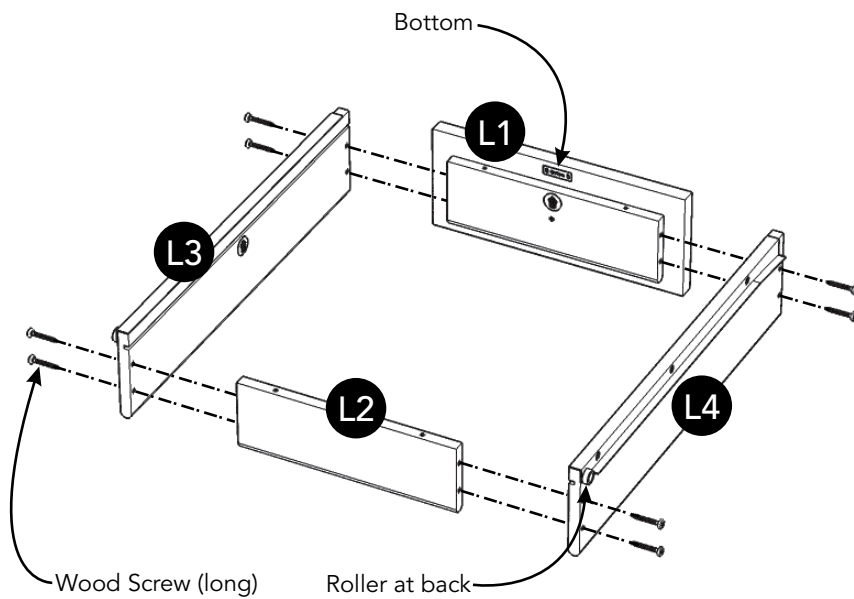

STEP 10

 
 
Attach Drawer Front (L1) and Drawer Back (L2) to Drawer Side (L3) with Wood Screws (long).

Attach Drawer Side (L4) to unit with Wood Screws (long).

STEP 11

Slide Drawer Bottom (L5) into groove.

Attach Drawer Bottom (L5) to unit with Wood Screws (short).

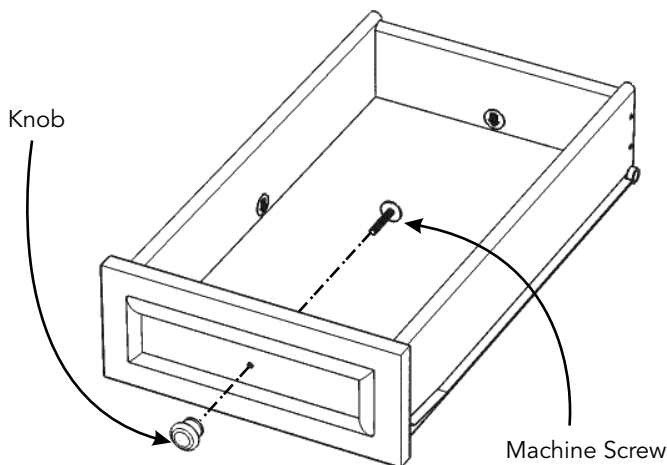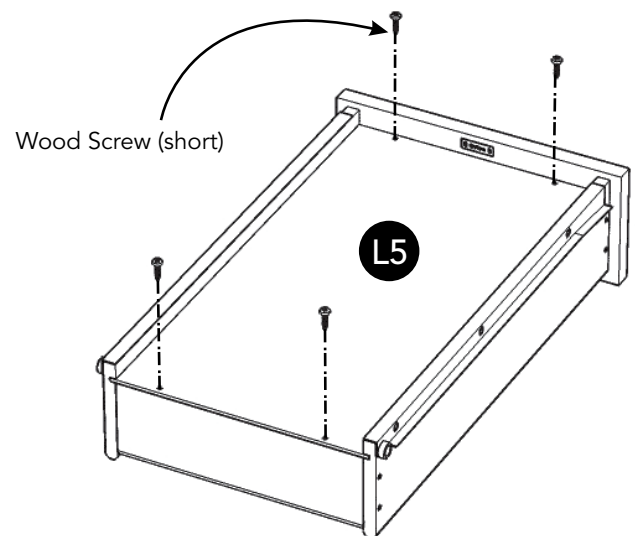


STEP 12

Attach Knob with Machine Screw.


Part List



 
L1.
Drawer Front
4 pcs.



L2.
Drawer Back
4 pcs.

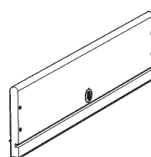 

L3.
Drawer Side
4 pcs.

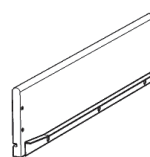 


L4.
Drawer Side
4 pcs.



L5.
Drawer Bottom
4 pcs.

Assembly Instructions 7/8

 Drawer (M)

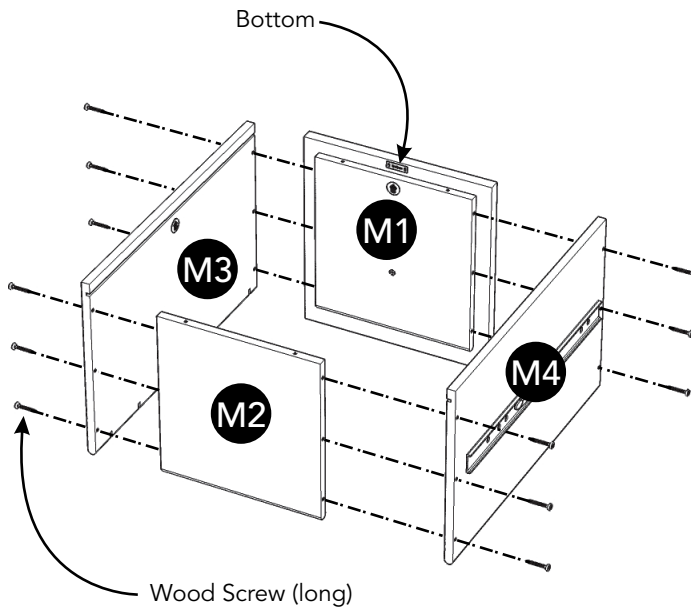

STEP 13

 
 
Attach Drawer Front (M1) and Drawer Back (M2) to Drawer Side (M3) with Wood Screws (long).

Attach Drawer Side (M4) to unit with Wood Screws (long).

STEP 14


Slide Drawer Bottom (L5) into groove.

Attach Drawer Bottom (L5) to unit with Wood Screws (short).

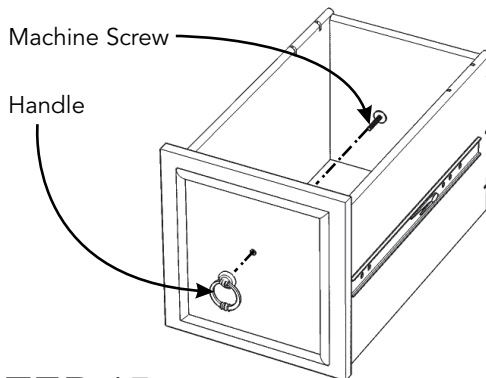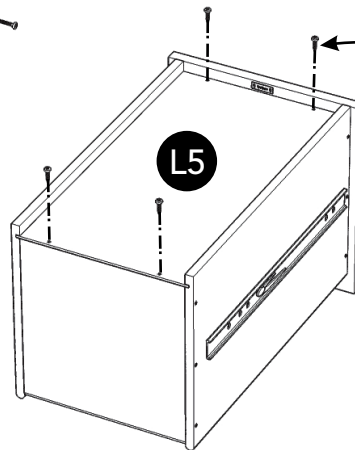

STEP 15

 Attach Handle with Machine Screw.

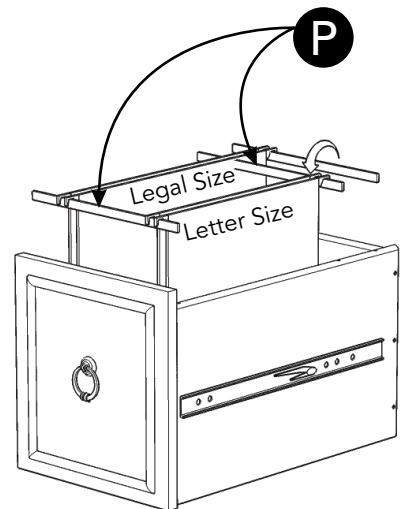


STEP 16


Place Metal Strips (P) into position.

Metal Strips (P) can be adjusted for letter or legal files.

 
Part List

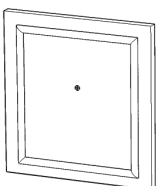


M1.
Drawer Front
2 pcs.

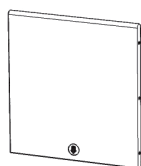 

M2.
Drawer Back
2 pcs.

 


M3.
Drawer Side
2 pcs.

 

M4.
Drawer Side
2 pcs.



 L5.
Drawer Bottom
2 pcs.

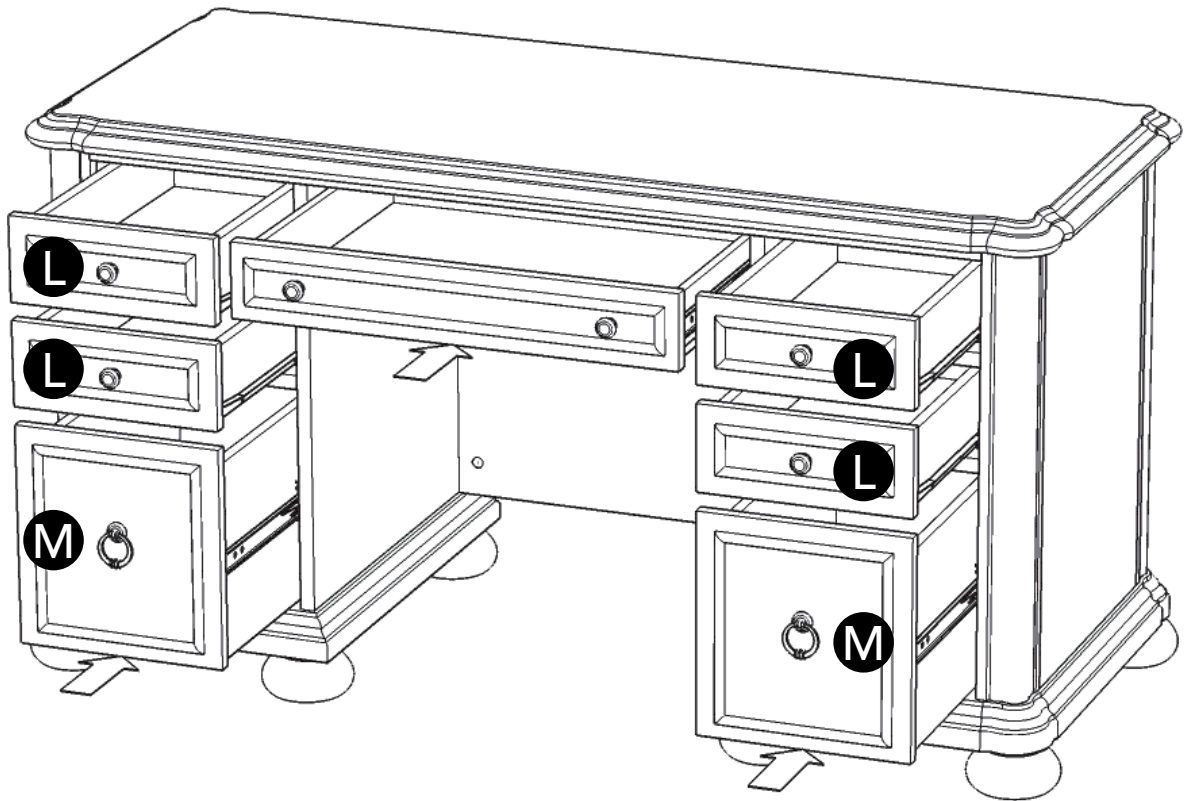

STEP 17

Slide Drawers (L), (M) and keyboard into position.

Note: To remove Drawers (M) and keyboard in future, push plastic lever on left side up, push plastic lever on right side down and pull open. (See Figures 5 and 6)

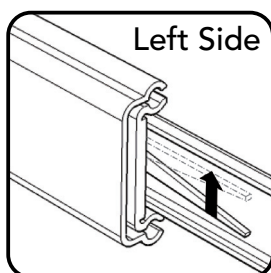 


Figure 5

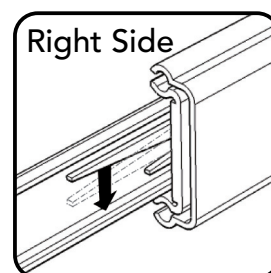 


Figure 6

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**




Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**

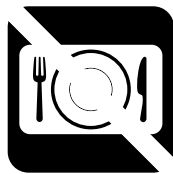

Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319