AUSTIN PLAYSET - F29085

INSTALLATION AND OPERATING INSTRUCTIONS



To reduce the risk of serious injury or death, you must read and follow these instructions. Keep and refer to WARNING

To reduce the risk of serious injury or death, you must read and follow these instructions. Keep and refer to these instructions often and give them to any future owner of this play system. Manufacturer contact information provided below.

OBSTACLE FREE SAFETY ZONE - 29' 1-5/8" x 27' 4" (8.88m x 8.33m) area requires Protective Surfacing. See page 3.


MAXIMUM VERTICAL FALL HEIGHT - 7'8" (2.34m)

 
CAPACITY - 9 Users Maximum, Ages 3 to 10;

Weight Limit 110 lbs. (49.9 kg) per child.

RESIDENTIAL HOME USE ONLY. Not intended for public areas such as schools, churches, nurseries, day cares or parks.

WARNING. Only for domestic use.

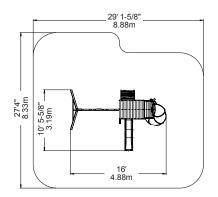





ASSEMBLY



FOR OUTDOOR FAMILY DOMESTIC USE ONLY



Cedar Summit by KidKraft 4630 Olin Road Dallas, TX 75244, United States

customerservice@kidkraft.com Online Parts Replacement: parts.kidkraft.com To warranty your product: kidkraft.com/warranty/ Customer Service: 1(800) 933-0771 or (972) 385-0100

KidKraft Netherlands BV Olympisch Stadion 8 1076 DE Amsterdam, The Netherlands

Europe Customer Service: +31 (0)20 305 8620 europecustomerservice@kidkraft.com EU Online Parts Replacement: parts.kidkraft.eu

Table of Contents

Warnings and Safe Play Instructions pg. 2
Protective Surfacing Guidelinespg. 3
Instructions for Proper Maintenance pg. 4
About Our Wood – Limited Warranty pg. 5
Keys to Assembly Success pg. 7
Part ID
Step-By-Step Instructions pg. 17

9409085 Rev 08/31/2020

Warnings and Safe Play Instructions



CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



WARNING

SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

COLLISION HAZARD

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).



WARNING – Safe Play Instructions

- Observe capacity limitations of your play-set. See front cover.
- Dress children with well fitting and full foot enclosing footwear.
- Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.

- Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- Do not allow children to walk, in front, between, behind or close to moving rides.
- Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- Do not let children get off rides while they are in motion.
- > Do not permit climbing on equipment when it is wet.
- Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- > Do not allow children to swing empty rides or seats.
- Do not allow children to go down slide head first or run up slide.

AProtective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose-Fill Materials

- Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch depth.
- Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles


You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.


- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height - vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below - of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 6 feet from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet in all directions.

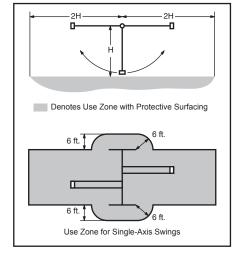

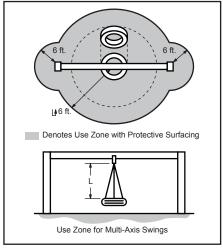

From the CPSC Outdoor Home Playground Safety Handbook. At http://www.playgroundregs.com/resources/CPSC%20324.pdf

 
Instructions for Proper Maintenance

Your Cedar Summit Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.


Check the following at the beginning of the play season:

HARDWARE:

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies DO NOT OVER-TIGHTEN as to cause crushing and splintering of wood.



 ✓ Check for sharp edges or protruding screw threads, add washers if required.



SHOCK ABSORBING SURFACING:

✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

GROUND STAKES (ANCHORS):

✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary.

SWING HANGERS:

- ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®. SWINGS, ROPES AND RIDES:
- ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed.
- ✓ Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment.

WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.

Check twice a month during play season:

HARDWARE:

- ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. DO NOT OVER-TIGHTEN. This will cause splintering of wood.
- ✓ Check for sharp edges or protruding screw threads. Add washers if required.

SHOCK ABSORBING SURFACING:

✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary.

(See Protective Surfacing, page 3)

Check once a month during play season:

SWING HANGERS:

- ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

SWINGS AND RIDES:

✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage.

Replace if structurally damaged or deteriorated.

Check at the end of the play season:

SWINGS AND RIDES:

✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.

SHOCK ABSORBING SURFACING:

✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary.

(See Protective Surfacing, page 3)

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

- 1. **Checking** is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.
- 2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
- 3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.

KidKraft Limited Warranty

MISSING OR DAMAGED PARTS:

KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig.1

Fig. 1 Product Age (All Parts) Consumer Pays

0-90 Days from date of purchase \$0 for Part + Free Shipping

DEFECTS IN MATERIAL AND WORKMANSHIP:

KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2 Product Age (All Parts) Consumer Pays

91 Days to 1 Year \$0 for Part + Free Shipping

WOOD ROT, DECAY, AND INSECT DAMAGE:

All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty**. See Fig. 3

Fig. 3 Product Age (Wood Parts) Consumer Pays

0 Days to 1 Year \$0 for Part + Free Shipping

After 1 Year to 5 Year \$0 for Part + Shipping & Handling

Over 5 Years 100% for Part (if available) + Shipping & Handling

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.

This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.

 
Keys to Assembly Success

Tools Required

- Tape Measure
- Carpenters Level
- Carpenters Square
- Claw Hammer
- · Standard or Cordless Drill
- #1 Phillips, #2 Robertson and Screwdriver
- Ratchet with extension (1/2" & 9/16" sockets)
- · Open End Wrench (1/2" & 9/16")
- · Adjustable Wrench
- 1/8" & 3/16" Drill Bits
- 3/16" Hex Key
- 8' Step Ladder
- · Safety Glasses
- · Adult Helpers
- Pencil

Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.



Symbols

Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.







Use

Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get

Measure Distance



Check that assembly is square before tightening bolts.



Use a measuring tape to assure proper location.



Check that set or assembly is properly level before proceeding.

Use Leve1

Pre-drill 1/8" & 3/16" Bit



Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.



This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.






CAUTION – Protrusion Hazard


Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.

Proper Hardware Assembly Lag screws require drilling pilot holes to avoid splitting wood. Only a flat washer is required. For ease of installation liquid soap can be used on all lag-type screws.


For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" is slightly larger than 1/4".


Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.

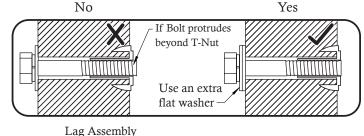


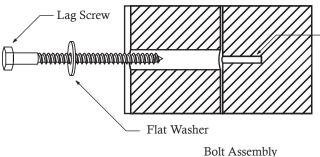



Before mounting Lag Screw, use factory drilled holes as guides to drill 1/8" pilot holes

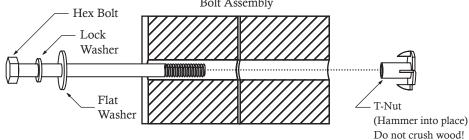


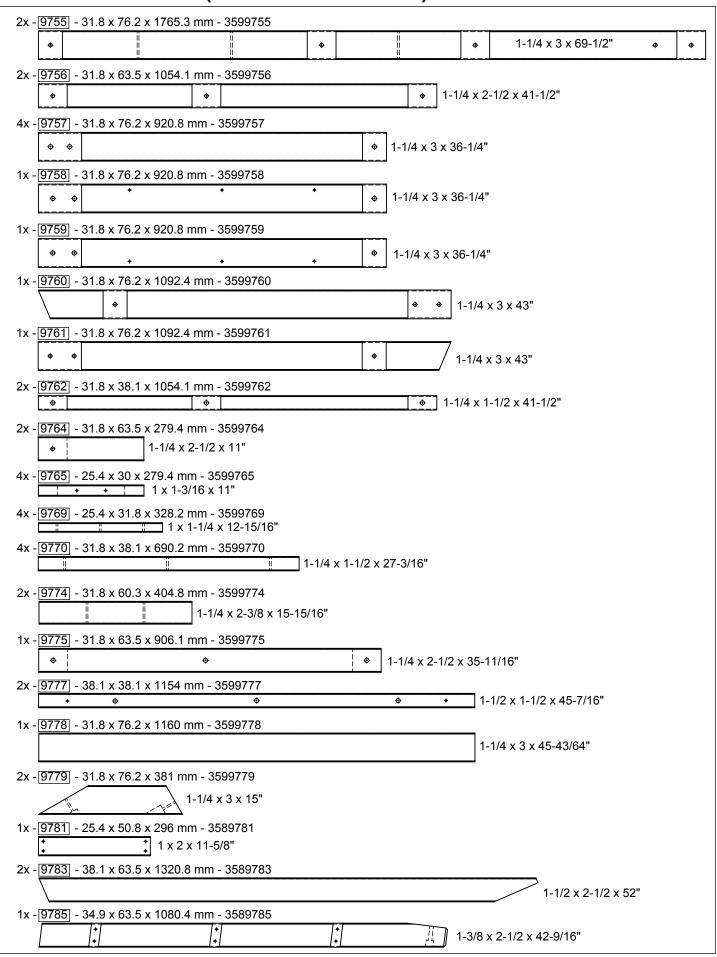


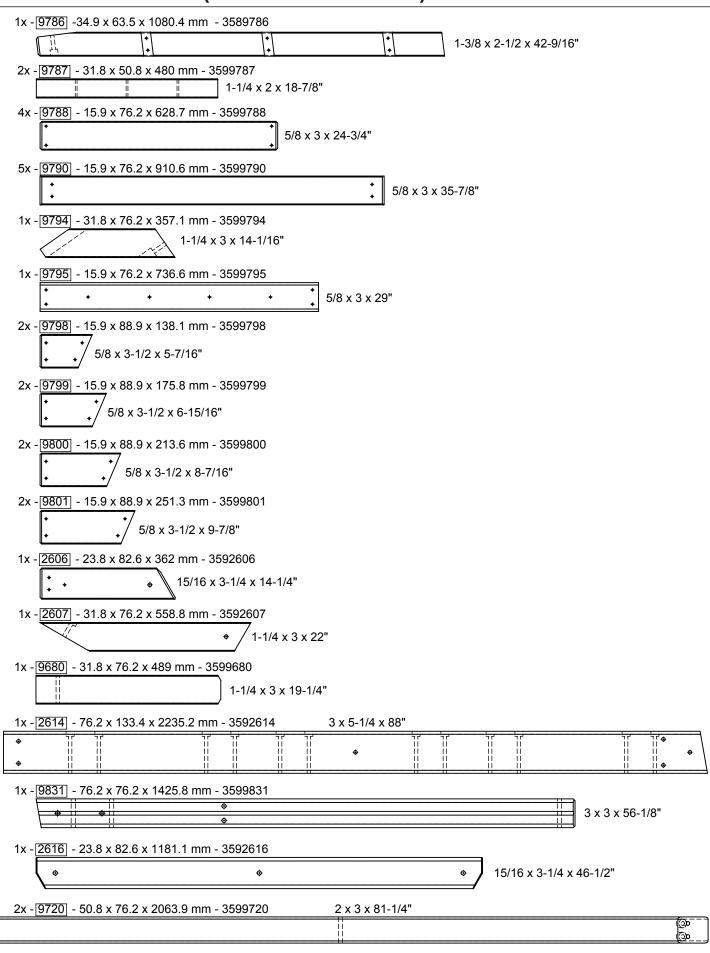


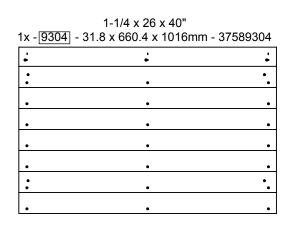


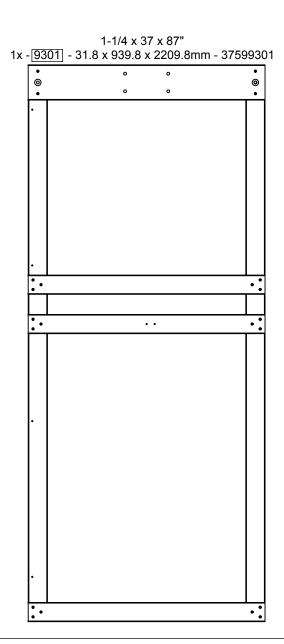

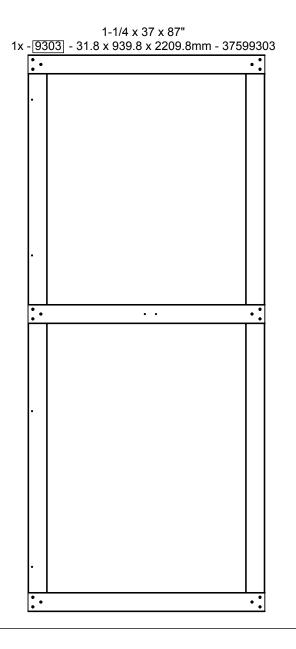


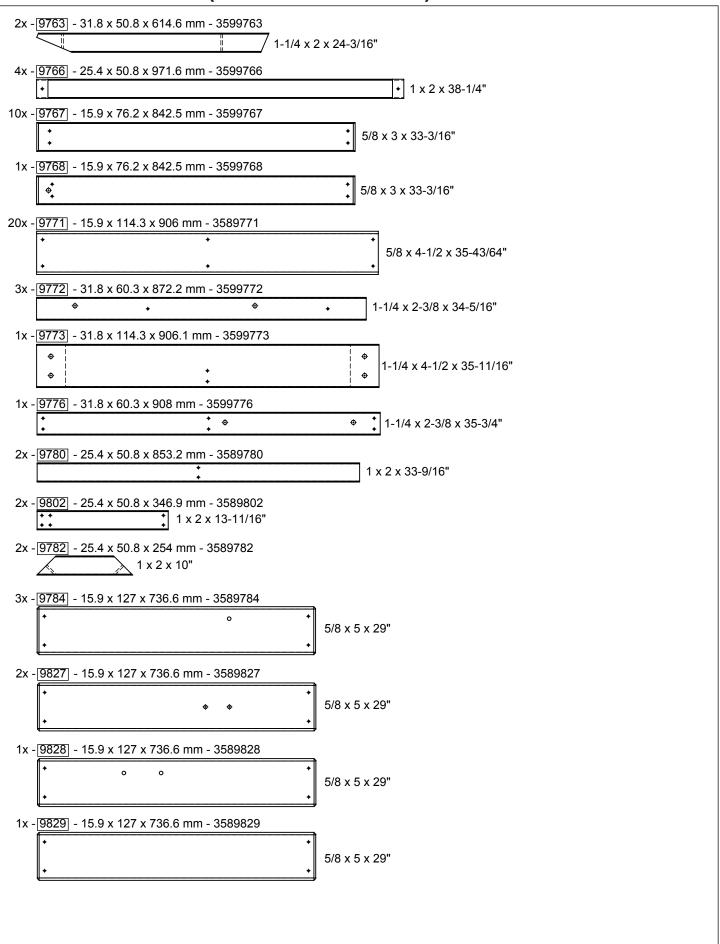

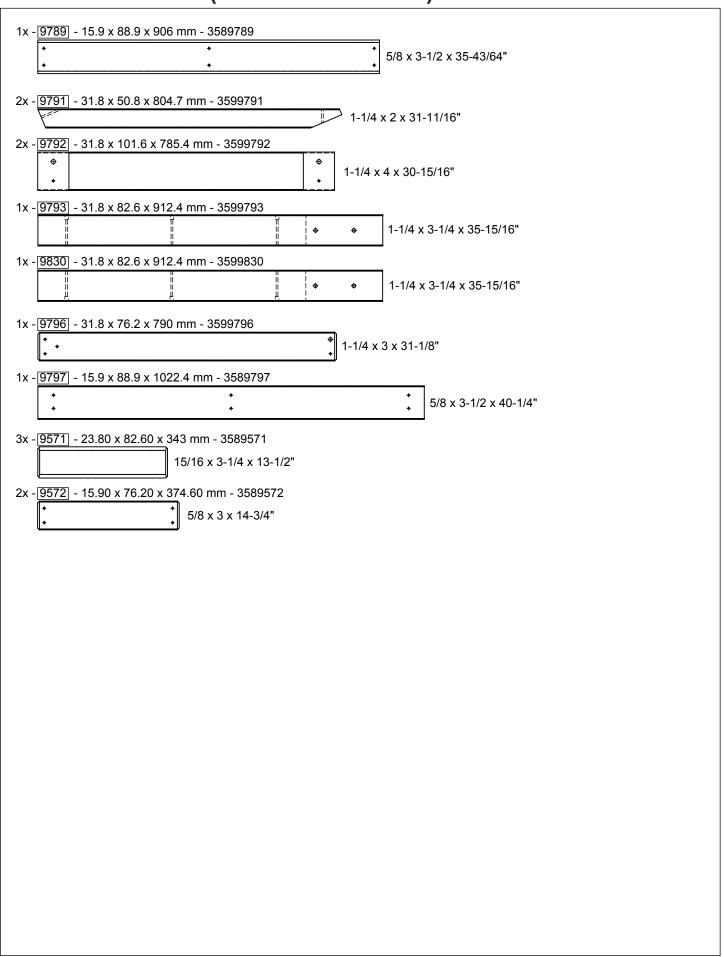


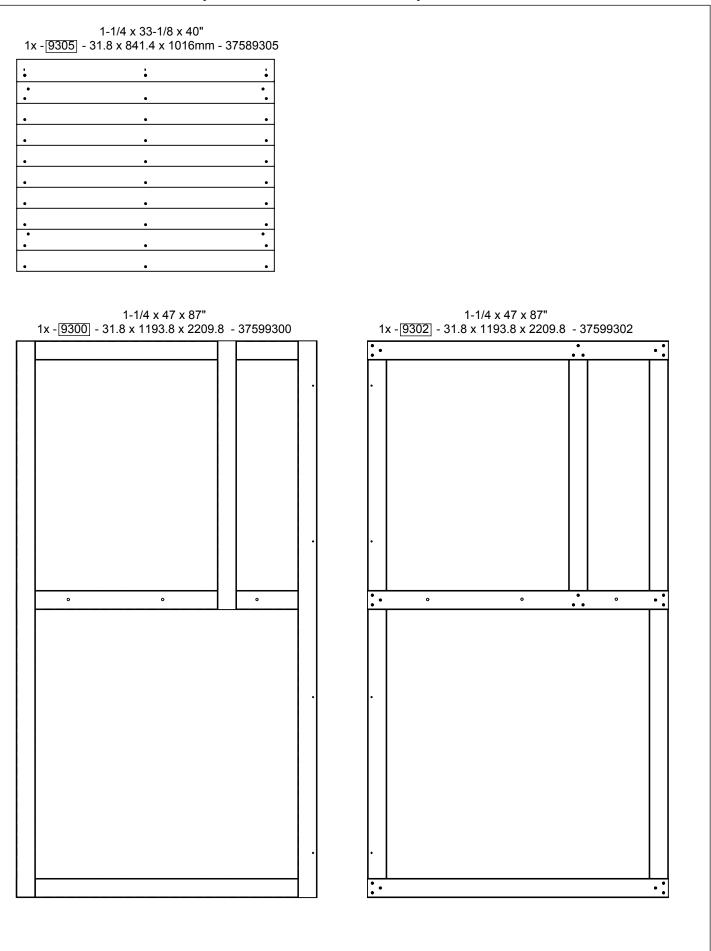


Hardware Identification (Actual Size)

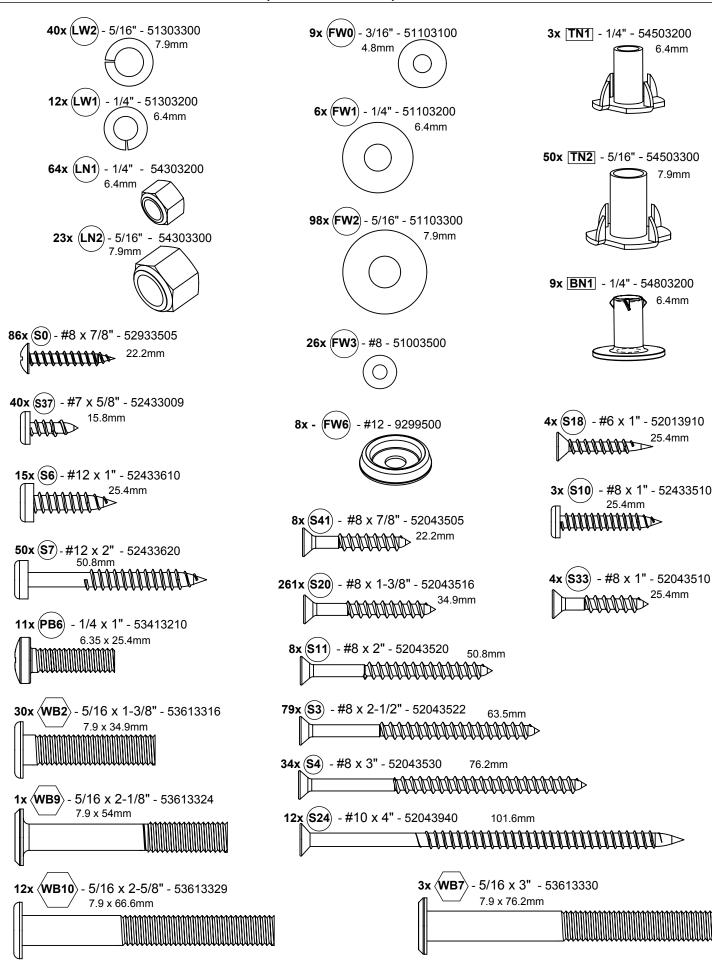


Hardware Identification (Actual Size)

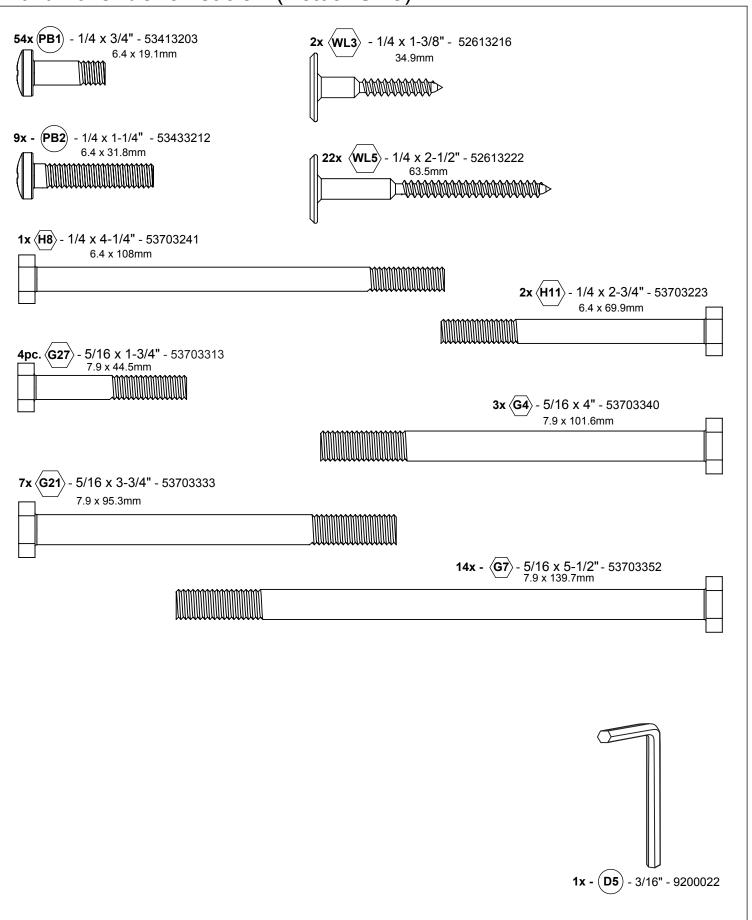


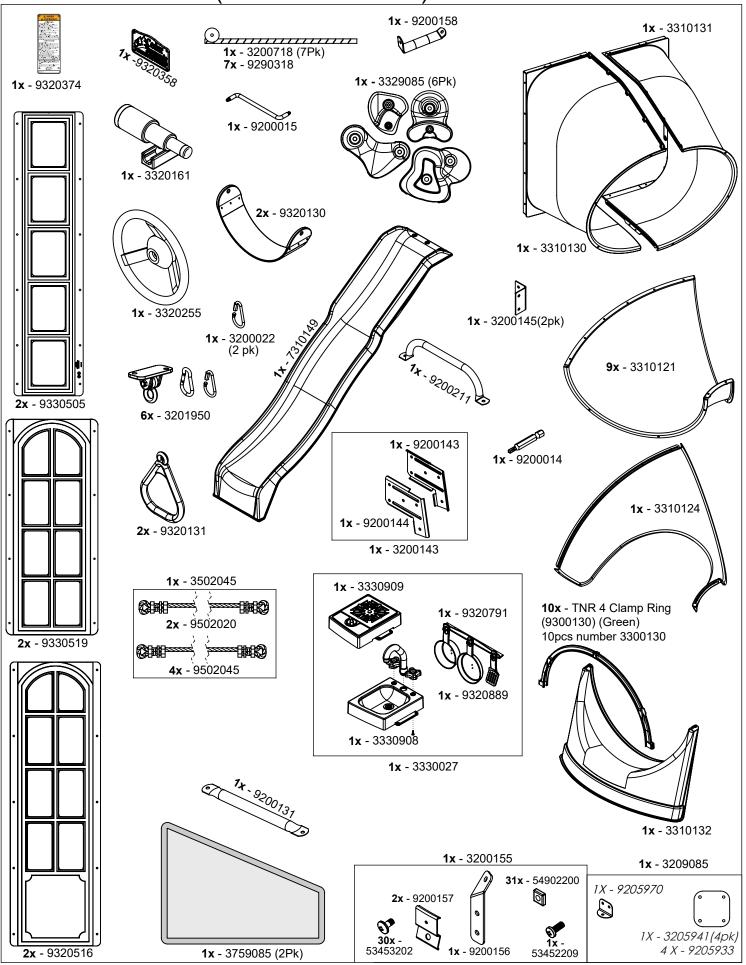

Step 1: Inventory Parts - Read This Before Starting Assembly

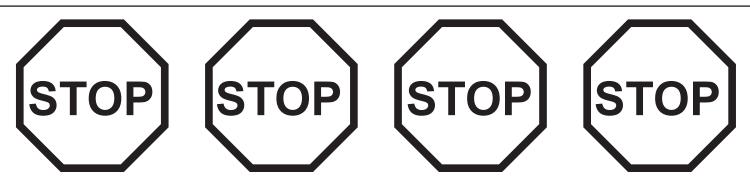

 - **A.** This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.
 - The wood pieces will have the key number stamped on the ends of the boards. Organize the wood pieces by step, as per the key numbering system below.



- Please refer to Page 7 for proper hardware assembly.
- Each step indicates which bolts and/or screws you will need for assembly, as well as any flat washers, lock washers, t-nuts or lock nuts.
- **B.** If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. <u>Call us before going back to the store.</u>

customerservice@kidkraft.com
Online Parts Replacement: parts.kidkraft.com
To warranty your product: kidkraft.com/warranty/
Customer Service:


1(800) 933-0771 or (972) 385-0100


Europe Customer Service: +31 (0)20 305 8620 europecustomerservice@kidkraft.com

EU Online Parts Replacement: parts.kidkraft.eu

- **C.** Read the assembly manual completely, paying special attention to EN71 and ASTM warnings; notes; and safety/maintenance information on pages 1 7.
- **D.** Before you discard your cartons fill out the form below.
 - The carton I.D. stamp is located on the end of each carton. The tracking number is located on the KidKraft ID Plaque (9320374).
 - Please retain this information for future reference. You will need this information if you contact the Consumer Relations Department.

MODEL NUMBER: F29085				
CARTON I.D. STAMP:	14459 (Box 1)	CARTON I.D. STAMP:	14459 (Box 4)	
CARTON I.D. STAMP:	14459 (Box 2)	CARTON I.D. STAMP:	(Box 5)	
CARTON I.D. STAMP:	14459 (Box 3)	CARTON I.D. STAMP:	14459 (Box 6)	
TRACKING NUMBER (from ID Plaque):				

 


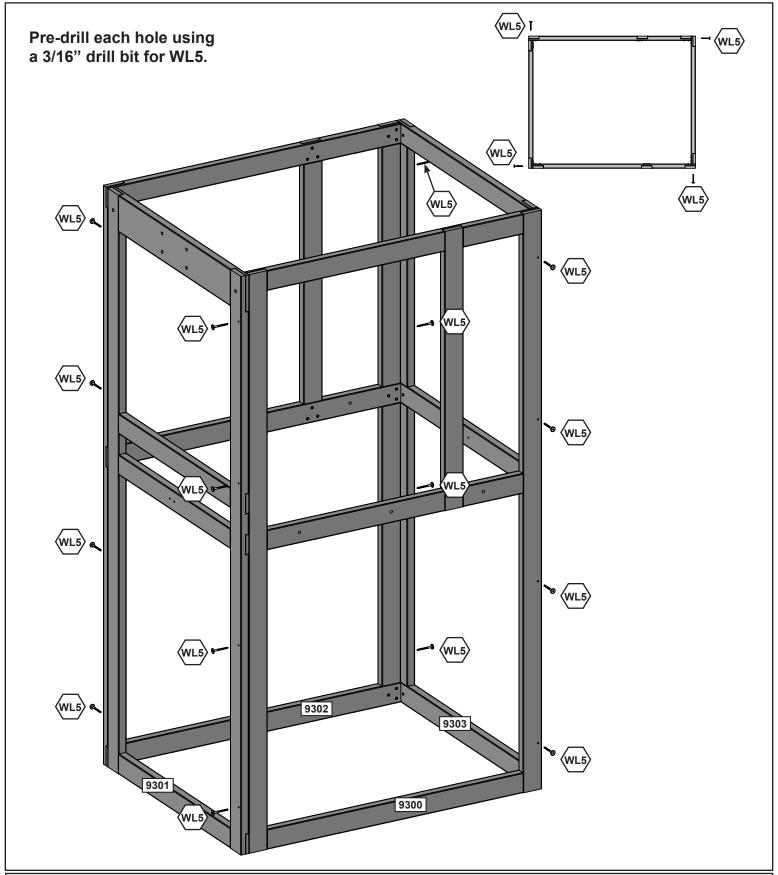


Wood Parts Hardware 1 x 9300 31.8 x 1193.8 x 2209.8 mm (1-1/4 x 47 x 87") 1 x 9303 31.8 x 939.8 x 2209.8 mm (1-1/4 x 37 x 87") 16 x (WL5) 6.4 x 63.5 mm (1/4 x 2-1/2") 1 x 9301 31.8 x 939.8 x 2209.8 mm (1-1/4 x 37 x 87")

1 x 9302 31.8 x 1193.8 x 2209.8 mm (1-1/4 x 47 x 87")



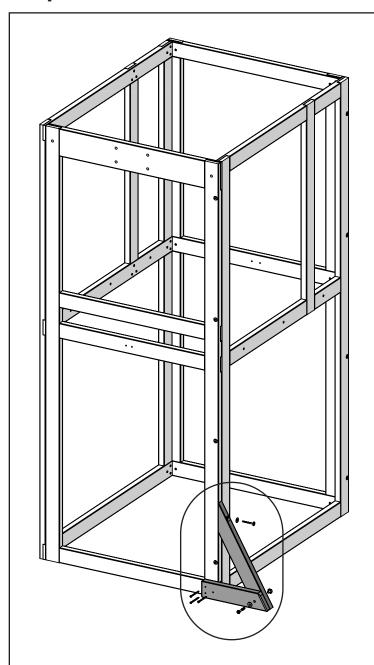

Pre-drill hole using a 3/16" drill bit for WL5.

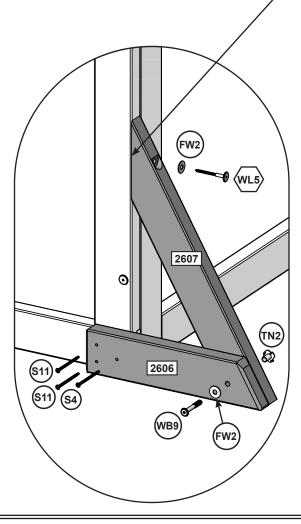

Wood Parts

1 x 2606 23.8 x 82.6 x 362 mm (15/16 x 3-1/4 x 14-1/4")

1 x 2607 31.8 x 76.2 x 558.8 mm (1-1/4 x 3 x 22")

Hardware


1 x WL5 6.4 x 63.5 mm (1/4 x 2-1/2") (FW2)

1 x (WB9) 7.9 x 54 mm (5/16 x 2-1/8") (FW2, TN2)

2 x (\$11) #8 x 50.8 mm (#8 x 2")

1 x (s4) #8 x 76.2 mm (#8 x 3")




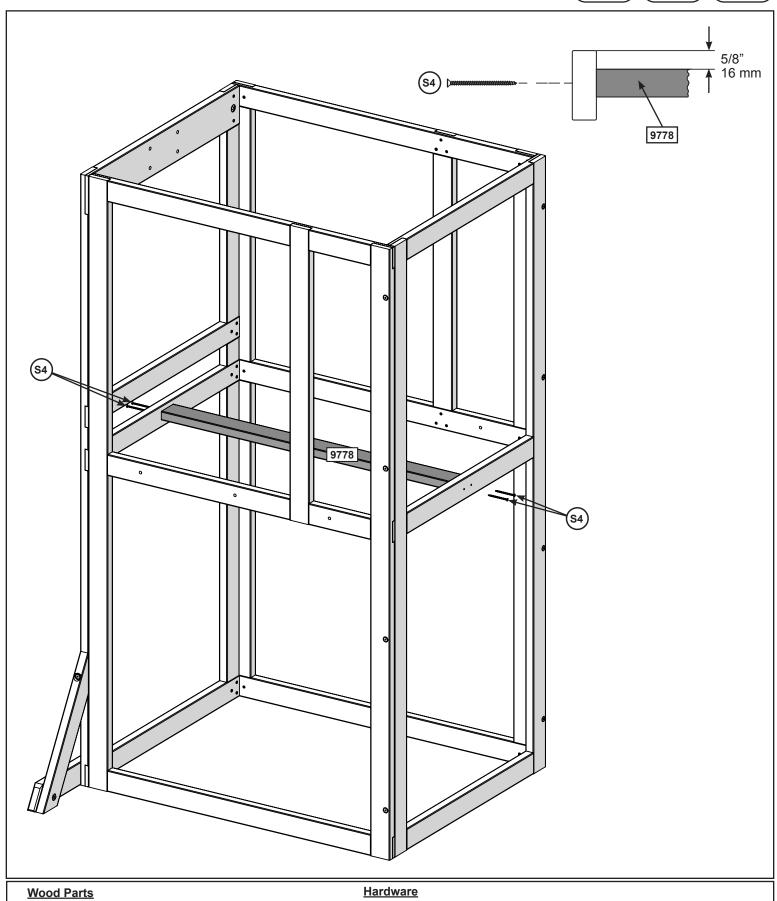

1 x 9778 31.8 x 76.2 x 1160 mm (1-1/4 x 3 x 45-43/64")

4 x (\$4) #8 x 76.2 mm (#8 x 3")




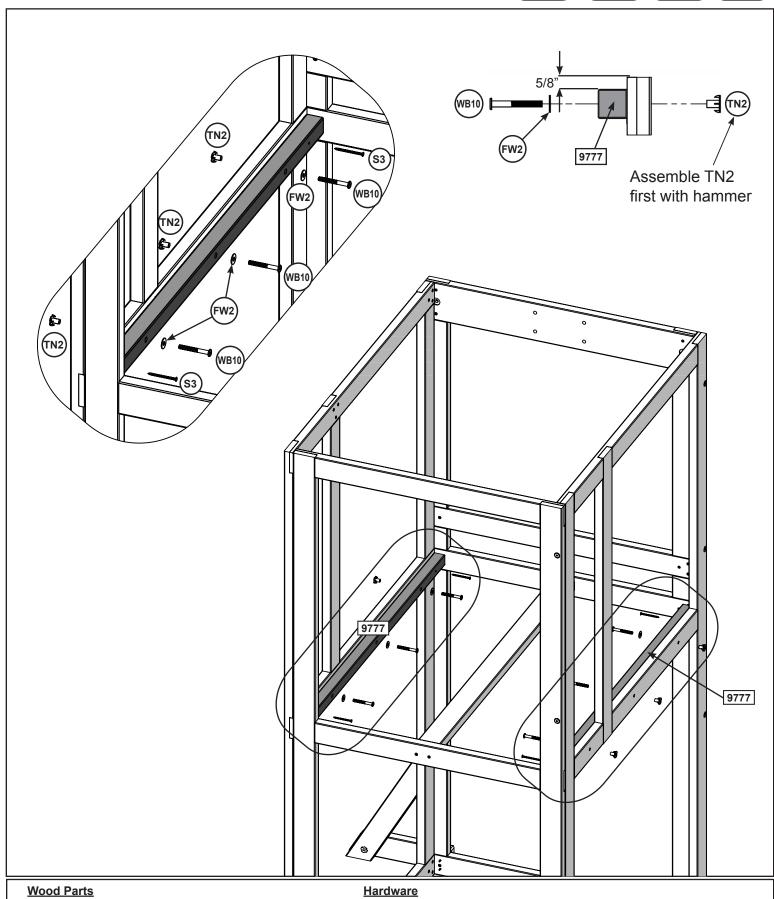

2 x 9777 38.1 x 38.1 x 1154 mm (1-1/2 x 1-1/2 x 45-7/16")

4 x (S3) #8 x 2-1/2" (63.5 mm) 6 x (WB10) 7.9 x 66.7 mm (5/16 x 2-5/8") (FW2, TN2)



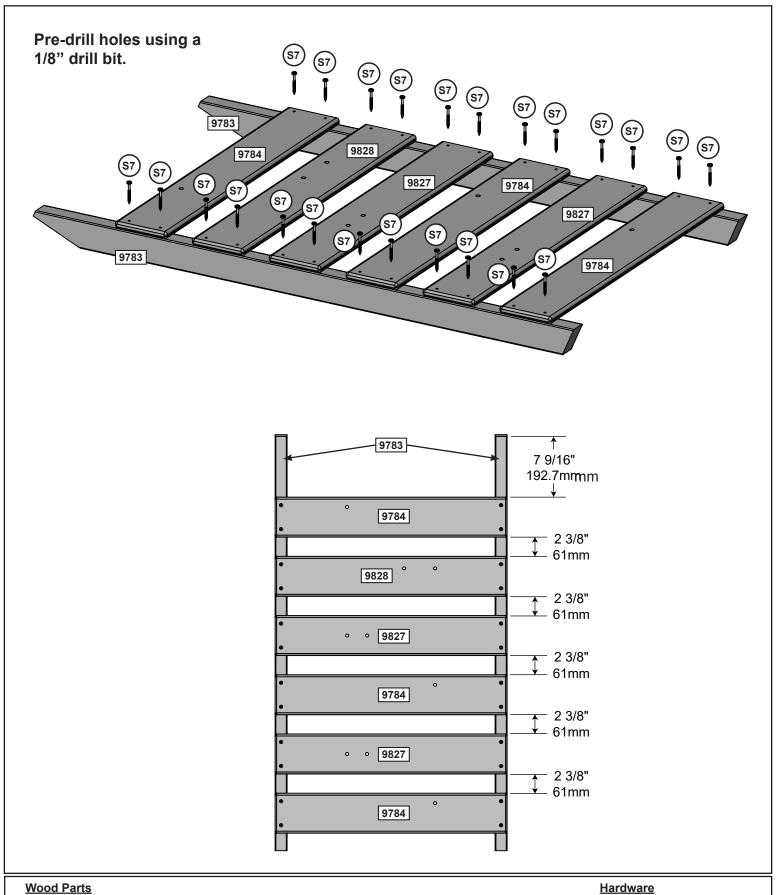


2 x 9783 38.1 x 63.5 x 1320.8 mm (1-1/2 x 2-1/2 x 52") 1 x 9828 15.9 x 127 x 736.6 mm (5/8 x 5 x 29")


24 x (S7) #12 x 50.8 mm (#12 x 2")

3 x 9784 15.9 x 127 x 736.6 mm (5/8 x 5 x 29")

2 x 9827 15.9 x 127 x 736.6 mm (5/8 x 5 x 29")

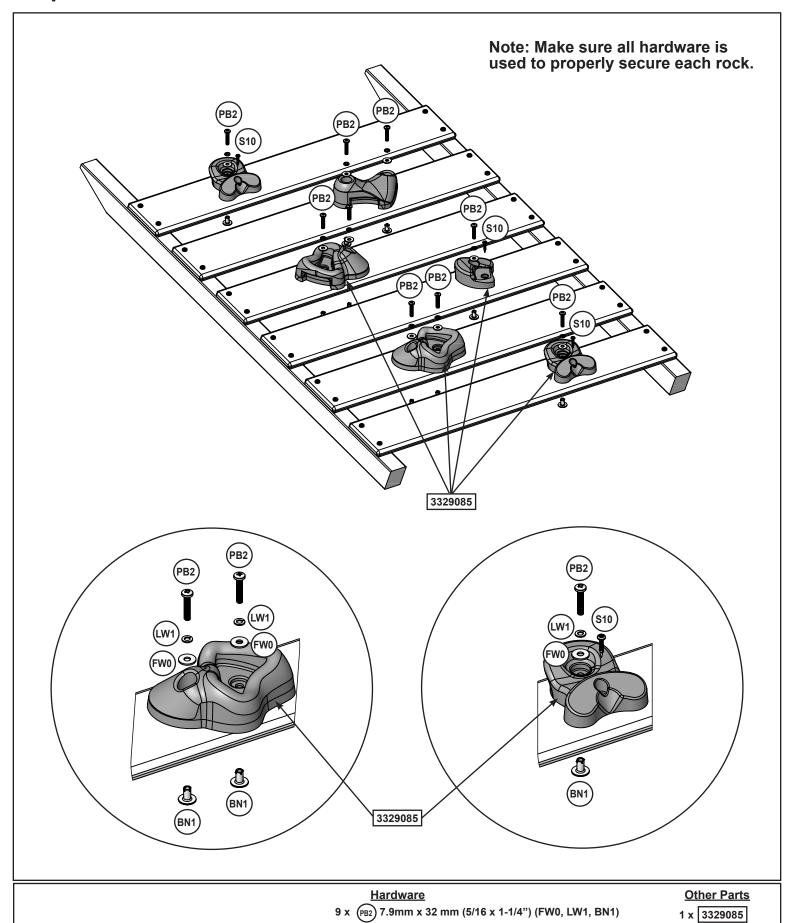

3 x (\$10) #8 x 25.4 mm (#8 x 1")

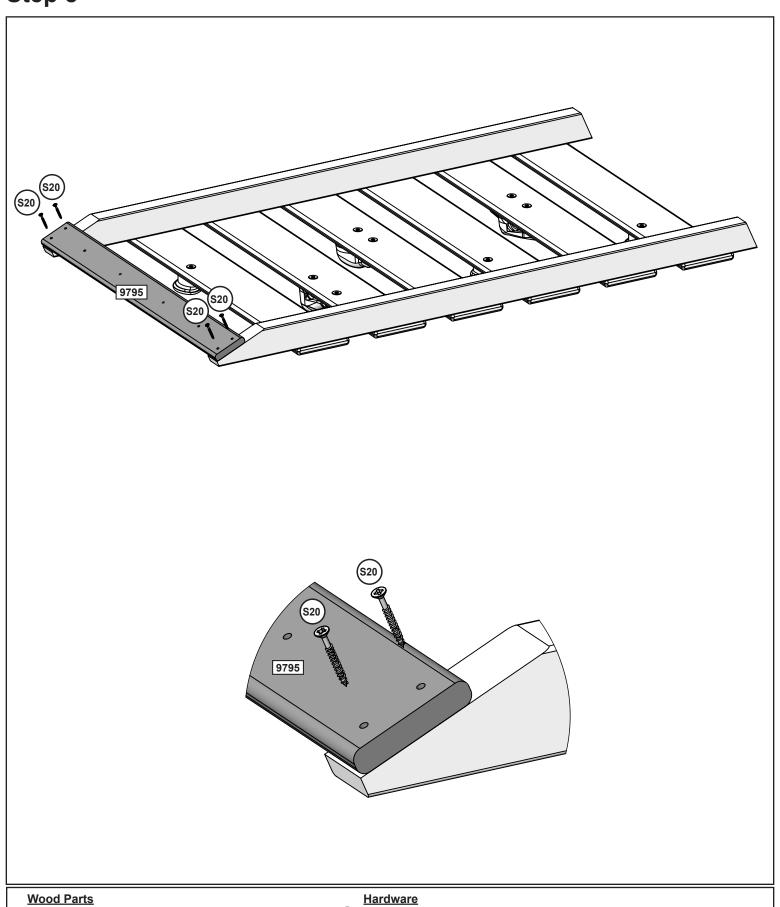


24

1 x 9795 15.9 x 76.2 x 736.6 mm (5/8 x 3 x 29")

4 x (S20) #8 x 35 mm (#8 x 1-3/8")




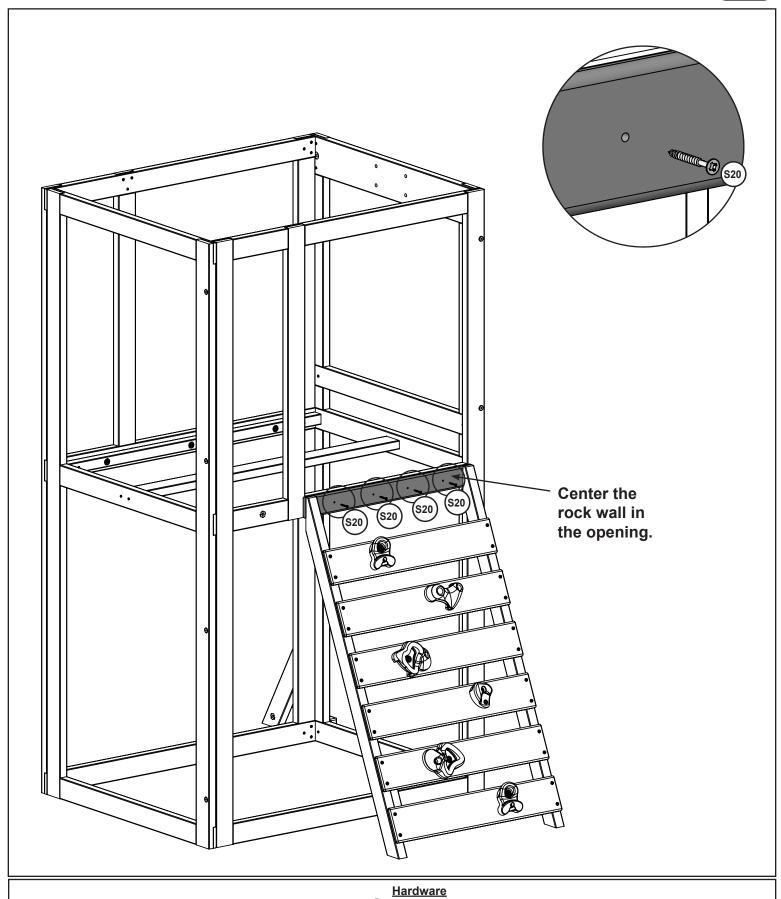

4 x (S20) #8 x 35 mm (#8 x 1-3/8")


1 x 9829 15.9 x 127 x 736.6 mm (5/8 x 5 x 29")



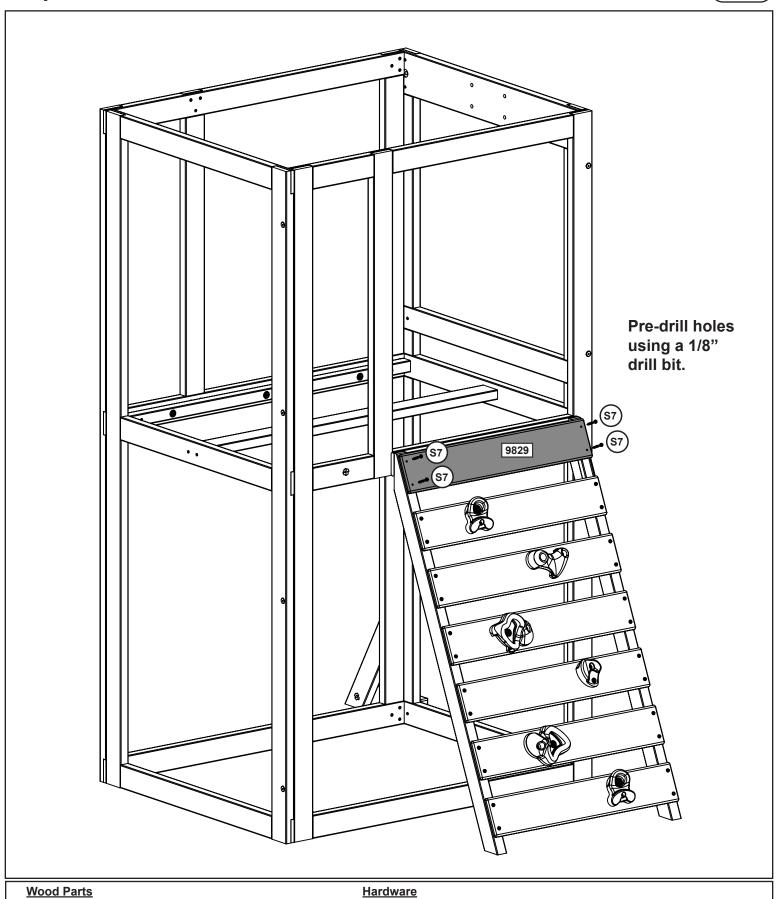

26

4 x (S7) #12 x 50.8 mm (#12 x 2")

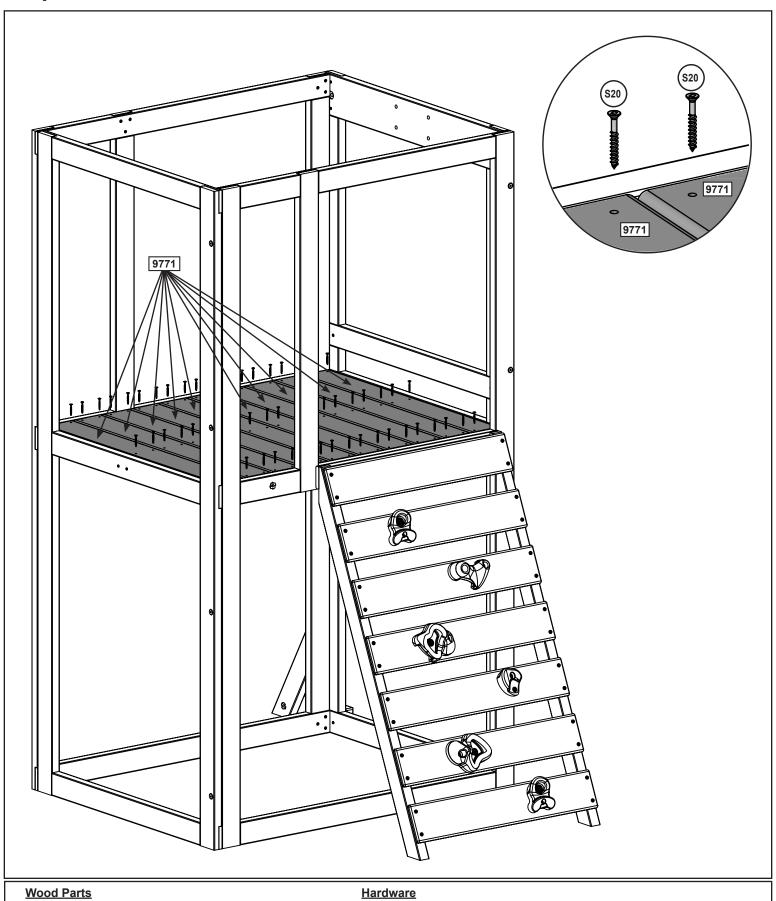


10 x 9771 15.9 x 114.3 x 906 mm (5/8 x 4-1/2 x 35-43/64")

60 x (S20) #8 x 35 mm (#8 x 1-3/8")





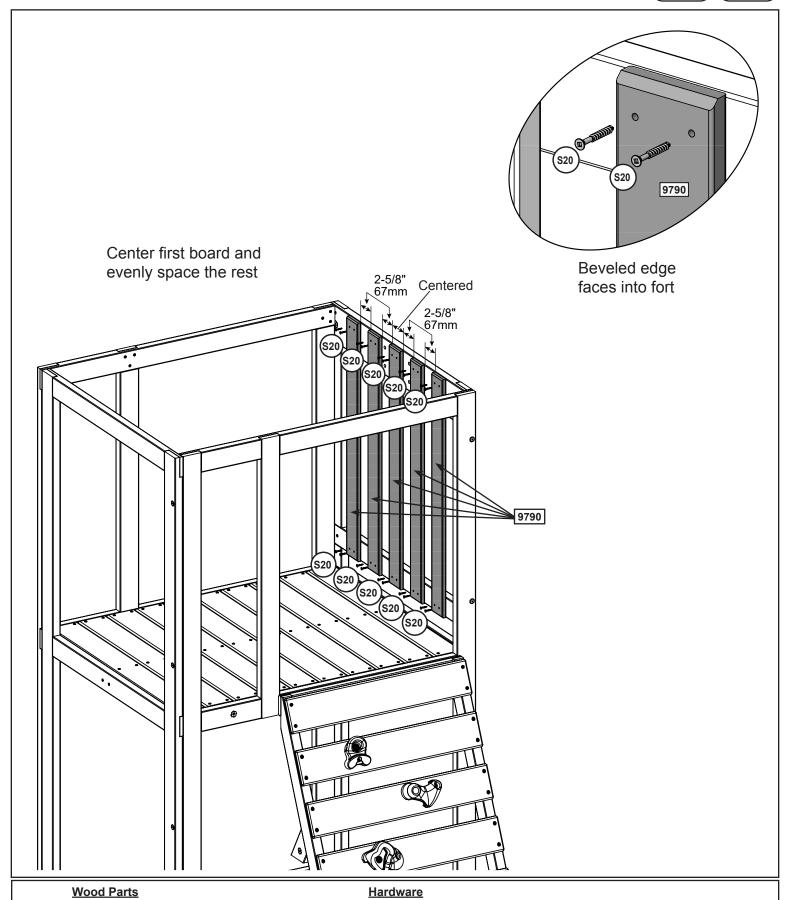


20 x (S20) #8 x 34.9 mm (#8 x 1-3/8")

5 x 9790 15.9 x 76.2 x 910.6 mm (5/8 x 3 x 35-7/8")





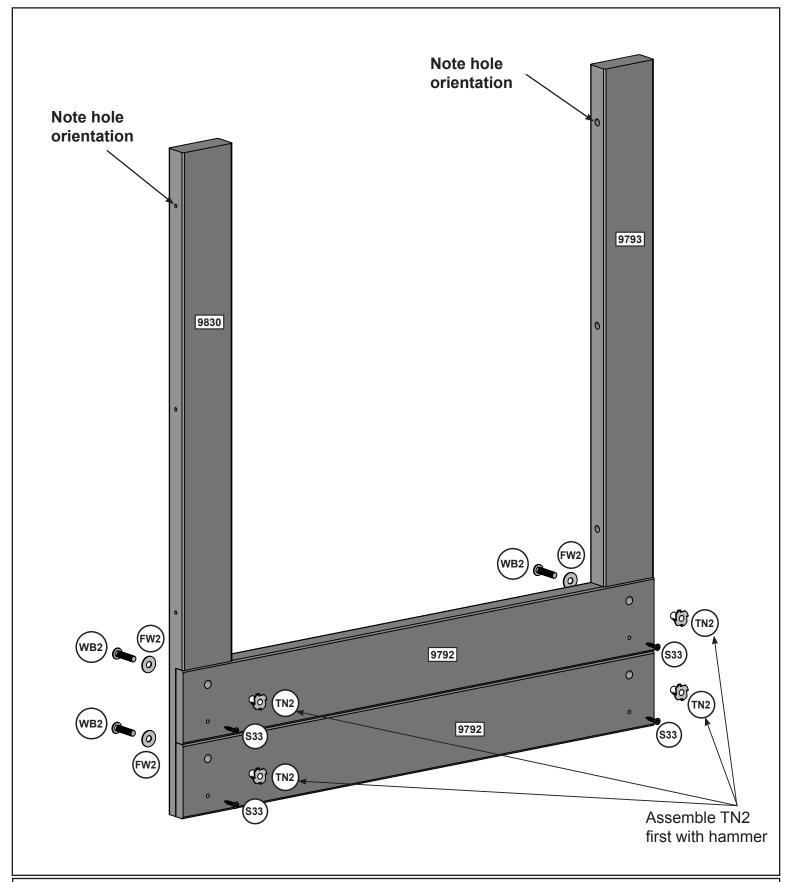

Wood Parts

2 x 9792 31.8 x 101.6 x 785.4 mm (1-1/4 x 4 x 30-15/16")

1 x 9793 31.8 x 82.6 x 912.4 mm (1-1/4 x 3-1/4 x 35-15/16")


1 x 9830 31.8 x 82.6 x 912.4 mm (1-1/4 x 3-1/4 x 35-15/16")


<u>Hardware</u>

4 x (WB2) 7.9 x 34.9 mm (5/16 x 1-3/8") (FW2, TN2)


4 x (S33) #8 x 25.4 mm (#8 x 1")



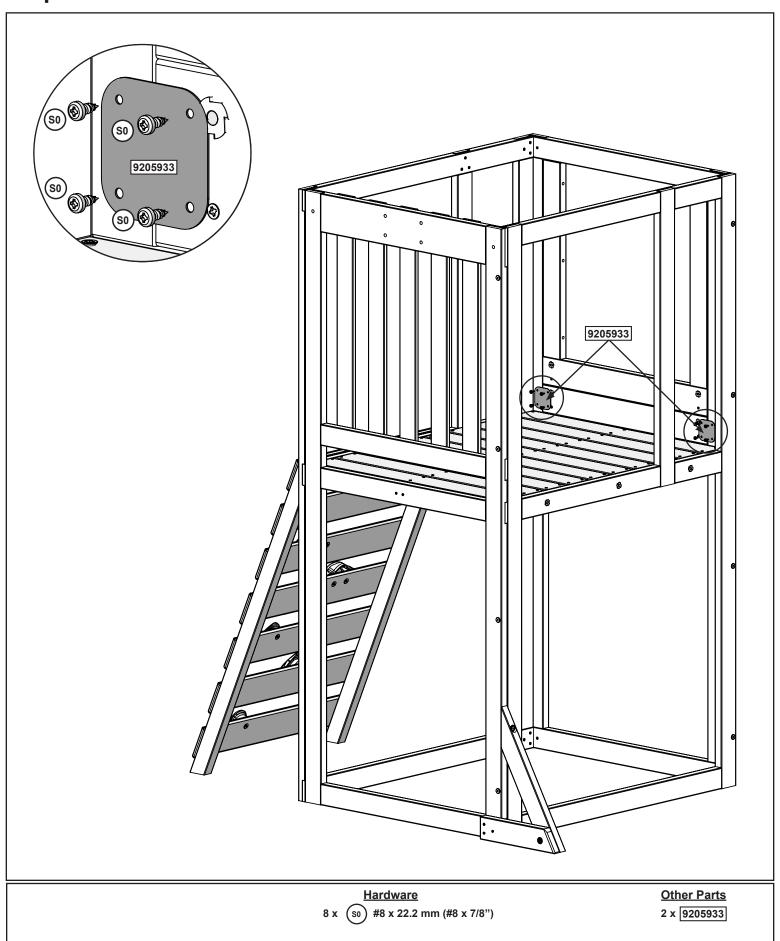

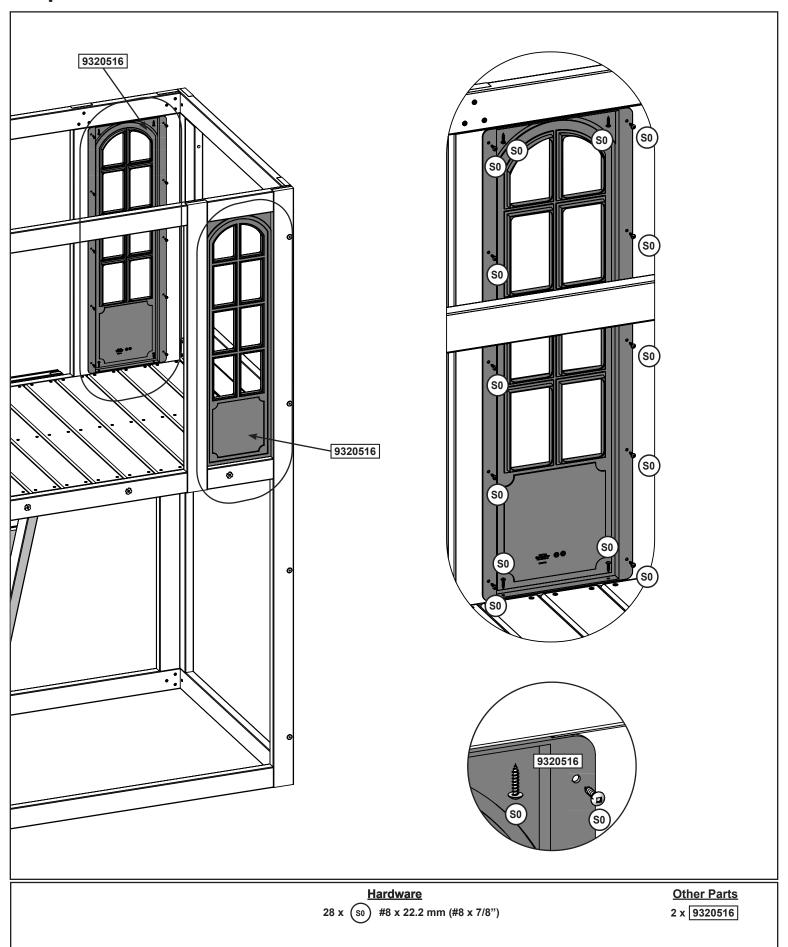



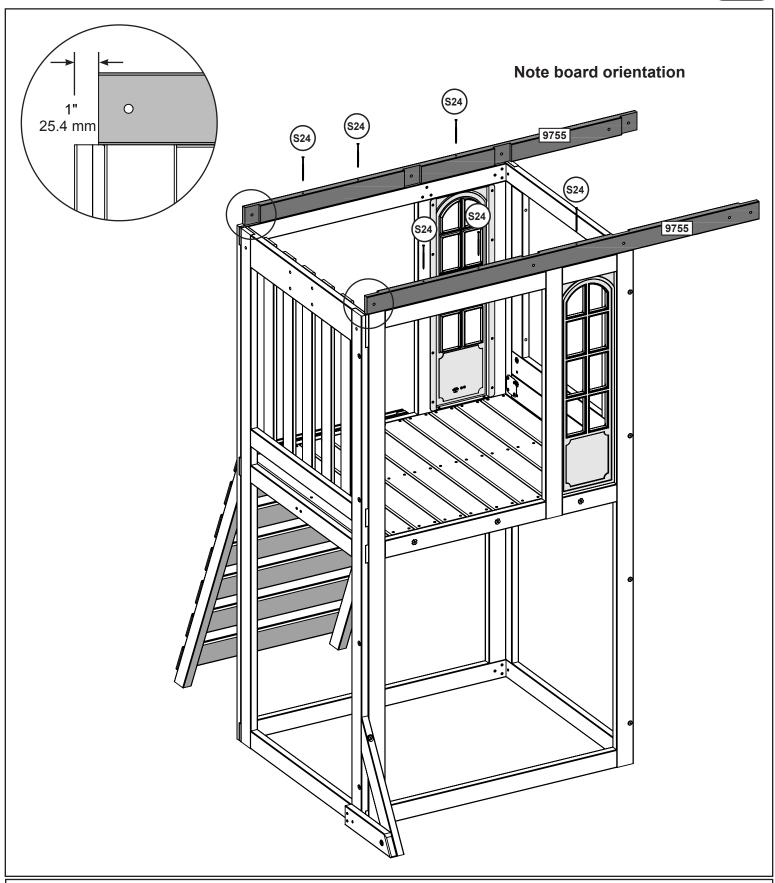


2 x 9755 31.8 x 76.2 x 1765.3 mm (1-1/4 x 3 x 69-1/2")


Wood Parts

Hardware 6 x (S24) #10 x 101.6 mm (#10 x 4")



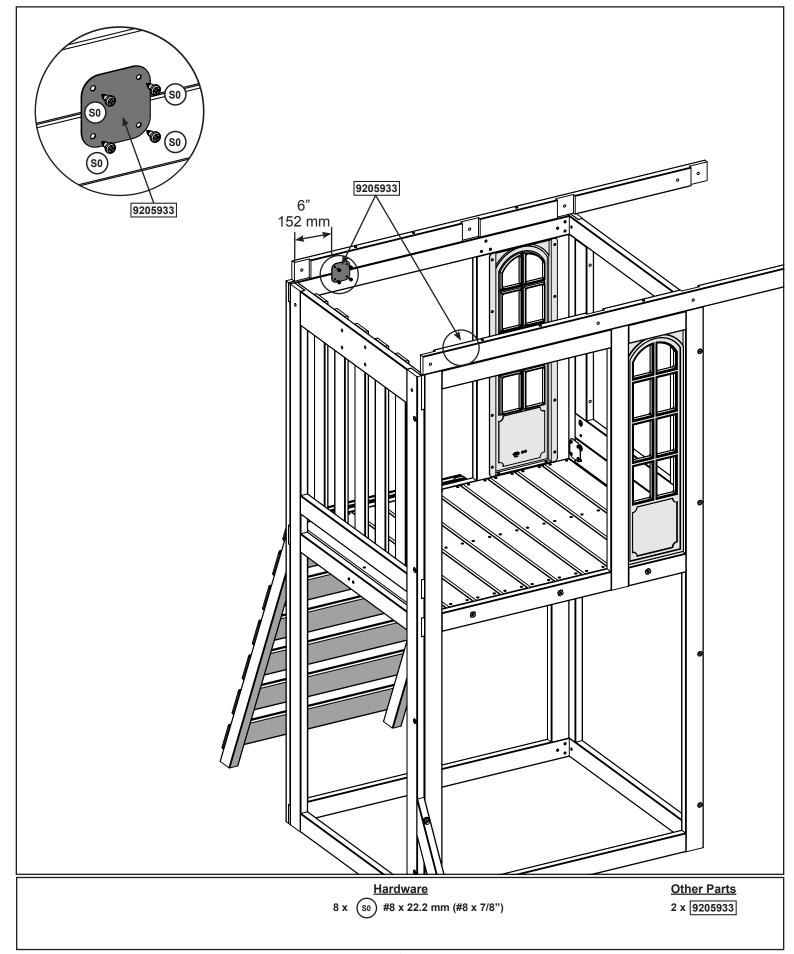



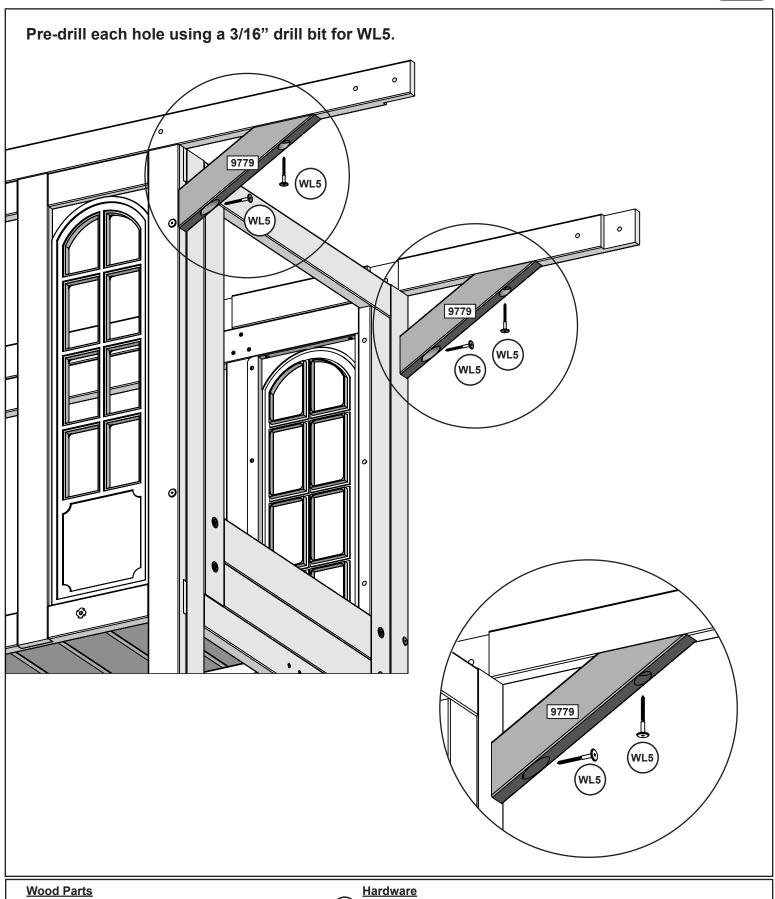


2 x 9779 31.8 x 76.2 x 381 mm (1-1/4 x 3 x 15")

4 x (WL5) 6.4 x 63.5 mm (1/4 x 2-1/2")





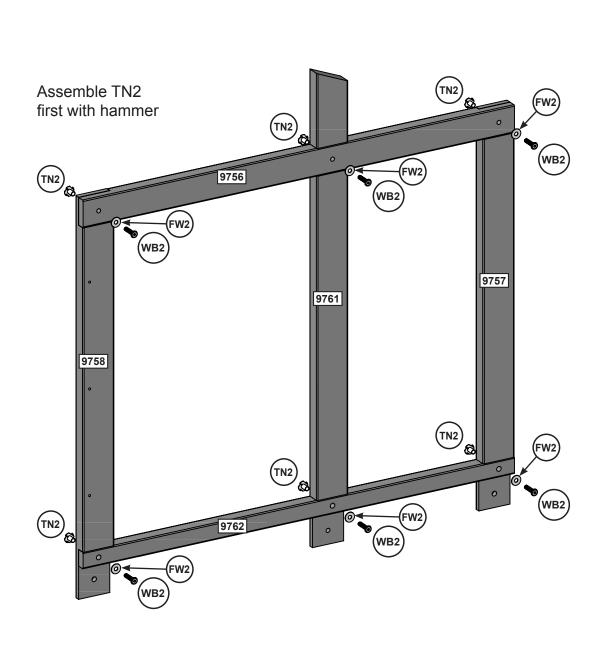

Wood Parts

1 x 9756 31.8 x 63.5 x 1054.1 mm (1-1/4 x 2-1/2 x 41-1/2") 1 x 9761 31.8 x 76.2 x 1092.4 mm (1-1/4 x 3 x 43") 1 x 9762 31.8 x 38.1 x 1054.1 mm (1-1/4 x 1-1/2 x 41-1/2")


Hardware 6 x (WB2) 7.9 x 34.9 mm (5/16 x 1-3/8") (FW2, TN2)

1 x 9757 31.8 x 76.2 x 920.8 mm (1-1/4 x 3 x 36-1/4")

1 x 9758 31.8 x 76.2 x 920.8 mm (1-1/4 x 3 x 36-1/4")





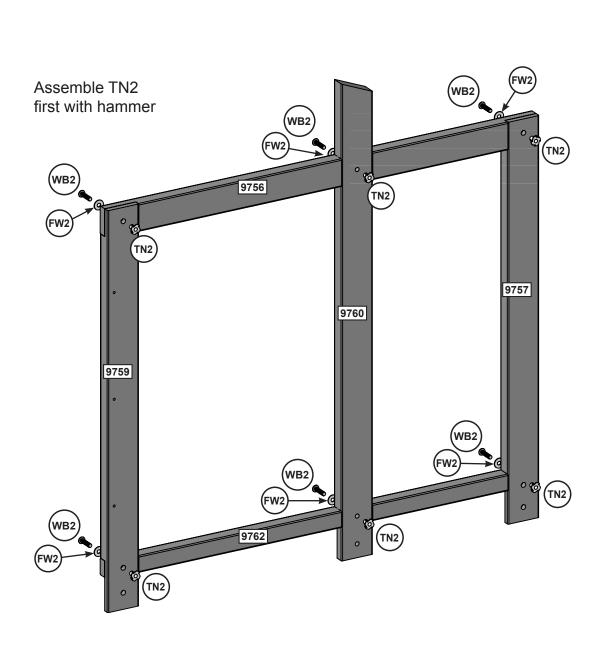

Wood Parts

1 x 9756 31.8 x 63.5 x 1054.1 mm (1-1/4 x 2-1/2 x 41-1/2") 1 x 9760 31.8 x 76.2 x 1092.4 mm (1-1/4 x 3 x 43") 6 x


Hardware 6 x (WB2) 7.9 x 34.9 mm (5/16 x 1-3/8") (FW2, TN2)

1 x 9757 31.8 x 76.2 x 920.8 mm (1-1/4 x 3 x 36-1/4")

1 x 9762 31.8 x 38.1 x 1054.1 mm (1-1/4 x 1-1/2 x 41-1/2")

1 x 9759 31.8 x 76.2 x 920.8 mm (1-1/4 x 3 x 36-1/4")



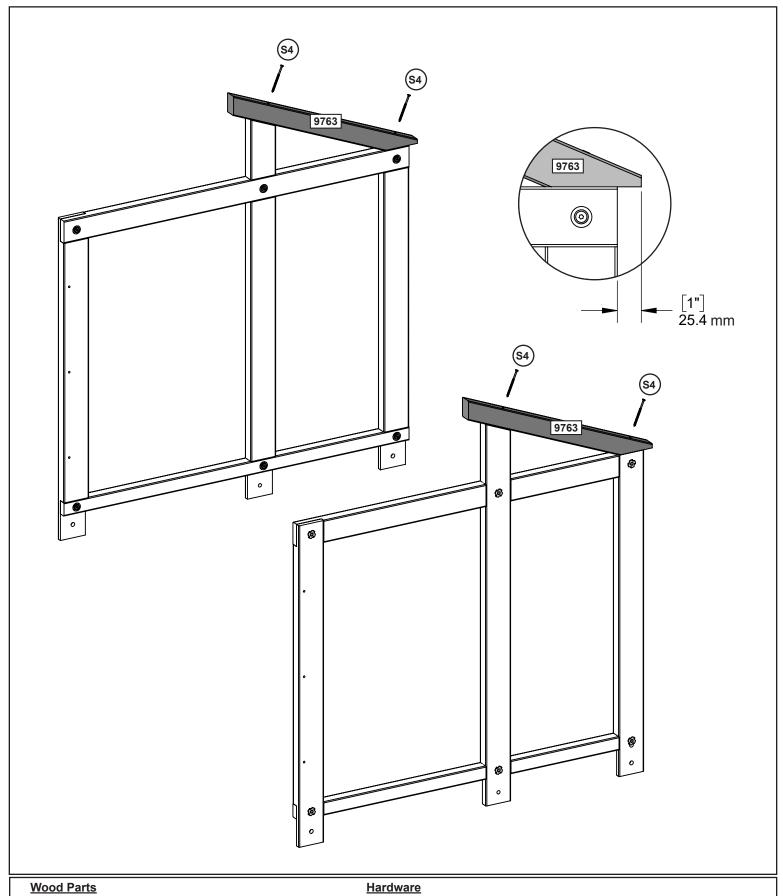


38

4 x (S4) #8 x 76.2 mm (#8 x 3")

2 x 9763 31.8 x 50.8 x 614.6 mm (1-1/4 x 2 x 24-3/16")






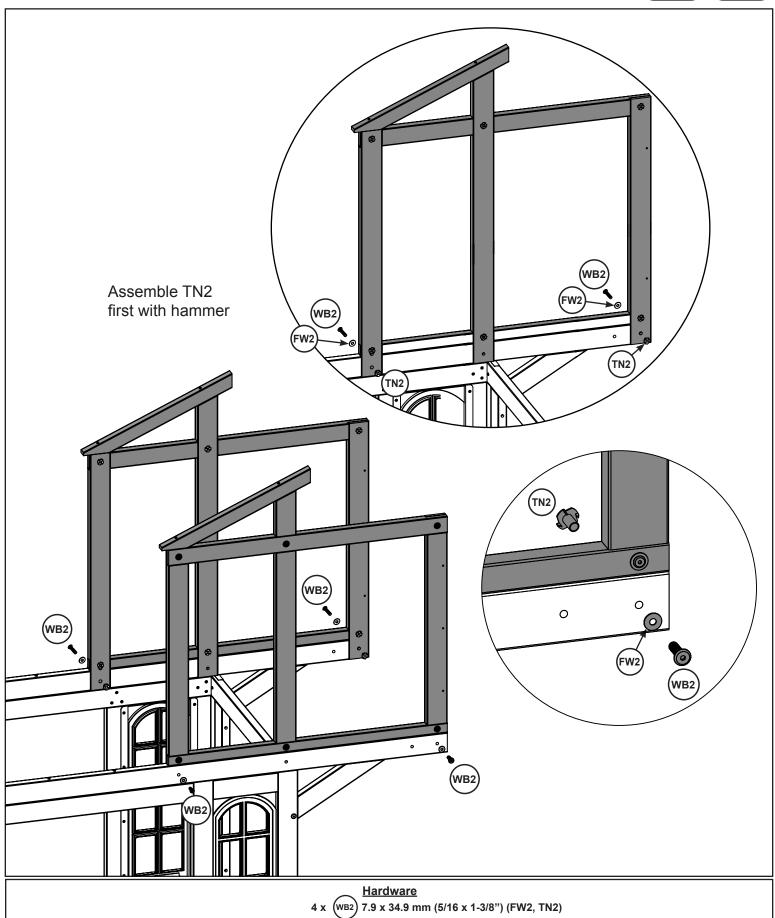





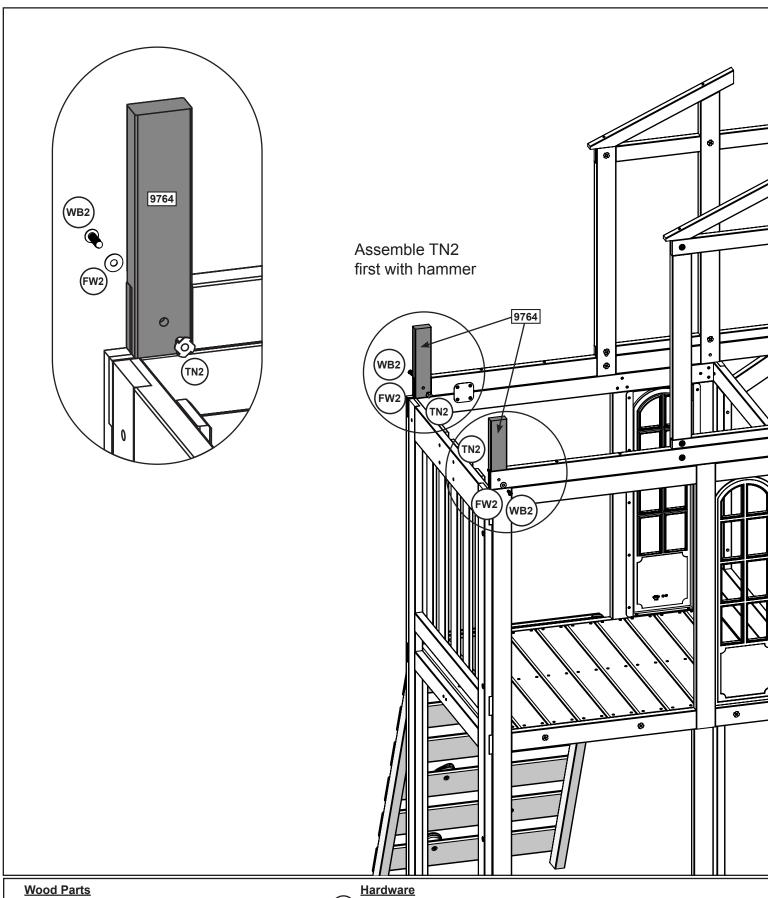


2 x 9764 31.8 x 63.5 x 279.4 mm (1-1/4 x 2-1/2 x 11")

Hardware

2 x (WB2) 7.9 x 34.9 mm (5/16 x 1-3/8") (FW2, TN2)





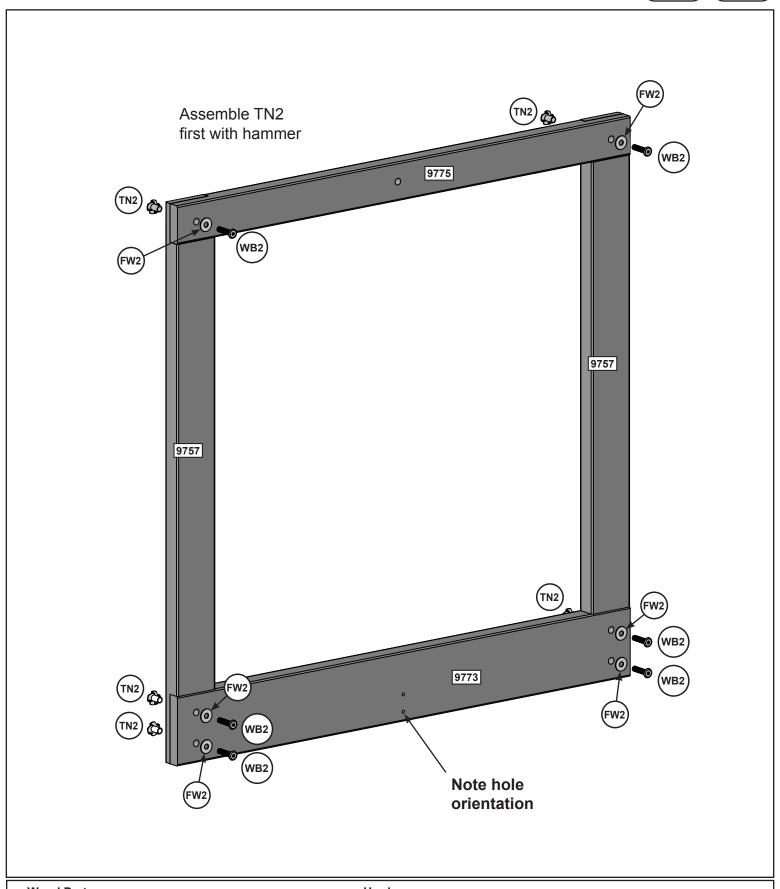

Wood Parts

2 x 9757 31.8 x 76.2 x 920.8 mm (1-1/4 x 3 x 36-1/4")

1 x 9773 31.8 x 114.3 x 906.1 mm (1-1/4 x 4-1/2 x 35-11/16" 1 x 9775 31.8 x 63.5 x 906.1 mm (1-1/4 x 2-1/2 x 35-11/16")


1 x 9773 31.8 x 114.3 x 906.1 mm (1-1/4 x 4-1/2 x 35-11/16")

Hardware

6 x (WB2) 7.9 x 34.9 mm (5/16 x 1-3/8") (FW2, TN2)





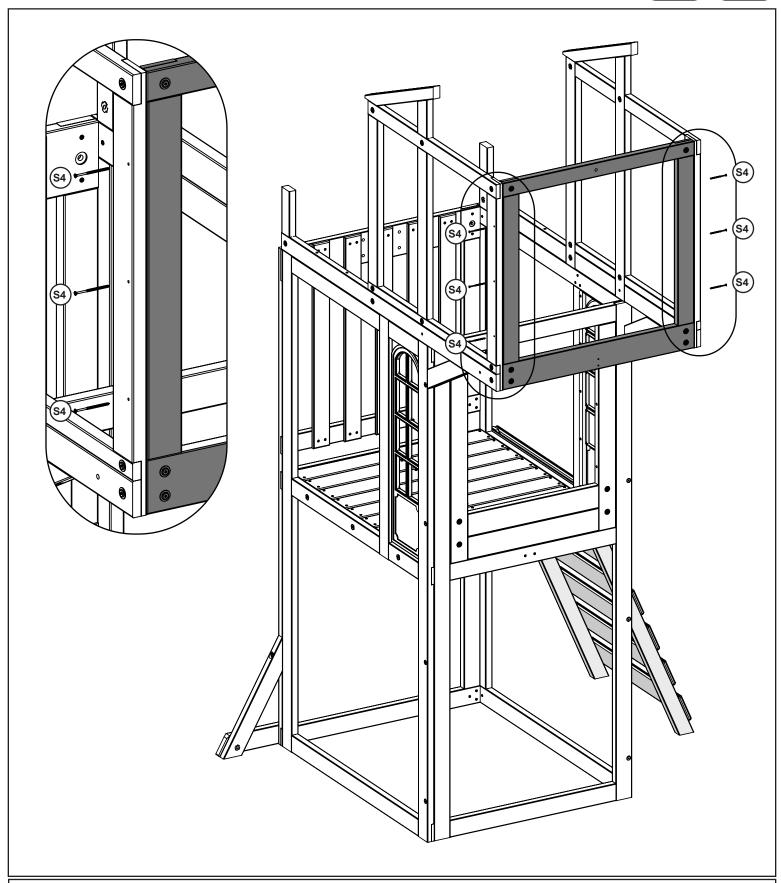


<u>Hardware</u>

6 x (S4) #8 x 76.2 mm (#8 x 3")



Note hole orientation

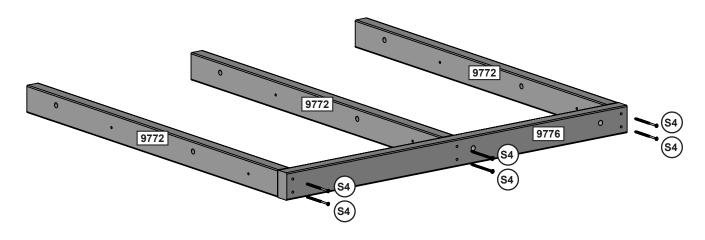

Wood Parts Hardware

3 x 9772 31.8 x 60.3 x 872.2 mm (1-1/4 x 2-3/8 x 34-5/16")


6 x (S4) #8 x 76.2 mm (#8 x 3")

1 x 9776 31.8 x 60.3 x 908 mm (1-1/4 x 2-3/8 x 35-3/4")








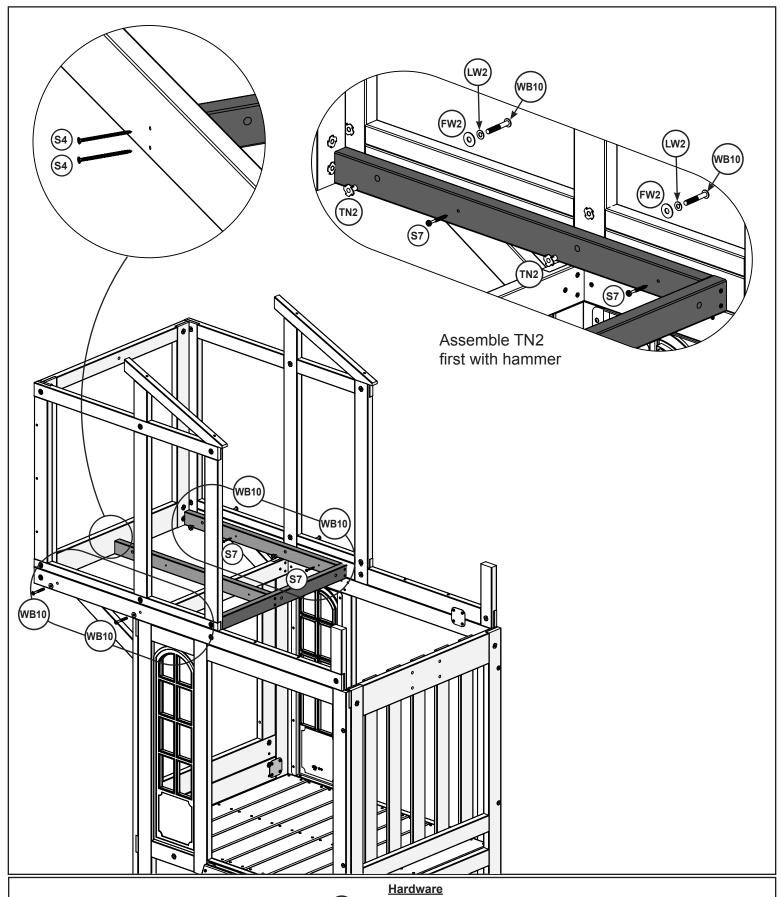

4 x (\$7) #12 x 50.8 mm (#12 x 2")

4 x (WB10) 7.9 x 66.7 mm (5/16 x 2-5/8") (FW2, LW2, TN2) 2 x (\$\\$4\) #8 x 76.2 mm (#8 x 3")

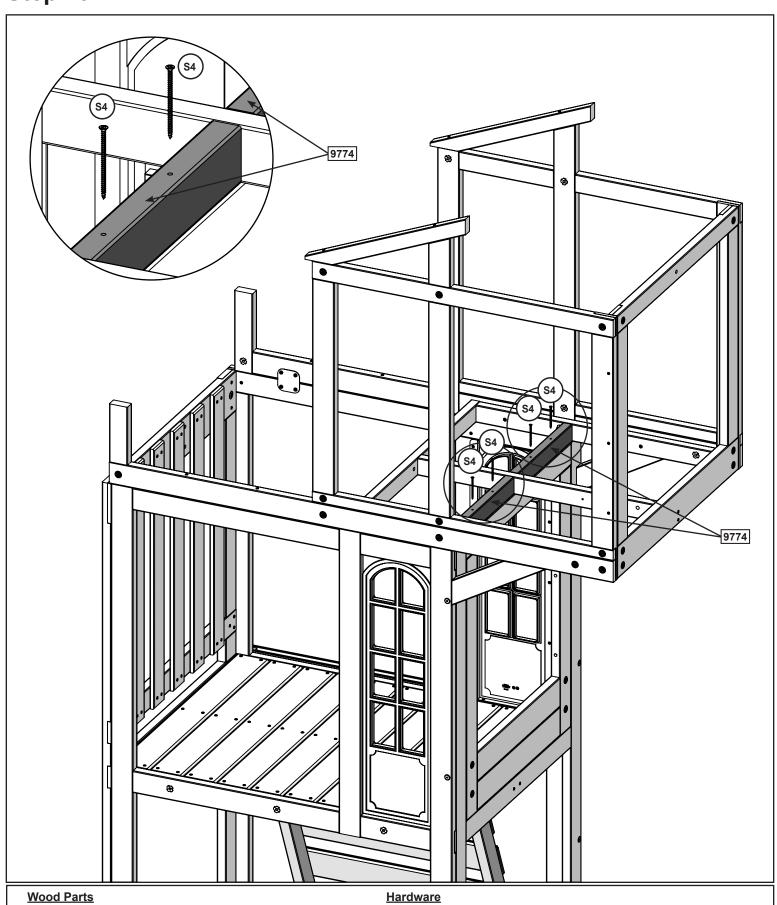


45

4 x (\$4) #8 x 76.2 mm (#8 x 3")

2 x 9774 31.8 x 60.3 x 404.8 mm (1-1/4 x 2-3/8 x 15-15/16")



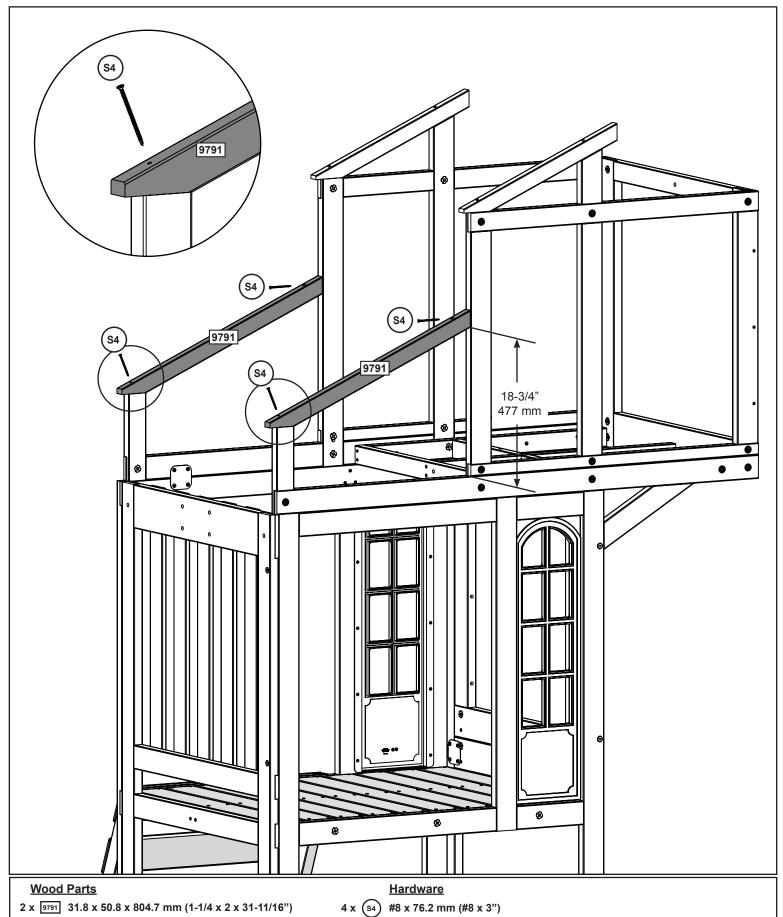


Step 31 x 2

4 x 9765 25.4 x 30 x 279.4 mm (1 x 1-3/16 x 11")

4 x 9766 25.4 x 50.8 x 971.6 mm (1 x 2 x 38-1/4")




2 x 9330505

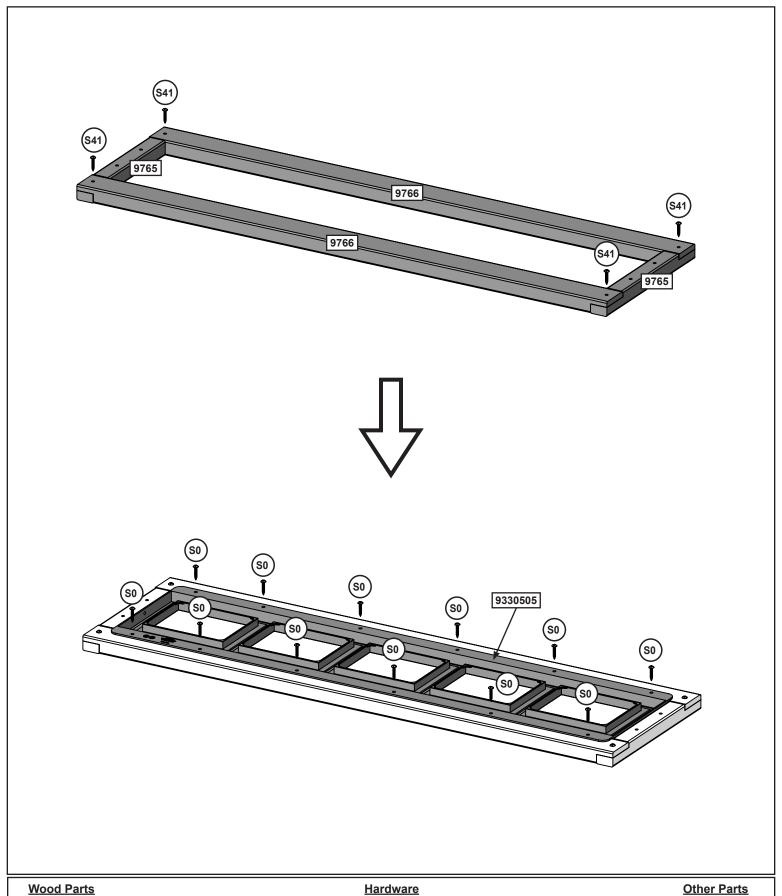

24 x (so) #8 x 22.2 mm (#8 x 7/8")


8 x (S41) #8 x 22.2 mm (#8 x 7/8")

Step 32

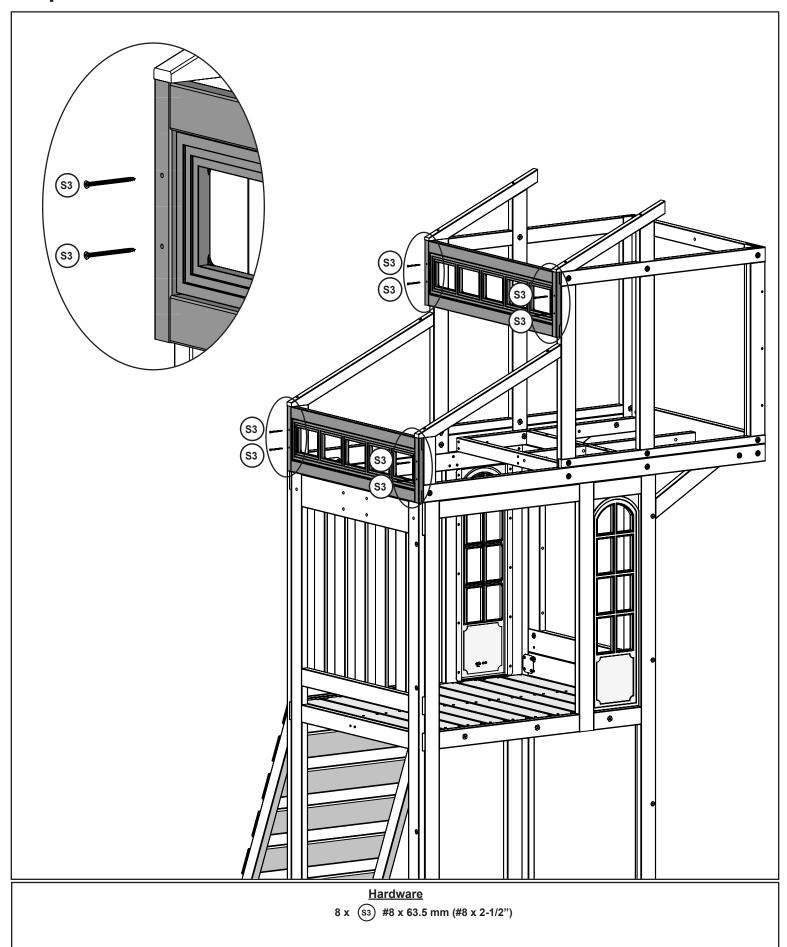





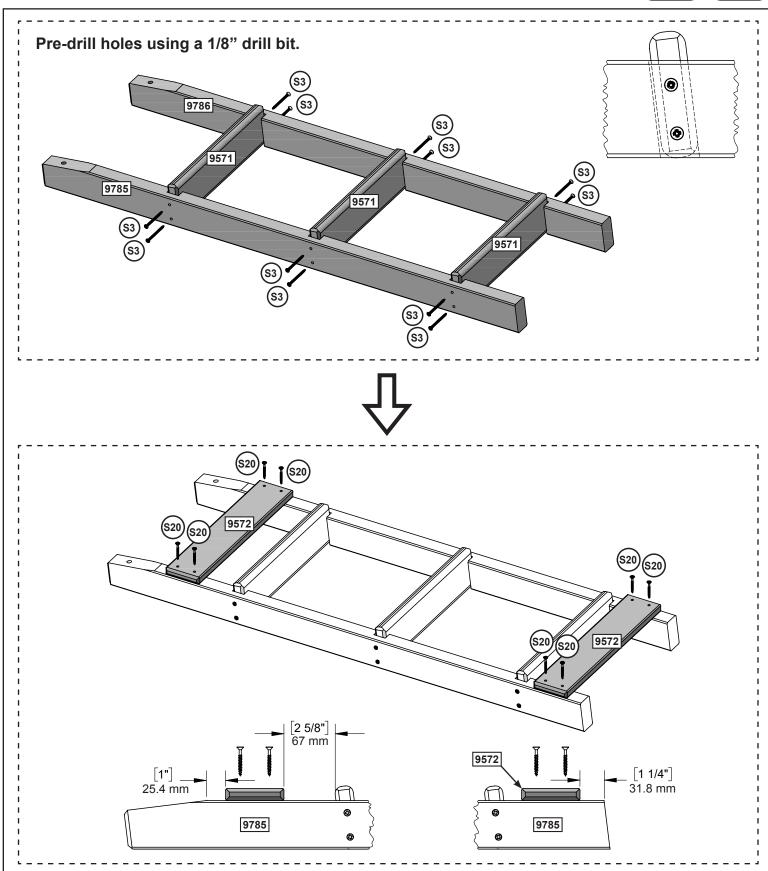

Wood Parts Hardware


3 x 9571 23.8 x 82.6 x 343 mm (15/16 x 3-1/4 x 13-1/2") 1 x 9786 34.9 x 63.5 x 1080.4 mm (1-3/8 x 2-1/2 x 42-9/16") 12 x (\$\sigma\$) #8 x 63.5 mm (#8 x 2-1/2")

2 x 9572 15.9 x 76.2 x 374.6 mm (5/8 x 3 x 14-3/4")


1 x 9785 34.9 x 63.5 x 1080.4 mm (1-3/8 x 2-1/2 x 42-9/16")

8 x (\$20) #8 x 34.9 mm (#8 x 1-3/8")



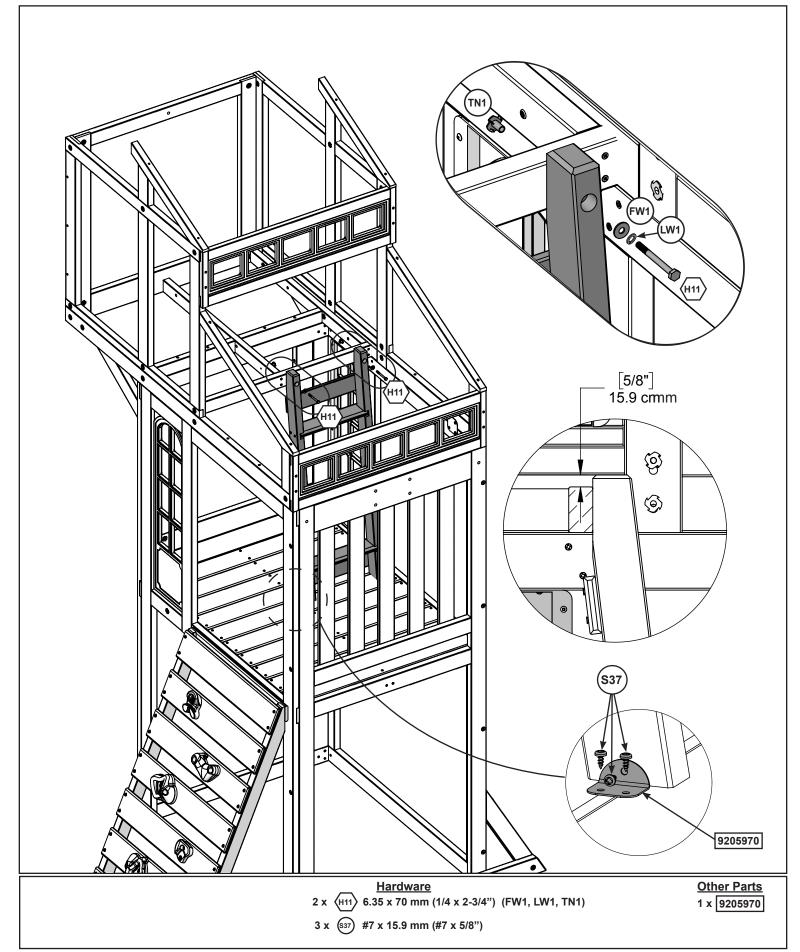



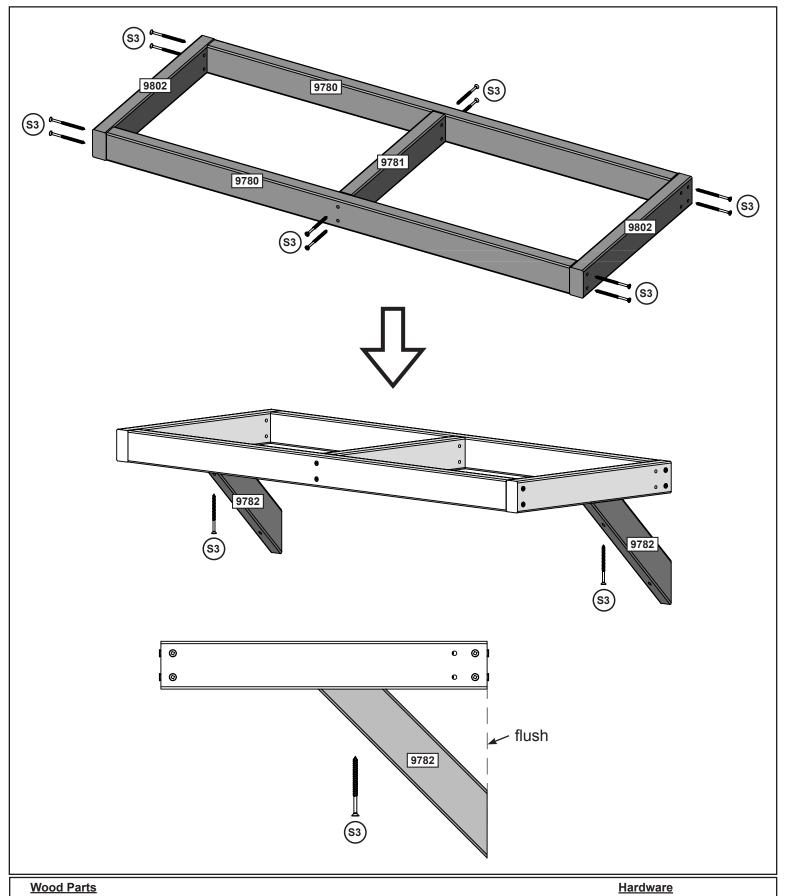

2 x 9802 25.4 x 50.8 x 346.9 mm (1 x 2 x 13-11/16")

14 x (s3) #8 x 63.5 mm (#8 x 2-1/2")


2 x 9780 25.4 x 50.8 x 853.2 mm (1 x 2 x 33-9/16")

1 x 9781 25.4 x 50.8 x 296 mm (1 x 2 x 11-5/8") 2 x 9782 25.4 x 50.8 x 254 mm (1 x 2 x 10")








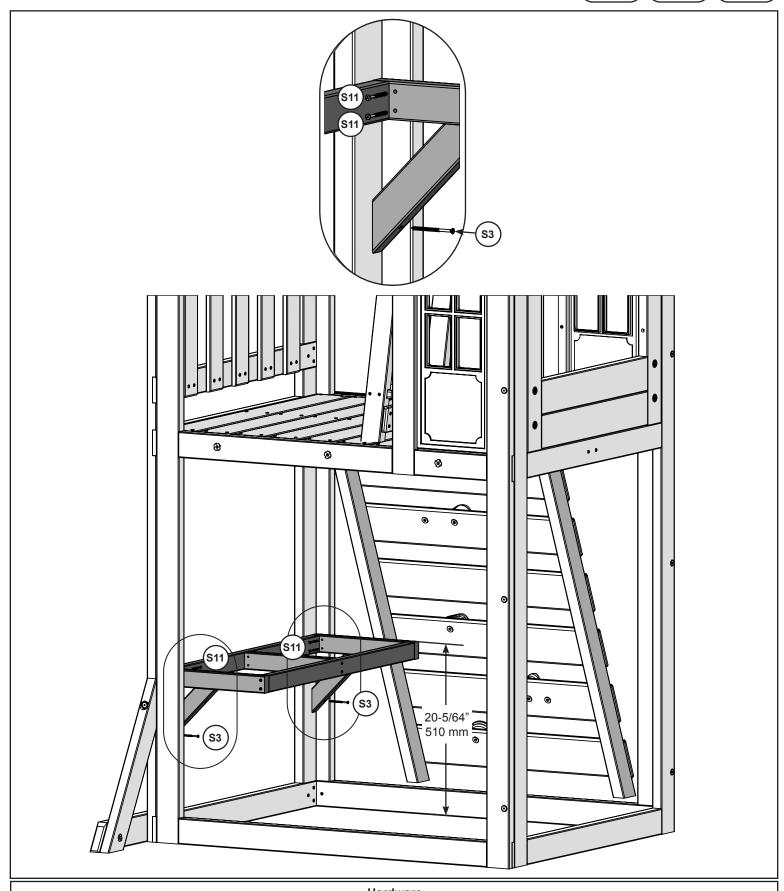

<u>Hardware</u>

- 2 x (s3) #8 x 63.5 mm (#8 x 2-1/2")
- 4 x (S11) #8 x 50.8 mm (#8 x 2")


Step 37

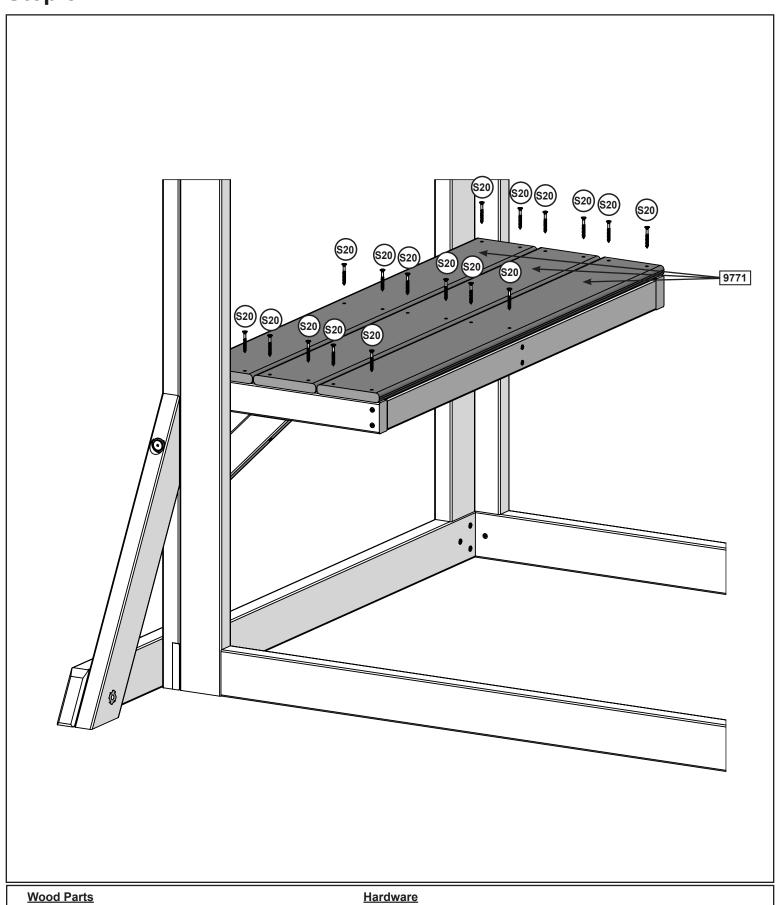

3 x 9771 15.9 x 114.3 x 906 mm (5/8 x 4-1/2 x 35-43/64")


Hardware 18 x (\$20) #8 x 34.9 mm (#8 x 1-3/8")




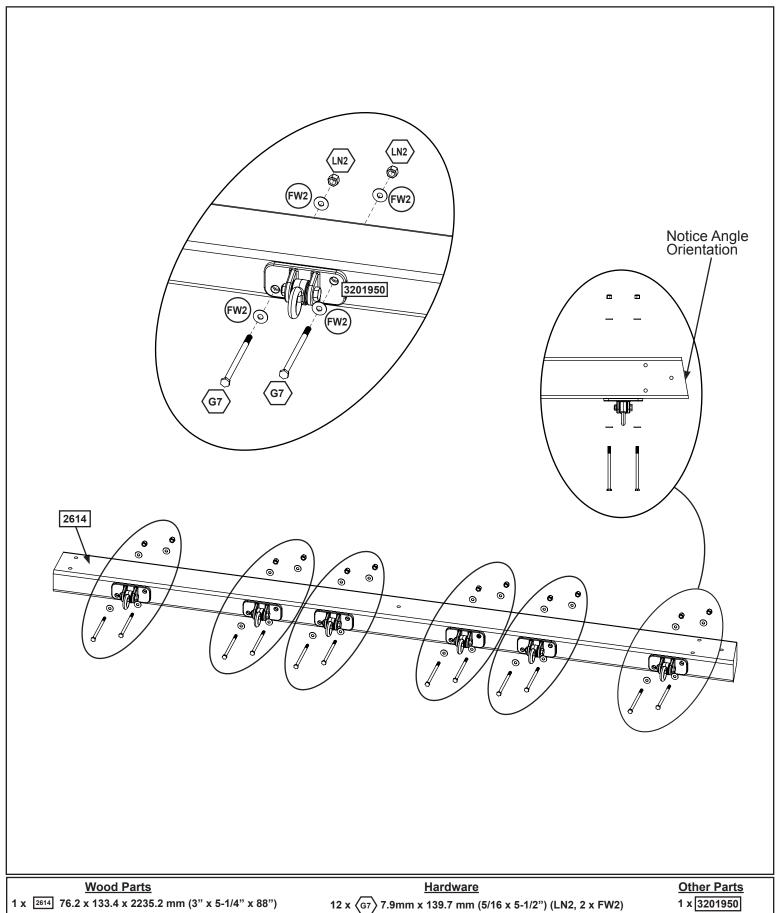

12 x $\langle G7 \rangle$ 7.9mm x 139.7 mm (5/16 x 5-1/2") (LN2, 2 x FW2)

1 x 2614 76.2 x 133.4 x 2235.2 mm (3" x 5-1/4" x 88")

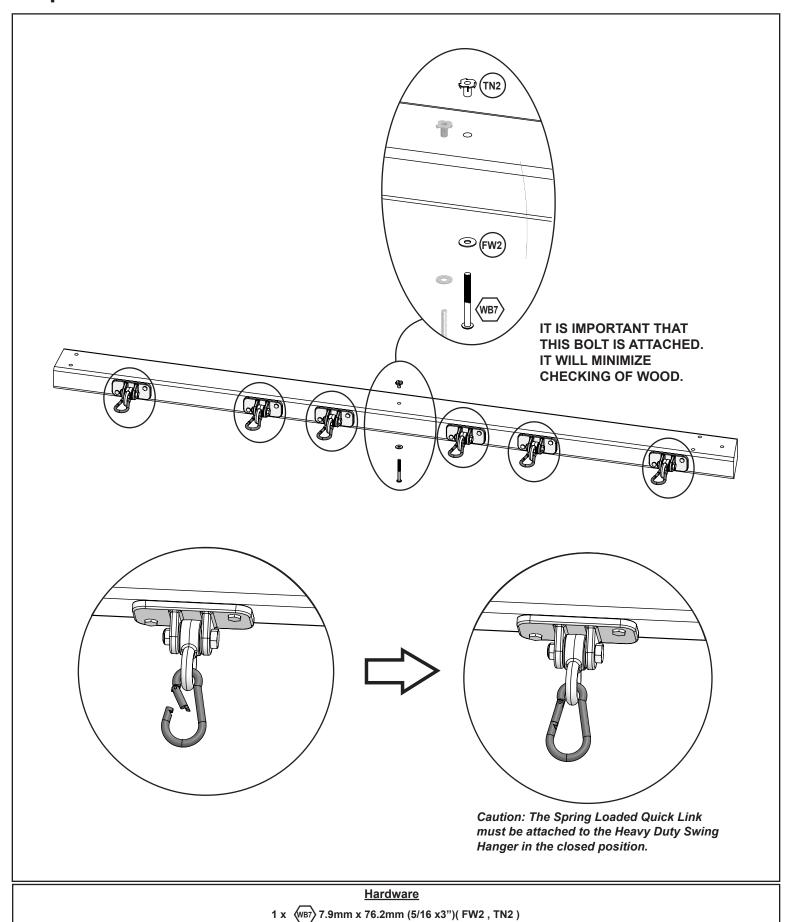

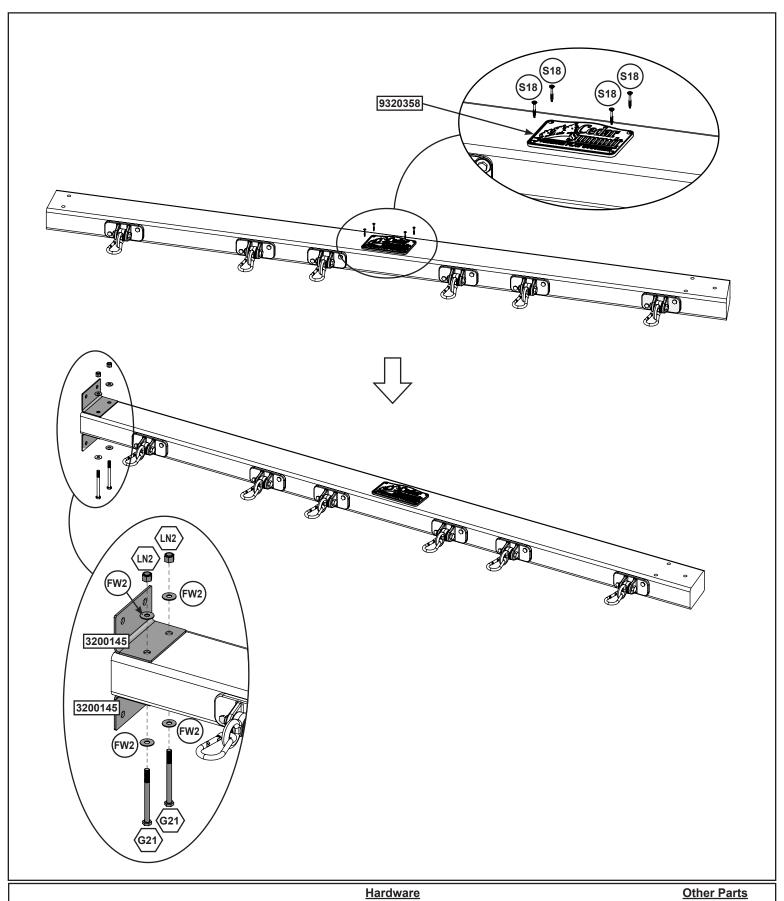


2 x (G21) 7.9 x 95 mm (5/16 x 3-3/4") (2 x FW2, LN2)

4 x (S18) #6 x 25.4 mm (#6 x 1")


1 x 3200145

1 x 9320358



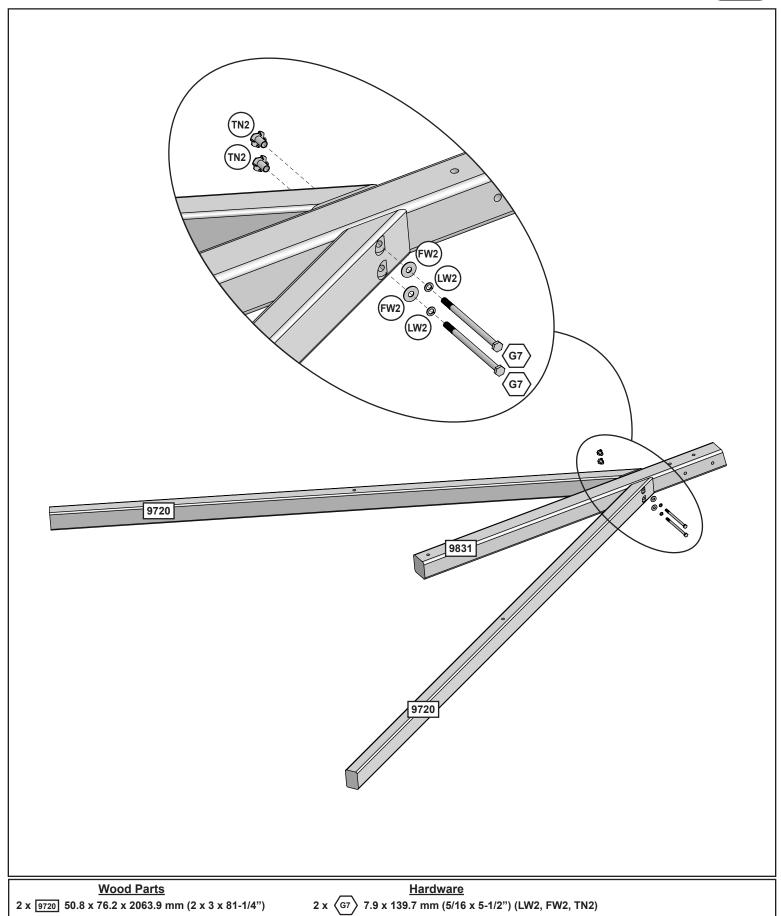



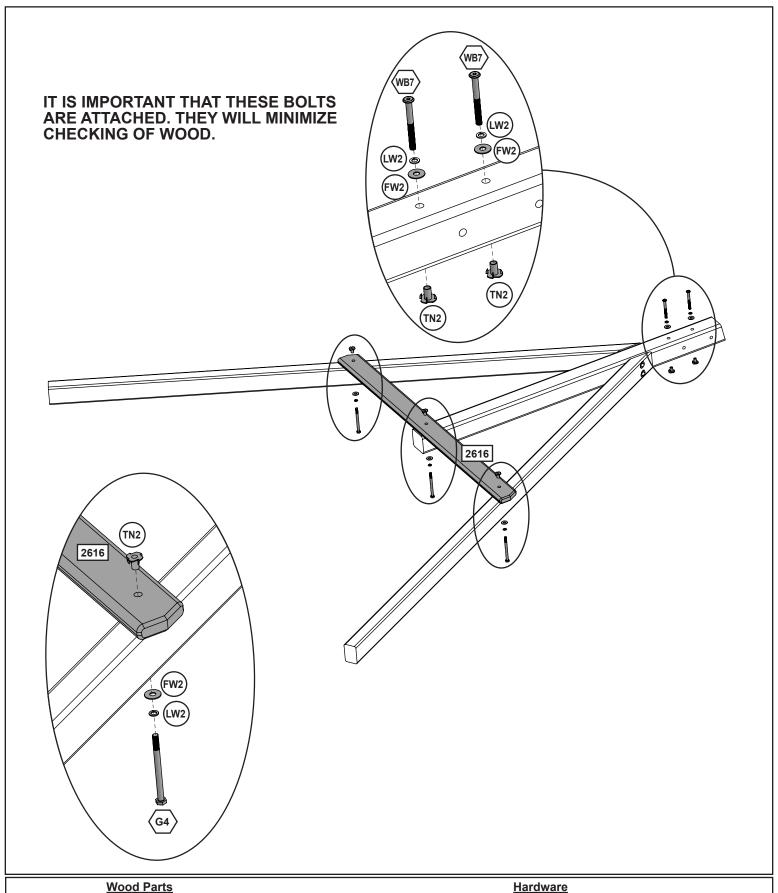

1 x 2616 23.8 x 82.6 x 1181.1mm (15/16 x 3-1/4 x 46-1/2")


Hardware


3 x (G4) 7.9mm x 101.6mm (5/16 x 4") (LW2, FW2, TN2)

2 x (WB7) 7.9mm x 76.2mm (5/16 x 3") (LW2, FW2, TN2)




x 9200144

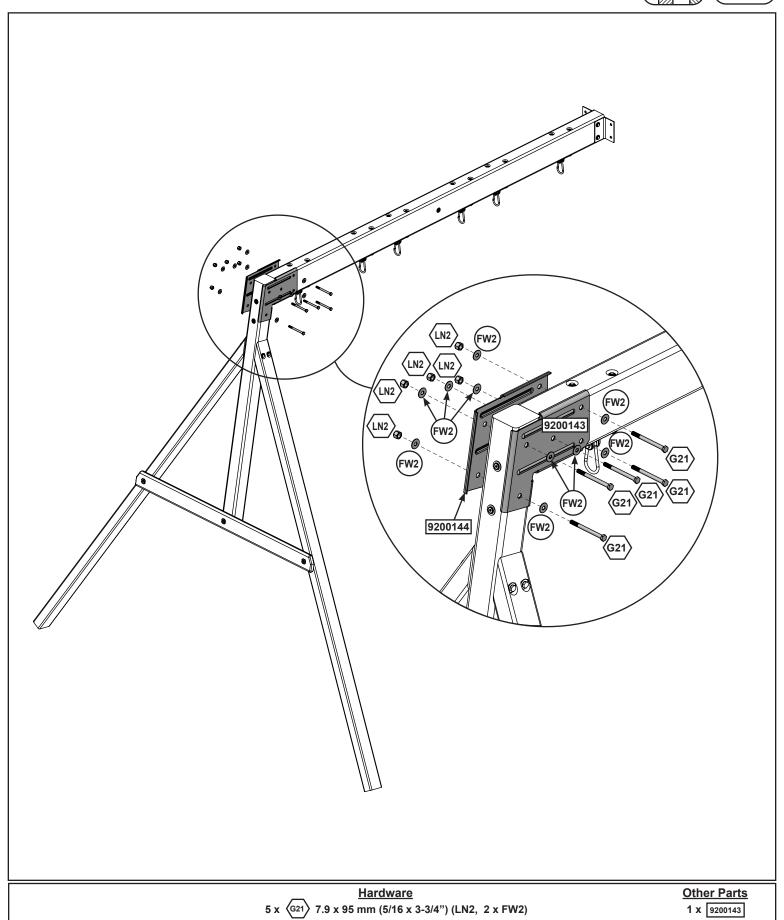

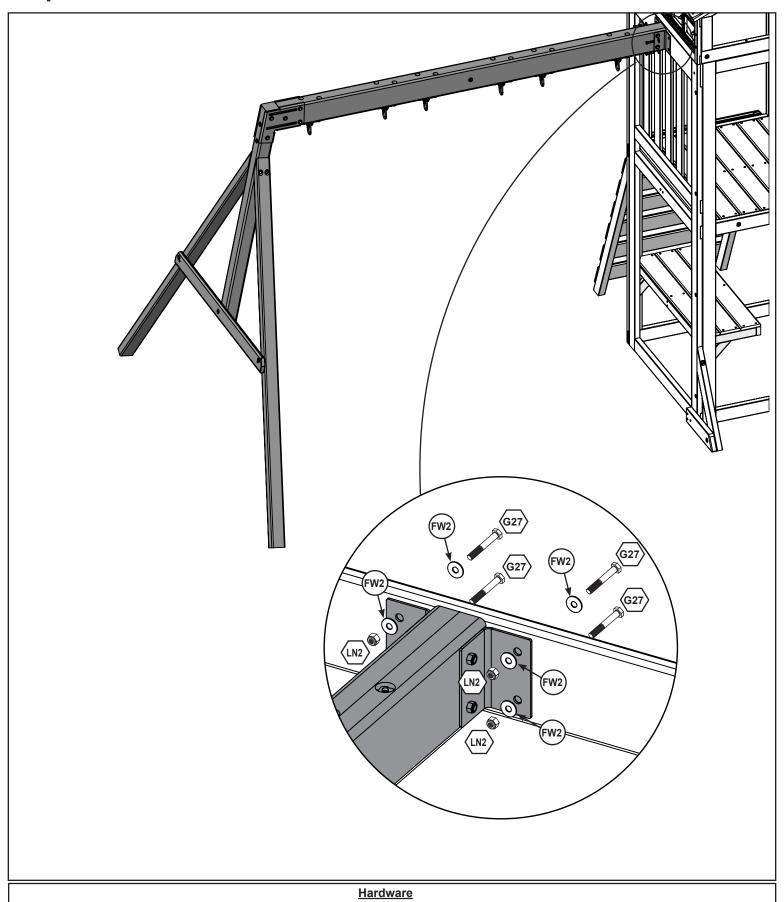

4 x (G27) 7.9 x 44.5 mm (5/16 x 1-3/4") (LN2, 2 x FW2)

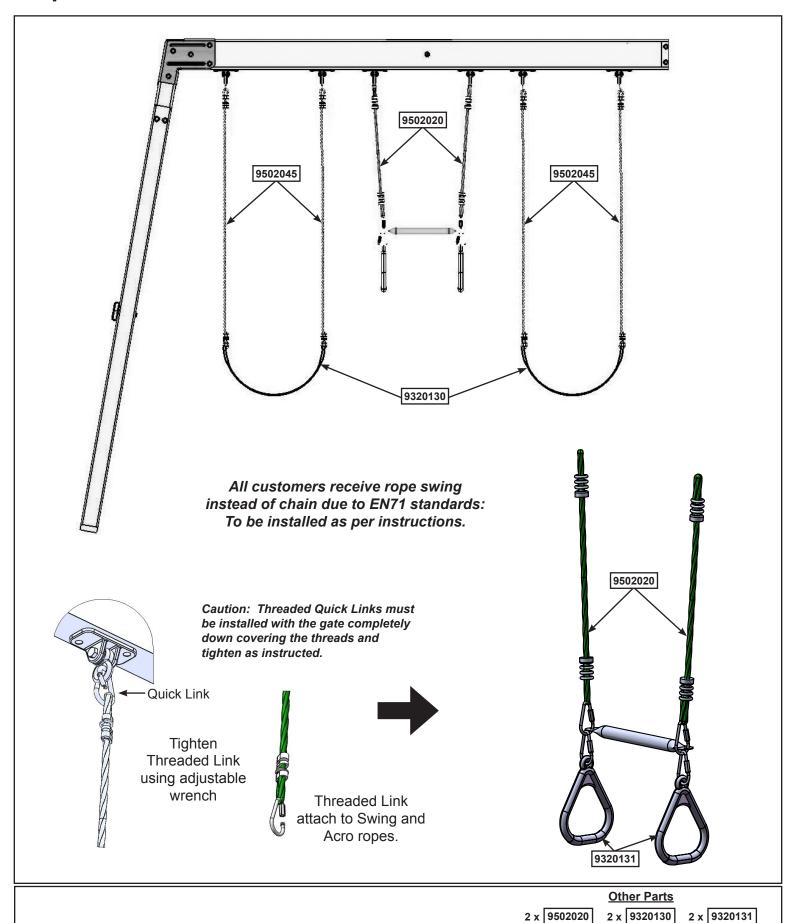


1 x 9200131

2 x 3200022

4 x 9502045


Step 46 x 4



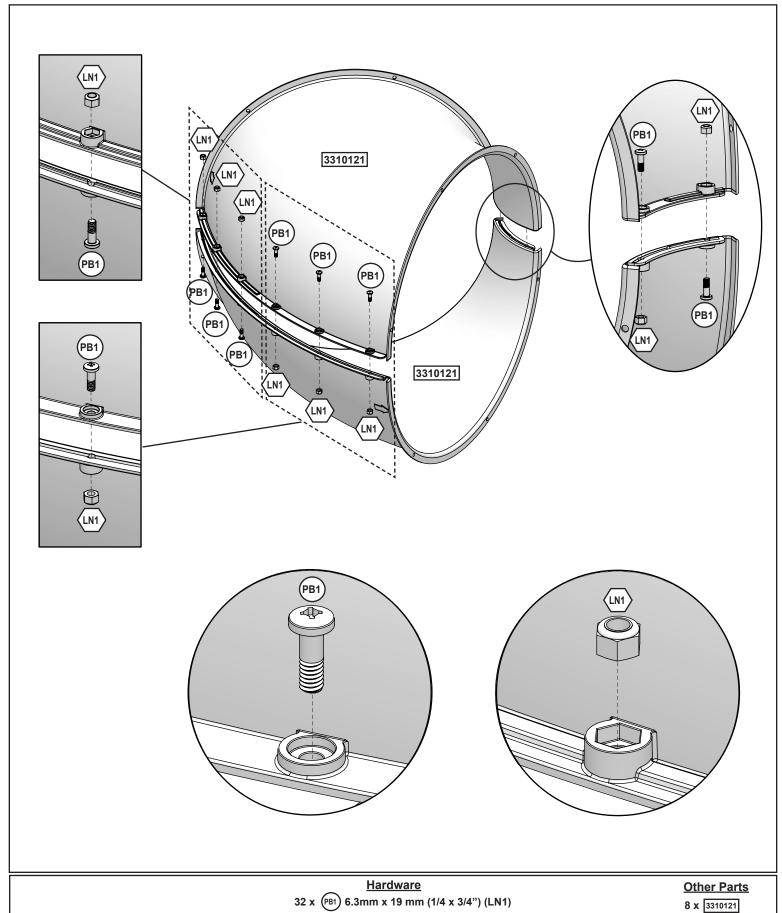



1 x 3310130 1 x 3310131

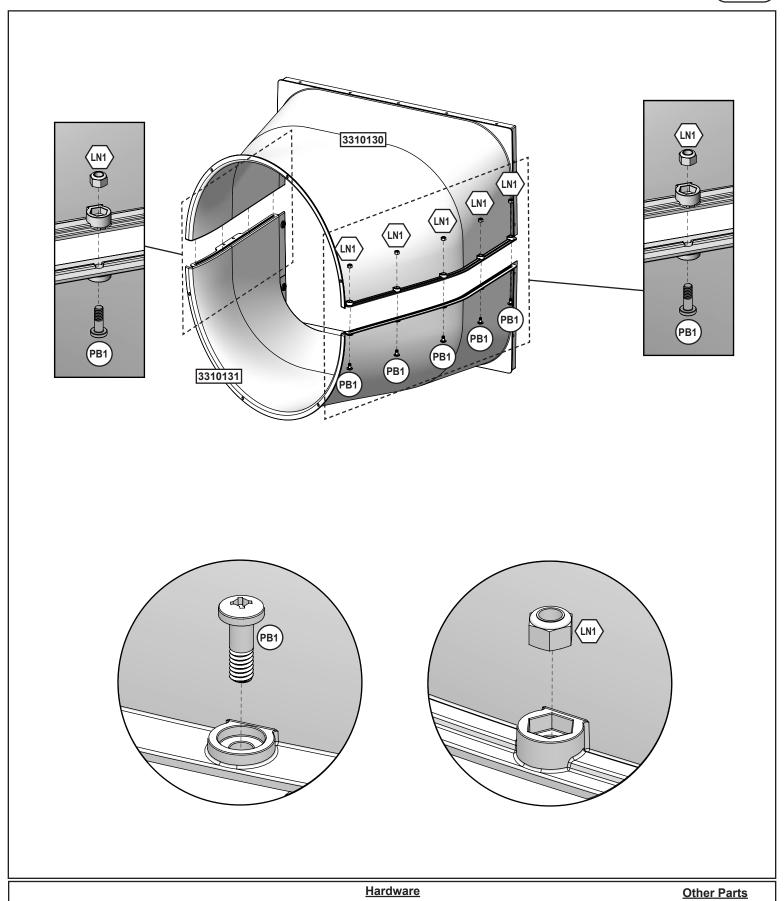


9 x (PB1) 6.3mm x 19 mm (1/4 x 3/4") (LN1)



1 x 3310124

1 x 3310121

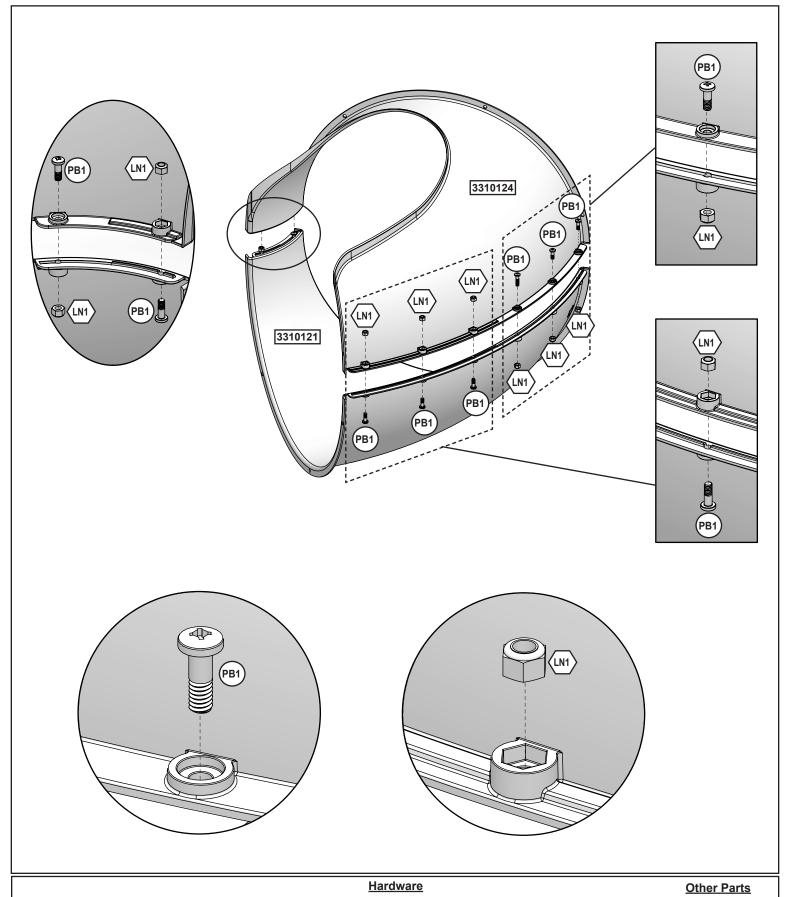


64

8 x (PB1) 6.3mm x 19 mm (1/4 x 3/4") (LN1)






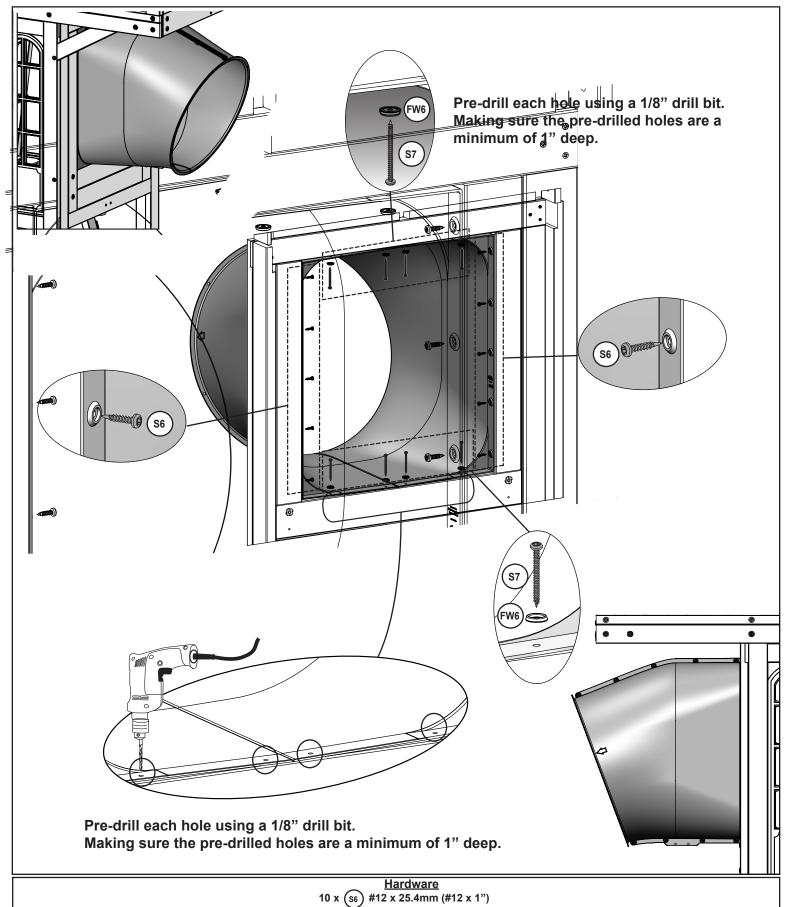

8 x (s₇) #12 x 50.8mm (#12 x 2")

8 x (FW6) #12



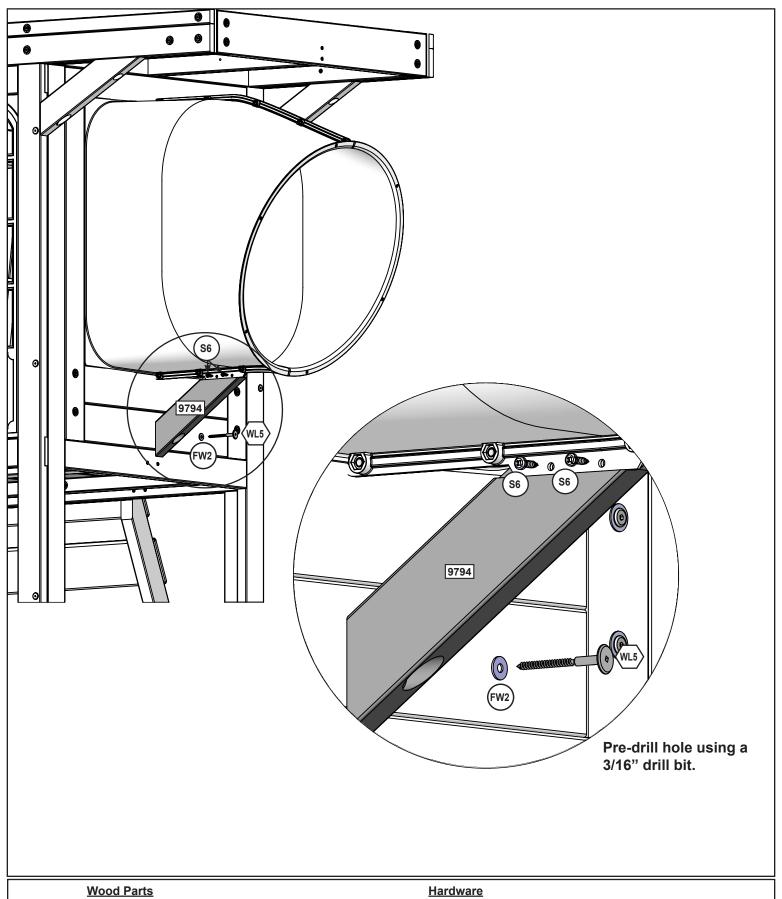


2 x (S6)

1 x 9794 31.8 x 76.2 x 357.1 mm (1-1/4" X 3" X 14-1/16")

1 x $\langle WL5 \rangle$ 6.4mm x 63.5 mm (1/4 x 2-1/2")(FW2)

#12 x 25.4mm (#12 x 1")



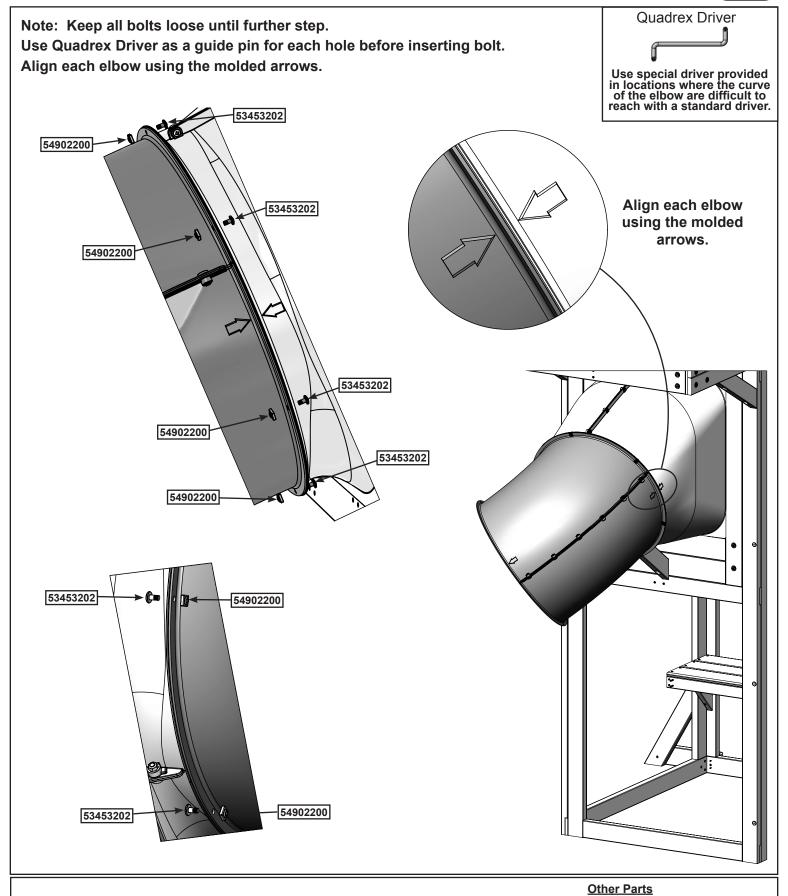


6 x 54902200

6 x 53453202 1/4" x 12.7mm

Step 52 x 3



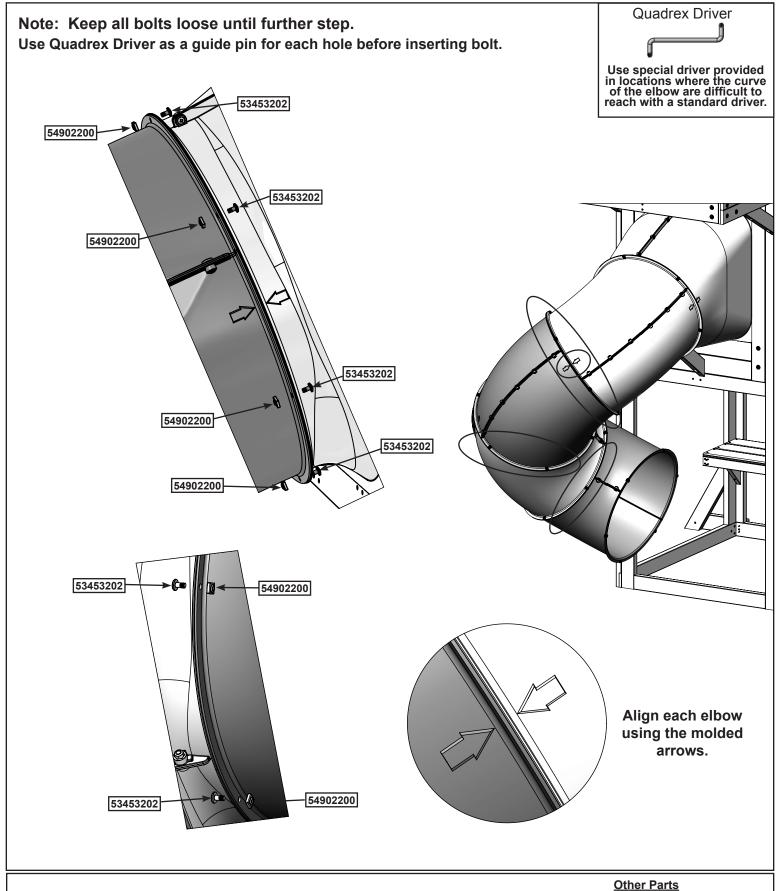


-

18 x 54902200


18 x 53453202 1/4" x 12.7mm

68



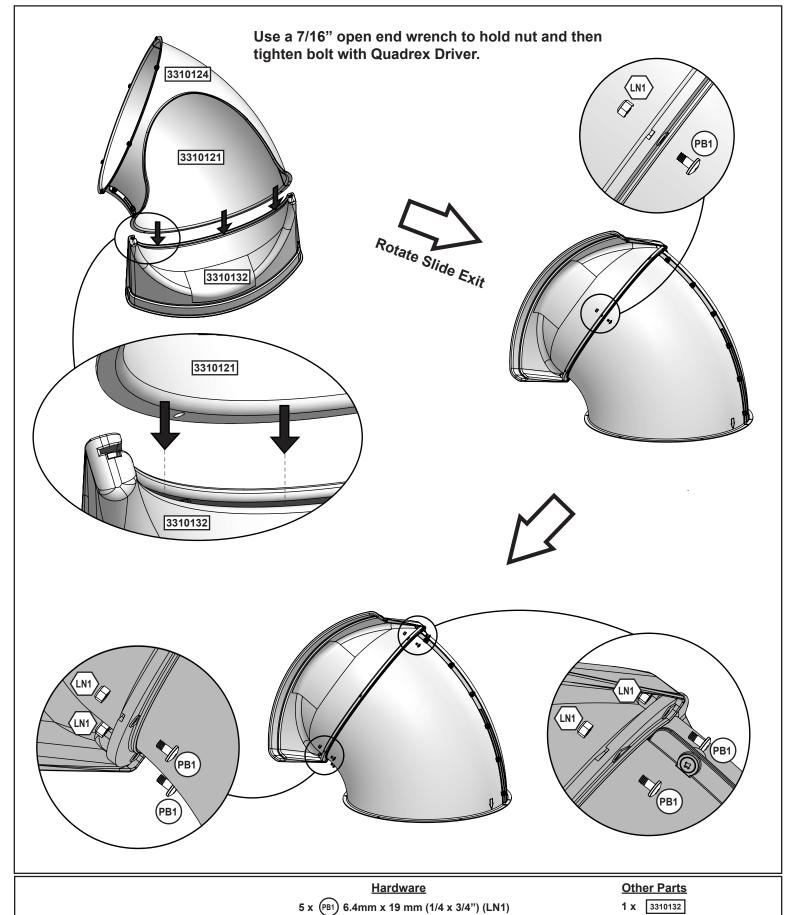



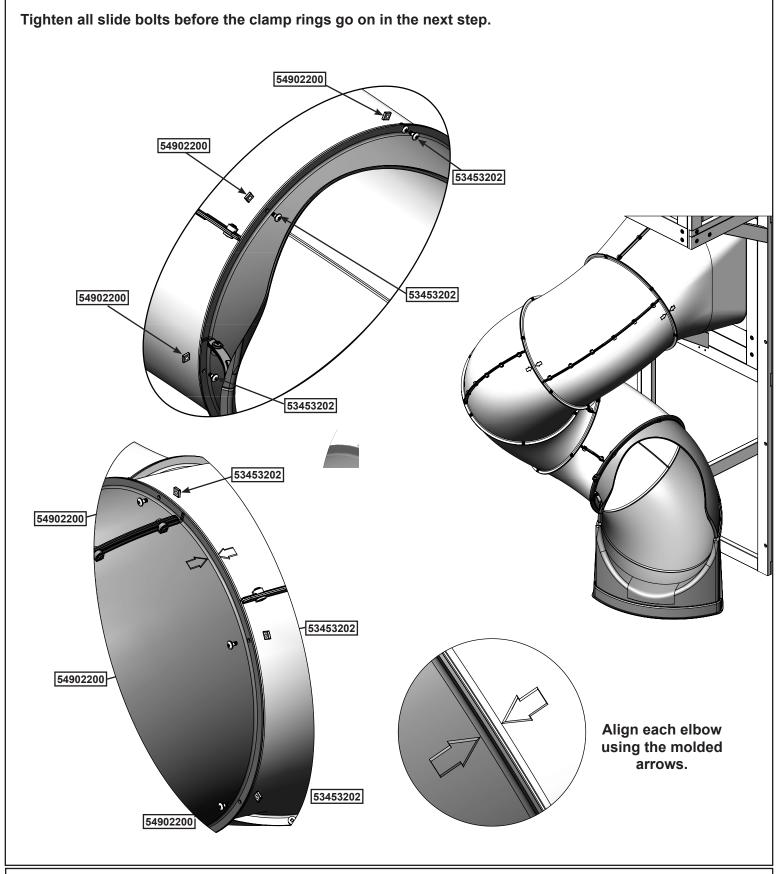


Other Parts

6 x 54902200

6 x 53453202 1/4" x 12.7mm




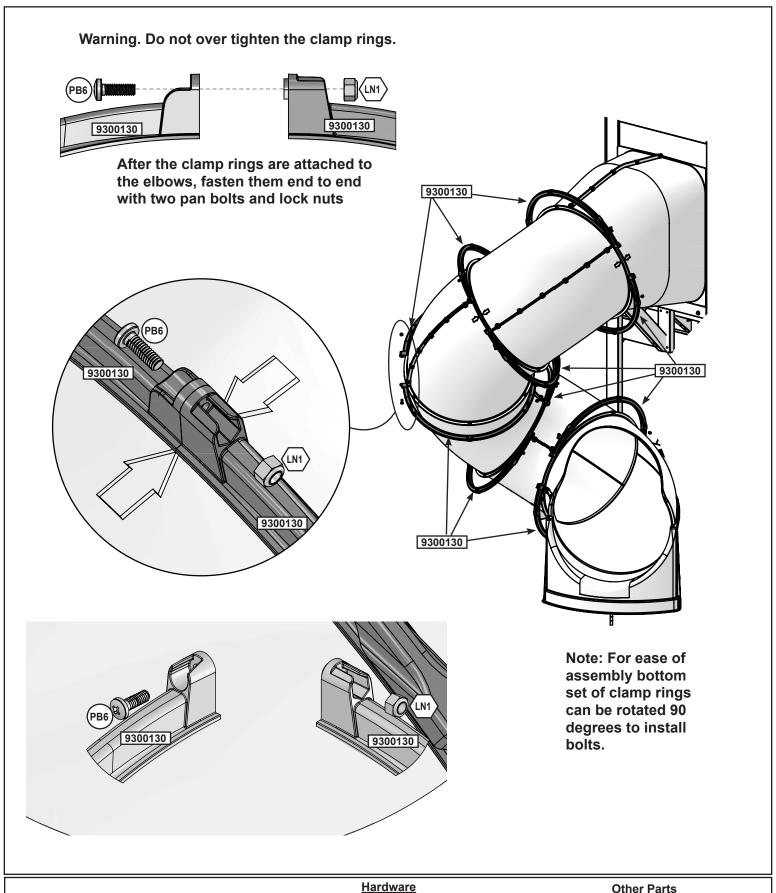



10 x (PB6) 6.4mm x 25.4 mm (1/4 x 1") (LN1)

 Other Parts
10 x 9300130



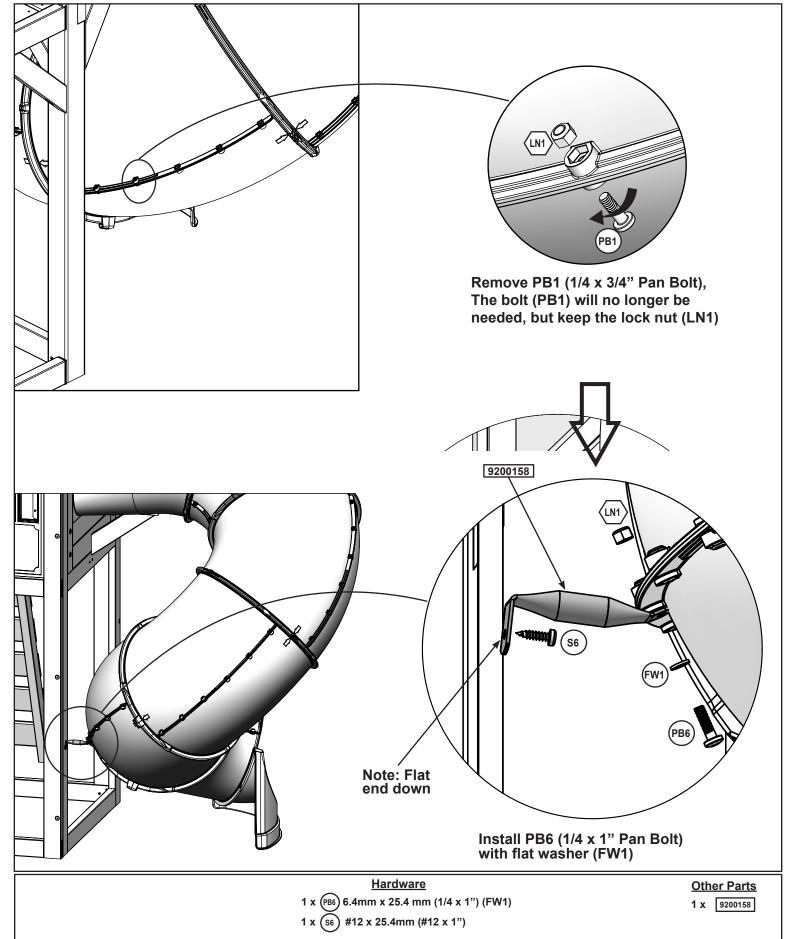




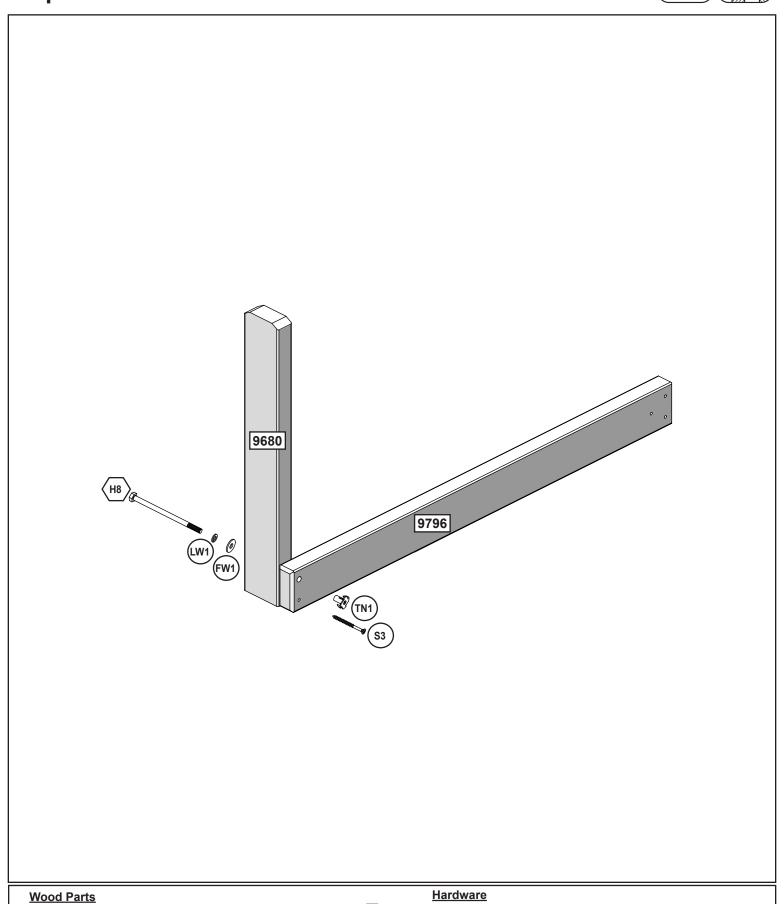


1 x 9680 31.8 x 76.2 x 489 mm (1-1/4" x 3" x 19-1/4") 1 x 9796 31.8 x 76.2 x 790 mm (1-1/4" x 3" x 31-1/8") 1 x (H8) 6.4mm x 108mm (1/4 x 4-1/4")(FW1, LW1, TN1)

1 x (s₃)#8 x 64mm (#8 x 2-1/2")

 73



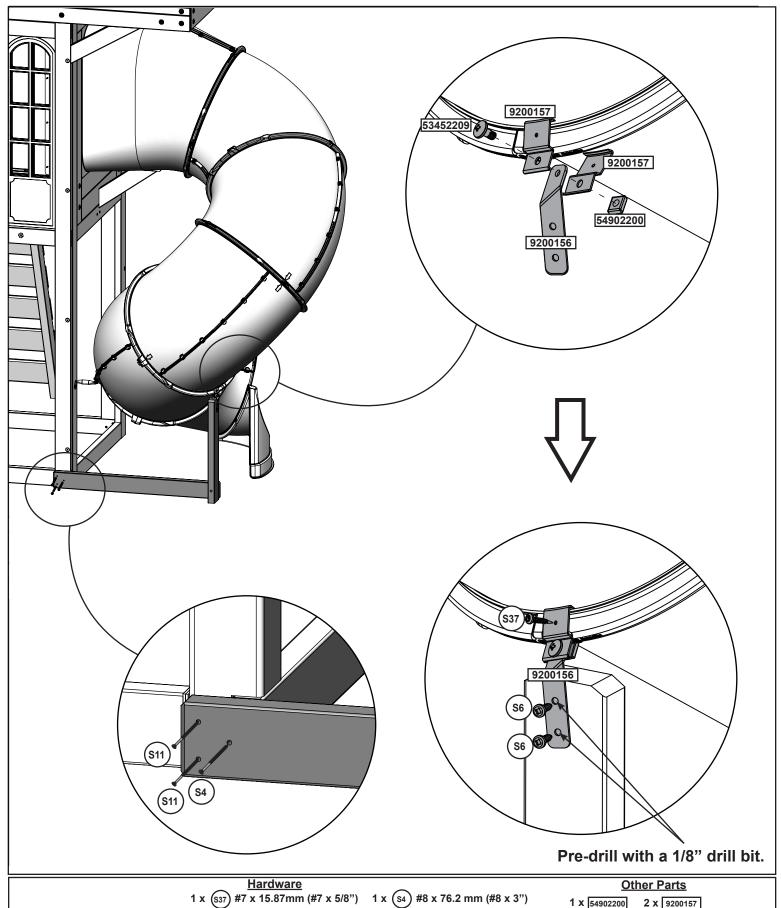

2 x (S6) #12 x 25.4mm (#12 x 1") 2 x (S₁₁) #8 x 50.8 mm (#8 x 2")

1 x 54902200 2 x 9200157

1 x 9200156







13" In Ground (330mm)

Warning! To prevent tipping and avoid potential injury, stakes must be driven 13"(330mm) into ground. Digging or driving stakes can be dangerous if you do not check first for underground wiring, cables or gas lines.


Hardware

1 x (S7) #12 x 50.8mm (#12 x 2")

Other Parts


1 x 9290318



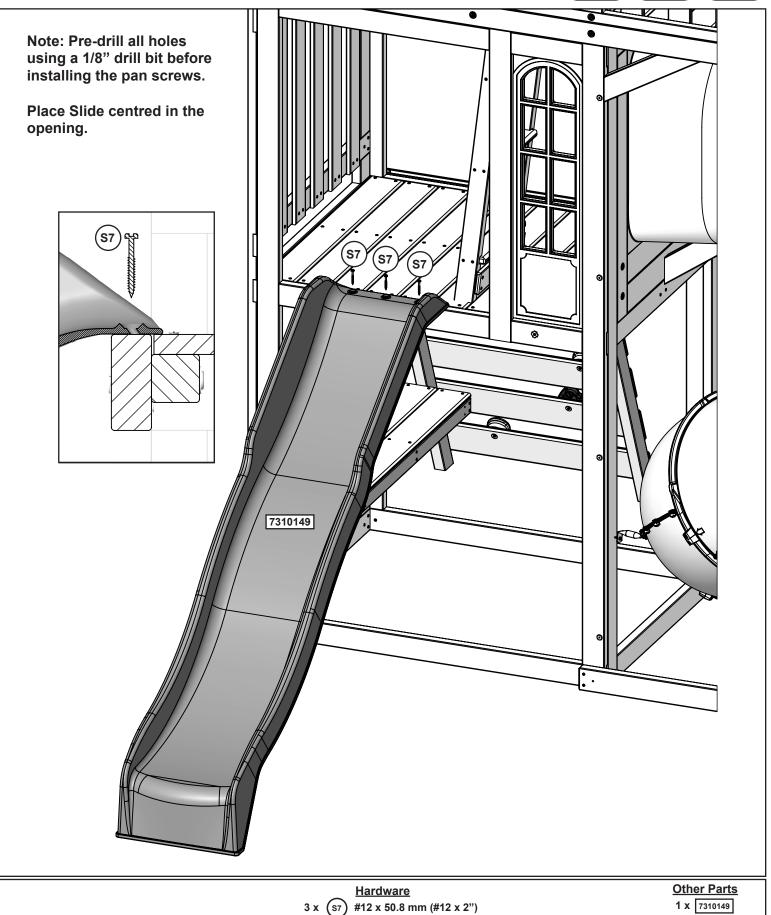


76

Hardware 3 x (s₇) #12 x 50.8 mm (#12 x 2")

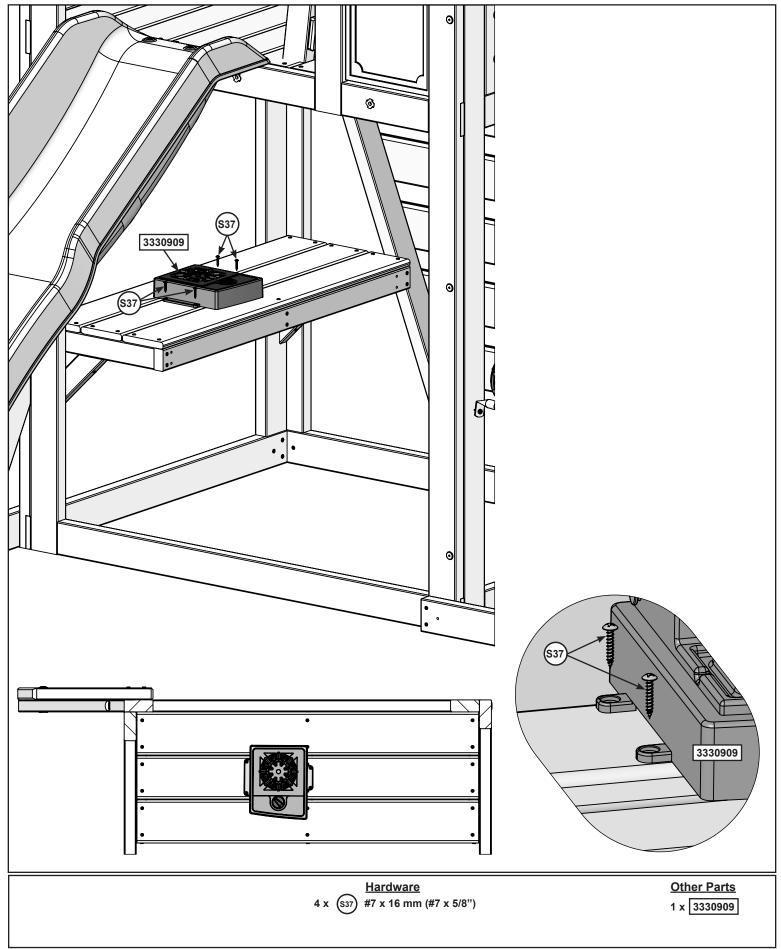




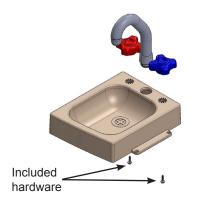

Important: Use a hand held screw driver and DO NOT over tighten.




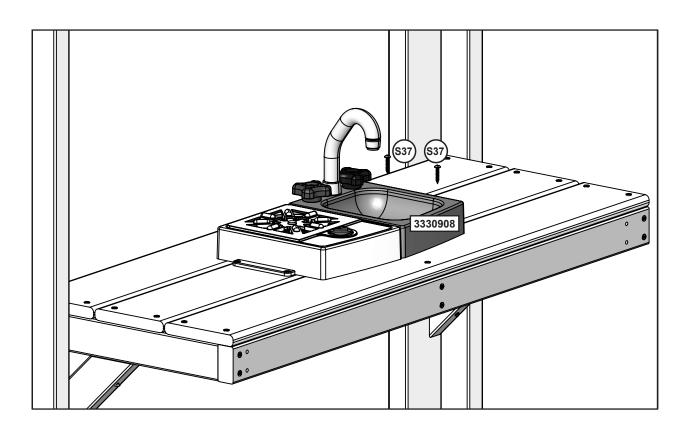


Hardware 2 x (S37) #7 x 16 mm (#7 x 5/8")

Other Parts
1 x 3330908

Step 63

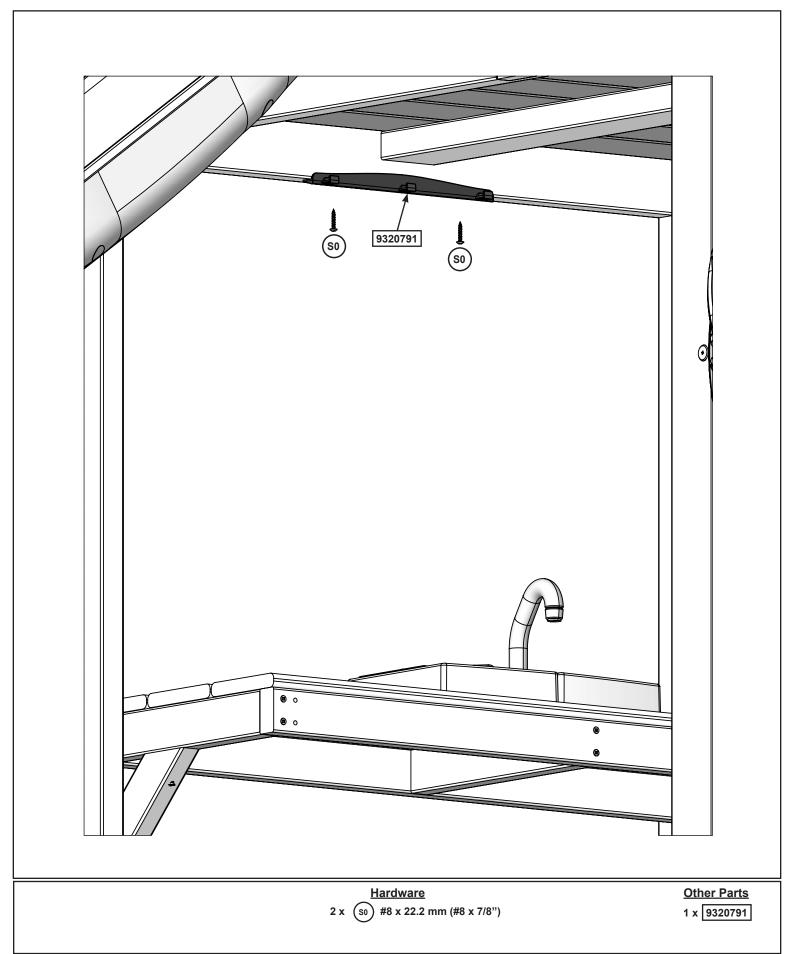

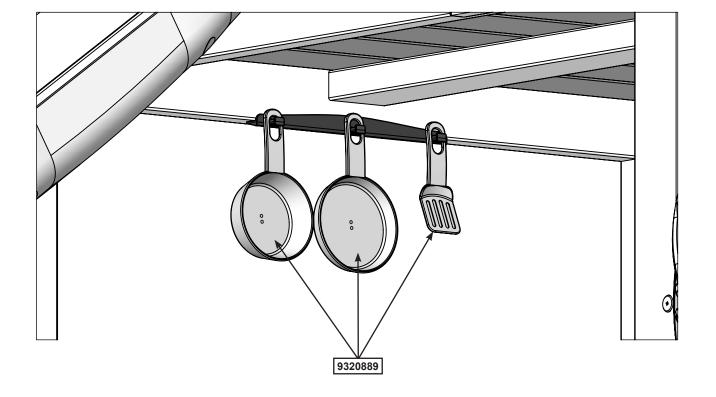


Other Parts

1 x 9320889






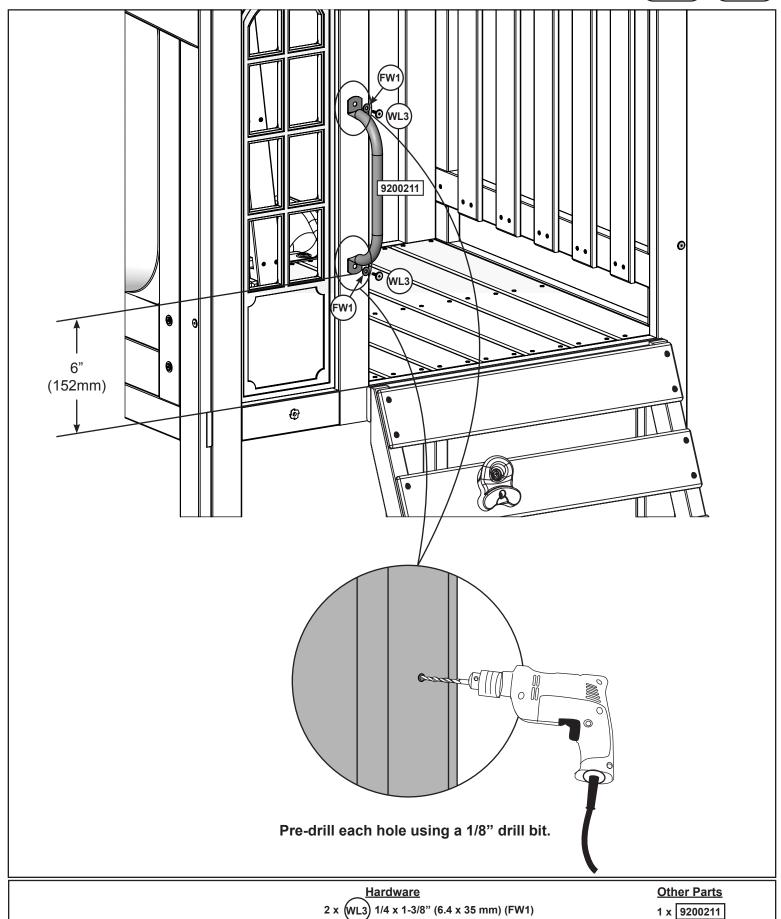





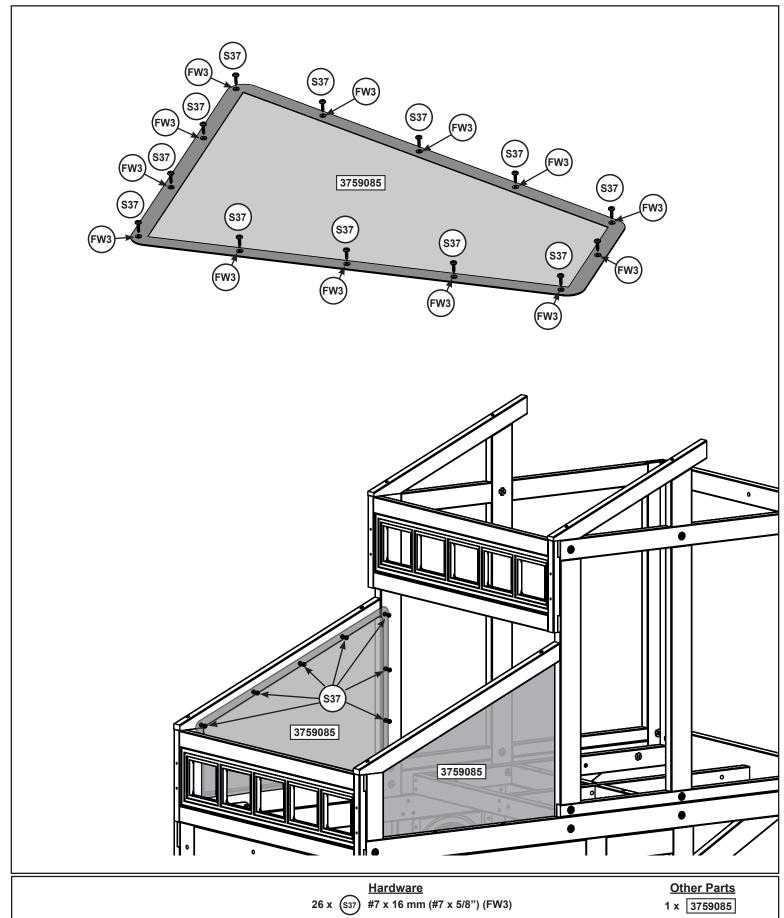



This provides warnings concerning safety and important contact information. A Tracking Number is provided to allow you to get critical information or order replacement parts for this specific model.



CONTINUOUS ADULT SUPERVISION REQUIRED!

STRANGULATION HAZARDS

Never allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this playset or to attach these items to play-set.

Never allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, or items with draw-strings, cords or ties when using this play-set.

Never allow children to wear bike or sport helmets when using

Never anow under it of wear line or sport remires when utilities play-set.

Failure to prohibit these items increases the risk of serious injury and death to children from entanglement and strangulation.

SERIOUS HEAD INJURY HAZARD

Maintain shock absorbing material under and around play-set as recommended in the Installation & Operating Instructions. Installation over concrete, aspinalt, dirt, grass, carpet and other hard surfaces creates a risk of serious injury or death from falls to the ground.

SURVEILLANCE CONSTANTE D'ADULTES EST REQUIS!

Risques D'étranglement

Ne iamais laisser les enfants jouer avec des cordes, cordes à linge, laisses pour animaux, des câbles,des chaînes ou ces type articles pendant de l'utilisation de cet portique de jeu ou à l'attaché de ces éléments à la portique de jeu.

Ne jamais laissez les enfants de porter des vêtements amples, des ponchos, des hottes, des foulards, capes, des colliers ou des articles avec cordes attirent ou les cordons pendant l'utilisation de cet portique de jeu.

Ne jamais laissez les enfants porter un casque de vélo oude sport quand ils utilisent ce portique de jue. Défaut d'interdire ces éléments augmente le risque de blessures graves et de décès des enfants de enchevêtrement et d'étranglement.

RISQUE DE BLESSURES GRAVES DU TÊTE

MISQUE DE BLESSURES GRAVES DU 1916 Maintenir le matériau absorbant les chocs sous et autour de la portique de jeu comme recommandé danslesInstructions D'installation.Installation sur béton, de l'asphalte, sol, de l'herbe, tapis et autres surfaces hdure crée un risque de blessure à la tête graves ou la mort causé par tomber à la sol.


THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 10; weight limit of 110 lbs. per child. Maximum number of users, Installation & Operating Instructions; other information is available at:

POUR LES ENFANTS DE 3 À 10 ANS D'ÂGE; limite de 110 Livres par enfant. Nombre maximum d' utilisateurs, installation et d'utilisation; d'autres informations sont disponibles sur:



www.KidKraft.com Contact us at: KidKraft Dallas, TX 75244 USA 1-800-933-0771

Tracking Number: Numèro de Suivi:

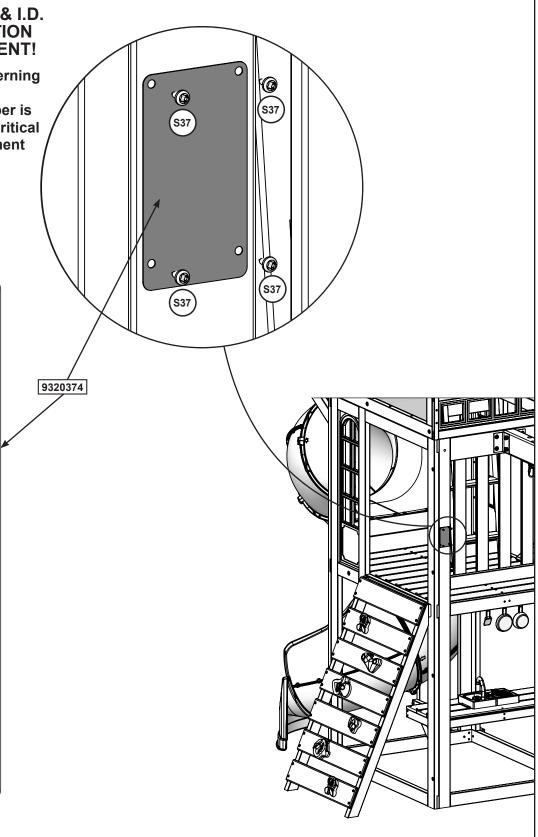


Hardware 4 x (s₃₇) #7 x 16 mm (#7 x 5/8") **Other Parts**

1 x 9320374



Other Parts


6 x 9290318

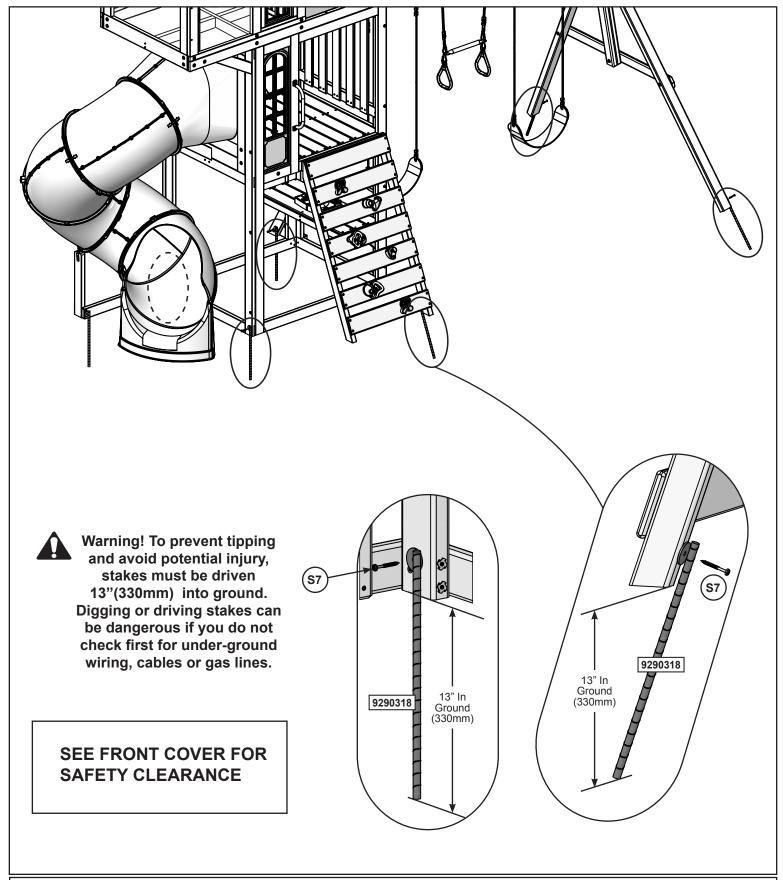

84


Hardware

6 x (s₇) #12 x 50.8 mm (#12 x 2")

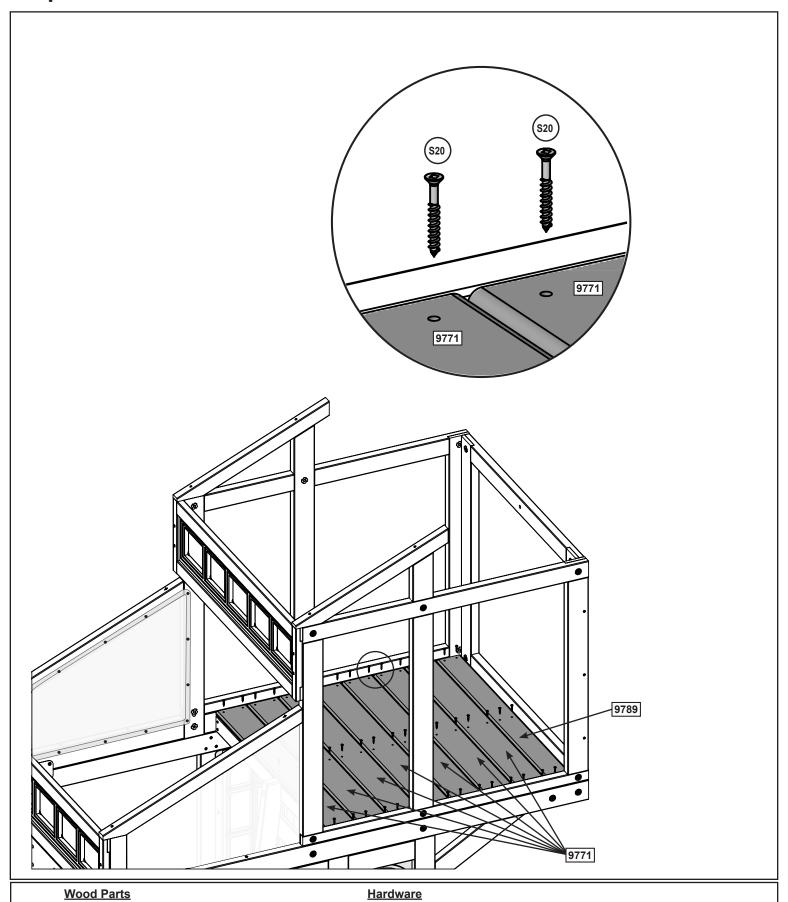

7 x 9771 15.9 x 114.3 x 906 mm (5/8 x 4-1/2 x 35-43/64") 1 x 9789 15.9 x 88.9 x 906 mm (5/8 x 3-1/2 x 35-43/64") 48 x (\$20) #8 x 34.9 mm (#8 x 1-3/8")



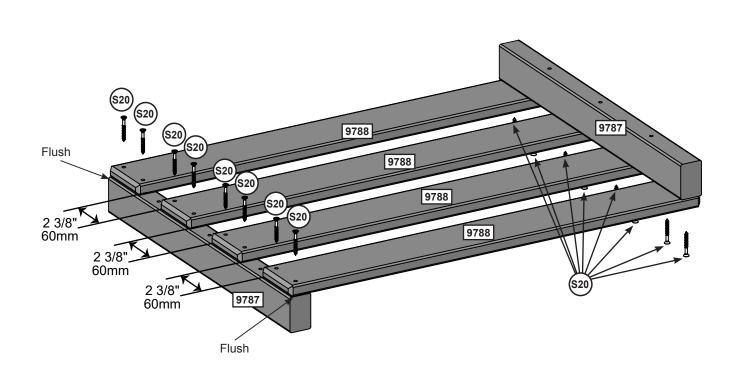


Wood Parts

2 x 9787 31.8 x 50.8 x 480 mm (1-1/4 x 2 x 18-7/8")

4 x 9788 15.9 x 76.2 x 644.6 mm (5/8 x 3 x 25-3/8")

<u>Hardware</u>

16 x (\$20) #8 x 34.9 mm (#8 x 1-3/8")

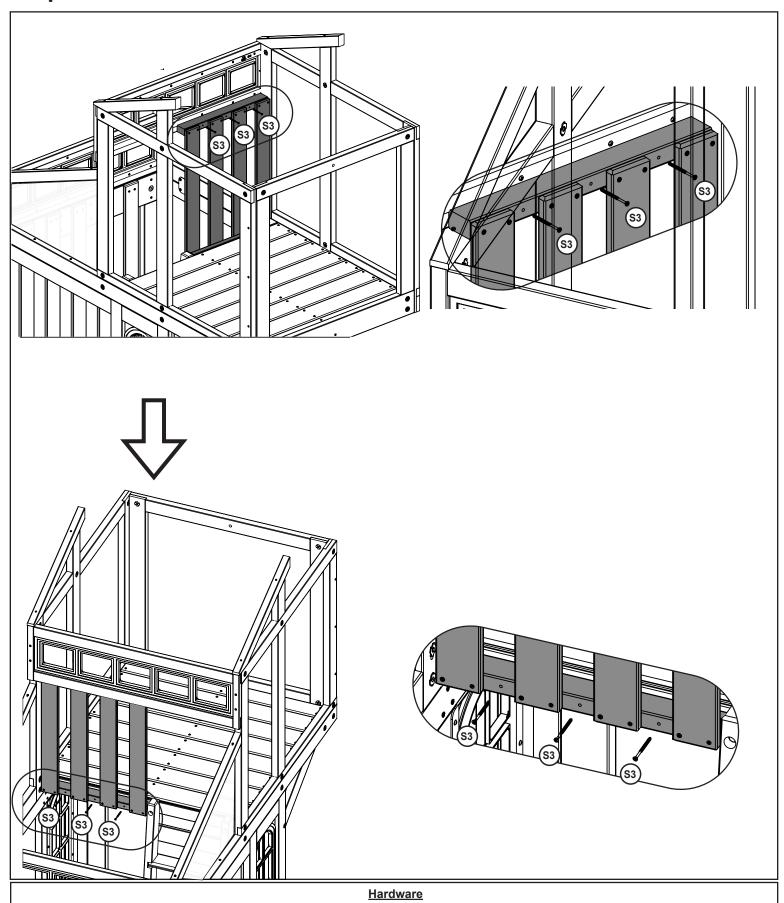


87

6 x (S3) #8 x 63.5 (#8 x 2-1/2")






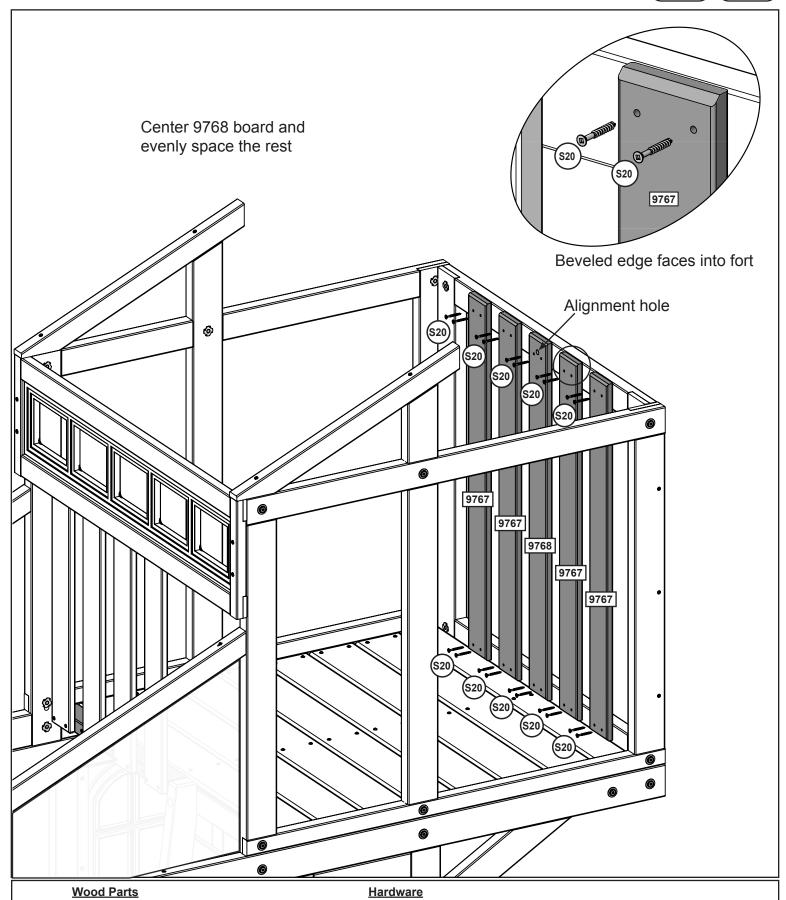



4 x 9767 15.9 x 76.2 x 842.5 mm (5/8 x 3 x 33-3/16") 1 x 9768 15.9 x 76.2 x 842.5 mm (5/8 x 3 x 33-3/16") 20 x (S20) #8 x 34.9 mm (#8 x 1-3/8")





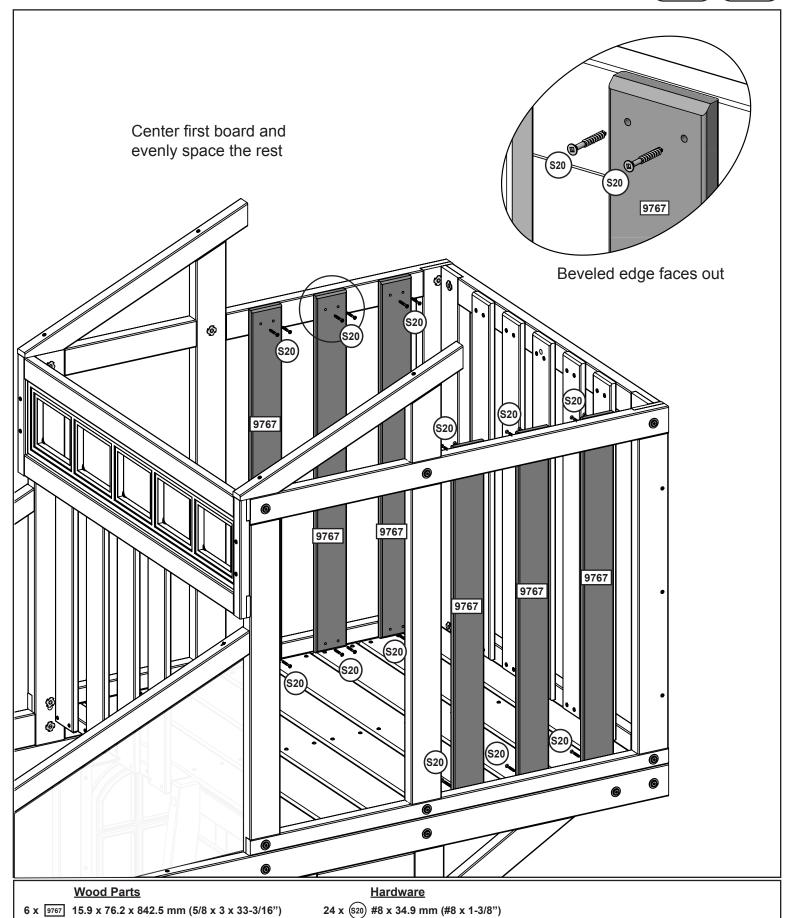


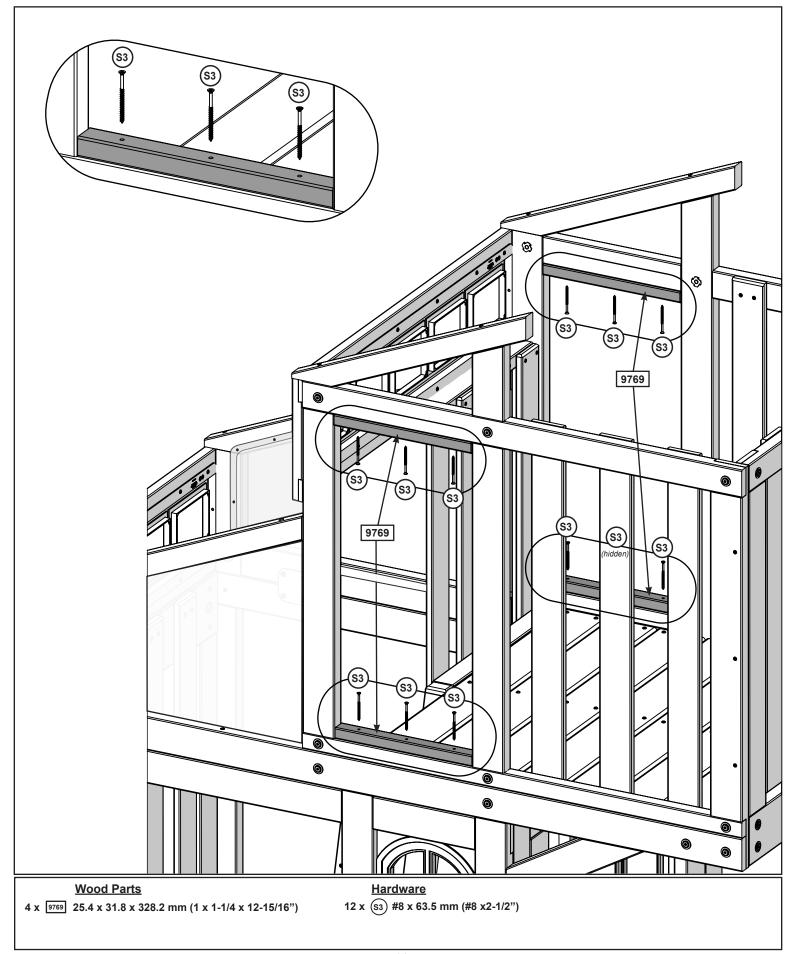

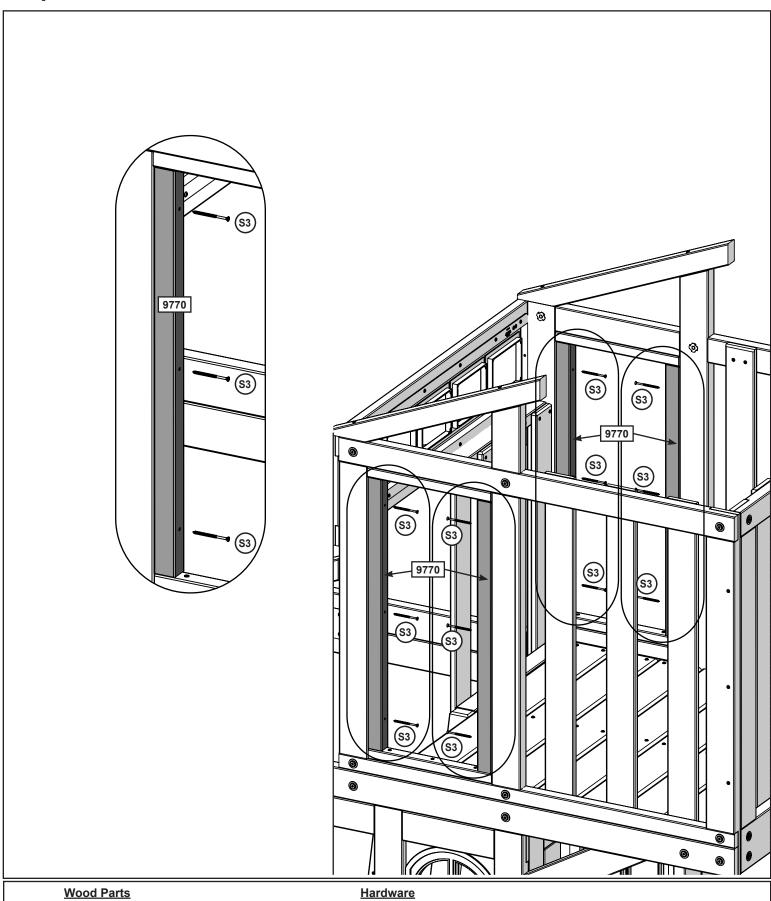


4 x 9770 31.8 x 38.1 x 690.2 mm (1-1/4 x 1-1/2 x 27-3/16")

12 x (S3) #8 x 63.5 mm (#8 x 2-1/2")

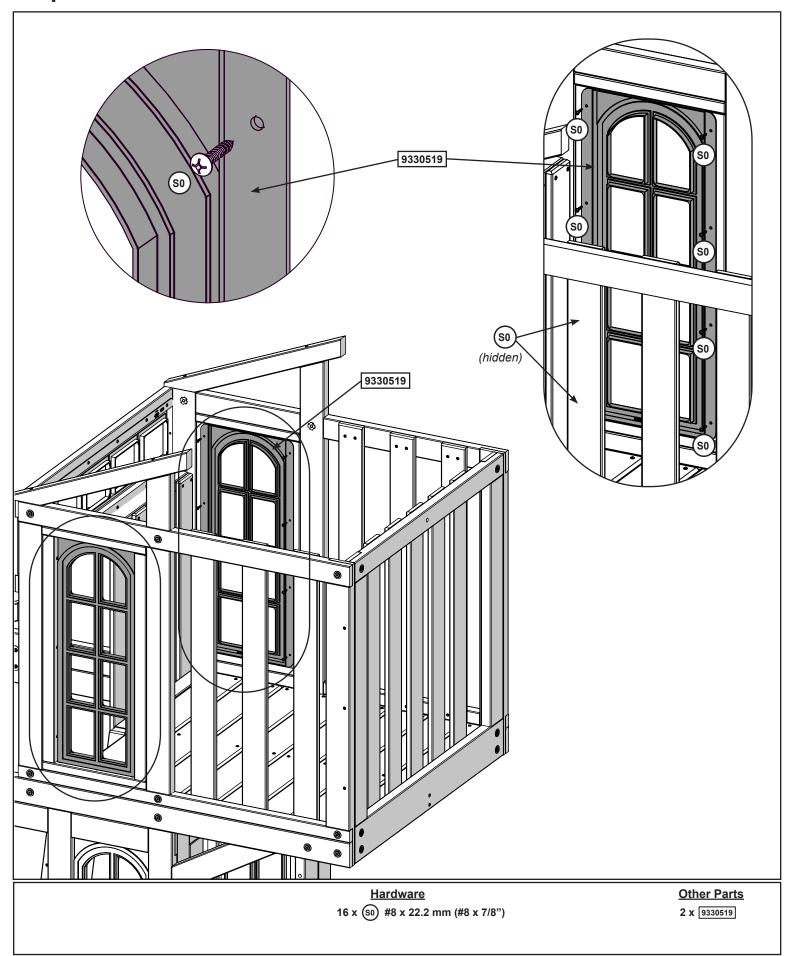




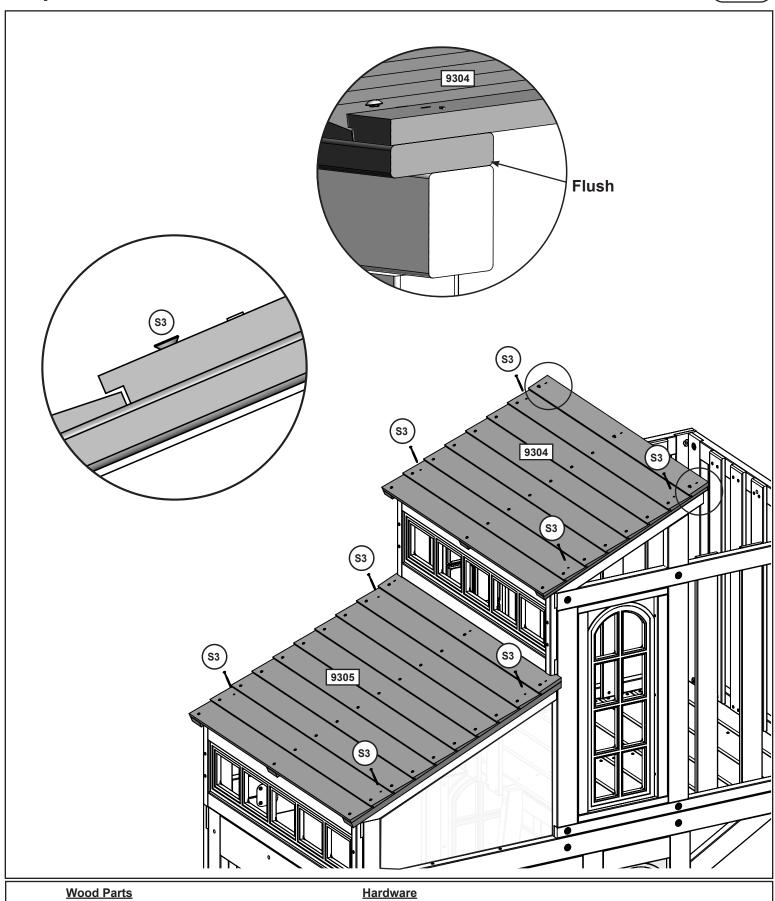

1 x 9304 31.8 x 660.4 x 1016 mm (1-1/4 x 26 x 40") 1 x 9305 25.4 x 841.4 x 1016 mm (1-1/4 x 33-1/8 x 40") Hardware 8 x (s3) #8 x 63.5 mm (#8 x 2-1/2")



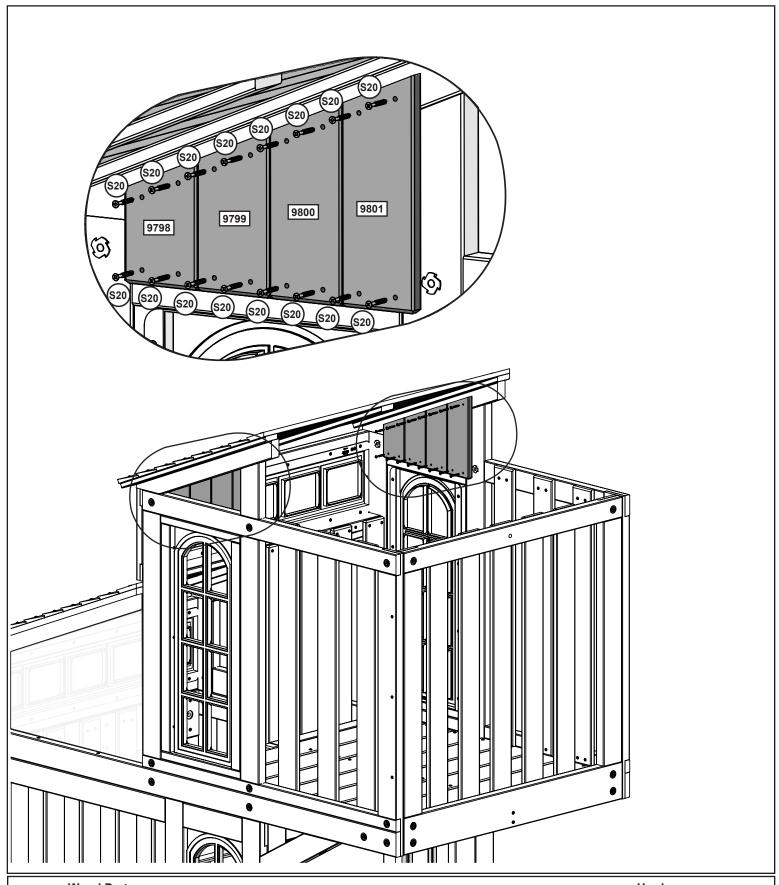


Wood Parts Hardware


2 x 9798 15.9 x 88.9 x 138.1 mm (5/8 x 3-1/2 x 5-7/16") 2 x 9801 15.9 x 88.9 x 251.3 mm (5/8 x 3-1/2 x 9-7/8") 32 x (\$20) #8 x 34.9 mm (#8 x 1-3/8")

2 x 9799 15.9 x 88.9 x 175.8 mm (5/8 x 3-1/2 x 6-15/16")

2 x 9800 15.9 x 88.9 x 213.6 mm (5/8 x 3-1/2 x 8-7/16")

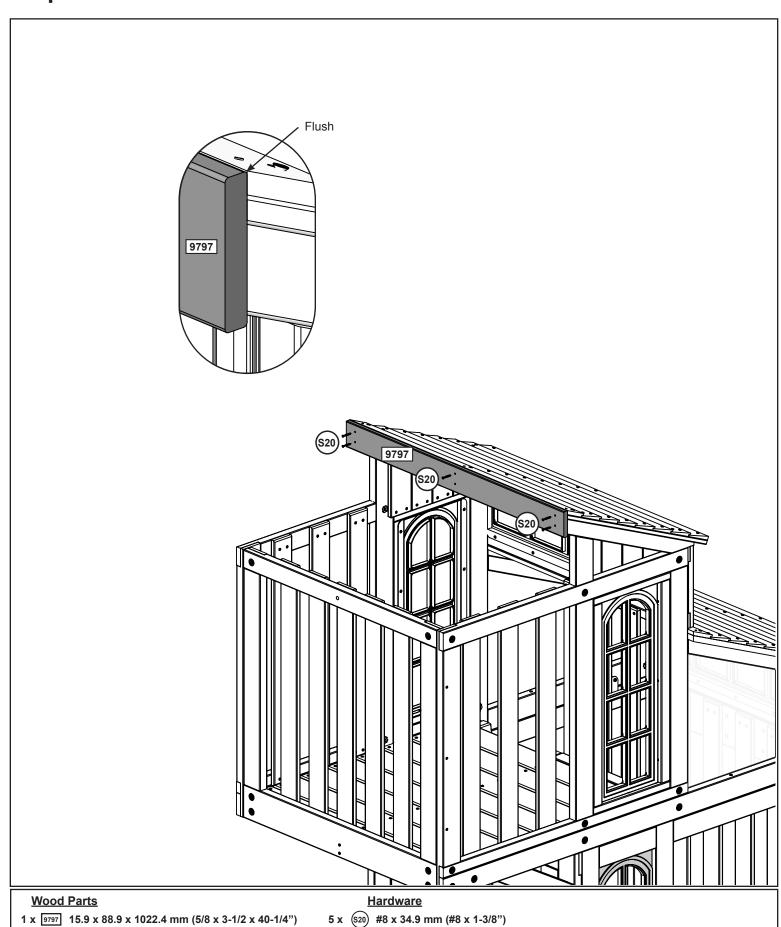

95

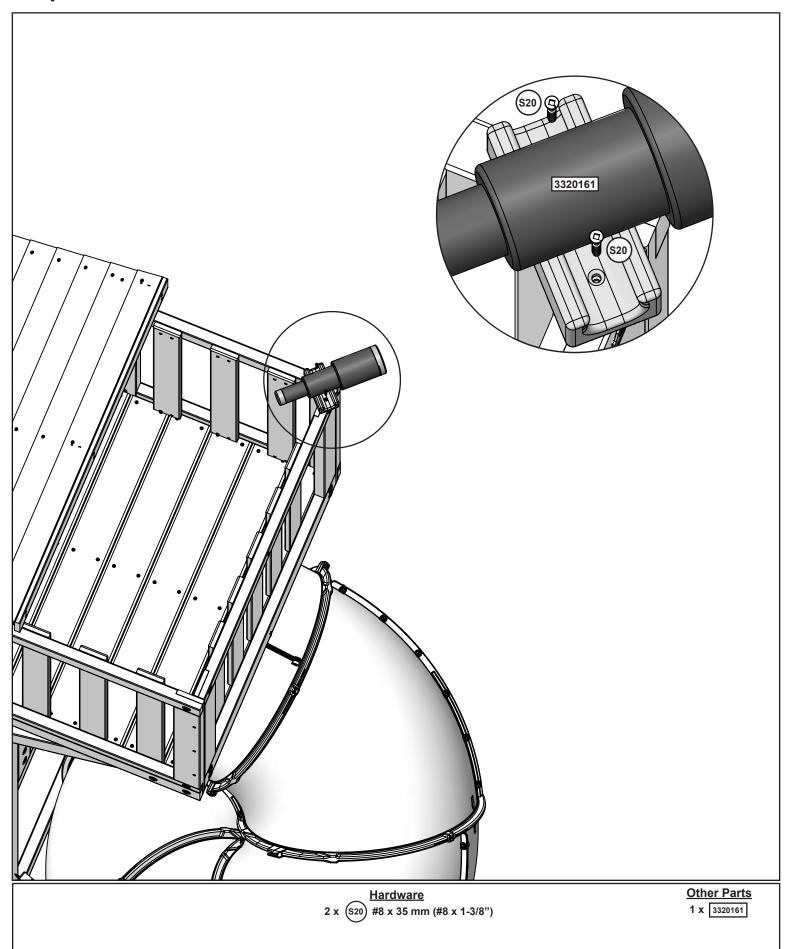

Step 81



NOTES

NOTES

_
_
_
_
_
_
_
_
_
_
_
_
_
_
_

NOTES

_
_
_
_
_
_
_
_
_
_
_
_
_
_
_

CEDAR SUMMIT Consumer Registration Card

First Name	Initial Last Name						
Street		Apt. N	lo.				
City		State/Province	ZIP/Postal Code				
Country	try Telephone Number						
E-Mail Address							
Model Name		Model Number	(Box Labels)				
Serial Number (on ID Plaque)							
Date Purchase Purchased From							
How would you rate this product for quality?							
☐ Excellent ☐ Very Good	□ Average	☐ Below Average	☐ Poor				
How would you rate this product for ease of assembly?							
☐ Excellent ☐ Very Good	☐ Excellent ☐ Very Good ☐ Average ☐ Below Average ☐ Poor						
How would you rate our instructions?							
☐ Excellent ☐ Very Good	☐ Average	☐ Below Average	☐ Poor				
How would you rate the quality of packaging? □ Excellent □ Very Good	□ Δverage	□ Relow Average	☐ Poor				
Would you recommend the purchase of our prod ☐ Yes ☐ No	ucts to mends and family	y ?					
Comments:							

MAIL TO:

KidKraft 4630 Olin Road Dallas, TX 75244 United States Attention: Customer Service



Fill out your registration card online at www.cedarsummitplay.com/
registration

Cedar Summit by KidKraft would like to say Thank You for your time and feedback.

