 


# Hutch

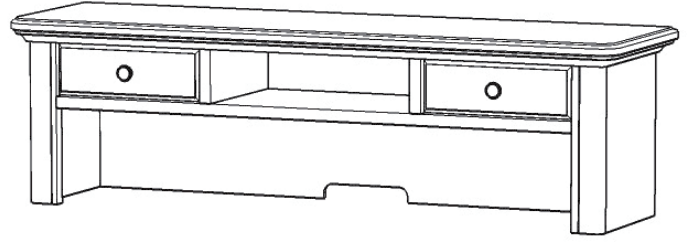

 
## IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


## Part List



 A.  
Top  
1 pc.



 
C.  
Side Panel  
1 pc.




D.  
Side Panel  
1 pc.



 
E.  
Divider  
1 pc.



 
F.  
Divider  
1 pc.



 B.  
Shelf  
1 pc.

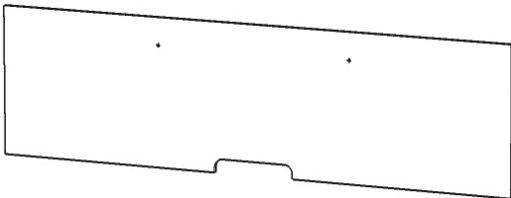

 G.  
Back Panel  
1 pc.

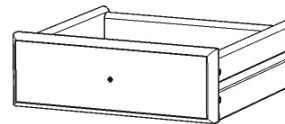


H.  
Drawer  
2 pcs.

Refer to later page(s) of these instructions for drawer assembly.

## Hardware List



 Cam Lock Screw  
16 pcs. (+1 extra)



Cam Lock  
16 pcs. (+2 extra)



M3x16  
Wood Screw  
2 pcs. (+1 extra)



M3.5x25  
Wood Screw (long)  
16 pcs. (+1 extra)



M4x25  
Machine Screw  
2 pcs.



Knob  
2 pcs.

Tool(s) required for assembly: Phillips screwdriver

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

## Assembly Instructions 2/5

### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.

### STEP 1

Place Top (A), Shelf (B) and Side Panels (C), (D) on a soft cloth.

Insert Cam Lock Screws into pre-drilled holes in Top (A), Shelf (B) and Side Panels (C), (D), then tighten. (See Figure 1)

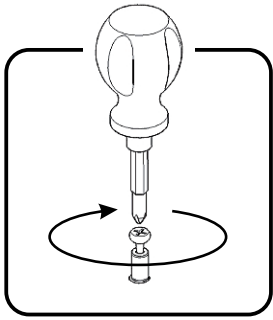 
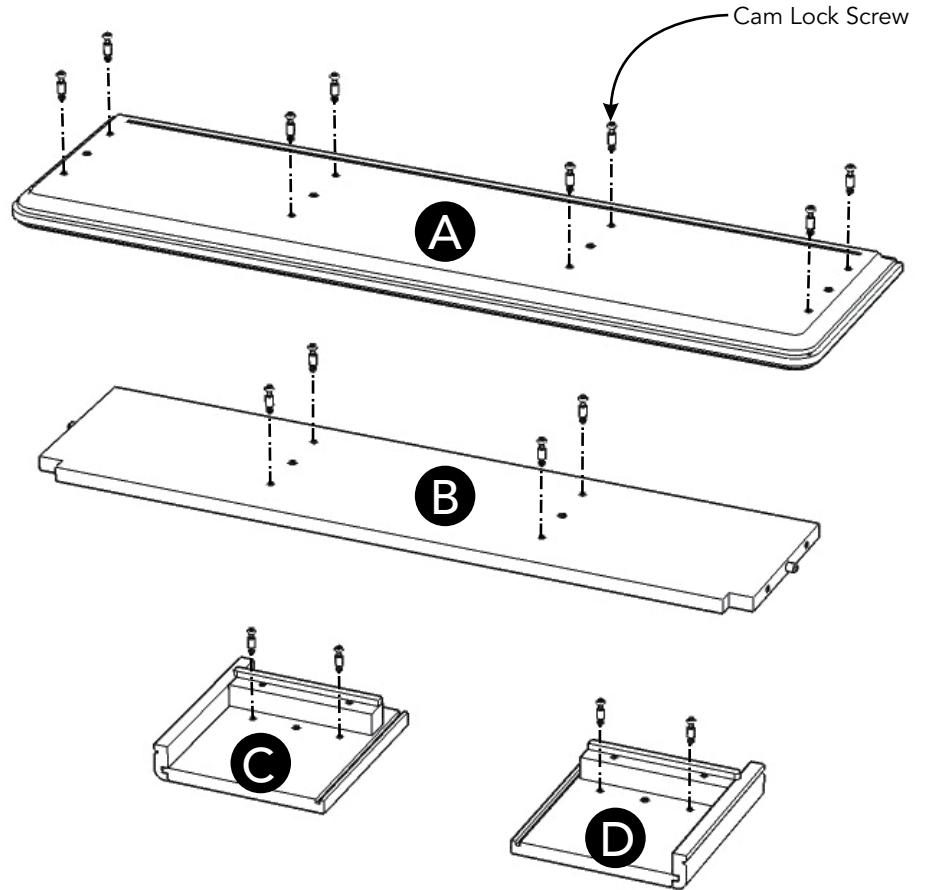 


Figure 1

### STEP 2

Attach Dividers (E) and (F) to Shelf (B) with Cam Locks. (See Figure 2)


 
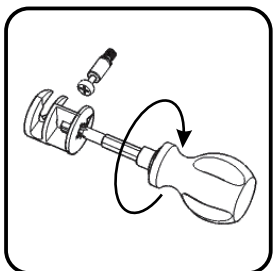 


Figure 2

## Assembly Instructions 3/5
 
### STEP 3


Attach Side Panels (C) and (D) to unit with Cam Locks.

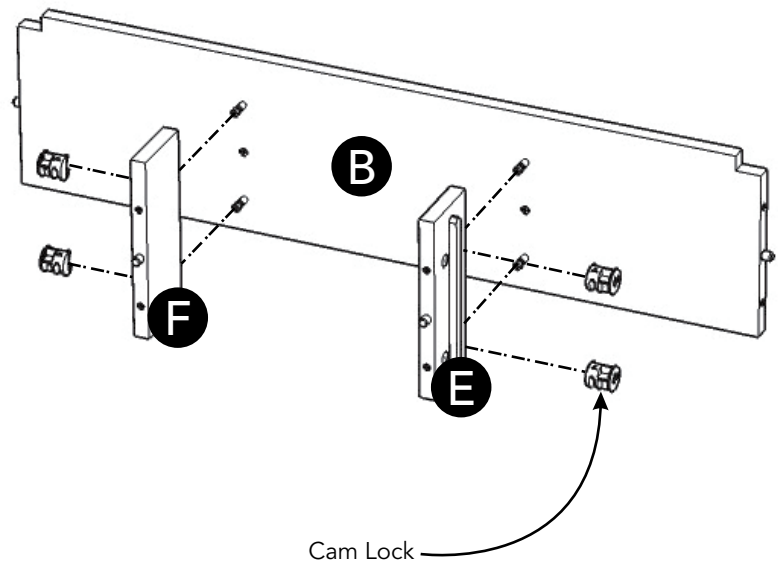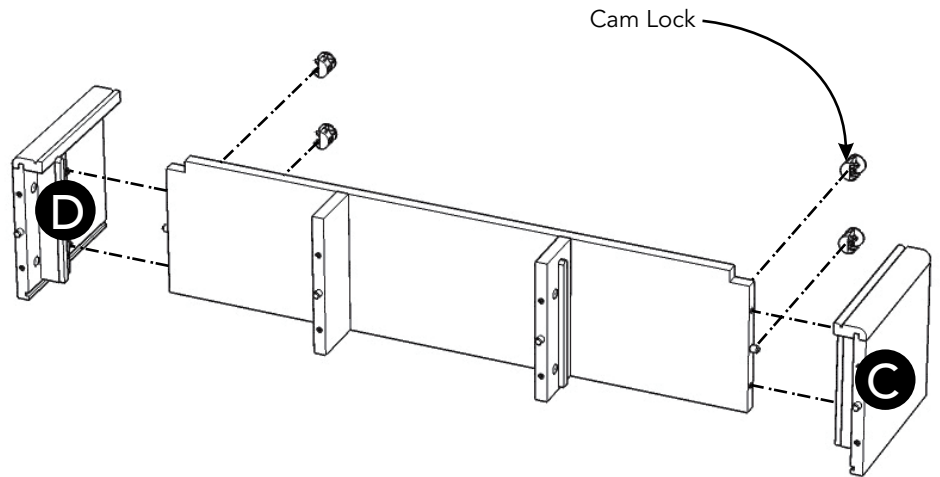

### STEP 4

Place Top (A) upside down on a soft cloth.

 
Attach unit to Top (A) with Cam Locks.

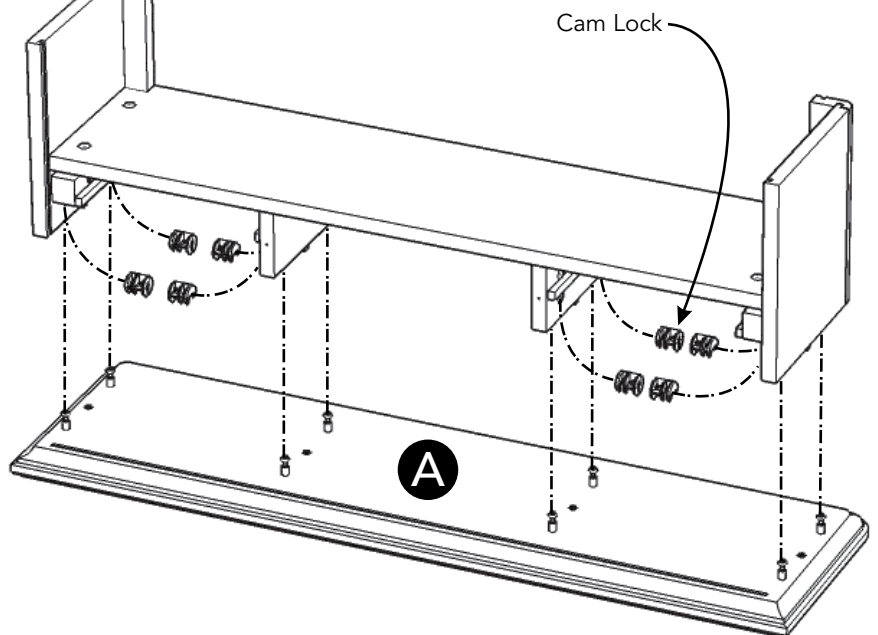

### STEP 5


Slide Back Panel (G) into position.

 Insert Wood Screws into pre-drilled in unit, then tighten.

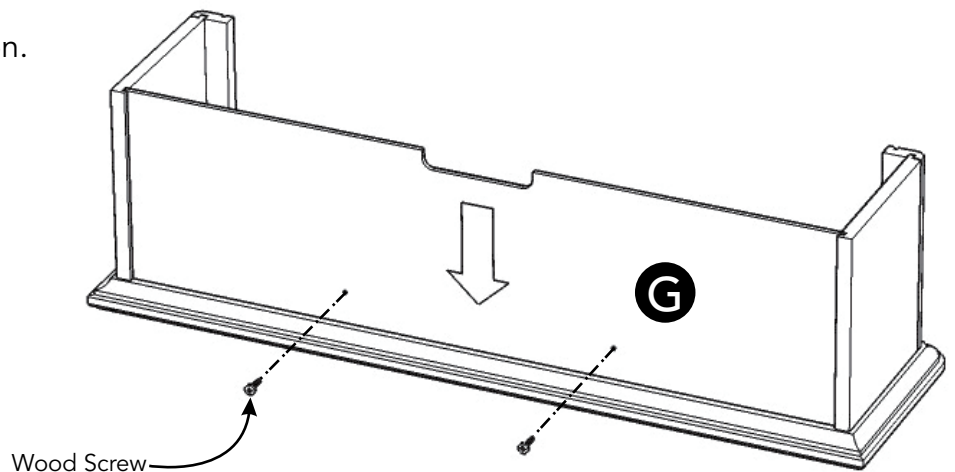


# Assembly Instructions 4/5
 
## Drawer (H)

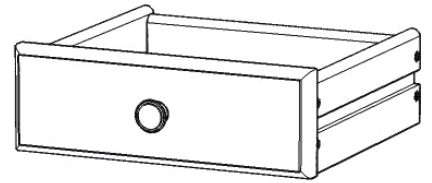

### STEP 6

 
Attach Drawer Sides (H3) and (H4) to Drawer Front (H1) with Wood Screws (long).

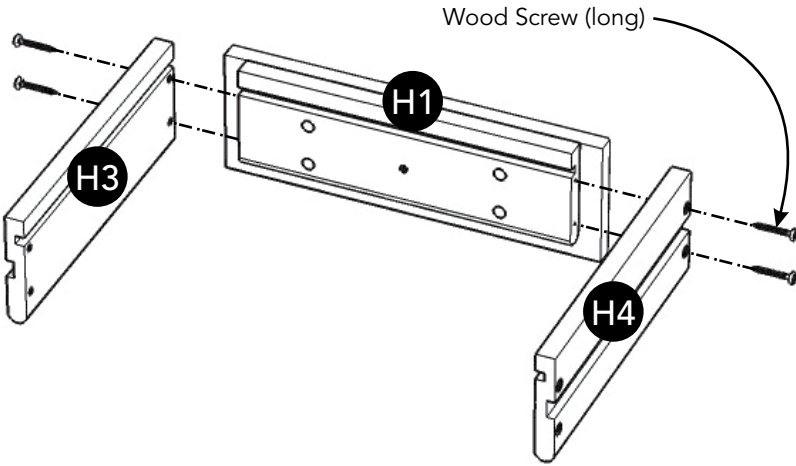

### STEP 7


Slide Drawer Bottom (H5) into groove.

 Attach Drawer Back (H2) to unit with Wood Screws (long).

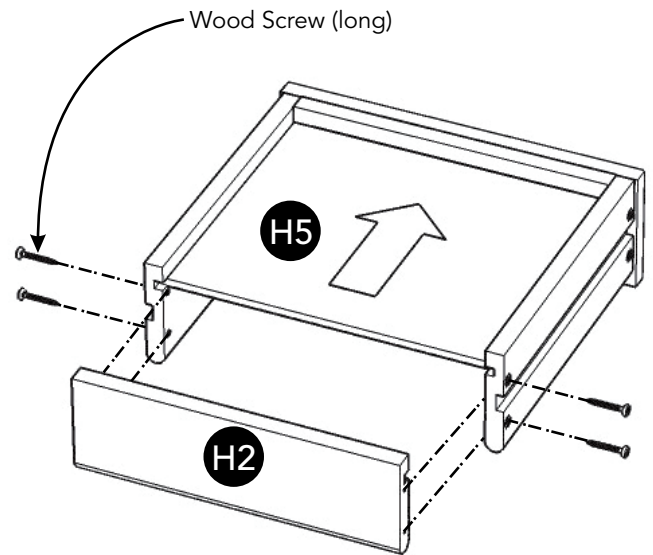


### STEP 8

 Attach Knob with Machine Screw.

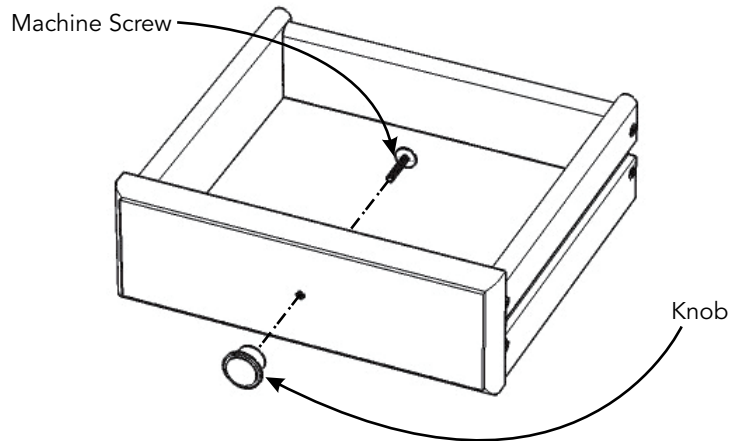


## Part List

 


H1.  
Drawer Front  
2 pcs.



 H2.  
Drawer Back  
2 pcs.



H3.  
Drawer Side  
2 pcs.

 

H4.  
Drawer Side  
2 pcs.




H5.  
Drawer Bottom  
2 pcs.

## Assembly Instructions 5/5
 
### STEP 9

Turn unit from Step 5 over to its' upright position.

Slide Drawers (H) into position.

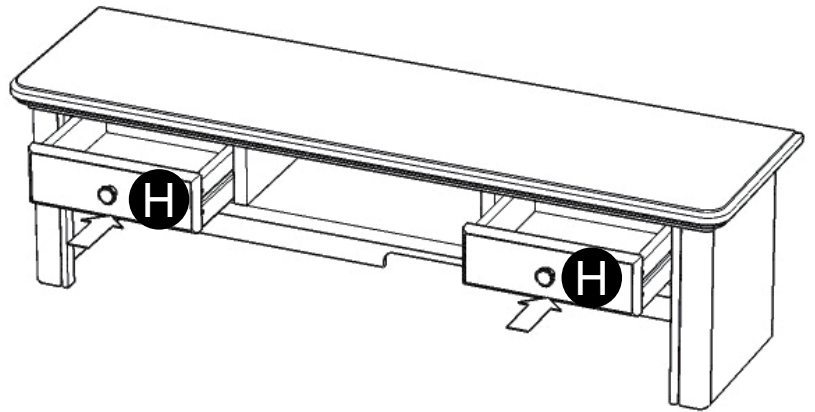

### STEP 10

Place Hutch onto Student Desk.



# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.  
**PREVENT  
CRACKING**



 
Do not place  
in direct sunlight.  
**PREVENT  
FADING**



Do not write  
directly on surface.  
**PREVENT  
MARKING**



Do not place hot  
objects on surface.  
**PREVENT  
FINISH DAMAGE**

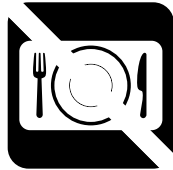

Do not use rubber  
based placemats.  
**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.  
**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer-service/replacement-parts](http://www.homestyles-furniture.com/customer-service/replacement-parts)

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319