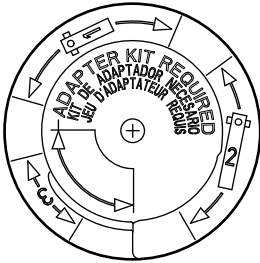
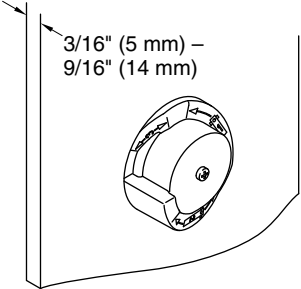
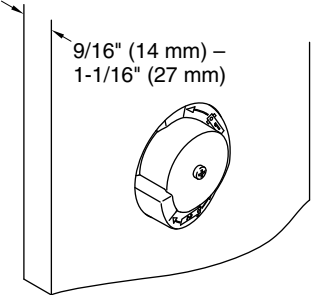
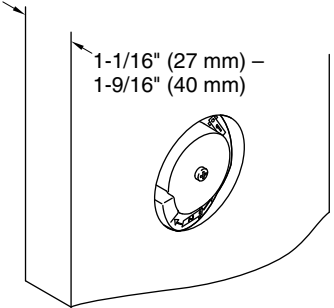
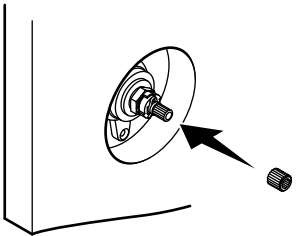
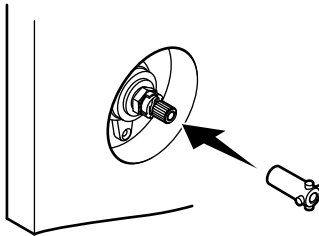
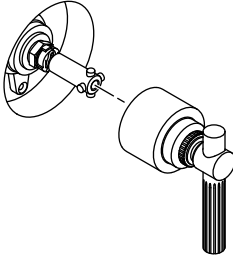
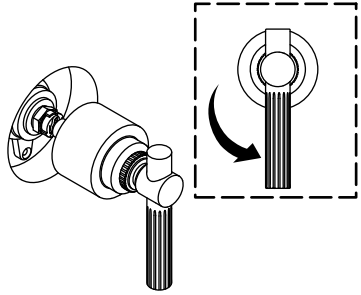
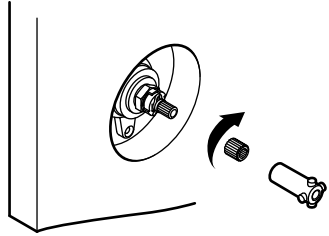
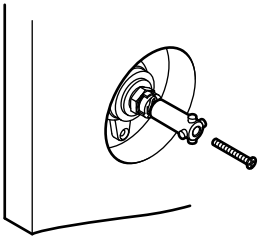
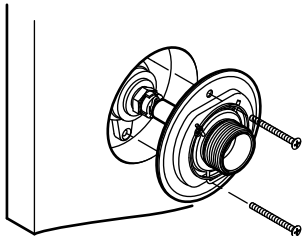
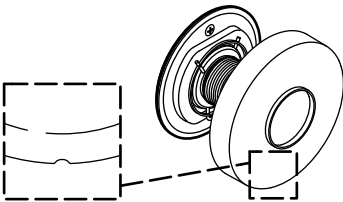


<p>Record your model number.</p>	<p>Important Information Follow all local plumbing and building codes.</p>	<p>1 Determine the valve stem adapter length. Refer to the plaster guard.</p> 	<p>Thin Wall: Use the #3 adapter and the 3/8" (19 mm) screw.</p> 	<p>Standard Wall: Use the #1 adapter and the 1-3/8" (35 mm) screw.</p> 
<p>Thick Wall: Use the #2 adapter and the 1-3/4" (44 mm) screw.</p> 	<p>2 Remove the plaster guard. Place the spline adapter on the valve stem.</p> 	<p>3 Temporarily fit the valve stem adapter on the spline adapter.</p> 	<p>4 Position the handle on the valve stem adapter.</p> 	<p>5 Turn the handle counterclockwise. It should stop at the 6 o'clock position.</p> 
<p>6 To adjust position, remove the handle and valve stem adapter. Turn the spline adapter.</p> 	<p>7 Secure the valve stem adapter with the proper length screw.</p> 	<p>8 Secure the plate assembly to the valve with proper length screws. Do not overtighten.</p> 	<p>9 Fit the faceplate over the plate assembly with the notch down.</p> 	<p>10 Point the handle down. Thread the bonnet onto the hub.</p> 