


Purchase Date:	/ /	Order/Customer Reference Number

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at https://tiny.cc/SunnydazeContact

ENTRYWAY TABLE WITH DRAWERS DTA-287

Carefully review assembly and care instructions before using this product. Save this document for future reference. **Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**

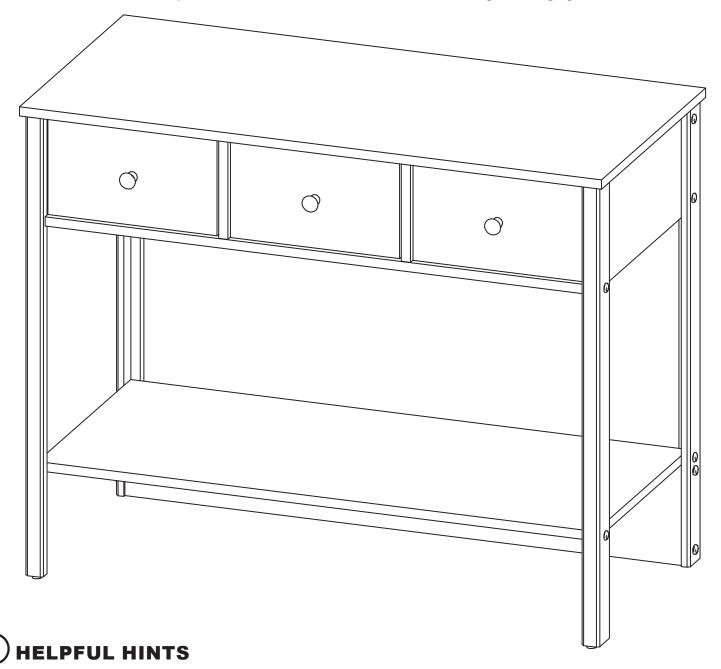

Sunnydaze Decor advises reviewing this manual fully, and assembling the unit soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

INTRODUCTION

Read the manual carefully to ensure you fully understand all use, care, assembly, and safety information.



Read this manual carefully and follow the assembly instructions in the order listed. Pay close attention to assembly drawings.



Regularly clean with a clean microfiber cloth to prevent dust accumulation.



Assemble on a soft, flat, clean, and drv surface.

Use a soft, protective barrier when assembling the furniture.

TIP: Use the box carton as a protective layer to separate and protect the parts from scratches and other damage during assembly.



Do not paint the unit.

Do not use abrasive materials or cleaners to clean the furniture: only use a slightly moistened cloth.



Indoor use only.

Do not expose the furniture to



Do not push or drag furniture as doing so may damage the unit.

Only move furniture when it is empty.



heat or humidity.



Always ask for help when moving furniture.



When cleaning nearby furniture, do not allow contact with water or cleaners as it may deteriorate the furniture.



Do not allow metal components to come in contact with water or cleaners as it may cause rust and staining.



Avoid Accidents - Do not climb, sit or stand on the furniture.

Do not allow children to play on or inside the furniture.



Keep sharp objects away as they may scratch or damage the unit.


Do not use the furniture as a writing surface without a padded barrier.

IMPORTANT: Take care not to over-tighten screws as doing so may crack the wood or strip the screw hole, causing a weak connection and reduced stability.

NOTICE:


Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

COMPONENTS

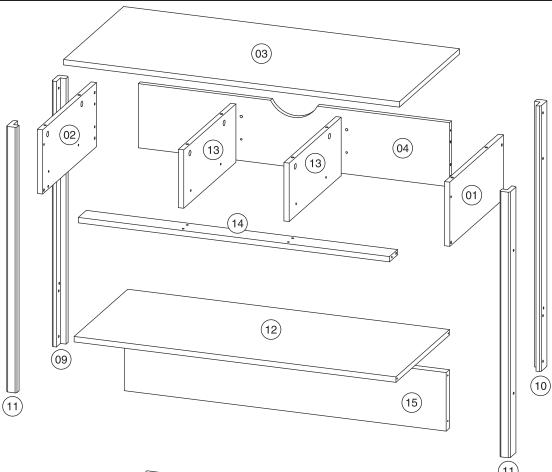

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

No.	PART NAME	QTY.
1	Right Side Panel	1
2	Left Side Panel	1
3	Tabletop	1
4	Top Back Panel	1
5	Drawer Front	3
6	Drawer Side Panel (L/R)	6
7	Drawer Back	3
8	Drawer Bottom	3
9	Left Back Leg	1
10	Right Back Leg	1
11	Front Leg	2
12	Shelf	1
13	Divider	2
14	Traverse	1
15	Bottom Back Panel	1

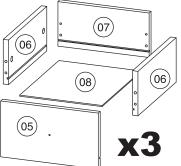

TOOLS REQUIRED (not included)				
Phillips Screwdriver	Rubber Mallet	Power Drill with 6mm Bit		

🛕 WARNING 🛕


CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

No.	H	ARDWARE	QTY.
Α		Wood Dowel	22
AZ		Hex Key	1
В		Cam Screw	20
ВХ		M3x12mm Flat Screw	4
С	A	Cam Lock	20
CZ	⊕	M4x25mm Wood Screw	2
D		M3.5x14mm Flat Screw	20
DE		M5x50mm Screw	1
DF		M4x25mm Bolt	3
DZ		M5x50mm Confirmat Screw	18
FM	9	Screw Cap	18
HE		Angle Bracket	1
L	1000 per 100	Wall Anchor	1
L1	0 0 00 00 00	Left Drawer Slide Track	3
L2	0 ,	Left Drawer Slide	3
Р	(4)	M6x8mm Set Screw	12
РХ		Knob	3
R1	* * * * * * * * * * * * * * * * * * * *	Right Drawer Slide Track	3
R2		Right Drawer Slide	3
Х	9	Plastic Foot	4
Υ		Sticker	12

IMPORTANT INSTALLATION INFORMATION 🔥


For the stability of the unit, it is important that furniture connectors are installed correctly. See drawings and tips below for proper installation.

Wood Dowel

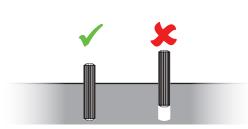


Install wood dowels by gently tapping them into the designated hole using a rubber mallet.

Cam Screw

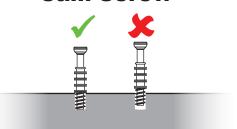

Use a screwdriver to tighten the cam screw until the shoulder is flush with the panel. Do not over-tighten or under-tighten.

 Cam Lock



Align the cam lock opening (arrow) with the pre-drilled hole on the side of the panel. Use a screwdriver to adjust alignment as needed.

SSEMBLY STEP 1 STEP 2 Tools Required **13**: 2

Ensure the slide tracks 02: are installed correctly, as indicated in the drawing.

L1: 1 R1: 1


DP


IMPORTANT: Install Flat Screw (D) after Set Screws (P).


TIP: Install wood dowels by gently tapping them into the designated A: hole using a rubber mallet. D: Α P: 8 **L1**: 2 R1: 2 DP Р Ensure the slide tracks Α are installed correctly, as ĎP indicated in the drawing.


Tools Required

STEP 3 **TOOLS REQUIRED** hole using a rubber mallet.

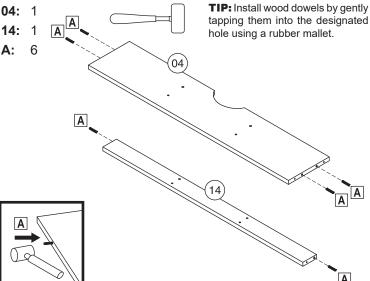

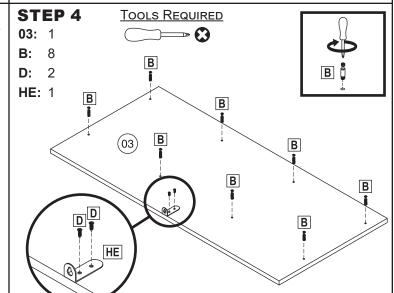


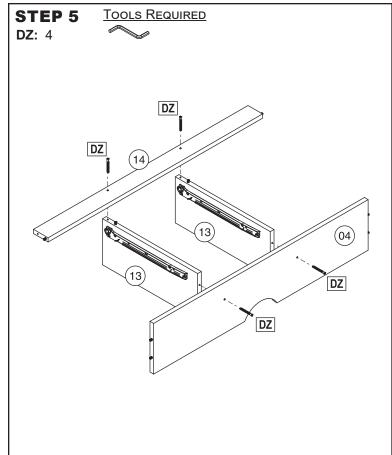

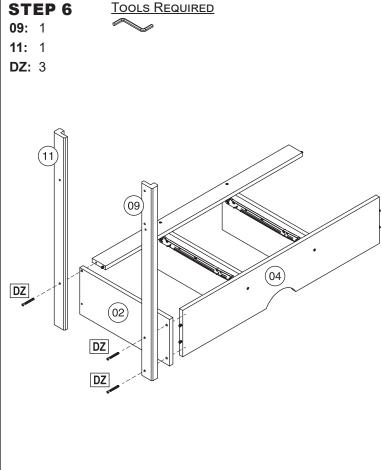


Tools Required

STEP 8

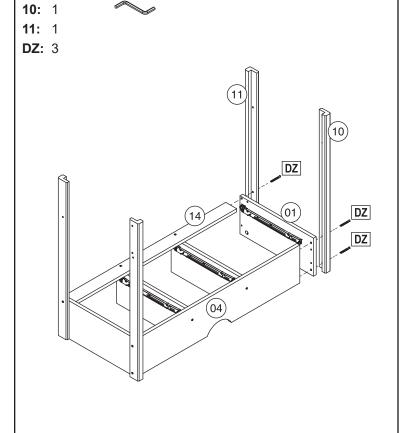

Tools Required

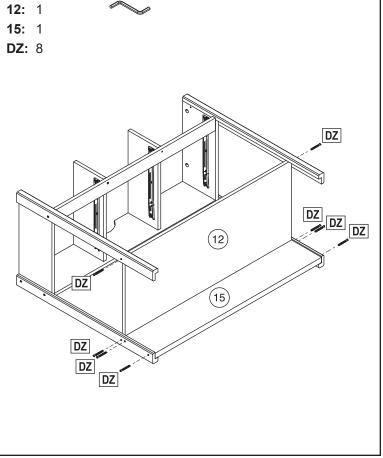



08/2022


Page 5 / 8


Sunnydaze Decor


STEP 7

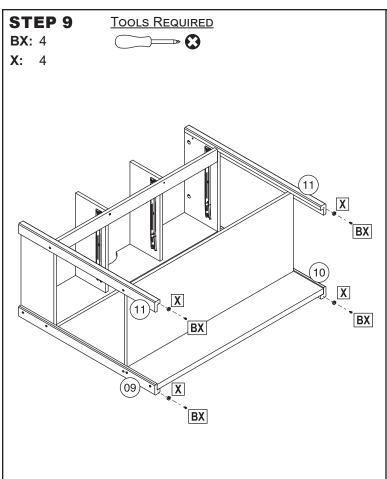


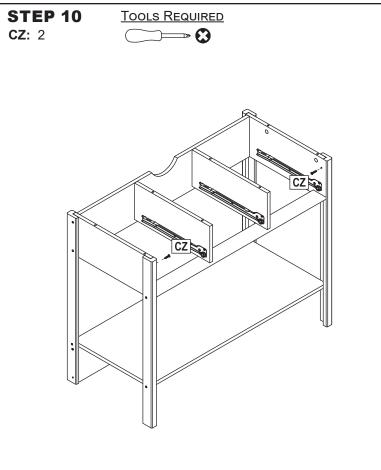

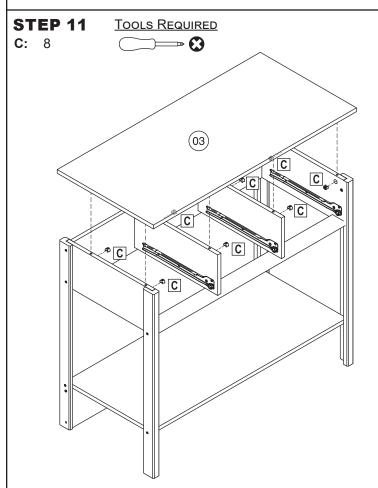

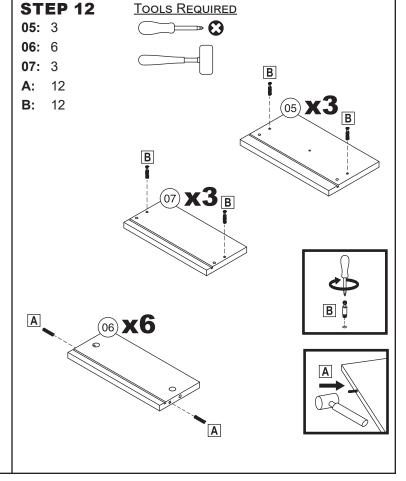

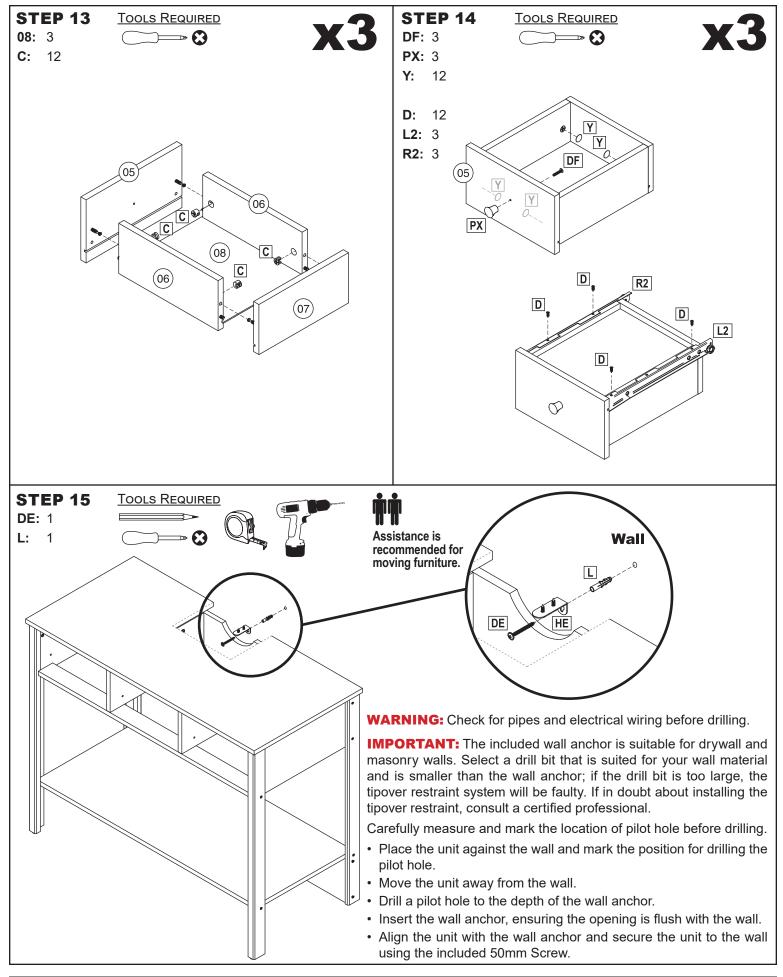

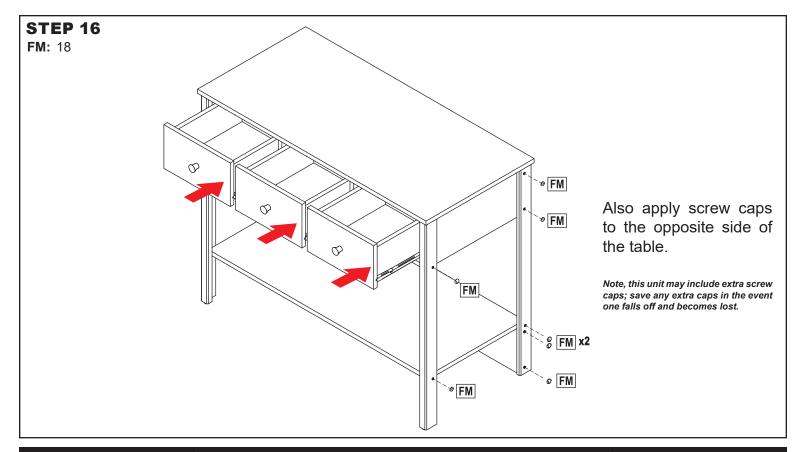

🚹 SAFETY STATEMENTS & WARNINGS 🛕

- For residential use only. Not for commercial or industrial use.
- · For indoor use only.
- Ensure all fittings are tight before use. Periodically check fittings to ensure they are tight.
- · Only use this unit on a flat, level surface.
- · Do not sit, stand or climb on the unit.
- · Supervise children; never allow children to climb or sit on this unit as it may tip over and cause serious injury.
- Do not place liquids or hot items directly on the furniture.
- · Never put a television on this product.
- · Never use chemical cleaning products or polishes as doing so may damage the finish.
- · Do not exceed the weight capacity of the furniture.
- Do not overload the shelf as doing so may cause it to sag.
- Do not overload the drawers as doing so may cause permanent damage.
- · Do not place the unit in direct sunlight.
- Avoid placing the unit near heating or cooling vents as forced air is very drying and can damage the unit.
- Do not write on furniture without a padded barrier to protect the surface.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

NOTICE:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.