



 
 
 
 



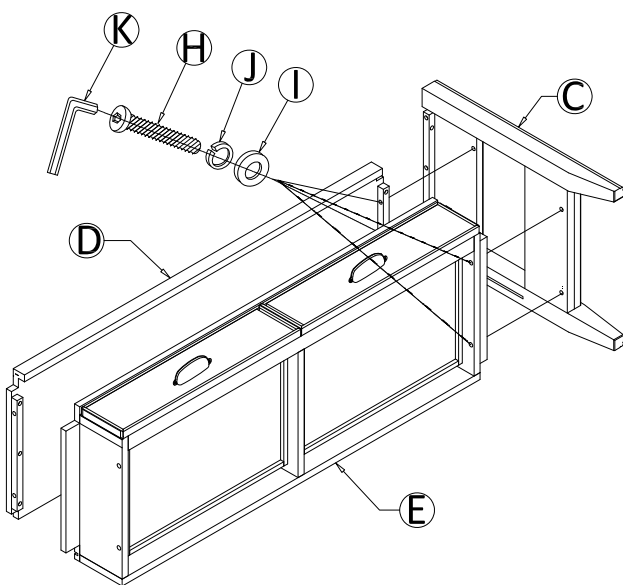


Assembly Instructions, #10510 Laurent TV Stand

A: Top Panel	
B: Left Side Frame	
C: Right Side Frame	
D: Shelf	
E: Base Assembly	
F: Back Panel	
G: Middle Panel	
H: (15) Bolts	
I : (15) Flat Washers	
J: (15) Lock Washers	
K: Allen Wrench	


Step 1

Place parts D & E & C on a soft surface according to sketch below. Fasten the right side frame with shelf and base assembly, using parts (H & J & I).




Step 2

Do the same thing with the left side frame as in Step 1.

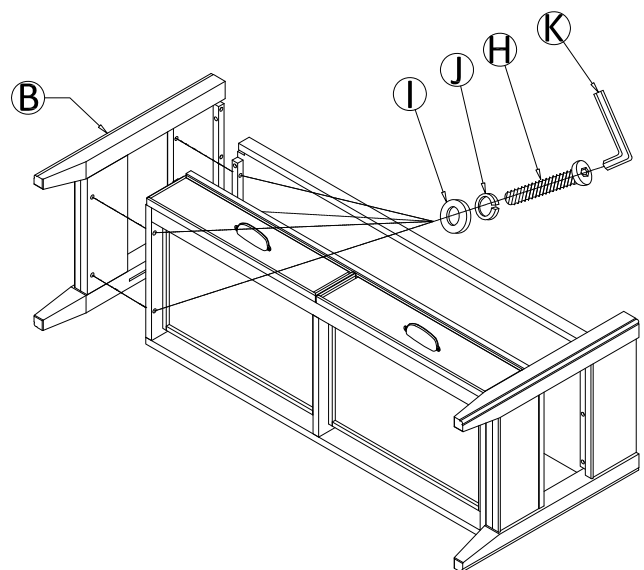


Step 3

Turn the cabinet upright and insert the back panel. Note the direction of the back with the wire management holes positioned as shown below.

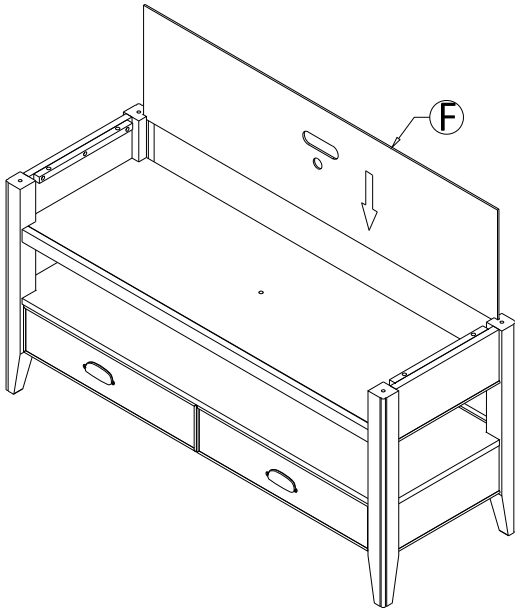


Step 4

Fasten the middle panel onto the top with the hardware and orientation as shown below.

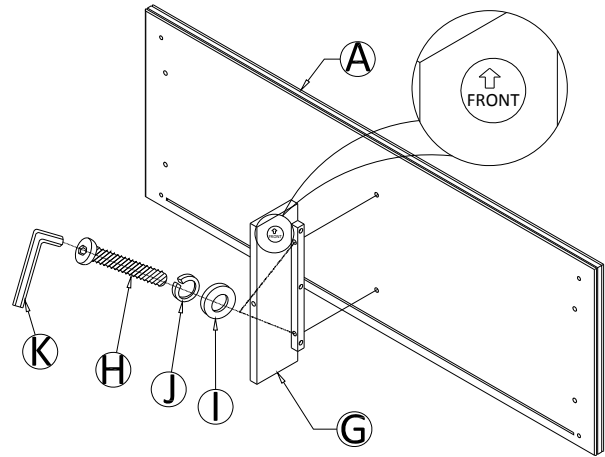

Step 5

Now fasten the top assembly to the cabinet, being careful to align the dowel pins in the legs and the back panel into the groove in the top. Fasten with the four bolts and washers.

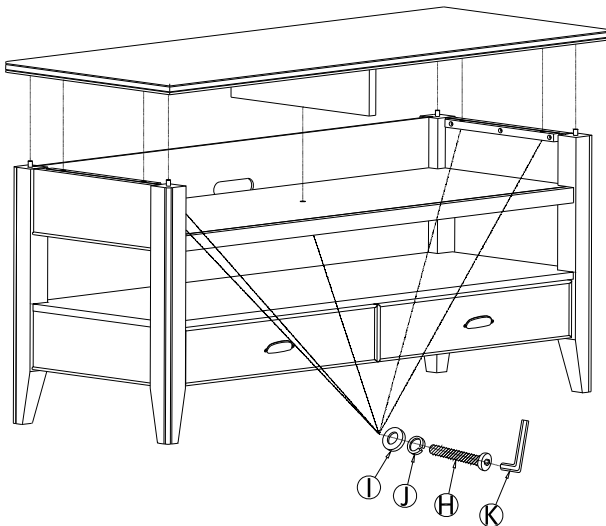

Step 6

Tighten all the bolts and place the TV stand right side up.

