Spotlight contains a sealed lead acid battery.

- To avoid damage to the battery or contacts, do not submerge in liquid.
- eak causing injury. mix with other battery types - may explode or
- · Do not install battery backwards, put in fire or
  - · Do not shine light into someone's face.
    - · Do not look directly into the light.
    - Keep away from children and pets.

# SAFETY GUIDELINES

#### or serious injury.

- situation that, if not avoided, COULD result in death A WARRING: Indicates a potentially hazardous or serious injury.
- situation that, if not avoided, WILL result in death A DANGER: Indicates an imminently hazardous

#### nsing this product:

The following signal words are used to emphasize safety warnings that must be followed when iniury and/or property damage!

with anything.

.inemquipe

or moderate injury.

burn injury could result.

never allow the spotlight lens to come in contact

I nis spought lens can melt some tabrics and a

waste. Battery must be disposed of in accor-dance with local, state and federal regulations.

Do not use spotlight in bed or sleeping bags.

DO NOT dispose of battery as household

which it not tollowed, MAY cause damage to

situation that, if not avoided, MAY result in minor

A CAUTION: Indicates a potentially hazardous

·Charging indicator light

9sut AS diw AS xsm V8 tuqtuo ,VS1

12V cigarette lighter outlet. Input

12V DC charger: Plugs into any

Hz, output 9V 300mA Charger

110V outlet. Input 110V AC 60

AC charger: Plugs into any

bebuloni ang DC chargers included

omso ntiw prisuod SBA sldsrug.

A NOTICE Indicates important information,

when in use. To avoid serious personal injury, · Do not cover with cloth, paper or any material

operate or maintain this product. Failure to comply with the instructions may result in serious personal A WARNING: Read and understand this entire instruction manual before attempting to assemble, install,

The manufacturer reserves the right to make product changes at any time without notice. of this instruction manual are based upon the latest product information available at the time of publication.

maintenance and troubleshooting steps described within to ensure your safety and satisfaction. The contents This instruction manual is intended for your benefit. Please read and follow the safety, installation,

# SNOITINITES / DEFINITIONS

Convenient hanging ring

- asu aan Locking trigger switch for hands
- Non-skid rubber bezel protector
  - · 4-1/4 in. Diameter reflector
- acid battery bsel belses eldsegnschoer nA4 V8.
  - halogen bulb
  - High power H3 6V55W quartz
- · Bright 1 million candlepower beam

**FEATURES** 

# 1 MILLION CANDLEPOWER RECHARGEABLE SPOTLIGHT

**usinit** 

Item Number W2432

**OWNER'S MANUAL** 



READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.



· Household use only. away trom combustible materials.

- Bisk of burns do not touch. Risk of fire keep.
  - locked in the ON position.
- · Never leave light unattended with the switch Do not operate light while it is being recharged. discharge.
  - not used to ensure that it does not completely · Recharge battery every 3 months even if it is
  - · Recharge within 48 hours after discharge.
    - Deep discharge will decrease battery life. Never completely discharge battery.
      - than 6 hours.
    - · Do not leave spotlight charging for more
- the 110-volt or 12-volt charger. · Before first use, charge the battery using either

#### **ϿΝΙΝΗΑ₩ Δ**

### **SPOTLIGHT USE AND CARE**

spheres. Internal sparks may ignite fumes. mable liquids or in gaseous or explosive atmo-

- Do not operate spotlight or charger near flam-IN TIRE.
- completely worn out. The battery may explode incinerating, even if it is severely damaged or
- Do not dispose of a worn out battery pack by explode or leak and cause personal injury.
- · Do not expose to high heat or fire as it might turer to recharge.
- · Use only the charger supplied by the manufac-
- torming any routine maintenance or cleaning. Remove battery pack from spotlight before per-
  - · Do not disassemble the spotlight.
- sibly explode, cause a fire, or personal injury. cause damage to your spotlight and could pos-
- Any attempt to use another battery pack will Use only recommended 6V 4Ah battery pack.
- be pulled into a tub or sink. not place of store spought where it can rail of spotlight or charger in water or other liquid. Do
- · To reduce the risk of electrical shock, do not put

· Battery performance will be greatly improved if

continuous use will diminish battery life and

an excessive drain on the battery and may

harm unit.

regulations.

tion with its products.

expressly warranted above.

in all cases.

P.O. Box 88259 • Tukwila, WA 98138 • 1-800-497-0552 • Made in China • © Copyright 2020 • www.wilmarcorp.com

continuous use in excess of 10 minutes will put

Battery disposal: If this unit is either damaged

battery in your rechargeable spotlight will no

judgment in disposal of this sealed lead acid

household waste. Battery must be disposed of

in accordance with local, state and federal

battery. DO NOT dispose of battery as

or, after many years of dependable service, the

longer accept a charge, PLEASE exercise good

unit is used intermittently. Prolonged or

# SAFETY GUIDELINES

# SPOTLIGHT USE AND CARE

charging. Charge 4 to 6 hours.

a 12-volt and 110-volt charger.

small button on side of handle.

**JOTICE** 

ine UN position.

unstable support.

or malfunction.

venicies.

vent to clean the spotlight.

LED indicator will light indicating the unit is

standard 110-volt receptacle. Plug the con-

110-volt Charging: Plug the charger into any

Recharge every three months even if not used.

charging. Always store in a charged state.

\* Recharge the battery immediately after dis-

12-VOLT AND 110-VOLT CHARGING

· Check to be certain that you have received both

during shipping. To unlock the trigger, push the

locked position to prevent accidental discriation

· The spotlight is packaged with the trigger in a

· Do not leave the spotlight unattended while in

pected situations. Do not use on a ladder or enable better control of the spotlight in unex-

ance at all times. Proper footing and balance

Do not overreach. Keep proper tooting and bal-

a spotlight will increase the risk of electric shock

· Do not expose spotlight to rain. Water entering

berroieum-pased products, or any strong sol-

cleaning. Never use brake fluids, gasoline,

Keep light dry, clean, and free from oil and

100° F. Do not store in outside sheds or in

location. Do not store in locations where the temperature is less than 50° F or more than

Do not store your spotlight in a damp or wet

grease. Always use a clean cloth when

tacle located at the back of the handle. The red

nector from the charger into the spotlight recep-

· 12-volt Charging: Plug the charger into any 12-volt cigarette lighter style receptacle. Plug the connector from the charger into the spotlight receptacle located at the back of the handle. The red LED indicator will light indicating the unit is charging. Charge 1 hour.

#### 

- · Check the receptacle; make sure it is clean and be certain the plug is fully inserted. If charger does not operate, check the fuse in the 12-volt receptacle.
- · Never use charger to power the light! Never charge battery for more than 6 hours. Do not leave charger plugged in when not in use.

# **90 DAY WARRANTY**

#### NOTE: Excluding the bulb and fuse

Performance Tool® extends only the following warranties and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

Performance Tool® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of pur chase immediately after discovery of defect. After 90 days and up to one year from date of purchase, Performance Tool® will replace at no charge any parts which our examination shall disclose to be defective and under warranty These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part(s) being returned. For part(s) after 90 days, please remit your request, postage prepaid

Performance Tool, P.O. Box 88259 Tukwila, WA 98138 These warranties exclude batteries, bulbs, blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and ser vice. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability. nor shall these warranties apply to any product or part

which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service. Performance Tool® does not authorize any other person to make any warranty or to assume any liability in connec

Except for warranties of title and the limited express war

ranties set forth above, Performance Tool® makes no express or implied warranties of any kind with respect to

its products. In particular, Performance Tool® makes no

implied warranty of merchantability and no implied war-ranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or house-

Performance Tool® makes an implied warranty of mer-chantability (and, if otherwise applicable, an implied war

ranty of fitness for a particular purpose), but only for the

particular qualities or characteristics, and for the duration

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply

Performance Tool® shall not be liable for consequential.

incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive

remedy for a defective product or part shall be the repair

or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or

special damages may vary from state to state, so the

above limitations may not apply in all cases.

hold use and not for commercial or business use