

# ROHL

 HOUSE OF ROHL

## INSTRUCTION MANUAL MANUEL D'INSTRUCTIONS MANUAL DE INSTRUCCIONES

### R51 EXT51KIT

1. Turn off stops and remove the cartridge. To remove your trim set, refer to original installation guide. 1. Turn off stops and remove the cartridge. To remove your trim set, refer to original installation guide. 1. Turn off stops and remove the cartridge. To remove your trim set, refer to original installation guide.

**2.** Install centering pins and new bottom cavity gasket into the extension. **3.** Install the new puck extension and the balancing spool and cartridge into place. **4.** Install cartridge nut housing by hand tightening and apply a 1/4 turn with a wrench. Do not overtighten.

**2.** Install centering pins and new bottom cavity gasket into the extension. **3.** Install the new puck extension and the balancing spool and cartridge into place. **4.** Install cartridge nut housing by hand tightening and apply a 1/4 turn with a wrench. Do not overtighten.

**2.** Install centering pins and new bottom cavity gasket into the extension. **3.** Install the new puck extension and the balancing spool and cartridge into place. **4.** Install cartridge nut housing by hand tightening and apply a 1/4 turn with a wrench. Do not overtighten.

**For warranty or additional information, contact:**

**INS12920 - Rev. 06/22**

**US Customers**

[houseofrohl.com/support](http://houseofrohl.com/support)

1-800-777-9762

**Canadian Customers**

[houseofrohl.ca/support](http://houseofrohl.ca/support)

1-866-473-8442

1-800-287-5354

6673 2100016 4100  
2012/06/22  
2012/06/22