

# KINGSTON

## INSTALLATION AND INITIAL MAINTENANCE

### Initial Tank Top

1. Remove the tank using instructions on page 10.
2. Install the tank top as shown.
3. Properly seal the tank to the base using 3/16" of 90° RTV.



4. Seal the base around the perimeter of the tank top using 90° RTV.



### INSTALLATION OF

### SLURRY LAYER AND PROTECTIVE

COATING

SEE MANUAL PAGE 10 FOR DETAILS