


# RL-4LC Quad Relay Module

## Installation Instructions

### WARNING

Do Not Route Any Wiring Over Circuit Boards.  
Maintain At Least 1" (25.4mm) Separations.

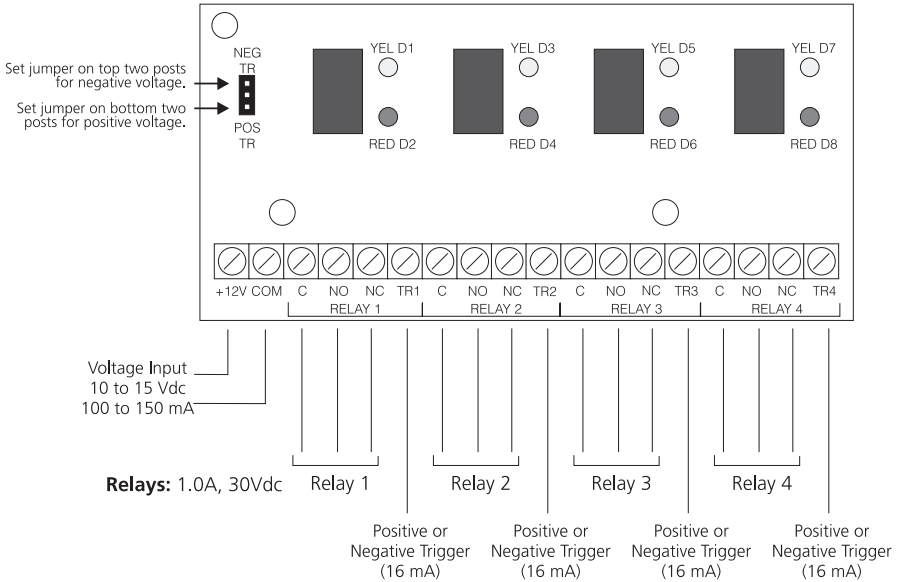

The RL-4 Quad Relay Module provides four independent Form "C" relay contacts. The relays are energized by applying a positive or negative voltage at the input terminal(s). You can choose positive or negative voltage by the setting of the jumper.