USER'S MANUAL RF WIRELESS REMOTE

RGB LED CONTROLLER

















RF Wireless Remote

Advanced


RGB LED Controller

Instructions

- 22 Dynamic Modes
- 20 Static Colors
- Very Smooth Effects
- Speed Adjustable
- Brightness Adjustable

- Card Type RF Remote
- Ultra Slim Design
- Dynamic Demo Mode
- Easy Remote Pairing
- Direct Color Select

Functions

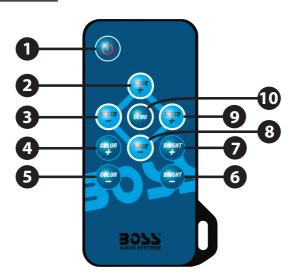

3

1. Turn On/Standby Mode

Press this key to turn on unit or switch to Standby Mode.

2/8. Dynamic Mode Adjust

Switch to Dynamic Mode from static color, or switch between Dynamic Modes.

3/9. Dynamic Speed Adjust

Adjust Dynamic Playing Speed. Press SPEED+ to increase speed and press SPEED- to decrease. Unit will switch to Dynamic Mode, if this key is pressed during Static Color Mode.

4/5. Static Color Adjust

Switch to Static Color Mode from Dynamic Mode, or press COLOR+ or COLOR-to change colors.

6/7. Brightness Adjust

Adjust static color brightness. Press BRIGHT+ to increase brightness and press BRIGHT- to decrease. Unit will switch to Static Color Mode, if this key is pressed during Dynamic Mode.

4

10. Demo Mode

Pressing this key will switch to Demo Mode. In Demo Mode, it plays 12 Dynamic Modes in loop, each mode repeats 3 times.

<u>Installing</u>

 
1. Power Supply

Operational voltage is 12V DC, negative ground. The DC jack's inner pole (or red cable) is positive and sleeve (or black cable) is negative. Also, please make sure the power supply voltage is same as the LED load.

2. LED Output

The peak output current is 4 amperes and maximum constant current is 2 amperes per channel. Please reduce load if main unit is overheating.

CAUTION! Do not short circuit or overload the LED outputs, this may lead to permanent damage!



Operation

1. Using Remote Controller

Please pull out the battery insulation tape before using. The RF wireless remote signal can pass through barrier, so it's not necessary to aim at the main unit when operating.

For proper receiving remote signal, please do not install the main unit in closed metal parts.

2. Pairing New Remote

The remote and main unit is 1 to 1 paired as default. Furthermore, main unit can be paired to 3 remote controls and each remote control can be paired to any main unit. Please do following steps to pair new remote control:

- 1). Plug off the power of main unit and plug in after 5 seconds.
- 2). Press 'SPEED-' and 'SPEED+' Key together in seconds after power on.

 After this operation, the main unit will recognize the new remote control.

3. Free Remote Pairing Mode

In some specific cases, the main unit may need to be paired to any remote control. Please do following steps for free remote pairing mode:

1). Unplug Power cable so the unit is OFF, and plug back in after 5 seconds.

2). Press 'ON/OFF' and 'MODE+' Key together 5 seconds after powering on. After this operation, the main unit will recognize any remote control. To pair the main unit back to specific remote, please repeat the 'pairing New Remote' operation.

4. Switch Output Color Sequence

The controller's default output signal sequence is Common-Green-Red-Blue. If the LED application is in different cable sequence, the direct color keys will not match the LED color. In this case, user can adjust the output signal sequence with following steps:

- 1). Unplug the power so the main unit is off for 5 seconds.
- 2). Press 'RED' and 'BLUE' color key together in 5 seconds after powering on. With this operation, the output sequence will switch between 6 possible combinations. The sequence will be stored in memory so on next operation it will be the same.

Specifications

Dynamic mode	22 modes	
Static Color	20 colors	
PWM Grade	256 levels	
Brightness Grade	5 levels	
Speed Grade	10 levels	
Demo Mode	Yes	
Direct Color Select	Yes	
Output Color Switchable	Yes, 6 options	
Operational Voltage	12V DC, negative ground	
Output Current	3x4A peak, 3x2A constant	
Remote Frequency	433.92MHz	
Remote Distance	> 15m at Open Area	

NOTES				

USER'S MANUAL

RF WIRELESS REMOTE

RGB LED CONTROLLER



BOSS Audio Systems 3451 Lunar Court • Oxnard, CA 93030

www.bossaudio.com 800-999-1236 US Toll-free 805-751-4853 Customer Service

Tech Support: www.bossaudio.com/support/technical-support

