

DENON[®]

DHT-S517

Dolby Atmos Sound Bar & Wireless Subwoofer

Owner's Manual



About manuals	4
About descriptions of this manual	4
Accessories	5
Before using the remote control unit	6
Operating range of the remote control unit	7
Part names and functions	8
Sound bar	8
Subwoofer	12
Remote control unit	13

Connections

Positioning	15
Positioning the sound bar in front of a TV	15
Hanging the sound bar on a wall	16
Positioning the subwoofer	18
Connecting a TV	19
TV equipped with an HDMI connector and compatible with the eARC (Enhanced Audio Return Channel) or ARC (Audio Return Channel)	20
TV equipped with an HDMI connector and incompatible with the eARC or ARC / TV equipped with an optical digital connector	21
TV equipped with an HDMI connector and incompatible with the eARC or ARC / TV equipped with an analog connector	22
Connecting a playback device	23
Connecting an HDMI device	23
Connecting the power cords	24

Playback

Playing TV, movies and music	25
Adjusting the volume	26
Adjusting the subwoofer volume	26
Turning off the sound temporarily	26
Playing music on a Bluetooth device	27
Pairing a Bluetooth device for the first time	27
Pairing with other Bluetooth devices	28
Playing music with a paired Bluetooth device	28

Settings

Settings	29
Selecting a sound mode	29
Automatically setting to standby (Auto standby function)	30
Reducing the standby power consumption (Deep standby function)	30
Switching the standby linking via HDMI control function on or off	31
Automatically turning on the power according to the playback of the playback device (Auto on control function)	32
Operating this unit using the remote control of a TV	33



Tips

Troubleshooting	35
Power does not turn on / Power is turned off	36
Operations cannot be performed through the remote control unit	37
Trouble teaching this unit remote control commands	37
No sound comes out	38
Bluetooth playback does not work	39
The HDMI control function does not work	40
Audio can be heard coming from the TV's speakers	40
Resetting factory settings	41

Appendix

About HDMI	42
Trademark information	43
Specifications	44
Sound bar	44
Subwoofer	47



Thank you for purchasing this Denon product.

To ensure proper operation, please read this owner's manual carefully before using the product.

After reading this manual, be sure to keep it for future reference.

About manuals

The following manuals are included on this unit.

- Safety Instructions (supplied)/Cautions on Using Batteries (supplied) : Describes careful considerations that you should note in order to use this unit correctly and safely. Please read carefully before using this unit.
- Quick Start Guide (supplied) : Describes the basics about how to use this unit. Please read when you use this unit for the first time.
- Owner's Manual (this manual) : Describes details about how to use this unit. Also, describes troubleshooting.

About descriptions of this manual

- DHT-S517 (sound bar and subwoofer) is described as this unit in this manual.
- In this manual, when you can operate either the sound bar or remote control, the operations for remote control are mainly described.
- The symbols used in this manual have the following meanings.

 
 
 
 
	Information such as the precautions on the use and the function restrictions.
	Information such as supplementary notes that are useful for you to know.

- Contents of this unit may be updated without notice.



Accessories


Check that the following parts are supplied with the product.

 Quick Start Guide	 Safety Instructions	 Cautions on Using Batteries	 Warranty	 Wall mount template
 Power cords	 HDMI cable (4K)	 Optical digital cable	 Wall mount spacers	 Remote control unit (RC-1245 / Built-in battery)




Before using the remote control unit

The remote control unit has a built-in lithium battery.
Pull out the insulation sheet before use.

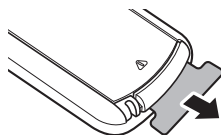


Replacing the battery


1. Lightly slide the catch of the battery case on the back of the remote control in the rightward direction.

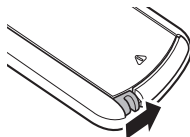

2. While pushing the catch lightly to the right, pull out the battery case.

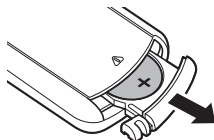

3. Remove the old battery, then insert a new coin-shaped lithium battery (CR2025) into the battery compartment so that the + symbol engraved on the battery faces upwards.
4. Replace the battery case in the original position.

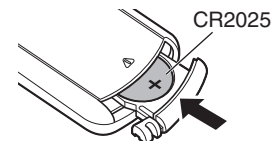


NOTE

- If the battery should have a leakage, immediately replace and dispose of the battery. In this case, there is a risk of burn when the liquid comes in contact with skins or clothes, so a great care should be taken. If the liquid accidentally comes in contact, wash with tap water and consult a doctor.
- Remove the battery from the remote control unit if it will not be in use for long periods.



Operating range of the remote control unit


Point the remote control unit at the remote sensor when operating it.

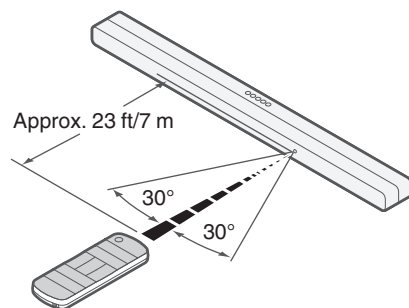

Part names and functions

Sound bar

■ Top panel

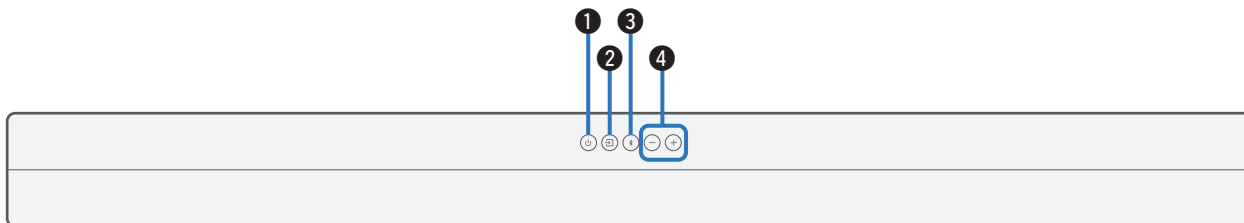

❶ Power operation button (🔌)

Turns the sound bar power on/off (standby). (👉 p. 25)
Links to sound bar power and turns the subwoofer power on/off (standby).

❷ Input source button (📺)

This selects the input source. (👉 p. 25)
Switches the input source each time the button is pressed.

❸ Bluetooth button (📶)


- Switches the input source to "Bluetooth". (👉 p. 27)
- Used to pair with Bluetooth devices. (👉 p. 27)

❹ Volume buttons (+, -)

These adjust the volume level. (👉 p. 26)



■ Front panel

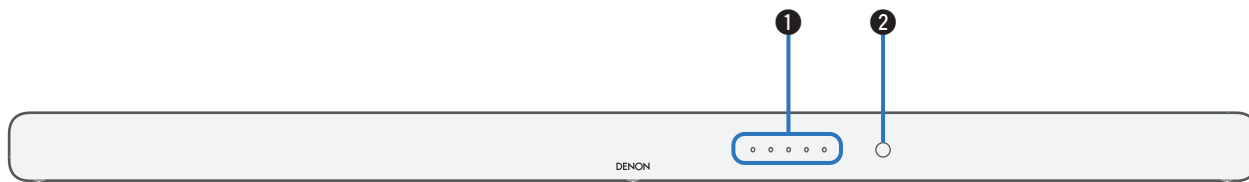

① Status LED

The status, such as for the power, input source, audio format, or sound mode is displayed. (👉 p. 10)

② Remote control sensor

This receives signals from the remote control unit. (👉 p. 7)




■ Status LED

DENON					
Power	Off (Standby)	○ ○ ○ ○ ○ ○	Sound mode [Ex.] Input source: TV (HDMI eARC/ARC)	Movie mode	○ ○ ○ ○ ○  Blink once
	On	○ ○ ○ ○ ○ ○		Music mode	○ ○ ○ ○ ○  Blink twice
Input source	TV (HDMI eARC/ARC)	○ ○ ○ ○ ○ ○		Night mode	○ ○ ○ ○ ○  Blink three times
	HDMI	○ ○ ○ ○ ○ ○		Dialog enhancer low	○ ○ ○ ○ ○  Blink once
	TV (OPTICAL)	○ ○ ○ ○ ○ ○		Dialog enhancer medium	○ ○ ○ ○ ○  Blink twice
	AUX	○ ○ ○ ○ ○ ○		Dialog enhancer high	○ ○ ○ ○ ○  Blink three times
	Bluetooth	○ ○ ○  ○ ○		Pure mode	○ ○ ○ ○ ○  Blink once
	USB	○ ○ ○  ○ ○			
Audio format [Ex.] Input source: TV (HDMI eARC/ARC)	Dolby Atmos	 ○ ○ ○ ○ ○ ○			
	Dolby (other than Atmos)	 ○ ○ ○ ○ ○ ○			
	PCM (or No Signal)	○ ○ ○ ○ ○ ○			
	Unsupported audio format	 ○ ○ ○ ○ ○ ○			



■ Rear panel

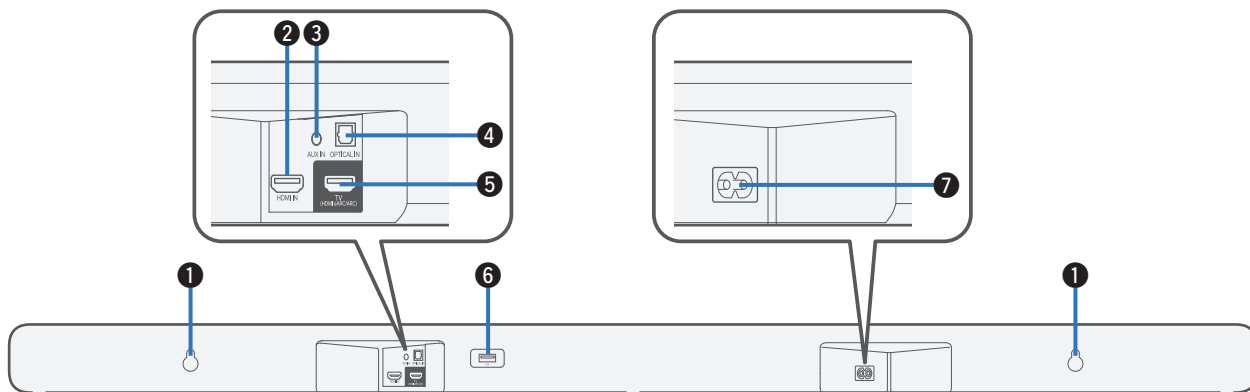

❶ Wall hook hole

Used to mount the sound bar on a wall. (👉 p. 16)

❷ HDMI IN connector

Used to connect to the HDMI equipment with an HDMI cable.
(👉 p. 23)

❸ Analog audio input connector (AUX IN)

Use a commercially available 3.5 mm stereo audio cable to connect a TV with an AUX audio output connector. (👉 p. 22)

❹ Optical digital input connector (OPTICAL IN)

Use the included optical digital cable to connect a TV with an optical digital terminal. (👉 p. 21)

❺ HDMI connector (TV (HDMI eARC/ARC))

Use the included HDMI cable to connect an eARC or ARC function-compatible TV. (👉 p. 20)

❻ USB port

USB playback is available. (👉 p. 25)


❼ AC inlet

Used to connect the power cord. (👉 p. 24)



Subwoofer

■ Rear panel

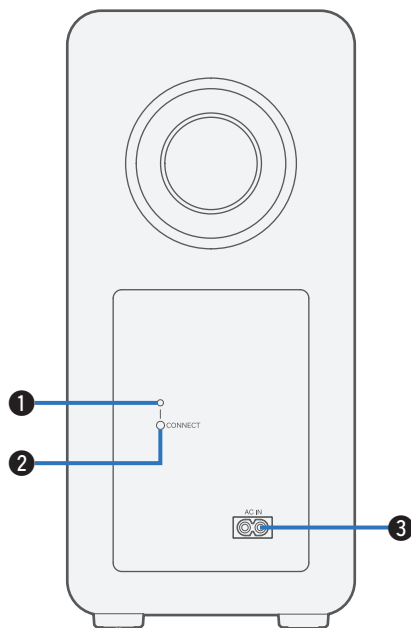

① Status LED

Displays subwoofer status.

LED indication	Status
○	When subwoofer power is standby
 → 	When the sound bar and subwoofer are wirelessly connected



- The sound bar and subwoofer are wirelessly connected as the factory default. If no audio is output from the subwoofer, wirelessly connect the sound bar and subwoofer again. (👉 p. 38)

② CONNECT button


Used to wirelessly connect the sound bar and subwoofer. (👉 p. 38)

③ AC inlet (AC IN)

Used to connect the power cord. (👉 p. 24)



Remote control unit

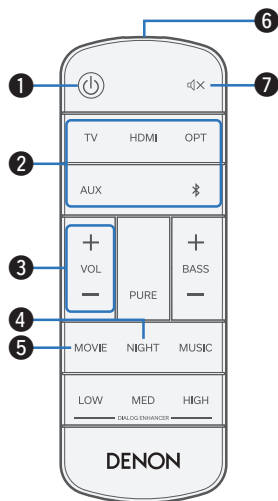

❶ Power button (⏻)

Turns the sound bar power on/off (standby). (👉 p. 25)

Links to sound bar power and turns the subwoofer power on/off (standby).

❷ Input source buttons (TV, HDMI, OPT, AUX, 📶)

This selects the input source. (👉 p. 25)

❸ Volume buttons (VOL +, -)

These adjust the volume level. (👉 p. 26)

❹ Night mode button (NIGHT)

Compresses the dynamic range (difference between loud and soft sounds) to make audio easier to hear at low volumes. (👉 p. 29)

❺ Movie mode button (MOVIE)

Enjoy movie theater-like surround sound. (👉 p. 29)


❻ Remote control signal transmitter

This transmits signals from the remote control unit. (👉 p. 7)

❼ Mute button (🔇)

This mutes the output audio. Press again to unmute. (👉 p. 26)



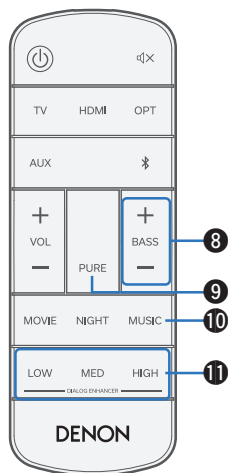

8 Button to adjust subwoofer (BASS +, -)

Adjusts the volume level for the subwoofer. (👉 p. 26)

9 Pure mode button (PURE)

Enjoy high quality sound that is faithful to the original source.

(👉 p. 29)

10 Music mode button (MUSIC)

Enjoy the full presence of a wide, encompassing acoustic field.

(👉 p. 29)

**11 Dialog enhancer buttons
(DIALOG ENHANCER LOW, MED, HIGH)**

Adjust the volume of dialog in movies, vocals in music, etc. so these can be heard more easily. (👉 p. 29)


Can be set to 3 levels. Set this to the desired value.



Positioning

Positioning the sound bar in front of a TV

Position the sound bar in front of your TV, etc., on a flat surface.

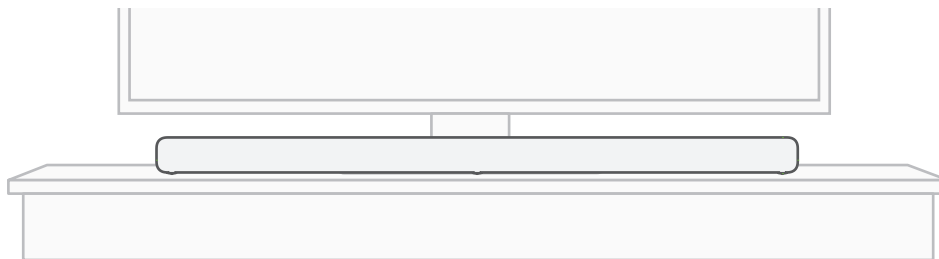

NOTE

- When positioning the sound bar in front of your TV, make sure the sound bar does not obstruct the TV's remote control light sensor, etc.




Hanging the sound bar on a wall

The sound bar can be mounted on a wall using the two keyholes provided on the back of the bar for this purpose. When hanging bar on a wall, position it in a flat, vertical position.

To ensure safety, it is best to employ a contractor to mount the sound bar on the wall.

NOTE

- In order to use the unit safely, do not place items on or hang items from the unit.
- Do not attempt to install the sound bar onto a wall made of material that may crumble easily, such as mortar or decorative plywood. Doing so may result in the screw pulling out and the sound bar falling, causing injury or damage to the sound bar.
- The included HDMI cable have ferrite cores. When hanging the sound bar on a wall, make sure not to put the ferrite core between the sound bar and the wall.
- Be sure to fix connection cables to the wall to ensure that the cables cannot be pulled or tripped over, which may cause the unit to fall. Check that the unit is mounted safely after the mounting work is complete.
- Also, periodically check that the unit is mounted solidly and that there is no possibility that the unit could fall.
- Denon cannot accept any responsibility for damage, injury or accidents caused by problems with the mounting location or mounting method.

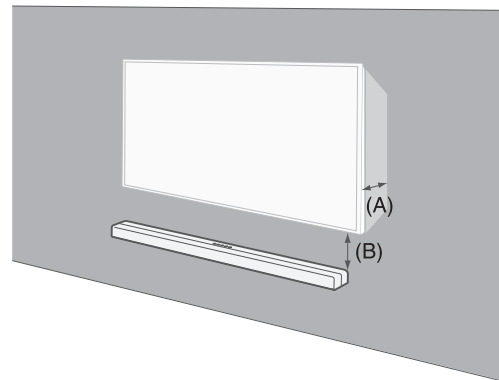

(A) Depth of the mounted TV	(B) Required space between the bottom of the TV and the top of the sound bar
Less than 2.5 in. (64 mm)	More than 2 in. (50 mm)
2.5 in. – 4.5 in. (64 – 102 mm)	More than 4 in. (102 mm)
More than 4 in. (102 mm)	More than 7.5 in. (191 mm)





- When hanging the sound bar on a wall, use the included wall mount template.


How to use the wall mount template

- ① Tape the template to the location you would like to mount the sound bar.

Leave enough space between the TV and the sound bar so that the sound from the Atmos speakers on the top of the bar, which projects towards the ceiling, is not blocked by the TV. Refer to the table on the previous page for spacing recommendations. (☞ p. 16)

- ② Screw in the wall mount screws by following the template.

Screw in one self-tapping screw (commercially available, 3/16 in./5 mm to 1/4 in./6 mm diameter) into a wall that has sufficient strength to support the weight of the sound bar, or into reinforcing material on the wall.

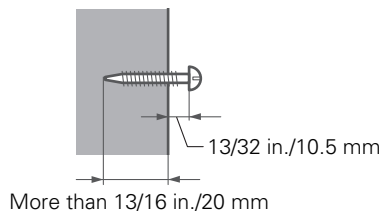

- ③ Remove the template from the wall.

- ④ Mount the included wall mount spacers on the back of the sound bar.


The wall mount spacers create a space for cords to pass through between the sound bar and the wall.

- ⑤ Hang the sound bar on the screws.



Positioning the subwoofer

Position the subwoofer in a flat location near the sound bar.

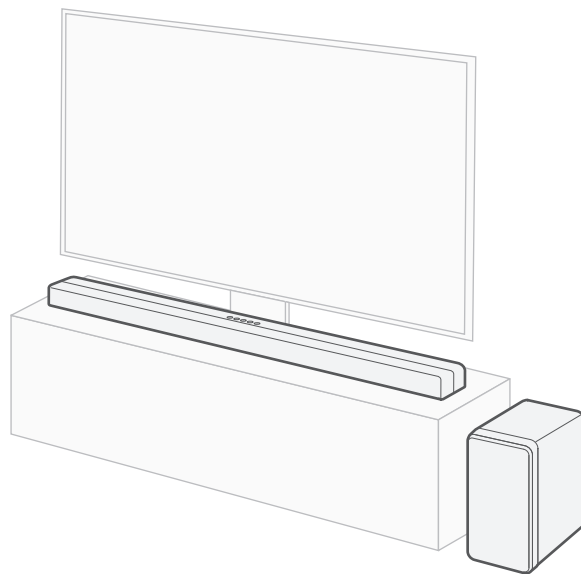

Connecting a TV

How to connect a TV depends on the connectors and functions equipped on the TV.



- Enable the TV's HDMI control function when using an HDMI cable to connect this unit to your TV. (See the TV owner's manual for details.)
- Turn off the TV's speaker or minimize the volume when using this unit.
- HDMI cable connection is recommended, but connection can be performed without an HDMI cable.


NOTE

- Make sure all devices are off when connecting.
- Do not plug device power cords into an outlet until all devices have been connected.



TV equipped with an HDMI connector and compatible with the eARC (Enhanced Audio Return Channel) or ARC (Audio Return Channel)

Use the included HDMI cable to connect this unit to an eARC or ARC function-compatible TV.

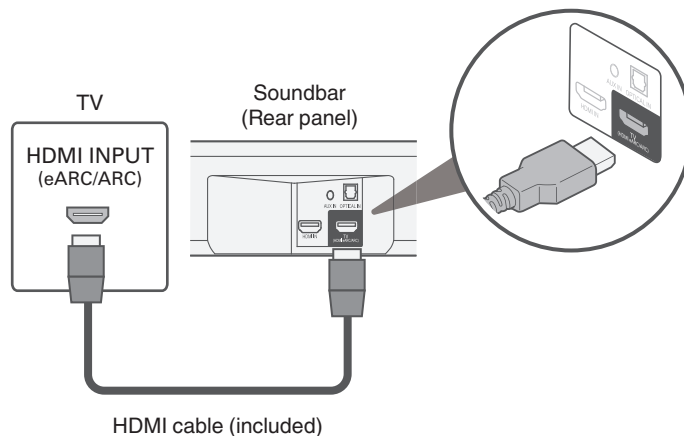


- The TV also needs to be compatible with the eARC or ARC function.



TV equipped with an HDMI connector and incompatible with the eARC or ARC / TV equipped with an optical digital connector

Use the included HDMI and optical cables to connect this unit to your TV.

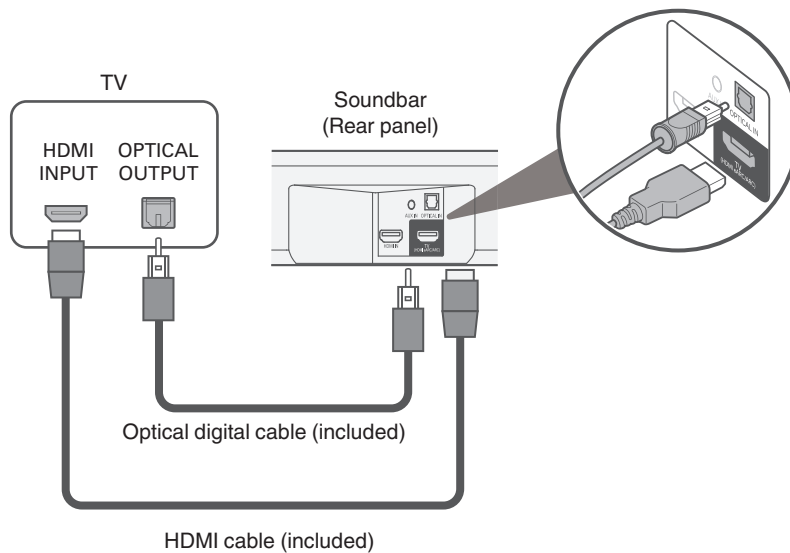


- Line up the optical digital cable with the shape of the terminal to insert.



TV equipped with an HDMI connector and incompatible with the eARC or ARC / TV equipped with an analog connector


Use the included HDMI cable and a commercially available 3.5 mm stereo audio cable to connect this unit to your TV.

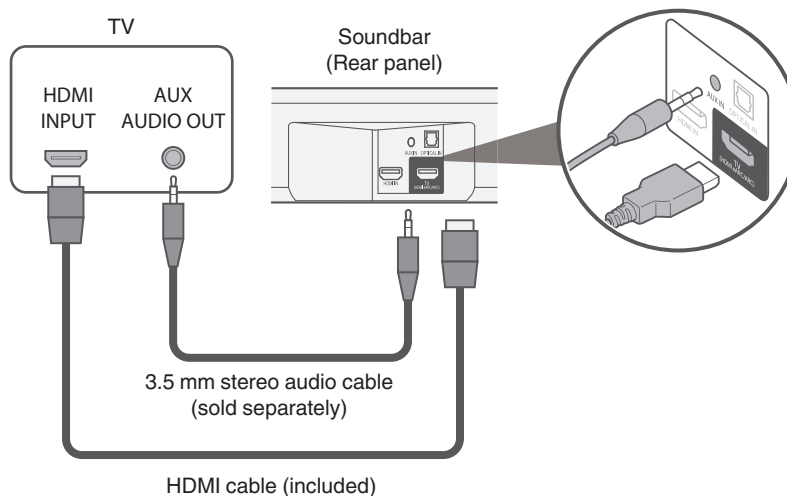

Connecting a playback device

Connecting an HDMI device

Use a commercially available HDMI cable to connect a Blu-ray disc player, game device or similar device to this unit.

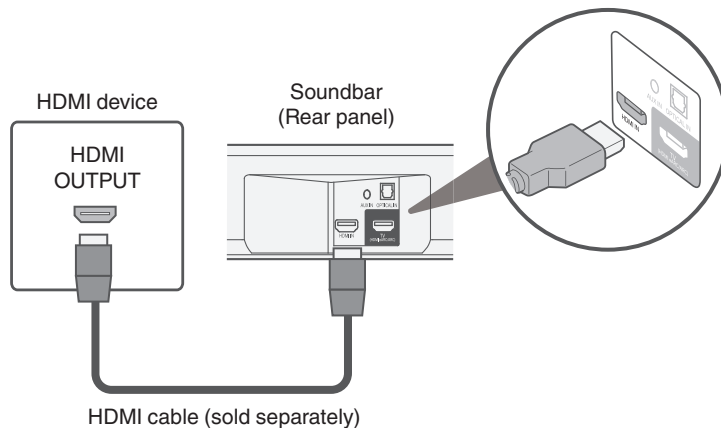


- When connecting this unit to a device that is compatible with the 4K functions, use a “High Speed HDMI cable with Ethernet” that displays the HDMI logo.




Connecting the power cords

After completing all the connections, insert the power plug into the power outlet.

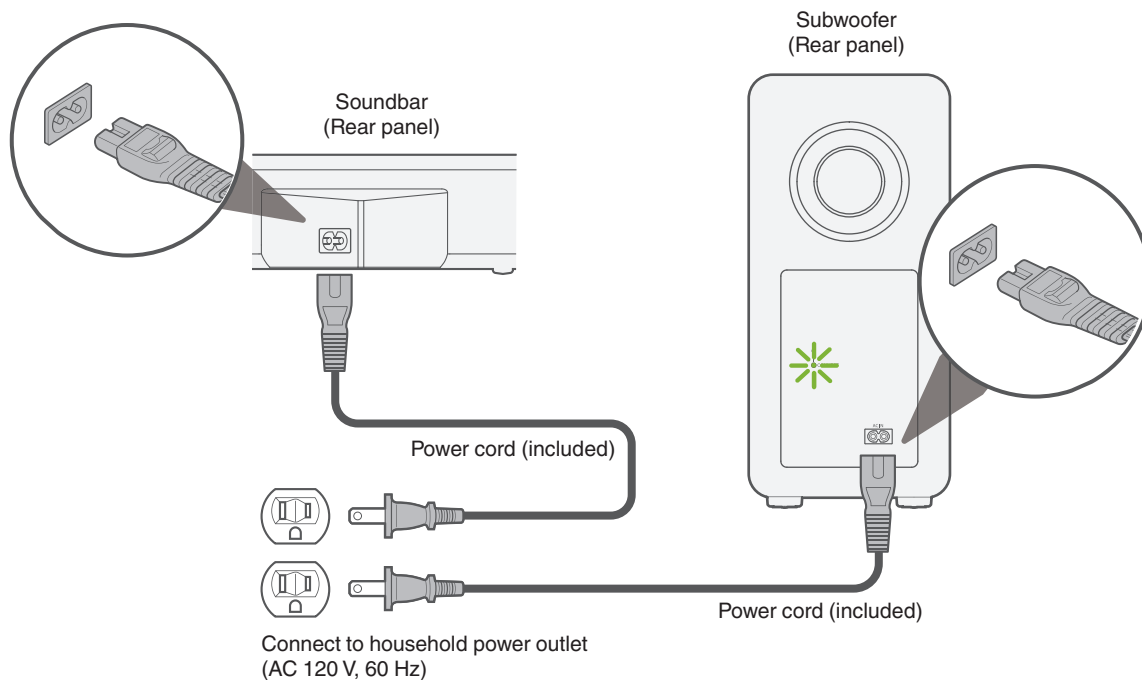

Playing TV, movies and music

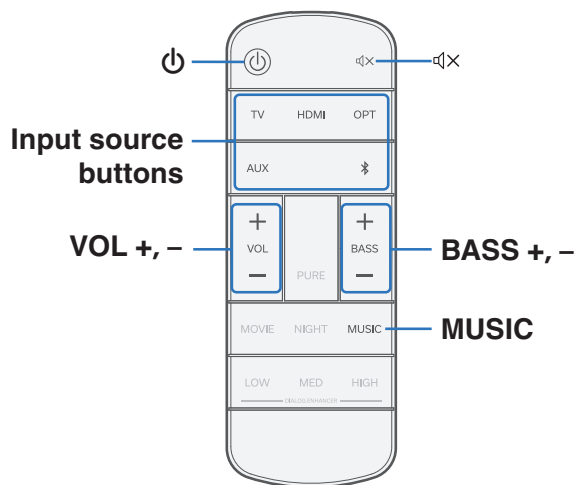

1 Turn on the power of the TV and connected devices.

2 Press  to turn on power to the unit.

3 Press the input source button.

TV:	Switches the input source to TV (HDMI eARC/ ARC).
HDMI:	Switches the input source to HDMI IN.
OPT:	Switches the input source to OPTICAL IN.
AUX:	Switches the input source to AUX IN.
Bluetooth symbol:	Switches the input source to Bluetooth.

4 Play the device connected to this unit.

For details, see the relevant device manual.



- Connect an HDMI control-compatible TV and this unit via HDMI and enable the HDMI control to enable linked control from either device. (p. 42)
- Press and hold MUSIC for 5 seconds or more to switch the input source to USB. The music files in the USB flash drive are played automatically.



Adjusting the volume

1 Use VOL + or VOL – to adjust the volume.

When the button is pressed, the status LED lights up to match the current volume.

- Each time a volume button is pressed, the status LEDs blink and the number of LEDs that are blinking increases or decreases according to the volume that is set.
- The status LEDs blink three times when the maximum or minimum volume is reached.



- When the power is turned on, the unit starts with the volume level that was set before being placed on standby. However, if the volume was previously set to high, it starts with the volume setting lowered to a certain level.

Adjusting the subwoofer volume

1 Use BASS + or BASS – to adjust the subwoofer volume.

When the button is pressed, the status LED lights up to match the current subwoofer volume.

- The status LED blinks each time the button is pressed, and the number of flashing LEDs increases or decreases to match the subwoofer volume.
- When the subwoofer volume reaches the maximum or minimum, the status LED blinks three times.

Turning off the sound temporarily

1 Press .

All status LEDs blink.




- To cancel, press  again.



Playing music on a Bluetooth device

Music files stored on Bluetooth devices such as smartphones, digital music players, etc. can be enjoyed on this unit by pairing and connecting this unit with the Bluetooth device.

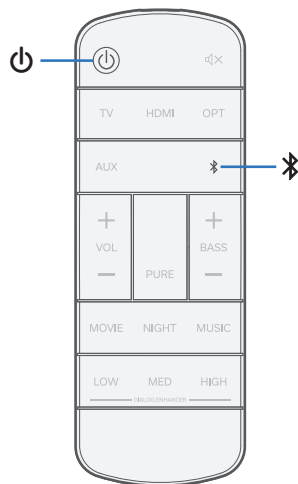

Pairing a Bluetooth device for the first time

Pair a Bluetooth device with this unit.

Once the Bluetooth device has been paired, it does not need to be paired again.

- 1 Press  to turn on power to the unit.**
- 2 Press  to switch the input source to “Bluetooth”.**
Automatically switches to pairing mode the first time it is used.
The status LED blinks in blue when this unit is in pairing mode.
- 3 Activate the Bluetooth settings on your Bluetooth device.**
- 4 Select “Denon DHT-S517” from the list of devices displayed on the screen of the Bluetooth device.**
The status LED lights up in blue and this unit and the Bluetooth device are paired.



Pairing with other Bluetooth devices

- 1 Press  to turn on power to the unit.**
- 2 Press  to switch the input source to “Bluetooth”.**
- 3 Activate the Bluetooth settings on your Bluetooth device.**
- 4 Press and hold  for 3 seconds.**

This unit enters pairing mode, and the status LED repeatedly blinks in blue.
- 5 Select “Denon DHT-S517” from the list of devices displayed on the screen of the Bluetooth device.**

The status LED lights up in blue and this unit and the Bluetooth device are paired.

Playing music with a paired Bluetooth device


- 1 Press  to turn on power to the unit.**
- 2 Press  to switch the input source to “Bluetooth”.**
- 3 Activate the Bluetooth settings on your Bluetooth device.**

The status LED lights up in blue and connects to the last Bluetooth device connected. If the connection is cut, perform connection again.
- 4 Play music using any app on your Bluetooth device.**



Settings

Perform the below operations and settings as needed.

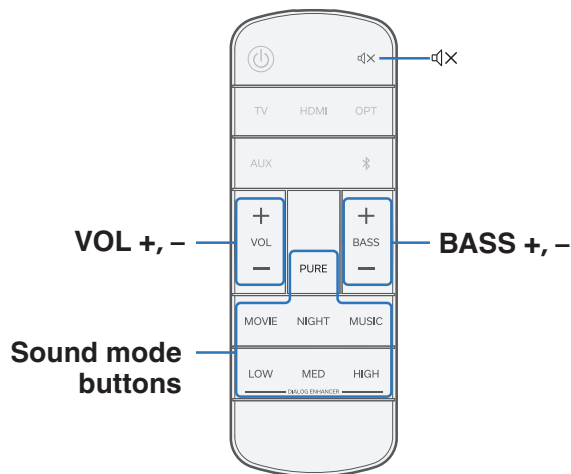

Selecting a sound mode

1 Press the sound mode button to select a sound mode.

When the button is pressed, the rightmost status LED blinks and the sound mode changes. (p. 10)

MOVIE:	Enjoy movie theater-like surround sound.
NIGHT:	Compresses the dynamic range (difference between loud and soft sounds) to make audio easier to hear at low volumes.
MUSIC:	Enjoy the full presence of a wide, encompassing acoustic field.
DIALOG ENHANCER LOW / MED / HIGH:	Adjust the volume of dialog in movies, vocals in music, etc. so these can be heard more easily. Can be set to 3 levels. Set this to the desired value.
PURE:	Enjoy sound that is faithful to the original source.




Automatically setting to standby (Auto standby function)

Switch the auto standby function on or off.

When the auto standby function is turned on, the power supply for this unit automatically switches to standby if no operations have been performed for approx. 20 minutes or more and audio is not being output.

1 Press and hold NIGHT for 5 seconds or more.

- The auto standby function switches on or off and the status LED blinks as indicated below.

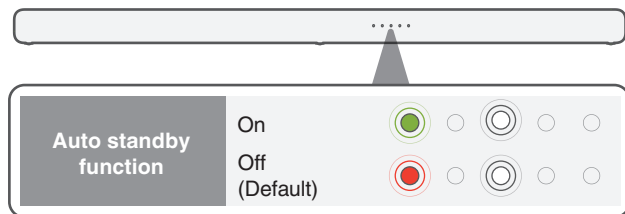


Reducing the standby power consumption (Deep standby function)

This unit can be placed into deep standby mode, in which its standby power consumption is lower than in normal standby mode. Perform the following steps to put this unit into deep standby mode.

1 Press and hold DIALOG ENHANCER HIGH for about 5 seconds or more.

- The deep standby function switches on or off and the status LED blinks as indicated below.

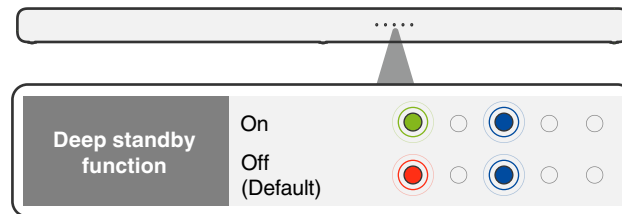



- When the power button is pressed while the deep standby function is on, all status LEDs blink in white three times and this unit enter deep standby mode.
- When the power button is pressed while the deep standby function is off, all status LEDs blink in green three times and this unit enter normal standby mode.

NOTE


- When this unit is in deep standby mode, it cannot be turned on by performing streaming operations with a Bluetooth connection.
- When this unit is in deep standby mode, the auto on control function of the optical and AUX inputs cannot turn on the unit. (p. 32)

Switching the standby linking via HDMI control function on or off

In the default settings, the HDMI control automatically puts the unit into standby mode, linked to the TV's power standby operation. When the standby linking via HDMI control function is turned off, music playback can continue without this unit switching to standby, even if the TV is set to standby while a music player or other device is connected and playing.

1 Press and hold MOVIE for 5 seconds or more.

- The standby linking via HDMI control function switches on or off and the status LED blinks as indicated below.

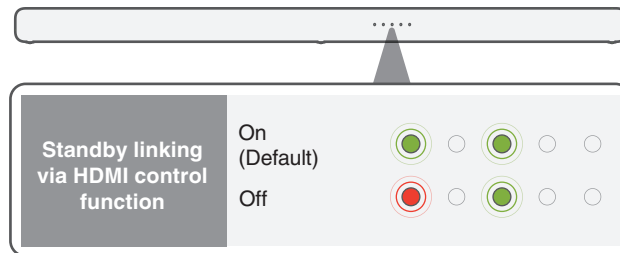


Automatically turning on the power according to the playback of the playback device (Auto on control function)

If you turn on the auto on control function and playback is started by the playback device while this unit is on standby, the power of this unit is automatically turned on and playback is started. In addition, if the power is on, the input source is automatically switched according to the playback of the playback device. The auto on control function can be set to on or off for each input source.

- 1 Switch to the input source you want to set.
- 2 On the remote control unit, press the button that corresponds to the input source you want to set for five seconds or longer.

Input source	Button
TV (HDMI eARC/ARC)	TV
HDMI IN	HDMI
OPTICAL IN	OPT
AUX IN	AUX

The status LEDs in the display of the current input source blink three times.

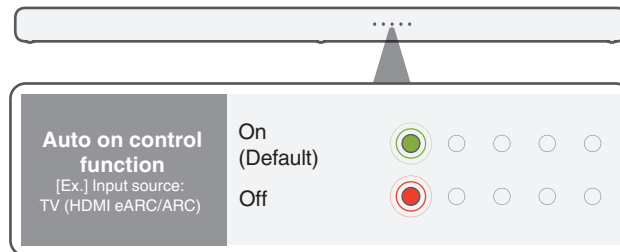

- Even if the auto on control function is on for the optical input or AUX input, the input source will not switch automatically during HDMI (eARC/ARC) playback.
- When this unit is in deep standby mode, the auto on control function of the optical and AUX inputs cannot turn on the unit. (p. 30)



Operating this unit using the remote control of a TV

There are three ways to operate this unit using the remote control of a TV.

• HDMI control function

Connect this unit to a TV that supports the HDMI control function with an HDMI cable and enable the HDMI control setting on the TV to perform basic operations on this unit (changing the input source, turning the power on and off, adjusting the volume) with the remote control of the TV.

Refer to “HDMI control function” for more information about the HDMI control function. (📖 p. 42)

• Remote control preset function

This unit is preset such that you can adjust the volume using the volume adjustment button on the remote controls for the televisions of major manufacturers. This is useful when the television you are using does not support HDMI control, or when you connect to a television that does not have an HDMI connector.

• Remote control learning function

If your TV does not support the HDMI control function and Remote control preset function, use this unit's remote control learning function. This enables you to operate this unit with the remote control of a TV. (“Using the remote control learning function” (📖 p. 33))


■ Using the remote control learning function

1 Press and hold the main unit's for 3 seconds or more.

Among the LEDs on the status display, one white LED light moves back and forth from left to right and indicates that the remote control learning mode has started.

2 Point the remote control of this unit at the remote sensor of this unit and press the remote control button to be learned (e.g. VOL +) once.

All status LEDs blink in white.

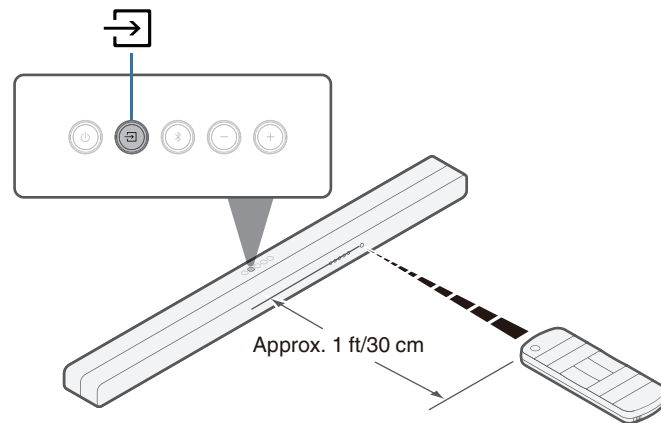

3 Point the remote control of the TV at the remote control sensor of this unit and press the remote control button to be learned (e.g. the button to increase the volume) once.

If learning is successful, the rightmost status LED blinks in green three times.

If learning is unsuccessful, the rightmost status LED blinks in red three times. Repeat steps 2 and 3 if this happens.



- When the status LEDs blink in white again, press the TV remote control button (e.g. the button to increase the volume) once more.

4 To learn a new function, repeat steps 2 and 3 with the next function.

5 Press and hold the main unit's for 3 seconds or more.

The rightmost status LED blinks white three times and indicates that the remote control learning mode is completed.

The unit exits remote control learning mode.

6 Confirm that the operation (e.g. increasing the volume) can be performed on this unit with the TV remote control.



- To delete all learned data, press and hold  on the sound bar for 10 seconds until all status LEDs blink in purple five times.
- Operations cannot be performed with the remote control learning function during the Deep standby.
- Other operations cannot be performed when in remote control learning mode.
- Remote control learning may not be possible depending on the type of TV remote control.



Troubleshooting

If a problem should arise, first check the following:

1. **Are the connections correct?**
2. **Is the set being operated as described in the owner's manual?**
3. **Are the other devices operating properly?**

If this unit does not operate properly, check the corresponding symptoms in this section.

If the symptoms do not match any of those described here, consult your dealer as it could be due to a fault in this unit. In this case, disconnect the power immediately and contact the store where you purchased this unit.



Power does not turn on / Power is turned off

Power does not turn on.

- Check whether the power plug is correctly inserted into the power outlet. (👉 p. 24)
- If the power of this unit cannot be turned on with the remote control for the TV, press the ⏻ button to turn on the power of this unit. (👉 p. 42)
- Enable the TV's HDMI control function when using an HDMI cable to connect this unit to your HDMI control-compatible TV. (See the TV owner's manual for details.)
- If the power cannot be turned on through a Bluetooth connection, this is in the deep standby mode. Press the ⏻ to turn on power to the unit. (👉 p. 30)
- If you set the auto on control function to off, the power of this unit will not automatically turn on even if playback is started by the TV or the playback device. (👉 p. 32)
- If the power cannot be turned on using the auto on control function of the optical and AUX inputs, this is in the deep standby mode. Press the ⏻ to turn on power to the unit. (👉 p. 32)

Power automatically turns off.

- If no operations have been performed for 20 minutes or more and audio is not being input, this unit automatically switches to standby. Turn this unit's power on again. To prevent the power from turning off automatically, turn off the auto standby function. (👉 p. 30)

Even if the power of the TV is turned off, the power of this unit is not automatically turned off.

- If the standby linking via HDMI control function is turned off, this unit will not switch to standby even if the power of the TV that is connected via HDMI is turned off. (👉 p. 31)
- If the input source is Bluetooth, this unit will not switch to standby even if the power of the TV that is connected via HDMI is turned off.

Power turns off and the the left most status LED flashes in red.

- The protection circuit has been activated due to a rise in temperature within sound bar. Unplug the power cord, wait about an hour until this unit cools down sufficiently, and then turn the power on again.
- Turn on the power again and turn down the volume.



Operations cannot be performed through the remote control unit

Operations cannot be performed through the remote control unit.

- Battery is worn out. Replace with new battery. (👉 p. 6)
- Operate the remote control unit within a distance of about 23 ft/7 m from this unit and at an angle of within 30°. (👉 p. 7)
- Remove any obstacle between this unit and the remote control unit.
- The coin-shaped lithium battery (CR2025) is not positioned correctly. Correct the positioning so that the ⊕ symbol engraved on the battery faces upwards. (👉 p. 6)
- This unit's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). Move this unit to a place in which the remote control sensor will not be exposed to strong light.

Trouble teaching this unit remote control commands

Trouble teaching this unit remote control commands.

- Remember that while this unit can learn almost all IR (infrared) remote commands, there remain a few rare code formats that cannot be taught.



No sound comes out

No sound comes out.

- Check the connections for all devices. (🔧 p. 19)
- Insert connection cables all the way in.
- Check that input connectors and output connectors are not reversely connected.
- Check cables for damage.
- Check that a proper input source is selected. (🔧 p. 25)
- Adjust the volume. (🔊 p. 26)
- Make sure volume is not muted. (🔊 p. 26)
- If the status LED lights up in red, an audio signal that is not supported by this unit is input. (🔧 p. 10)
In that case, set the audio format to "PCM" on the audio output device.

No sound is produced from subwoofer.

- When there is an obstacle between the sound bar and the subwoofer, remove it or place the subwoofer closer to the sound bar.
- To prevent electromagnetic interference, locate this unit away from microwave ovens, wireless LAN devices and other Bluetooth devices.
- Make sure the subwoofer status display LED is lit in green. If lights are not lit, it may indicate that the sound bar and subwoofer are not wirelessly connected. Perform connection again according to the following steps.
 - ① Press the ⏻ button to turn on power to the unit.
 - ② Press and hold the subwoofer CONNECT button for 3 seconds or more.
The subwoofer status LED blinks in green, the subwoofer enters pairing mode.
 - ③ Press and hold the sound bar ⌘ and + buttons for 5 seconds or more until the soundbar status LED blinks in red.
The sound bar enters pairing mode, the subwoofer automatically wirelessly connects to the sound bar. Perform steps ① to ③ again if they do not connect.



Bluetooth playback does not work

Cannot pair with a Bluetooth device.

- It may be that Bluetooth is not enabled on the Bluetooth device. See the owner's manual of the Bluetooth device to enable the Bluetooth function.
- This unit may be paired with another Bluetooth device. Select this unit from the list of devices displayed on the screen of the Bluetooth device.
- Bring the Bluetooth device near to this unit.
- Turn the power of the Bluetooth device off and on again, and then try again.
- Only 1 Bluetooth device can be connected at a time.
- The connection from the Bluetooth mobile device is malfunctioning. Power cycle the mobile device, remove the pairing information and re-pair this unit to the mobile device.

The sound is cut off.

- Bring the Bluetooth device near to this unit.
- Remove obstructions between the Bluetooth device and this unit.
- To prevent electromagnetic interference, locate this unit away from microwave ovens, wireless LAN devices and other Bluetooth devices.
- Pair with the Bluetooth device again. (🔧 p. 27)



The HDMI control function does not work

The HDMI control function does not work.

- You cannot operate devices that are not compatible with the HDMI control function. In addition, depending on the connected device or the settings, the HDMI control function may not work. In this case, operate the external device directly.
- Check that the HDMI control function setting is enabled on all devices connected to this unit.

Audio can be heard coming from the TV's speakers

Audio can be heard coming from the TV's speakers.


- Disable the TV's speakers (usually a setup-menu option, but a rear-panel switch on some TVs).



Resetting factory settings

Perform this procedure if the display is abnormal or if operations cannot be performed.

Various settings are reset to the factory default values. Make settings again.

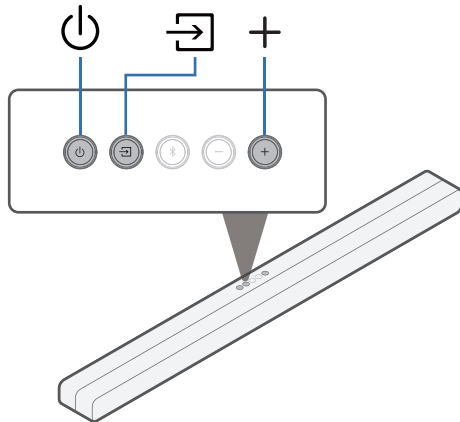

- 1 Press ⏻ to turn on power to the unit.**
- 2 Press and hold the main unit's ⏻, ↗ and + at the same time for at least 5 seconds.**
The status LED blinks in red three times.
- 3 Wait for around 10 seconds after the LED turns off and then press ⏻.**

All settings return to the factory settings after the sound bar is restarted.



About HDMI

This unit supports the following HDMI functions.

- **ARC (Audio Return Channel) function**

Enjoy movies, music, etc., on your TV simply by connecting an ARC function-compatible TV to this unit via HDMI.

- **eARC (Enhanced Audio Return Channel) function**

The eARC function is compatible with conventional ARC function compatible audio formats in addition to multichannel linear PCM, Dolby TrueHD, Dolby Atmos and other audio formats a conventional ARC function cannot transmit. Additionally, connecting to an eARC function-compatible TV enables enjoyment of higher-quality surround playback of the audio content played from your TV.

- **HDMI control function**

Connect an HDMI control-compatible TV and this unit via HDMI and enable the HDMI control to enable linked control from either device.

- Input source switching

If the TV is turned on, this unit automatically powers on and switches the input source.

- Power off link

The TV power off operation is linked so this unit also turns off.

- Volume adjustment

The volume of this unit can be adjusted using the TV remote control.

- Audio output destination switching

If this unit is turned on, TV audio is output from this unit. If this unit is turned off, TV audio is output from the speakers of the TV.

NOTE

- Some functions may not operate depending on the connected TV.



Trademark information



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by D&M Holdings Inc. is under license. Other trademarks and trade names are those of their respective owners.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2021 Dolby Laboratories. All rights reserved.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.



Specifications

Sound bar

■ General

Operating temperature:	41 °F - 95 °F (5 °C - 35 °C)
Power supply:	AC 100 - 240 V, 50/60 Hz
Power consumption:	40 W
Power consumption in standby mode:	1.7 W
Power consumption in deep standby mode:	0.4 W
Max Analog Input:	2 Vrms
Sampling frequency:	32 kHz, 44.1 kHz, 48 kHz
Supported audio formats:	Linear PCM, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Atmos



■ Wireless section

Used frequency range: 2.4 GHz (Wireless subwoofer)

■ Bluetooth section

Communications system: Bluetooth Version 5.0

Transmission power: Power Class 2

Maximum communication range: Approx. 32.8 ft/10 m in line of sight*

Used frequency range: 2.4 GHz band

Modulation scheme: FHSS (Frequency-Hopping Spread Spectrum)

Supported profiles: A2DP (Advanced Audio Distribution Profile) 1.3
AVRCP (Audio Video Remote Control Profile) 1.6


Corresponding codec: SBC

Transmission range (A2DP): 20 Hz – 20,000 Hz

*The actual communication range varies depending on the influence of such factors as obstructions between devices, electromagnetic waves from microwave ovens, static electricity, cordless phones, reception sensitivity, antenna performance, operating system, application software etc.



■ Dimensions (Unit : in. (mm))

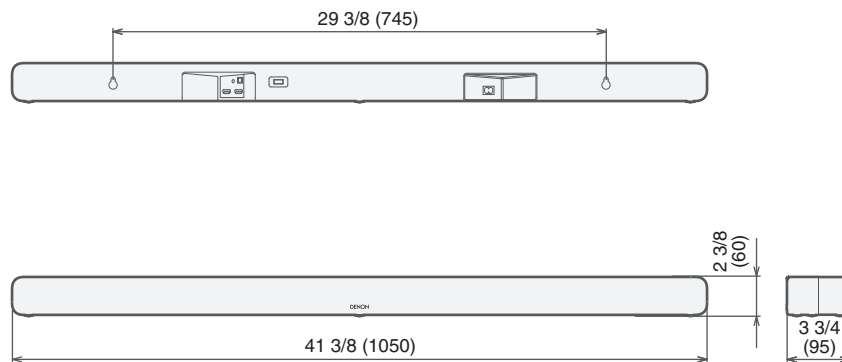

■ Weight : 5 lbs 8 oz (2.5 kg)





Subwoofer

■ General

Operating temperature:	41 °F - 95 °F (5 °C - 35 °C)
Power supply:	AC 100 - 240 V, 50/60 Hz
Power consumption:	40 W
Power consumption in standby mode:	0.3 W
Power consumption in deep standby mode:	0.3 W

■ Dimensions (Unit : in. (mm))

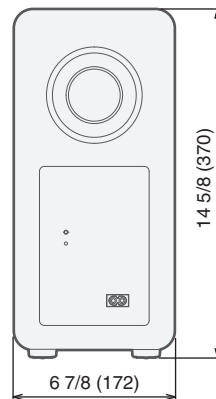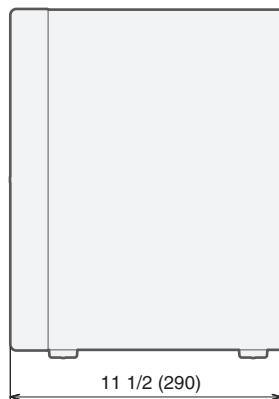

■ Weight: 9 lbs 8 oz (4.3 kg)



DENON®

www.denon.com

3520 10829 00AD

©2021 Sound United. All Rights Reserved.

DENON®

DHT-S517

Dolby Atmos Sound Bar & Wireless Subwoofer

Quick Start Guide

 
Guide de démarrage rapide / Guía de inicio rápido

Read Me First....


Lisez-moi en premier.... / Lea esto primero....

Before you begin

What's in the box



Sound bar

 

Subwoofer



Quick Start Guide



 
Safety Instructions




Wall mount template



Power cords



HDMI cable (4K)

 

Optical digital cable




Wall mount spacers




Remote control unit
(RC-1245 / CR2025
battery pre-installed)

1 Place the sound bar

For the best listening experience, place the sound bar centered under your TV and flush with the front edge of your cabinet.

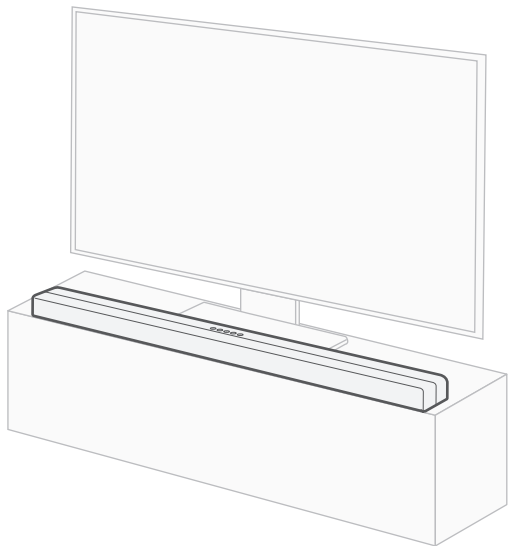


- The sound bar can also be mounted on a wall. Refer to the included wall mount template for details.
- For additional wall mounting assistance, refer to the online Owner's Manual or consult with your local Denon dealer or professional installer.

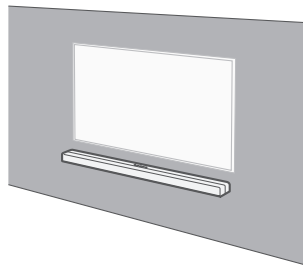


2 Place the subwoofer

Place the subwoofer on the floor near the sound bar.

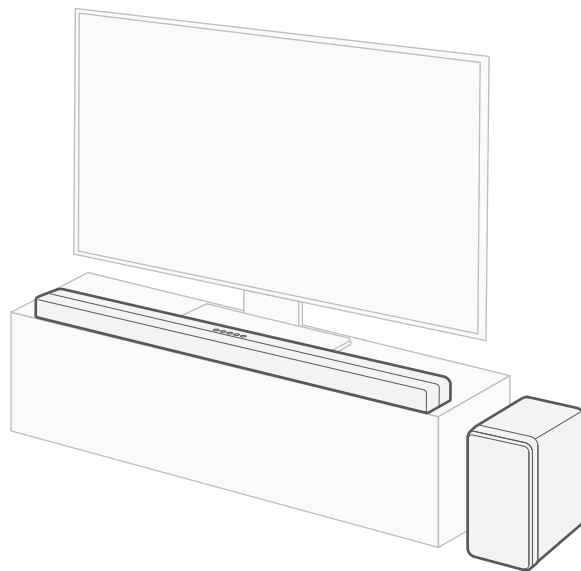

3 Connect the sound bar to your TV

1. Connect one end of the HDMI cable to the port labeled "eARC" or "ARC" on your TV.
2. Connect the other end of the HDMI cable to the port marked "TV (HDMI eARC/ARC)" on your sound bar.

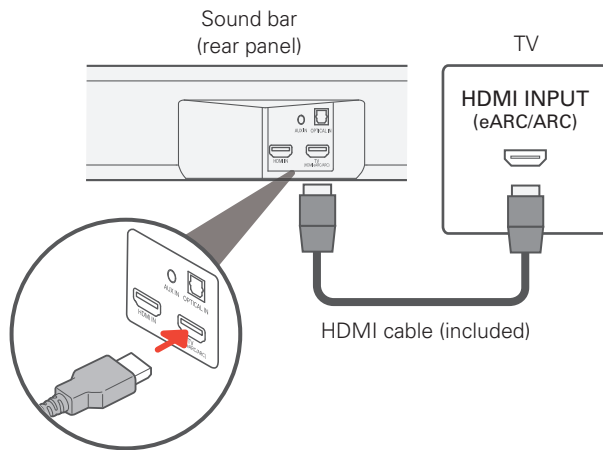


- If the TV does not have an HDMI labeled "eARC or ARC", connect the sound bar to the TV using the optical cable. Please note that an optical connection does not support Dolby Atmos.

4

Connect the power cords to a wall outlet

Connect the included power cords to the sound bar and the subwoofer, and insert the plugs into an outlet.

Turn on the sound bar. The light on the back of the subwoofer turns solid green, indicating the subwoofer is paired with the sound bar.

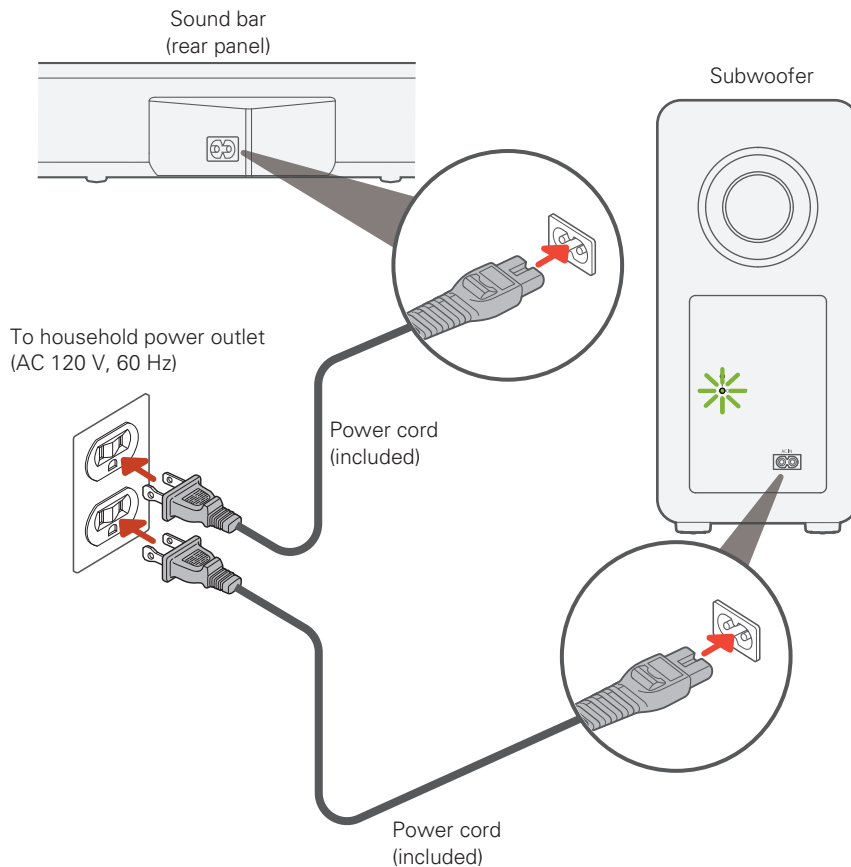


5 Setup is now complete!

Turn on your TV and verify that you hear sound playing from the sound bar.



- If you hear an echo or audio coming from the TV's internal speakers, make sure the TV speakers are switched off in the TV settings menu. Refer to the TV user manual for guidance.

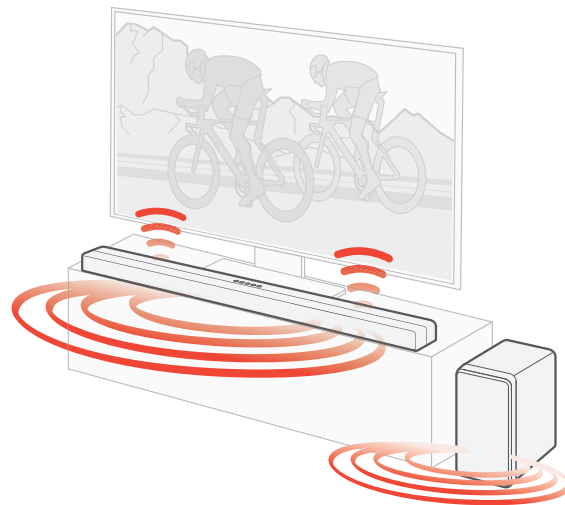


Owner's manual

- Refer to the online manual for other functions, information and operation procedure details.
manuals.denon.com/DHTS517/NA/EN/
- For more information, visit **www.denon.com**



About the status lights

 The lights on the sound bar indicate the power state, input source, audio format and other status information.




Power	Off (Standby)	☐ ☐ ☐ ☐ ☐
	On	☒ ☐ ☐ ☐ ☐
Input source	TV (HDMI eARC/ARC)	☐ ☐ ☐ ☐ ☐
	HDMI	☐ ☒ ☐ ☐ ☐
	TV (OPTICAL)	☐ ☒ ☒ ☐ ☐
	AUX	☐ ☒ ☒ ☒ ☐
	Bluetooth®	☐ ☐ ☐ ☒ ☐ (Blue)
	USB	☐ ☐ ☐ ☒ ☐ (Orange)
Audio format	Dolby Atmos®	☒ ☐ ☐ ☐ ☐ (Cyan)
	Dolby® (other than Atmos)	☒ ☐ ☐ ☐ ☐ (Green)
	PCM (or No Signal)	☐ ☐ ☐ ☐ ☐
	Unsupported audio format	☒ ☐ ☐ ☐ ☐ (Red)


Streaming music via Bluetooth

Before you can stream music from your Bluetooth device to the sound bar, you must first “pair” the sound bar and your device.

- ① Press the  (Bluetooth) button on the sound bar (or remote control unit) until the Bluetooth light blinks blue. The sound bar enters pairing mode.

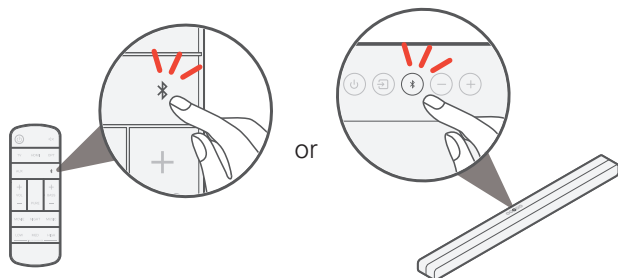

- ② Go to the Bluetooth settings on your device, and make sure Bluetooth is turned ON.

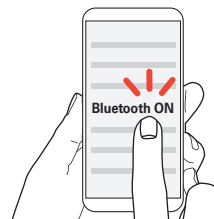

- ③ Select “Denon DHT-S517”.
The Bluetooth light on the sound bar turns solid blue when pairing is complete.



Trademark information



COMPATIBLE WITH



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2021 Dolby Laboratories. All rights reserved.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by D&M Holdings Inc. is under license. Other trademarks and trade names are those of their respective owners.



DENON®
www.denon.com

Printed in China 5411 11941 10AD
© 2021 Sound United. All Rights Reserved.

DENON® DHT-S517

Wall-Mounting Template Gabarit de montage mural

Plantilla para instalación en pared | Wandhalterungs-Schablone
Dima di montaggio a parete | Sjabloon voor muurbeugel
Mall för väggmontering | Шаблон настенного крепления
Szablon montażu uchwyty ściennego




























 
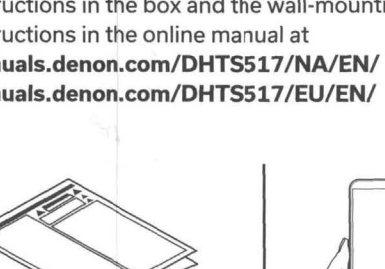


Before you begin, please review the safety instructions in the box and the wall-mounting instructions in the online manual at manuals.denon.com/DHTS517/NA/EN/ manuals.denon.com/DHTS517/EU/EN/



North America

                             
Europe



1

Using a level, align and tape the template on the wall at least 7.5 inches (20 cm) below your TV so that your TV does not interfere with the sound from the up-firing speakers.

À l'aide d'un niveau, alignez et collez le gabarit sur le mur à au moins 7,5 pouces (20 cm) en dessous de votre téléviseur afin que votre téléviseur n'interfère pas avec le son des haut-parleurs à émission verticale.

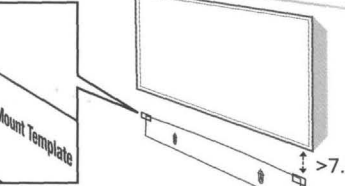

>7.5 in (20 cm)

2

Mark the location of the mounting holes on the wall with a sharp tool.

Marquez l'emplacement des trous de montage sur le mur avec un outil pointu.

3

Install the proper mounting hardware (not included) for your particular wall surface at the marked locations.

Installez le matériel de montage (non inclus) correspondant à la surface de la paroi (cheville et visse) sur les emplacements marqués.

4

(Optional) Attach the wall mount spacers if more room is needed to pass cables behind the bar. Peel backing off spacer and press firmly to attach.

(Facultatif) Fixez les entretoises murales si vous avez besoin de plus d'espace pour passer des câbles derrière la barre. Décollez l'entretoise et appuyez fermement pour la fixer.

5

Install the sound bar onto the mounting hardware and make sure it is secure.

Installez le barre de son sur le matériel de montage et assurez-vous qu'elle est bien sécurisée.

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2

1

3

4

5

2</



DENON DHT-S517

Sound bar system with wireless subwoofer, Dolby Atmos, eARC, and Bluetooth

Built by the market leader in AV receivers, the Denon DHT-S517 transforms any TV into a home entertainment center. The sleek sound bar with integrated up-firing speakers and the powerful subwoofer offer thrilling 3D audio with Dolby Atmos overhead effects. Quickly connect your TV, Blu-ray, or other devices through the HDMI (with Enhanced Audio Return Channel) and optical inputs and easily stream your favorite music via Bluetooth.

HIGHLIGHTS

YOUR BENEFITS

Upgrade to 3D Sound

Boost your home theater experience for TV, movies, and music with premium-quality Denon sound and Dolby Atmos

Your TV never sounded better

A rich driver array and a powerful subwoofer give you the superior sound quality you've always been looking for

Works with every TV

Experience exceptional sound clarity from your TV through the HDMI connection or the digital optical output

Easy setup and use

With all cables in the box, a Quick Start Guide, and a straightforward user concept, the DHT-S517 is easy to install and use

Wireless music streaming via Bluetooth

Quickly and easily enjoy your favorite music from your Bluetooth-enabled smart device

Denon Dialogue Enhancer

Enjoy crystal clear movie and TV dialogue, even during loud scenes or complex soundtracks

Pure Mode

Eliminates surround sound processing and other adjusted characteristics for pure music listening

Optical digital audio and HDMI 4K UHD inputs

Effortlessly connect your Blu-ray, gaming console, or other devices

Engineered with a more than 110-year Denon legacy in audio excellence

Trust in a high-quality, durable system to deliver the ultimate audio experience

SINCE 1910 | DEFINING AUDIO EXCELLENCE





3D Sound with Dolby Atmos

Spectacular, immersive surround sound experience tuned by the Denon Sound Masters for the perfect home theater. Enjoy enhanced bass, crystal clear dialogue, and enveloping sound from this 3.1.2 sound bar configuration.

Universal compatibility with eARC

The DHT-S517 works with all TVs. Use the included HDMI cable to send audio from your smart TV and other connected sources to the sound bar via the HDMI Enhanced Audio Return Channel (eARC). Once connected via the HDMI eARC or ARC connection, you can seamlessly control the sound bar volume with your TV remote. Non-HDMI ARC TVs can connect via the digital optical input.

Wireless music streaming

Your favorite tracks are at your fingertips. Easily stream your favorite music directly from your smart device to your sound bar via Bluetooth.

Easy setup and use

With all cables in the box, a Quick Start Guide, and a straightforward user concept, the DHT-S517 is easy to install and use. The sound bar can be either controlled by the supplied remote or works automatically with most TV remotes directly or via HDMI control.

Dialogue Enhancer

Denon Dialogue Enhancer improves dialogue intelligibility with three different modes—ideal for movies and TV shows. You can even turn up the dialogue without having to adjust overall volume.

High-performance build quality

The DHT-S517 is equipped with a left and right midrange and tweeter, a dedicated center channel, plus two up-firing speakers. Together with the wireless subwoofer, this adds up to a powerful 3.1.2 speaker configuration.

Sound modes for any occasion

With three different sound modes — Movie, Music, and Night — you can choose the perfect mode for any occasion.

Denon Pure mode

Eliminates surround processing and removes any adjusted characteristics associated with Movie, Music, or Night modes for a pure music listening experience.

Amazing sound built on over 110 years of audio innovation
As Japan's first audio electronics manufacturer with a deep legacy of firsts, Denon is the defining audio company of Japan. Found in 1910, we enable the moments that matter through the relentless pursuit of quality, innovation, and audio performance. We innovate for a better experience.

Technical Information	
Dimensions (in)	
Bar (WxDxH)	41.3 x 2.3 x 3.8
Sub (WxDxH)	6.7 x 14.5 x 11.4
Drivers (in)	
Bar	Left/Right Tweeter . (2) 1 (round) Left/Right Midrange (WxH) . (2) 4.7 x 1.6 (racetrack) Center Full-Range . (1) 1 (round) Left/Right Up-Firing, Full-Range . (2) 2.5 (round)
Subwoofer	(1) 5.25 (round)
Power	
Bar	50W
Subwoofer	100W

Connectivity	• HDMI 1 In/ 1 Out • Enhanced Audio Return Channel (eARC) • Optical Input • Auxiliary Input • Bluetooth Streaming
What's In The Box	• Sound Bar • Subwoofer • Remote Control • Bar Power Cord • Subwoofer Power Cord • HDMI Cable • Optical Cable • 1x CR2023 Battery (preinstalled in remote) • Quick Start Guide • Registration Card • Safety Documentation • Wall-Mount Template
Customer Downloads Available	- Owner's Manual - Quick Start Guide

Cautions on Using Batteries (Read these cautions before operating the unit.)

CAUTIONS ON USING BATTERIES

- There is a possibility of smoke, fire, explosion from the battery. Please note as following.
- Insert the specified batteries in the remote control unit.
 - Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. (The supplied batteries are only for verifying operation. Replace them with new batteries at an early date.)
 - When inserting the batteries, be sure to do so in the proper direction, following the  and  marks in the battery compartment.
 - To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
 - Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
 - If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
 - Remove the batteries from the remote control unit if it will not be in use for long periods.
 - Used batteries should be disposed of in accordance with the local regulations regarding battery disposal.
 - The remote control unit may function improperly if rechargeable batteries are used.

WARNHINWEISE BEZÜGLICH BATTERIEN

- Es kann bei der Batterie zur Raumentwicklung, einem Brand oder einer Explosion kommen. Bitte beachten Sie Folgendes.
- Legen Sie die vorgeschriebenen Batterien in die Fernbedienung ein.
 - Tauschen Sie die Batterien aus, wenn das Gerät nicht bedient werden kann, obwohl die Fernbedienung direkt vor dem Gerät betätigt wird. (Die im Lieferumfang enthaltenen Batterien dienen nur der Überprüfung der Funktionstüchtigkeit. Ersetzen Sie sie rechtzeitig durch neue Batterien.)
 - Beachten Sie beim Einsetzen der Batterien die richtige Polung, die mit den Symbolen  und  im Batteriefach angegeben ist.
 - Beachten Sie folgende Hinweise, um Schäden oder ein Auslaufen der Batterien zu vermeiden:
 - Verwenden Sie neue und alte Batterien nicht zusammen.
 - Verwenden Sie nicht zwei unterschiedliche Batterietypen.
 - Versuchen Sie nicht, Trockenbatterien aufzuladen.
 - Batterien dürfen nicht kurzgeschlossen, zerlegt, aufgeheizt oder ins Feuer geworfen werden.
 - Lagern Sie die Batterie nicht an einem Ort, an dem sie direktem Sonnenlicht oder extrem hohen Temperaturen ausgesetzt ist, wie z. B. in der Nähe eines Heizgeräts.
 - Wenn eine Batterie ausläuft, wischen Sie die Flüssigkeit im Batteriefach sorgfältig auf, und legen Sie neue Batterien ein.
 - Nehmen Sie die Batterien aus der Fernbedienung, wenn diese längere Zeit nicht benutzt wird.
 - Verbrauchte Batterien müssen entsprechend der örtlichen Bestimmungen bezüglich Batterie-Abfallbeseitigung entsorgt werden.
 - Die Funktion der Fernbedienung kann bei Verwendung von Akkus beeinträchtigt sein.

PRÉCAUTIONS RELATIVES À L'UTILISATION DES PILES

- Il existe un risque d'émission de fumée, d'incendie, d'explosion de la pile. Veuillez tenir compte des points suivants.
- Insérez les piles spécifiées dans la télécommande.
 - Remplacez les piles si l'appareil ne fonctionne pas même lorsque la télécommande est actionnée à proximité. (Les piles fournies ne servent qu'aux opérations de vérification. Remplacez-les par des piles neuves sans attendre.)
 - Lorsque vous insérez les piles, assurez-vous de les placer dans le bon sens, en respectant les marques  et  qui figurent dans le compartiment à piles.
 - Pour éviter un endommagement de la télécommande ou une fuite du liquide des piles:
 - Ne pas mélanger piles neuves et anciennes.
 - Ne pas utiliser deux types de piles différents.
 - Ne pas essayer de charger de piles sèches.
 - Ne pas court-circuiter, démonter, chauffer ou brûler les piles.
 - Ne placez pas la pile dans un endroit exposé à la lumière directe du soleil ou dans des endroits présentant des températures extrêmement élevées, par exemple près d'un radiateur.
 - En cas de fuite du liquide de pile, essayez soigneusement l'intérieur du compartiment avant d'insérer de nouvelles piles.
 - Otez les piles de la télécommande si vous ne l'utilisez pas pendant longtemps.
 - Veillez vous débarrasser des piles usagées conformément aux lois locales relatives à la mise au rebut des piles.
 - La télécommande risque de ne pas fonctionner correctement en cas d'utilisation de piles rechargeables.

PRECAUZIONI SULL'UTILIZZO DELLE BATTERIE

- Sussiste la possibilità di fumo, incendio o esplosione derivanti dalla batteria. Tenere presente quanto segue.
- Se si prevede di non utilizzare il telecomando per un periodo prolungato, rimuovere le batterie dal telecomando.
 - Se l'unità non funziona neanche quando il telecomando viene utilizzato vicino all'unità, sostituire le batterie con delle nuove. (Le batterie in dotazione sono soltanto per verificare il funzionamento. Sostituire con batterie nuove a una data prossima.)
 - Inserire le batterie con la polarità corretta, attenendosi agli appositi segni  e  presenti nel vano batteria.
 - Per prevenire danni o perdita di fluido della batteria:
 - Non utilizzare una batteria nuova con una vecchia.
 - Non utilizzare due tipi diversi di batterie.
 - Non tentare di caricare batterie a secco.
 - Non cortocircuitare, smontare, riscaldare o bruciare le batterie.
 - Non tenere la batteria in luoghi esposti alla luce solare diretta o con temperature estremamente elevate, ad esempio in prossimità di dispositivi di riscaldamento.
 - In caso di perdita di fluido della batteria, rimuoverlo attentamente dall'interno del vano batteria ed inserire delle nuove batterie.
 - Se si prevede di non utilizzare per un periodo prolungato, rimuovere le batterie dal telecomando.
 - Le batterie esauste devono essere dismesse in conformità alle normative locali sull' smaltimento delle batterie.
 - Se si utilizzano batterie ricaricabili, il telecomando potrebbe non funzionare correttamente.

AVISOS SOBRE DE LAS PILAS

- Existe posibilidad de generación de humo, incendio o explosión de la batería. Tenga en cuenta los siguientes aspectos.
- Introduzca las pilas especificadas en el mando a distancia.
 - Ponga pilas nuevas si el equipo no funciona ni siquiera si el mando a distancia se pone muy cerca. (Las pilas que se entregan con la unidad solo sirven para verificar que funciona. Cámbielas por pilas nuevas lo antes posible.)
 - Cuando inserte las baterías, asegúrese de hacerlo en la dirección correcta, según las marcas  y  en el compartimiento de baterías.
 - Para evitar daños o derrames del fluido de la batería:
 - No utilice una nueva batería junto con una ya utilizada.
 - No utilice dos tipos diferentes de baterías.
 - No intente cargar baterías secas.
 - No corte circuitos, desensamble, caliente o queme las baterías.
 - No coloque las pilas en un lugar expuesto a la luz directa del sol o donde la temperatura sea extremadamente alta, como cerca de una calefacción.
 - Si hay fluido de batería, límpielo cuidadosamente el fluido en el compartimiento de las baterías e inserte unas nuevas.
 - Retire las baterías del mando a distancia si no lo va a utilizar por un largo periodo de tiempo.
 - Las pilas usadas deben desecharse de acuerdo a las regulaciones locales concernientes al desecho de pilas.
 - Puede que el mando a distancia no funcione correctamente si se utilizan pilas recargables.

VOORZORGSMAATREGELEN WANNEER U DE BATTERIJEN GEBRUIKT

- De kans bestaat dat er rook uit een batterij komt of dat deze in brand vliegt of explodeert. Neem de volgende voorzorgsmaatregelen in acht.
- Plaats de aangegeven batterijen in de afstandsbediening.
 - Vervang de batterijen door nieuwe als het toestel zelfs niet meet werkt wanneer de afstandsbediening dicht bij het toestel wordt gebruikt. (De meegeleverde batterijen zijn alleen bedoeld om u de werking van het toestel te kunnen laten controleren. Vervang ze zo snel als mogelijk door nieuwe batterijen.)
 - Zorg ervoor dat u de batterijen in de juiste richting plaatst volgens de aanduidingen  en  in het batterijcompartiment.
 - Voorkom beschadiging van de batterijen of lekkage van batterijvloeistof:
 - Gebruik een nieuwe batterij niet samen met een oude.
 - Gebruik geen twee verschillende soorten batterijen.
 - Probeer droge batterijen niet op te laden.
 - De batterijen niet kortsluiten, uitsenhalen, verwarmen of veggooien in open vlam.
 - Bewaar de batterijen niet op een plaats waar deze blootstaan aan direct zonlicht of op plaatsen waar zeer hoge temperaturen heersen, zoals in de buurt van een kachel.
 - In geval van lekkage van batterijvloeistof veegt u de vloeistof in het batterijcompartiment voorzichtig weg en plaatst u nieuwe batterijen.
 - Verwijder de batterijen uit de afstandsbediening als u ze voor lange tijd niet gaat gebruiken.
 - Gebruikte batterijen moeten volgens lokale reglementen betreffende het verwijderen van batterijen worden afgevoerd.
 - De afstandsbediening kan verkeerd werken als er oplaadbare batterijen zijn gebruikt.

WARNING:

- DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.
- The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause internal burns in just 2 hours and can lead to death.
 - Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate Medical attention.



WARNHINWEISE:

- BATTERIEN NICHT VERSCHLUCKEN: VERÄTZUNGSGEFAHR.
- Die mit diesem Produkt gelieferte Fernbedienung enthält eine Knopfzelle. Wenn die Knopfzelle verschluckt wird, kann dies innerhalb von nur zwei Stunden zu schweren inneren Verätzungen führen.
 - Halten Sie neue und gebrauchte Batterien von Kindern fern. Wenn sich das Batteriefach nicht zuverlässig schließen lässt, verwenden Sie das Produkt nicht mehr, und halten Sie es von Kindern fern. Wenn Sie vermuten, dass die Batterie verschluckt worden sein oder auf andere Weise in den Körper eingedrungen sein könnte, suchen Sie unverzüglich einen Arzt auf.

AVERTISSEMENTS:

- N'INGÉREZ PAS LES PILES. BRÛLURE CHIMIQUE.
- La télécommande fournie avec ce produit contient une pile bouton. Si la pile bouton est avalée, elle peut entraîner de très graves brûlures internes en à peine 2 heures et la mort.
 - Conservez les piles, nouvelles ou usagées, hors de portée des enfants. Si le compartiment des piles ne se ferme pas correctement, n'utilisez plus le produit et conservez-le hors de portée des enfants. Si vous pensez que des piles ont été ingérées ou placées dans n'importe quelle partie du corps, consultez immédiatement un médecin.

AVVERTENZE:

- NON INGERIRE LA BATTERIA. PERICOLO DI USTIONI CHIMICHE.
- Il telecomando fornito con questo prodotto contiene una batteria con celle a moneta/bottone. Se la batteria con celle a moneta/bottone viene ingerita, può causare gravi ustioni interne in sole 2 ore e provocare la morte.
 - Tenere le batterie nuove e usate lontano dalla portata dei bambini. Se il vano batterie non si chiude in modo sicuro, cessare di utilizzare il prodotto e tenerlo lontano dai bambini. Se si ritiene che le batterie possano essere state ingerite o inserite in qualsiasi parte del corpo, contattare immediatamente un medico.

RECHARGEABLE BATTERY PRECAUTIONS

- There is a possibility of smoke, fire, explosion from the rechargeable battery. Please note as following.
- Do not toss the rechargeable battery into a fire, and do not heat up the battery. Doing so could cause battery heat generation, battery fires, and battery rupture.
 - Do not subject the rechargeable battery to strong impact forces, such as stabbing it with sharp objects (a nail, etc.), tapping it with a hammer, or stepping on it. Doing so could cause battery heat generation, battery fires, and battery rupture.
 - Do not place foreign objects inside this unit. Doing so could cause fires and electrical shocks.
 - Do not charge, use, or place this unit in high-temperature locations such as near heaters and stove burners, in areas exposed to direct sunlight, or inside a car on a hot day. Doing so could cause battery heat generation, battery fires, and battery rupture.
 - Such actions could also affect the performance and shorten the life of the internal rechargeable battery.
 - Stop using this unit immediately, and contact the sales outlet or Manufacturer in the event that abnormal odors or heat generation occurs while using, charging, or storing this unit, or if other abnormalities such as discoloration, etc., are detected.
 - Always observe the following precautions:
 - Do not place this unit in a microwave oven or in a high-pressure container.
 - Do not place this unit on top of an electromagnetic cooker.
 - Do not attempt to recharge the internal rechargeable battery by connecting it to a power outlet or a car's cigarette lighter socket.
 - Strictly observe the recharging procedure and conditions specified by Manufacturer.
 - If fluid should leak from the rechargeable battery and get into the eyes, do not rub the eyes. Instead, rinse the eyes thoroughly with tap water, etc., and see a doctor without delay for treatment. Leaving the eyes untreated could cause vision impairment.
 - Do not use this unit near medical devices, automatic doors, or fire alarms, etc. Signals from this unit could interfere with the operation of those devices, possibly causing malfunctions and accidents.
 - If recharging fails to complete even though the prescribed recharging time period has elapsed, stop the recharging operation. Continuing to recharge the battery could cause battery heat generation, battery fires, and battery rupture.

VORSICHTSMASSNAHMEN FÜR DIE WIEDERAUFLADBARE BATTERIE

- Es kann beim Akku zur Raumentwicklung, einem Brand oder einer Explosion kommen. Bitte beachten Sie Folgendes.
- Die wiederaufladbare Batterie nicht ins Feuer werfen und nicht erhitzen. Dies könnte zu Wärmeentwicklung in der Batterie, zu Batterieberänden und zum Reißen der Batterie führen.
 - Die wiederaufladbare Batterie nicht übermäßiger Kräfteinwirkung aussetzen, z. B. nicht mit scharfkantigen Gegenständen (einem Nagel usw.) darauf einstechen, nicht mit einem Hammer schlagen und nicht darauf treten. Dies könnte zu Wärmeentwicklung in der Batterie, zu Batterieberänden oder zum Reißen der Batterie führen.
 - Setzen Sie keine Fremdkörper in dieses ein. Dies könnte zu Bränden und elektrischen Stromschlägen führen.
 - Dieses Gerät nicht an Orten mit hohen Temperaturen aufladen, benutzen oder ablegen, z. B. nicht in der Nähe von Heizgeräten und Öfen, in direktem Sonnenlicht oder im Inneren eines Autos an einem heißen Tag. Dies könnte zu Wärmeentwicklung in der Batterie, zu Batterieberänden und zum Reißen der Batterie führen.
 - Ein solches Vorgehen könnte auch die Leistung des integrierten Akkus beeinträchtigen und seine Lebensdauer verkürzen.
 - Stop onmiddellijk het gebruik van dit toestel en neem contact op met uw verkoper of de fabrikant als u abnormale geuren of warmteontwikkeling gewaarwordt tijdens het gebruik, het opladen of het opslaan van dit toestel, of als andere abnormiteiten zoals verkleuring enz. worden opgemerkt.
 - Beachten Sie stets die folgenden Vorsichtsmaßnahmen:
 - Dieses Gerät nicht in einen Mikrowellenofen oder in einen Hochdruckbehälter legen.
 - Dieses Gerät nicht auf einem elektromagnetischen Herd ablegen.
 - Versuchen Sie nicht, den internen Akku durch Anschließen an eine Steckdose oder den Zigarettenzünder eines Autos aufzuladen.
 - Volg nauwgezet de procedure en voorwaarden van de fabrikant voor het opladen.
 - Falls Flüssigkeit aus dem Akku austritt und in die Augen gerät, die Augen nicht reiben. Spülen Sie die Augen stattdessen gründlich mit Leitungswasser o. Ä. aus und begeben Sie sich unverzüglich in ärztliche Behandlung. Ohne Behandlung der Augen könnte es zu einer Beeinträchtigung des Sehvermögens kommen.
 - Dieses Gerät nicht in der Nähe von medizinischen Geräten, automatischen Türen oder Brandmeldern usw. verwenden. Signale aus diesem Gerät könnten den Betrieb dieser Vorrichtungen stören, was möglicherweise zu Fehlfunktionen und Unfällen führen könnte.
 - Falls das Wiederaufladen auch nach Ablauf der vorgegebenen Ladezeit noch nicht abgeschlossen ist, beenden Sie den Ladevorgang. Wird das Aufladen des Akkus fortgesetzt, könnte dies zu Wärmeentwicklung in der Batterie, zu Batterieberänden und zum Reißen der Batterie führen.

For California customers only:

This product contains a battery that contains perchlorate material.
Perchlorate Material -special handling may apply.
See www.dtsc.ca.gov/hazardouswaste/perchlorate



Safety Instructions (Read these safety instructions before operating the unit.)

SAFETY PRECAUTIONS



CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



UKCA DECLARATION OF CONFORMITY

Hereby, [D&M Holdings Inc.] declares that our product is in compliance with following UK regulations. The full text of the UKCA declaration of conformity is available at the following internet address:

- <UKCA Regulations>
- Radio Equipment Regulation 2017
 - The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
 - Eco design for Energy-Related Products Regulations 2010

<UKCA declaration of conformity URL: <http://manuals.denon.com/CEdeclaration/>>

UK Importer: D+M Audiovisual Ltd
Cells 1 & 2 Kopshop 6 Old London Road
Kingston Upon Thames KT2 6QF UK

UK
CA

WARNINGS

NOTES ON USE

- Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack.
- Handle the power cord carefully. Hold the plug when unplugging the cord.
- Keep the unit free from moisture, water, and dust.
- Unplug the power cord when not using the unit for long periods of time.
- Do not obstruct the ventilation holes.
- Do not let foreign objects into the unit.
- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Never disassemble or modify the unit in any way.
- Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains.
- Naked flame sources such as lighted candles should not be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not handle the mains cord with wet hands.
- When the switch is in the OFF (STANDBY) position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
- Do not bend forcibly the plug on the equipment or the connection between the connector and micro USB/USB cable.

(Only amplifier)



Hot surface mark

CAUTION:
HOT SURFACE. DO NOT TOUCH.

The top surface over the internal heat sink may become hot when operating this product continuously.

Do not touch hot areas, especially around the "Hot surface mark" and the top panel.

CAUTION:

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.

The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

CAUTION:

To prevent electric shock hazard, do not connect to mains power supply while grille is removed.



DECLARATION OF CONFORMITY

Hereby, [D&M Holdings Inc.] declares that our product is in compliance with following EU/EC Directives. The full text of the EU declaration of conformity is available at the following internet address:

ErP: EC regulation 1275/2008 and its frame work directive 2009/125/EC including amendment 801/2013
RoHS: 2011/65/EU, and amendment directive (EU) 2015/863
RE: 2014/53/EU



A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal. This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.



Pb

<EU declaration of conformity URL:
<http://manuals.denon.com/CEdeclaration/>>

 
D&M Holdings Inc.
2-1 Nissin-cho, Kawasaki-ku, Kawasaki, Kanagawa, 210-8569 Japan
EU importer: D&M Europe B.V.
Beemdstraat 11, 5653 MA Eindhoven, The Netherlands

CAUTIONS

When mounting the speakers on a wall

- The speakers can be mounted on a wall using the keyhole hook on its rear panel.
- When you mount the speakers, be sure to install them properly and securely.

1. Screw in one self-tapping screw (commercially available, 3/16 inch / 5 mm to 1/4 inch / 6 mm diameter) into a wall that has sufficient strength to support the weight of the speaker, or into reinforcing material on the wall.
2. Hook the keyhole hook on the back of the speaker onto the head of the self-tapping screw.



- Check that the head of the self-tapping screw hooks securely into the keyhole hook hole.
- Do not attempt to install this product onto a wall made of material that may crumble easily, such as mortar or decorative plywood. Doing so may result in the screw pulling out and speaker falling, causing damage to the speaker or injury.
- Do not install the speaker using other methods such as nails or double-sided tape. The nails may become loose due to vibration or the double-sided tape may peel off due to prolonged use, causing the speaker to fall.
- Be sure to fix the cables in place so that they cannot be pulled or tripped over by accident.
- Be sure to check that the product is safe after installation. Please note that we cannot accept any liability for accidents, etc. that occur as a result of where or how this product is installed. If you are unsure of how to install this product safely, request a professional contractor do the installation work.

D&M Holdings Inc. 5431 10752 10AD



70-DHT517-SAFB3

Notes on Radio

USA CANADA

☐ FCC Information (For US customers)

1. COMPLIANCE INFORMATION

- **Product Name:** HOME THEATER SYSTEM
- **Model Number:** DHT-S517
- **THIS PRODUCT'S FCC ID:** BV2-DHT-S517BAR/
BV2-DHT-S517SUB

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

Sound United, LLC
5541 Fermi Court Carlsbad, CA 92008, USA
Tel. (800) 377-7655

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by Denon may void your authority, granted by the FCC, to use the product.

3. IMPORTANT (For Network)

When connecting this product to network hub or router, use only a shielded STP or ScTP LAN cable which is available at retailer. Follow all installation instructions. Failure to follow instructions could void your authority, granted by the FCC, to use the product.

4. CAUTION (For Bluetooth/Wi-Fi)

- To comply with FCC RF exposure compliance requirement, separation distance of at least 20 cm must be maintained between this product and all persons.
- This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

5. NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

☐ INFORMATION FCC (Pour la clientèle étasunienne)

1. INFORMATIONS DE CONFORMITE

- **Nom du produit :** SYSTÈMES HOME CINEMA
- **Numéro de modèle :** DHT-S517
- **FCC ID DE CE PRODUIT :** BV2-DHT-S517BAR/
BV2-DHT-S517SUB

Ce produit est conforme à la section 15 du règlement FCC. L'utilisation est sujette aux deux conditions suivantes : (1) ce produit ne provoque pas d'interférences nocives et (2) ce produit doit accepter toute interférence, y compris les interférences pouvant entraîner un fonctionnement non souhaitable.

Sound United, LLC
5541 Fermi Court Carlsbad, CA 92008, USA
Tel. (800) 377-7655

2. REMARQUE IMPORTANTE : NE PAS MODIFIER CE PRODUIT

Ce produit, lorsqu'il est installé comme indiqué dans les instructions de ce manuel, est conforme aux normes FCC. Les modifications qui ne sont pas expressément approuvées par Denon peuvent annuler l'autorisation FCC à utiliser le produit.

3. IMPORTANT (Pour réseau)

Lors du branchement de ce produit à un routeur ou à un concentrateur réseau, n'utilisez qu'un câble STP ou ScTP LAN blindé (disponible chez un détaillant).

Suivre toutes instructions d'installation. Dans le cas contraire, cela pourrait annuler l'autorisation FCC à utiliser cet appareil.

4. PRECAUTION (Pour Bluetooth/Wi-Fi)

- Afin de répondre aux exigences de conformité FCC sur l'exposition aux RF, une distance d'au moins 20 cm doit être maintenue entre cet appareil et toutes les personnes.
- Cet appareil ainsi que son antenne ne doivent pas se trouver à proximité immédiate, ni être utilisés en association avec une autre antenne ou un autre émetteur.

5. NOTE

Ce produit a été testé et il est conforme aux limitations des dispositifs numériques de Class B, en vertu de la section 15 du règlement FCC. Ces limitations sont conçues pour fournir une protection raisonnable contre les interférences nocives sur une installation résidentielle.

Ce produit génère, utilise et émet de l'énergie de radiofréquence et s'il n'est pas installé et utilisé conformément aux instructions, il peut entraîner des interférences néfastes avec les communications radio. Toutefois, nous ne pouvons pas garantir l'absence d'interférence avec certaines installations. En cas d'interférences néfastes sur la réception de la radio ou de la télévision provoquées par cet appareil, survenant au moment de l'activation ON ou de la désactivation OFF, nous conseillons à l'utilisateur d'essayer de corriger l'interférence comme suit :

- Réorienter ou déplacer l'antenne.
- Augmenter la distance entre l'équipement et le récepteur.
- Connecter l'appareil à la prise murale d'un circuit différent de celui du récepteur.
- Consulter un revendeur local agréé pour la distribution de ce type de produit ou un technicien radio/TV expérimenté.

☐ IC Information (For Canadian customers)

1. PRODUCT

- **THIS PRODUCT'S IC ID:** 10369A-DHTS517BAR/
10369A-DHTS517SUB

This product complies with RSS-rules of Industry Canada. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation. This Class B digital apparatus complies with Canadian ICES-003.

2. CAUTION

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

☐ Informations sur IC (pour les clients canadiens)

1. APPAREIL

- **IC ID DE CE PRODUIT :** 10369A-DHTS517BAR/
10369A-DHTS517SUB

Cet appareil est conforme à la norme règles CNR du Canada. L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

2. ATTENTION

Afin de réduire le risque d'interférence aux autres utilisateurs, il faut choisir le type d'antenne et son gain de façon à ce que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne soit pas supérieure au niveau requis pour l'obtention d'une communication satisfaisante.

For Canadian customers/Pour les clients canadiens :
CAN ICES-3(B)/NMB-3(B)

☐ RF Exposure Information

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Cet équipement est conforme aux normes d'exposition aux radiations FCC/IC définies pour un environnement non contrôlé et satisfait les directives d'exposition à la radiofréquence (RF) dans le supplément C des OET65 et RSS-102 des règles d'exposition à la fréquence radio (RF) IC. Cet équipement a de très faibles niveaux d'énergie RF qui sont jugés conformes sans test de taux d'absorption spécifique (SAR).

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

[ENGLISH]**1. DECLARATION OF CONFORMITY**

Hereby, [D&M Holdings Inc.] declares that our product [Product Name: HOME THEATER SYSTEM, Model Number: DHT-S517] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://manuals.denon.com/CEdeclaration/>

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets RE directive requirements. Modification of the product could result in hazardous Radio and EMC radiation.

3. CAUTION

Separation distance of at least 20 cm must be maintained between this product and all persons. This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

[DEUTSCH]**1. ÜBEREINSTIMMUNGSEKTLÄRUNG**

Hiermit erklärt [D&M Holdings Inc.], dass unser Produkt [Produktname: HEIMKINO SYSTEM, Modellnummer: DHT-S517] der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://manuals.denon.com/CEdeclaration/>

2. WICHTIGER HINWEIS: NEHMEN SIE KEINE VERÄNDERUNGEN AN DIESEM PRODUKT VOR

Wenn dieses Produkt entsprechend dieser Bedienungsanleitung aufgebaut wird, entspricht es den Anforderungen der RE-Richtlinie. Veränderungen am Produkt können zu gefährlicher Funk- und EMV-Strahlung führen.

3. VORSICHT

Zwischen dieses Produkts und Personen muss ein Schutzabstand von 20 cm eingehalten werden. Dieses Produkt und seine Antenne dürfen nicht neben anderen Antennen oder Sendern aufgestellt oder zusammen mit ihnen verwendet werden.

[FRANÇAIS]**1. DECLARATION DE CONFORMITE**

Le soussigné, [D&M Holdings Inc.], déclare que notre produit [Nom du produit: SYSTÈME HOME CINEMA, Numéro de modèle: DHT-S517] est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante :

<http://manuals.denon.com/CEdeclaration/>

2. MISE EN GARDE IMPORTANTE : NE JAMAIS MODIFIER CE PRODUIT

Si toutes les consignes indiquées dans ce mode ont été respectées pendant son installation, ce produit est conforme aux directives RE. Toute modification du produit risquerait alors de générer des radiations radio et EMC dangereuses.

3. ATTENTION

L'appareil devra être située à une distance de 20 cm au moins des personnes. Ce produit ainsi que son antenne ne devront en aucun cas être utilisés à proximité d'une autre antenne ou transmetteur.

[ITALIANO]**1. DICHIARAZIONE DI CONFORMITÀ**

Il fabbricante, [D&M Holdings Inc.], dichiara che il nostro prodotto [Nome del prodotto: SISTEMA HOME THEATER, Numero di modello: DHT-S517] è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://manuals.denon.com/CEdeclaration/>

2. AVVERTENZA IMPORTANTE: NON MODIFICARE QUESTO PRODOTTO

Se installato come indicato nelle istruzioni del presente manuale, questo prodotto soddisfa i requisiti della direttiva RE. Eventuali modifiche apportate al prodotto potrebbero causare pericolose radiazioni radio ed EMC.

3. ATTENZIONE

È necessario mantenere una distanza minima di 20 cm tra questo prodotto e le persone. Questo prodotto e la relativa antenna non devono essere posizionati in prossimità di altre antenne o trasmettitori e non devono essere utilizzati congiuntamente a questi ultimi.

[ESPAÑOL]**1. DECLARACIÓN DE CONFORMIDAD**

Por la presente, [D&M Holdings Inc.], declara que nuestro producto [Nombre del producto: SISTEMA CINE EN CASA, Número de modelo: DHT-S517] es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://manuals.denon.com/CEdeclaration/>

2. NOTA IMPORTANTE: NO MODIFIQUE ESTE PRODUCTO

Este producto, si es instalado de acuerdo con las instrucciones contenidas en este manual, cumple los requisitos de la directiva RE. La modificación del producto puede producir radiación de Radio y EMC peligrosa.

3. PRECAUCIÓN

Se debe mantener una separación de al menos 20 cm del producto y las personas. Este producto y su antena no debe instalarse ni utilizarse conjuntamente con otra antena o transmisor.

[NEDERLANDS]**1. EENVORMIGHEIDSVKLRING**

Hierbij verklaar ik, [D&M Holdings Inc.], dat ons product [Productnaam: THUISBIOSCOOP SYSTEEM, Modelnummer: DHT-S517] conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <http://manuals.denon.com/CEdeclaration/>

2. BELANGRIJKE MEDEDELING: BRENG AAN DIT PRODUCT GEEN AANPASSINGEN AAN

Dit product, indien geïnstalleerd volgens de aanwijzingen in deze gebruiksaanwijzing, voldoet aan de vereisten van de RE-richtlijn. Aanpassing van dit product kan gevaarlijke radio- en EMC-straling tot gevolg hebben.

3. LET OP

Houd tussen en personen altijd een afstand van ten minste 20 cm aan. Dit product en zijn antenne mogen niet in de buurt van een andere antenne of zender worden geplaatst of in combinatie daarmee worden gebruikt.

[SVENSKA]**1. ÖVERENSSTÄMMELSEINTY**

Härmed försäkrar [D&M Holdings Inc.], att vår produkt [Produktnamn: HEMMABIOSYSTEM, Modellnummer: DHT-S517] överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

<http://manuals.denon.com/CEdeclaration/>

2. VIKTIGT: APPARATEN FÅR INTE MODIFIERAS

Under förutsättning att apparaten installeras enligt anvisningarna i denna bruksanvisning, uppfyller denna kraven i RE-direktivet. Ev. modifiering av apparaten kan resultera i farlig radio- och elektromagnetisk strålning.

3. FÖRSIKTIGT

Se till att det finns ett avstånd på minst 20 cm mellan apparatens och personer i omgivningen. Apparaten och dess antenn får inte placeras eller användas i närheten av andra antenner eller sändare.

[РУССКИЙ]**1. СЕРТИФИКАТ СООТВЕТСТВИЯ**

Настоящим, [D&M Holdings Inc.], заявляет, что наш продукт [Наименование товара: СИСТЕМА ДОМАШНИЙ КИНОТЕАТР, Номер модели: DHT-S517] соответствует Директиве 2014/53/EU. Полный текст декларации соответствия ЕС можно получить по следующему интернет-адресу: <http://manuals.denon.com/CEdeclaration/>

2. ВАЖНО! НЕ ИЗМЕНЯЙТЕ ДАННЫЙ ПРОДУКТ

Продукт, установленный согласно инструкциям в настоящем руководстве, отвечает требованиям директивы RE. Изменение продукта может привести к появлению опасного электромагнитного излучения.

3. ПРЕДУПРЕЖДЕНИЕ

Не приближайтесь к данному изделию ближе, чем на 20 см. Запрещается использовать данный продукт и антенну с другой антенной или передатчиком.

[POLSKI]**1. DEKLARACJA ZGODNOŚCI**

[D&M Holdings Inc.], niniejszym oświadczam, że nasz produkt [Nazwa produktu: SYSTEM KINA DOMOWEGO, Numer modelu: DHT-S517] jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <http://manuals.denon.com/CEdeclaration/>

2. UWAGA: MODYFIKACJA TEGO URZĄDZENIA JEST ZABRONIONA

Po zainstalowaniu zgodnie z instrukcjami zawartymi w niniejszej instrukcji obsługi urządzenie to będzie spełniać wymogi dyrektywy RE. Wprowadzanie modyfikacji do tego urządzenia może skutkować powstaniem niebezpiecznego promieniowania elektromagnetycznego oraz radiowego.

3. OSTRZEŻENIE

Miedzy tego produktu i wszelkimi osobami musi być zachowana odległość przynajmniej 20 cm. Urządzenia wraz z anteną nie można instalować w połączeniu z inną anteną lub nadajnikiem.

<EU declaration of conformity URL:

<http://manuals.denon.com/CEdeclaration/>>

D&M Holdings Inc.

2-1 Nissin-cho, Kawasaki-ku, Kawasaki, Kanagawa, 210-8569 Japan

EU importer: D&M Europe B.V.

Beemdstraat 11, 5653 MA Eindhoven, The Netherlands

Radio Specification (for Europe model)

Type	Frequency Range	Max. RF Power
Bluetooth	2,402 - 2,480 MHz	20 dBm
Wireless Module(BAR/SUB)	2,400 - 2,483.5 MHz	20 dBm

Note: The above specification is based on the RE Directive.
There is a possibility to varies by countries.

**UKCA DECLARATION OF CONFORMITY**

Hereby, [D&M Holdings Inc.] declares that our product is in compliance with Radio Equipment Regulation 2017 of UK regulations. The full text of the UKCA declaration of conformity is available at the following internet address:

<UKCA declaration of conformity URL:

<http://manuals.denon.com/CEdeclaration/>>

UK Importer: D+M Audiovisual Ltd
Cells 1 & 2 Kopshop 6 Old London Road
Kingston Upon Thames KT2 6QF UK



Congratulations on purchasing this Denon product!
We invite you to join the Denon Owner's Club.

Thank you for choosing Denon.

Be the first to know about upcoming Denon products and get exclusive previews of new technologies. You will also receive members only offers from our online store and be the first in line for all promotions and contests.

<http://usa.denon.com/ownersclub>

Join today!

Please register your product at,

USA Customers : <http://usa.denon.com/register>

Canada Customers : <http://ca.denon.com/register>

Denon Factory Service Information

USA

DENON FACTORY SERVICE by PANURGY OEM

701 Ford Road (South Dock)

Rockaway, NJ 07866-2053

(973) 625-4056

(973) 625-9489 Fax

<http://www.panurgoem.com/Denon/Denonrepair.html>

To locate an authorized warranty service center within your area please visit our web site at
<http://usa.denon.com/servicecenters>

CANADA

DENON FACTORY SERVICE by MICROLAND TECHNICAL SERVICES

170 Alden Road, Unit 2

Markham, ON L3R4C1

(905) 940-1982

<http://clientportal.microland.ca/rmastart.aspx>

To locate an authorized warranty service center within your area please visit our web site at
<http://ca.denon.com/servicecenters>

This warranty will be honored only in the **U.S.A.**

DENON[®]

LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by DENON ELECTRONICS (USA), LLC remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED DENON ELECTRONICS (USA), LLC DEALER.

Product Category

A/V Controller, A/V Receiver, AM/FM Receiver	AVC, AVR, DRA	2	YEAR(S)
IN-Command series™ AV Receivers	AVR-****CI, AVR-X	3	
DVD Receiver, DVD Home Theater System	ADV, S	1	
D/A Converter, Portable USB-DAC / Headphone Amplifier	DA	2	
Pre-Amplifier, Digital Pre-Amplifier, Power-Amplifier, Head Amplifier	PRA, AVP, DAP, POA, HA	3	
Tuner, Integrated Amplifier	TU, PMA	3	
Option Board	ACD	3	
Super Audio CD / CD Player, DVD Player, Blu-ray Disc Player	DCD, DCM, DVD, DVM, DBR DBT	1	
CD Recorder	CDRW	1	
CD Receiver, Network CD Receiver, Network Receiver	RCD, DRA-N	1	
Network Audio Player	DNP	2	
System Audio, CD Receiver System	D-F, D-M, S, D-T	1	
Turntable	1 Autolift / Manual	4	
	2 Full Automatic	2	
Speaker	SC	5	
Sub-woofer	DSW	1	
Microphone	DM-S, DM-A	2	
Wireless Speaker	DENON HOME	2	
Bluetooth Speaker	DSB	1	
iPhone® / iPod® Docks	ASD, DSD	1	
Headphone	AH	1	
Sound bar	DHTS	2	
TV Speaker Base	DHTT	1	
Video Processor	DVP	3	
Cartridge	DL	90	DAYS
Remote Controller	RC	90	
Cables	AK	90	
Speaker stands	ASF	90	

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in the U.S.A. by DENON ELECTRONICS (USA), LLC. (2) Any product which is not purchased in the U.S.A. from an authorized DENON dealer. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact DENON as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside the U.S.A. (8) Damaged magnetic tape or CD/DVD/BD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, reconditioned or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or DENON ELECTRONICS (if you are uncertain as to whether a service station is DENON authorized, please visit our website at <http://usa.denon.com/servicecenters> or contact DENON as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service;

- You are responsible for transporting your unit or arranging for its transportation.
- If shipment of your unit is required:
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
- WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.**
- You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem.
In the case of a CD/DVD/BD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN THE U.S.A. ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Customer Support Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from state to state. This Warranty may not be altered other than in a writing signed by an officer of Denon Electronics USA, LLC.

DENON ELECTRONICS (USA), LLC
(a D&M Holdings Company)
100 Corporate Drive Mahwah, NJ 07430-2041
(201) 762-6665
www.usa.denon.com

DENON FACTORY SERVICE by PANURGY OEM
701 Ford Road (South Dock) Rockaway, NJ 07866-2053
(973) 625-4056
(973) 625-9489 Fax
<http://www.panurgoem.com/Denon/Denonrepair.html>

This warranty will be honored only in **Canada**.

DENON[®]

LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by D&M CANADA INC. remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED D&M CANADA INC. DEALER.

Product Category

A/V Controller, A/V Receiver, AM/FM Receiver	AVC, AVR, DRA	2	YEAR(S)
IN-Command series™ AV Receivers	AVR-****CI, AVR-X	3	
DVD Receiver, DVD Home Theater System	ADV, S	1	
D/A Converter, Portable USB-DAC / Headphone Amplifier	DA	2	
Pre-Amplifier, Digital Pre-Amplifier, Power-Amplifier, Head Amplifier	PRA, AVP, DAP, POA, HA	3	
Tuner, Integrated Amplifier	TU, PMA	3	
Option Board	ACD	3	
Super Audio CD / CD Player, DVD Player, Blu-ray Disc Player	DCD, DCM, DVD, DVM, DBP, DBT	1	
CD Recorder	CDRW	1	
CD Receiver, Network CD Receiver, Network Receiver	RCD, DRA-N	1	
Network Audio Player	DNP	2	
System Audio, CD Receiver System	D-F, D-M, S, D-T	1	
Turntable	1 Autolift / Manual	4	
	2 Full Automatic	2	
Speaker	SC	5	
Sub-woofer	DSW	1	
Microphone	DM-S, DM-A	2	
Wireless Speaker	DENON HOME	2	
Bluetooth Speaker	DSB	1	
iPhone® / iPod® Docks	ASD, DSD	1	
Headphone	AH	1	
Sound bar	DHTS	2	
TV Speaker Base	DHT-T	1	DAYS
Video Processor	DVP	3	
Cartridge	DL	90	
Remote Controller	RC	90	
Cables	AK	90	
Speaker stands	ASF	90	

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in Canada by D&M CANADA INC. (2) Any product which is not purchased in Canada from an authorized DENON dealer. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact D&M CANADA INC. as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside Canada. (8) Damaged magnetic tape or CD/DVD/BD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, reconditioned or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or D&M CANADA INC. (For an authorized DENON service station near you, please check our website <http://ca.denon.com/servicecenters> or contact D&M CANADA INC. as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service;

- You are responsible for transporting your unit or arranging for its transportation.
- If shipment of your unit is required:
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
- WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.**
- You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem.
In the case of a CD/DVD/BD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN CANADA ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Customer Support Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from province to province. This Warranty may not be altered other than in a writing signed by an officer of D&M Canada Inc.

D&M CANADA INC.
10462 Islington Avenue, Unit 8B
Kleinburg, Ontario L0J 1C0
(905) 475-4085
www.ca.denon.com

DENON FACTORY SERVICE
by MICROLAND TECHNICAL SERVICES
170 Alden Road, Unit 2 Markham, ON L3R 4C1
(905) 940-1982
<http://clientportal.microland.ca/rmastart.aspx>

Cette garantie ne sera honorée qu'au **Canada**.

DENON®

GARANTIE LIMITÉE

Durée du garantie non-transférable

La garantie de votre produit DENON, distribué et garanti par D&M CANADA INC. prend effet à partir de la date d'achat du consommateur original auprès d'un revendeur officiel D&M CANADA INC. pendant les périodes suivantes.

Catégorie de produit

Contrôleur A/V, Récepteur A/V, Récepteur AM/FM	AVC, AVR, DRA	2	ANNÉES
IN-Command series™ Récepteurs AV	AVR-****CI, AVR-X	3	
Récepteur DVD, Système DVD Home Theater	ADV, S	1	
Convertisseur N/A, USB-DAC Portable / Amplificateur casque	DA	2	
Préamplificateur, préamplificateur numérique, Amplificateur de puissance, Préamplificateur phono	PRA, AVP, DAP, POA, HA	3	
Syntoniseur, amplificateur intégré	TU, PMA	3	
Carte optionnelle	ACD	3	
Lecteur Super Audio CD / CD, Lecteur DVD, Lecteur Disque Blu-ray	DCD, DCM, DVD, DVM, DBP, DBT	1	
Enregistreur CD	CDRW	1	
Ampli-tuner avec Lecteur de CD, Récepteur audio / CD avec réseau intégré / Chaîne audio avec réseau intégré	RCD, DRA-N	1	
Lecteur Audio Réseau	DNP	2	
Système Audio, Système CD tuner	D-F, D-M, S, D-T	1	
Table tournante	1 Levée auto	4	
	2 Auto complet	2	
Haut-parleurs	DP-F, DP-USB	5	
Sub-woofer	SC	1	
Micro	DSW	2	
Enceinte sans fil	DM-S, DM-A	2	
Enceinte Bluetooth	DENON HOME	2	
iPhone® / iPod® Docks	DSB	1	
Casque d'écoute	ASD, DSD	1	
Barre de son	AH	1	
Base d'enceinte pour TV	DHT-S	2	
Processeur vidéo	DHT-T	1	
Cellule phonolectrice	DVP	3	
Télécommande	DL	90	JOURS
Câble	RC	90	
Support pour enceinte acoustique	AK	90	
	ASF	90	

Apple et iPod sont des marques commerciales d'Apple Inc., déposées aux États-Unis et dans d'autres pays.

Couverture

Cette garantie couvre tous les défauts de matériel ou de fabrication du produit, à l'exception de ceux indiqués ci-après qui conformément selon les termes durant la période de la garantie. Ne sont pas couverts par la garantie: (1) Tout produit qui n'est pas distribué au Canada par D&M CANADA INC. (2) Tout produit qui n'a pas été acheté au Canada auprès d'un revendeur officiel DENON (Note: On peut identifier les revendeurs officiels DENON par leur auto-collant "REVENDEUR OFFICIEL DENON" affiché dans leur magasin. Si vous doutez qu'un revendeur soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous.) (3) Tout produit dont le numéro de série a été effacé, modifié ou enlevé. (4) Dommages dus à la détérioration ou à un fonctionnement défectueux à la suite de: a) accident, acte de la nature, abus, utilisation impropre, négligence, réparation au moyen d'un produit non autorisé, débalé, modification, emploi contraire aux instructions fournies avec le produit, b) réparation ou tentative de réparation par quelqu'un non reconnu par DENON. c) tout envoi du produit (la réclamation doit être présentée au transporteur), (5) Articles sujets à détérioration par l'usage (têtes de magnétophone, cellules phono, pointes de lecture phono, piles, etc.). (6) Vérification périodique qui ne révèle aucun défaut. (7) Utilisation du produit hors du Canada. (8) Bandes magnétiques, disques CD/DVD/BD endommagés. (9) Utilisation commerciale, industrielle ou professionnelle. (10) Toutes charges d'installation ou de déplacement résultant d'un défaut du produit.

Notre paiement

Si votre produit DENON est reconnu défectueux par DENON durant la période d'application de la garantie après la date d'achat du consommateur, DENON réparera ou, à son choix, remplacera avec un modèle neuf, usagé ou équivalent ce produit défectueux sans frais de pièces ni de main d'œuvre.

Application de la garantie

Si votre appareil nécessite une vérification ou une réparation, il peut être apporté ou envoyé à tout atelier de service autorisé DENON ou directement chez D&M CANADA INC. (Pour trouver l'atelier autorisé le plus près, prière de vérifier sur le site Internet de DENON au <http://ca.denon.com/servicecenters> ou bien contactez D&M Canada Inc aux coordonnées indiquées ci bas). Dans tous les autres cas, les procédures suivantes s'appliquent si votre appareil doit être envoyé pour une vérification ou une réparation sous garantie.

- Vous êtes responsable du transport de votre article ou vous devez vous arranger vous-même pour son transport.
 - Si votre article doit être envoyé, vous devez payer les frais d'envoi initiaux, mais nous payerons les frais de retour si la garantie couvre les réparations.
 - LORSQUE VOUS RENVOYEZ VOTRE ARTICLE POUR UN SERVICE SOUS GARANTIE, VOUS DEVEZ JOINDRE UNE COPIE DE LA FACTURE D'ACHAT D'ORIGINE.
 - Vous devez inclure également vos nom, adresse, numéro de téléphone de jour, numéros de modèle et de série du produit et une description du problème.
- Dans le cas d'un lecteur CD/DVD/BD, joindre un disque que l'appareil n'a pu lire pour test. Il vous sera retourné avec l'article.

CETTE GARANTIE EST VALABLE SEULMENT AU CANADA.

Si votre produit ne requiert aucun service mais que vous avez des questions quant à son fonctionnement, contactez notre département service clientèle dont l'adresse figure ci-dessous.

CETTE GARANTIE EST EXPRESSÉMENT FAITE EN LIEU ET PLACE DE TOUTES LES AUTRES GARANTIES EXPRIMÉES OU SOUS-ENTENDUES Y COMPRIS, SANS SE LIMITER À CELLES-CI, LES GARANTIES MARCHANDES ET SPÉCIFIQUES POUR UN USAGE PARTICULIER.

NOTRE RESPONSABILITÉ SE LIMITE À LA RÉPARATION OU AU REMPLACEMENT, À NOTRE CHOIX, DE TOUT PRODUIT DÉFECTUEUX ET N'INCLUT EN AUCUN CAS DES DOMMAGES FORTUITS, COMMERCIAUX INDIRECTS NI MATÉRIELS D'AUCUNE SORTE. NOUS NOUS SOMMES PAS RESPONSABLES POUR LA PERTE DE LES PRODUITS ET/OU LES MARCHANDISES ENDOMMAGÉES PENDANT LE TRANSPORT DES BIENS.

CERTAINES PROVINCES NE PERMETTENT PAS DE LIMITES QUANT À LA DURÉE D'UNE GARANTIE SOUS-ENTENDUE ET/OU NE PERMETTENT PAS L'EXCLUSION DE DOMMAGES FORTUITS. LES LIMITATIONS ET EXCLUSIONS MENTIONNÉES PLUS HAUT PEUVENT NE PAS S'APPLIQUER À VOTRE CAS.

Cette garantie vous donne des droits légaux spécifiques, mais il se pourrait que vous ayez d'autres droits qui varient d'une province à l'autre. La garantie ne peut être modifiée que par un document signé par un gestionnaire autorisé de D&M Canada.

D&M CANADA INC.
10462 Islington Avenue, Unit 8B
Kleinburg, Ontario L0J 1C0
(905) 475-4085
www.ca.denon.com

DENON FACTORY SERVICE
by MICROLAND TECHNICAL SERVICES
170 Alden Road, Unit 2 Markham, ON L3R 4C1
(905) 940-1982
<http://clientportal.microland.ca/rmastart.aspx>