

# INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service  
Email: [journey@nemoequipment.com](mailto:journey@nemoequipment.com)  
Phone: 800-997-9301



## 1 Stake Corners

Secure the corner anchors by pounding the stakes into the ground or burying them in the snow. If the ground is too hard for stakes, tie anchors to rocks or other heavy objects.



## 2 Attach Main Poles

Arrange two long poles diagonally so pole tips point toward the tent corners. Insert both pole end tips through the short black sleeves and matching corner grommets. Clip tent to poles.



## 3 Attach Side Poles

Insert one side pole through the short red sleeves and into matching grommets. Repeat with second side pole and grey sleeves. Clip tent to poles.



## 4 Attach Vestibule

Insert prebent pole through sleeve on the vestibule, locking pole tips in the grommets. Zip vestibule to tent.



## 5 Tension

Stake both vestibules and pull firmly on all corner anchors. Add guy-lines for additional strength. A properly tensioned tent ensures maximum water shedding and wind resistance.



©2018 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

**CHOGORI™ SERIES**