FLEXSTEEL°


W1027-06


ENTERTAINMENT BASE


IMPORTANT

Carefully remove all parts from the carton, and put them individually on a soft cloth to prevent damage to the parts.

We have taken great care in the design of this product and request that you carefully and accurately follow our assembly instructions to ensure proper set-up.

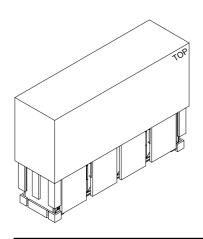


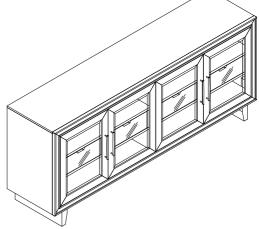

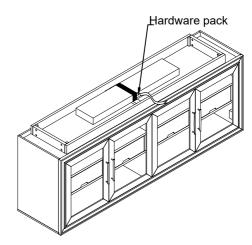

Part List

Assembly Instructions 1/3

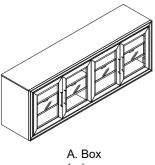

1 piece



B. Left Leg 1 piece



C. Right Leg 1 piece



D. Support Leg 1 piece

Hardware List



Bolt Ø5/16"-18 UNC x 1-3/4" 8 pieces



Spring Washer Ø5/16" x 1.5mm 8 pieces



Flat Washer Ø5/16" x Ø19mm x 1.5mm 8 pieces



Hex Key 5/32" 1 piece



Anti- Tipping 1set

FLEXSTEEL°


Assembly Instructions 2/3

IMPORTANT NOTES

- Do not tighten up all the bolts until each part is properly assembled.
- Keep the Hex Key in a safe place as you may need to tighten up the bolts in the future.
- Use a soft cloth between these parts and the floor.
- We recommend this product be assembled by at least two adults.


STEP 1

The assembly parts are located at the bottom of the cabinet - Left Leg (B) and Right Leg (C) (See Figure 1).

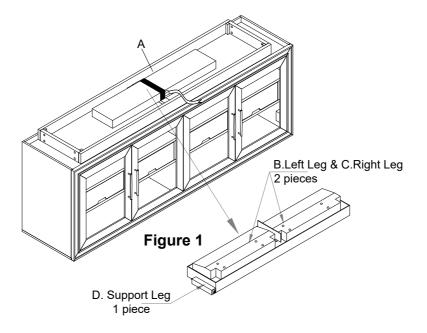

STEP 2

Fix Left Leg (B) and Right Leg (C) to the Box (A). Insert Bolt, Spring Washer, Flat Washer and fully tighten bolts with Hex Key (See Figure 2), Connect the Support Leg (D) to Box (A) by turning by hand until tight (See Figure 3).

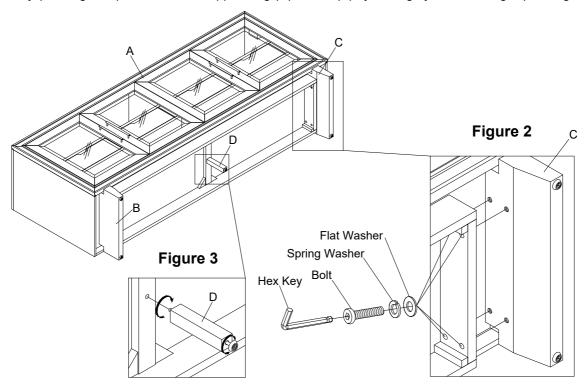

FLEXSTEEL°


Assembly Instructions 3/3

IMPORTANT NOTES

- Do not tighten up all the bolts until each part is properly assembled.
- Keep the Hex Key in a safe place as you may need to tighten up the bolts in the future.
- · Use a soft cloth between these parts and the floor.
- · We recommend this product be assembled by at least two adults.

STEP 3

Flip cabinet over, and adjust the levelers on the legs until the furniture is leveled. (See Figure 4) When two drawers collide, adjust the knob on the slide to raise the drawer (See Figure 5).

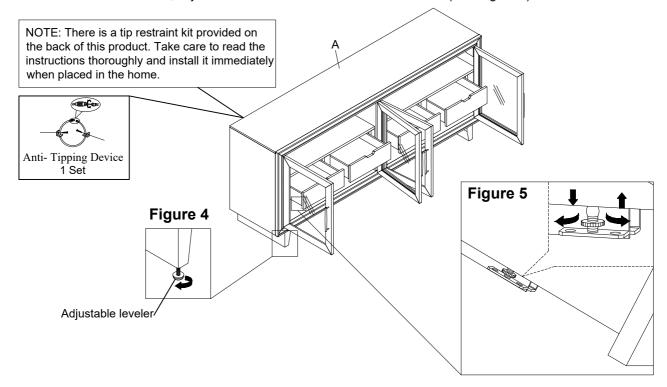

CARE INSTRUCTIONS

- To avoid scratches, do not place sharp or jagged objects directly on the table top.
- Do not place hot items directly on the table top.
- · Use placemats or trivets under hot items and coasters under beverages to prevent marks and stains.
- Avoid the use of harsh chemicals or abrasive cleaning materials.
- · Wipe the table clean with a soft, dry cloth after each use.
- Wipe up spills quickly with a soft, dry cloth.

Flexsteel Industries, Inc.

For Parts or Customer Service call toll-free:
1-888-415-3979
Monday-Friday
8:00 a.m. -5:00 p.m.
(Central Time)
Email:
customersolutions@flexsteel.com

www.flexsteel.com