# **home**styles

#### 9100-007

## Kitchen Cart


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



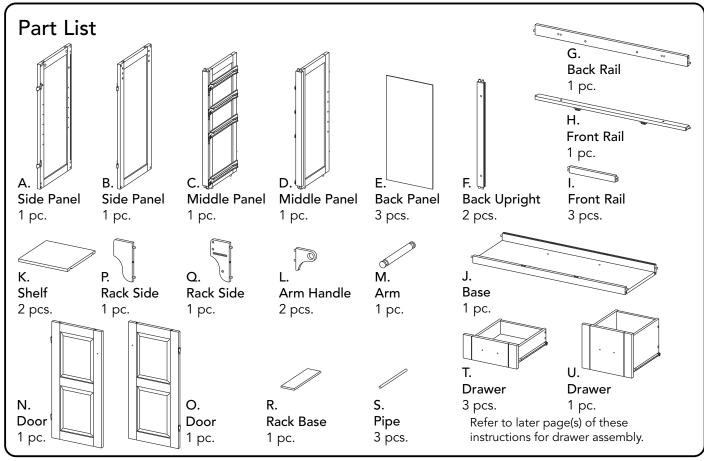

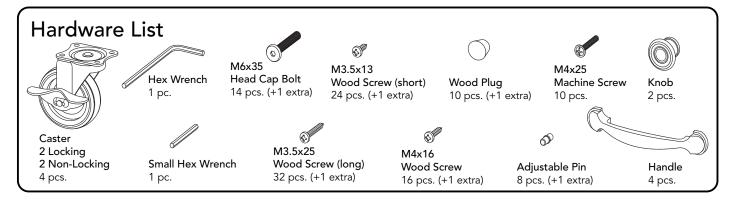


### 9100 Top carton is also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver

## Assembly Instructions 2/8

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

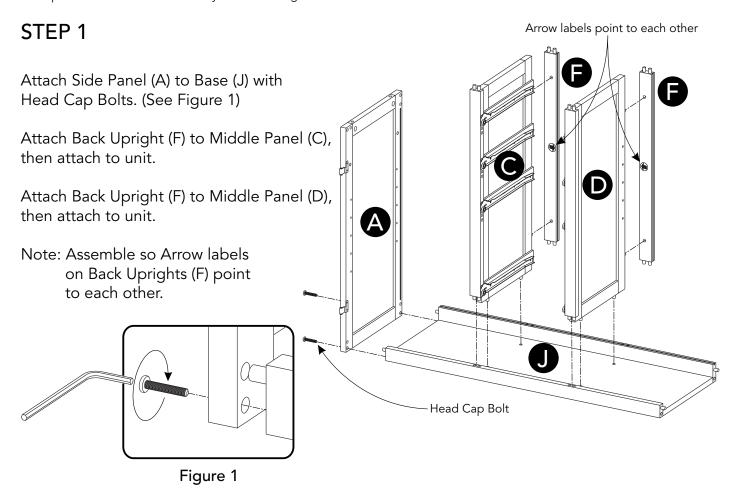

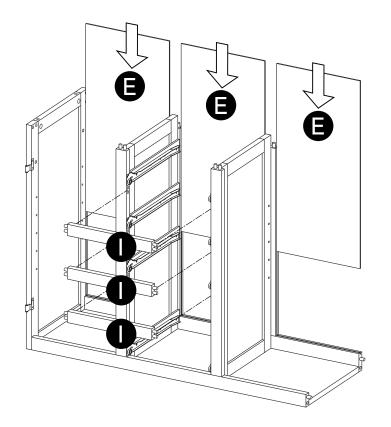

#### STEP 2


Attach lower Front Rail (I) to unit.

Attach middle Front Rail (I) to unit.


Attach upper Front Rail (I) to unit.

Slide Back Panels (E) into position.


## Assembly Instructions 3/8

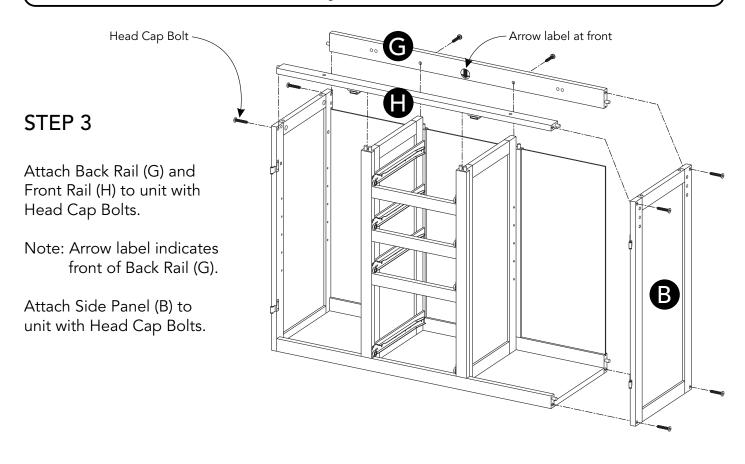

### STEP 4

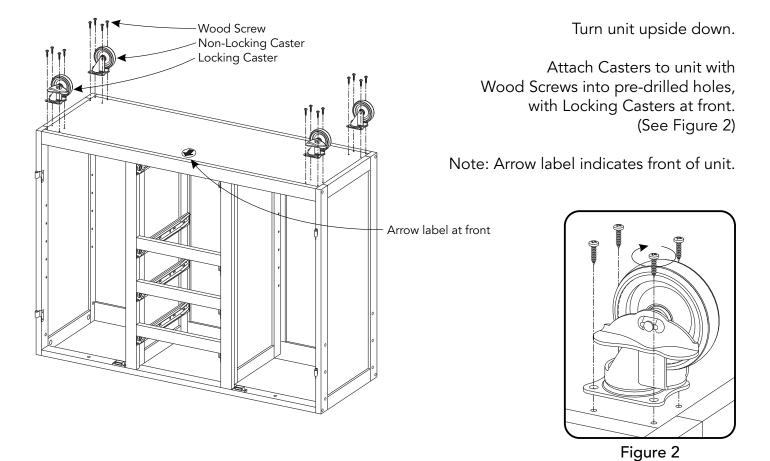

## Assembly Instructions 4/8

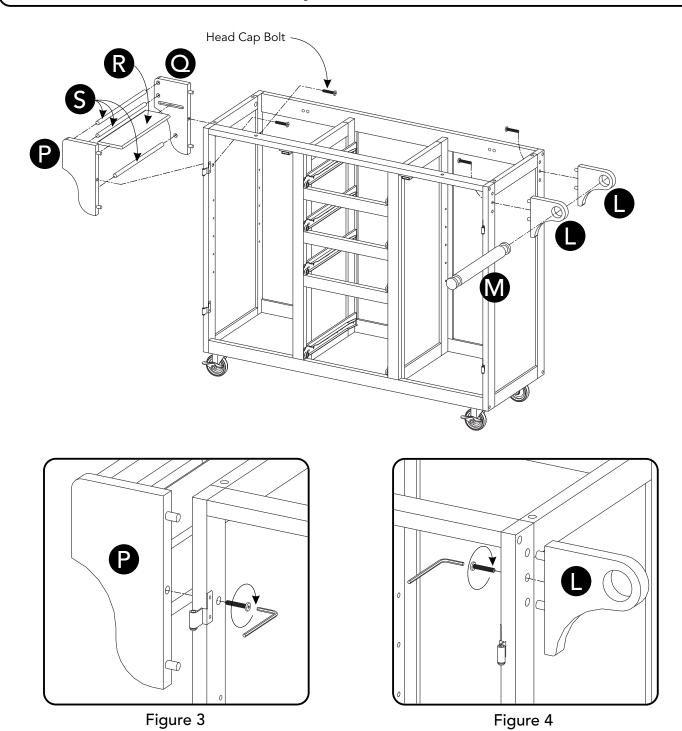

## STEP 5

Turn unit over to its upright position.

Attach Rack Side (P) to unit with Head Cap Bolt. (See Figure 3)


Slide Rack Base (R) and Pipes (S) into Rack Side (P).

Attach Rack Side (Q) to unit with Head Cap Bolt.

Attach Arm Handles (L) to unit with Head Cap Bolts. (See Figure 4)

Slide Arm (M) into position.

## Assembly Instructions 5/8

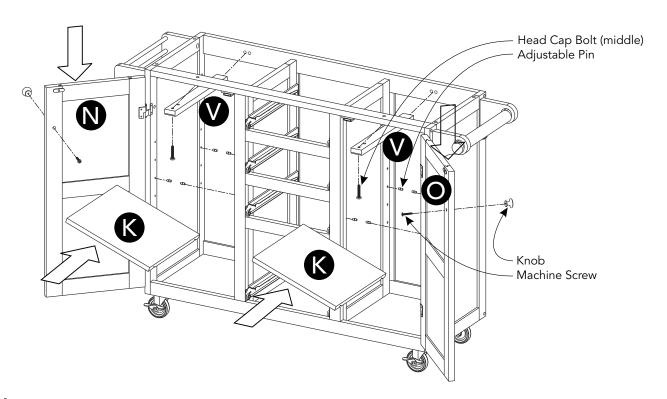

#### STEP 6

Insert Adjustable Pins into side panels and middle panels at desired level. (See Figure 5)

Place Shelves (K) into position.

Attach Doors (N) and (O) to unit by sliding door hinges into side panel hinges. (See Figure 6)

Attach Knobs to Doors (N) and (O) with Machine Screws. (See Figure 7)

Attach Supports (V) to unit with Head Cap Bolts (middle).

Note: Supports (V) and Head Cap Bolts (middle) are in 9100 Top carton.

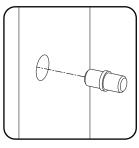


Figure 5

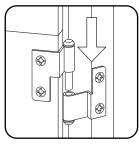


Figure 6


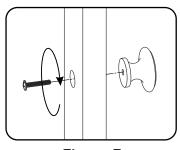


Figure 7

## Assembly Instructions 6/8

## Drawer (T)



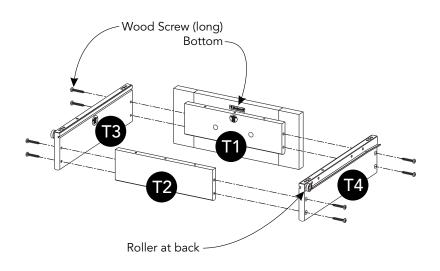

#### STEP 7


Attach Drawer Front (T1) and Drawer Back (T2) to Drawer Side (T3) with Wood Screws (long).


Attach Drawer Side (T4) to unit with Wood Screws (long).

#### STEP 8

Slide Drawer Bottom (T5) into groove.


Attach Drawer Bottom (T5) to unit with Wood Screws (short).

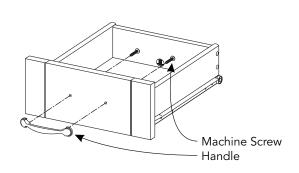

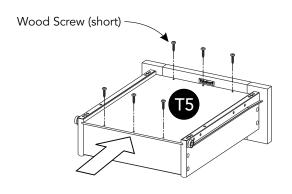


#### STEP 9


Attach Handle with Machine Screws.

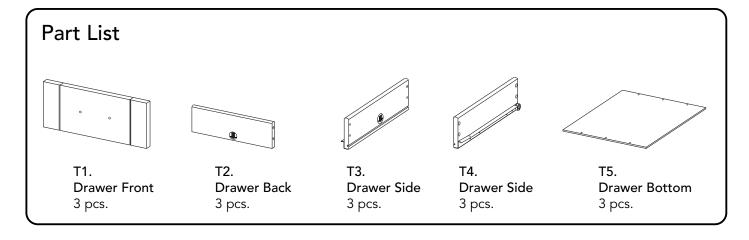

## Assembly Instructions 7/8

## Drawer (U)

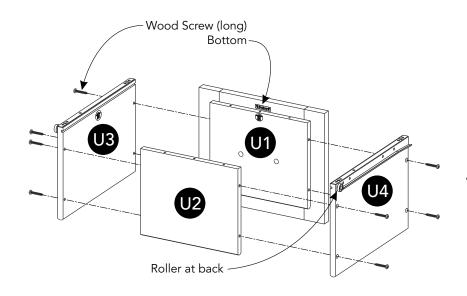

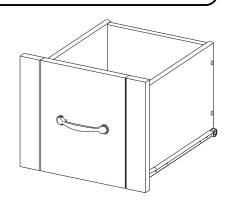

#### **STEP 10**


Attach Drawer Front (U1) and Drawer Back (U2) to Drawer Side (U3) with Wood Screws (long).


Attach Drawer Side (U4) to unit with Wood Screws (long).

#### **STEP 11**

Slide Drawer Bottom (U5) into groove.


Attach Drawer Bottom (U5) to unit with Wood Screws (short).

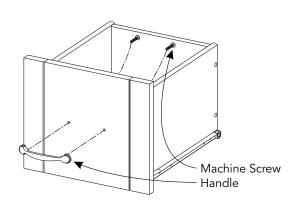

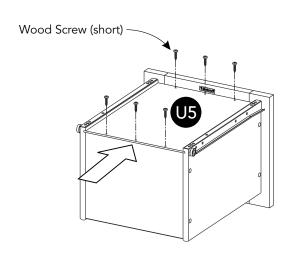


#### **STEP 12**

Attach Handle with Machine Screws.

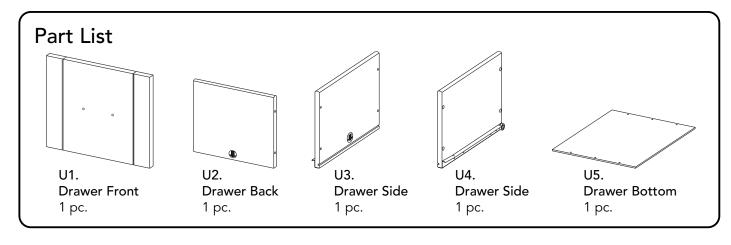

## Assembly Instructions 8/8

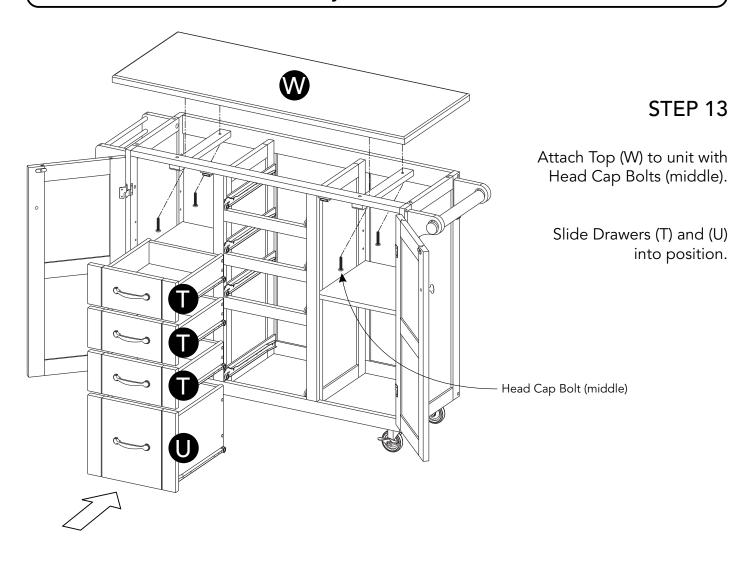

### **STEP 14**

Cover all holes with Wood Plugs. (See Figure 8)


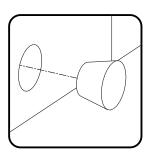


Figure 8

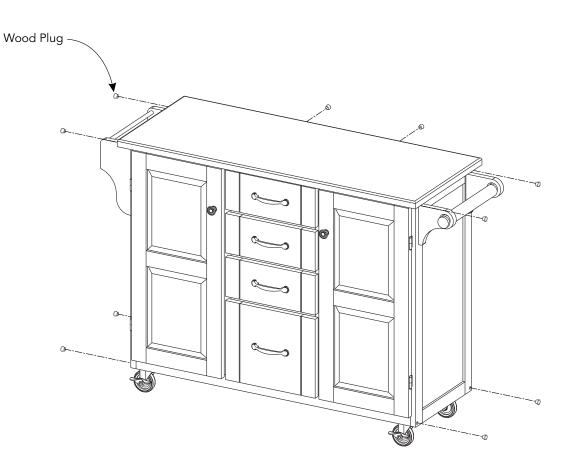


## Stainless Steel Top

#### **IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

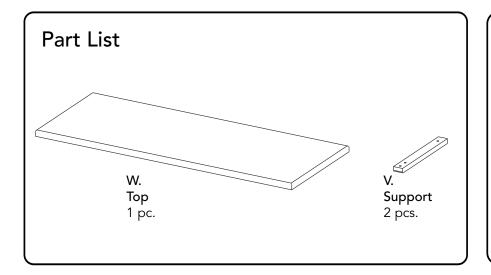



Head Cap Bolt (middle)

6 pcs. (+1 extra)

#### Care Instructions

This stainless steel top is made from high grade stainless steel on a strong wood product base construction.

To avoid scratching the top during assembly, do not remove the top from this carton until the body has been assembled and is ready for the top to be installed. After removing the top from this carton place it on a soft cloth.

This stainless steel top is ideal as a surface for food preparation but cannot be used as a cutting or chopping board. Do not use knives or any sharp objects directly on the top.

If scratched the following may improve the appearance of the top: Apply talcum powder or flour on the scratched area and rub with very fine steel wool in the same direction as the top's hairline scratch pattern.

For assembly see instructions in Cart carton.

# CARE INSTRUCTIONS

## **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

## **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

## **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



**home**styles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.