homestyles*

4420-95

Kitchen Cart


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



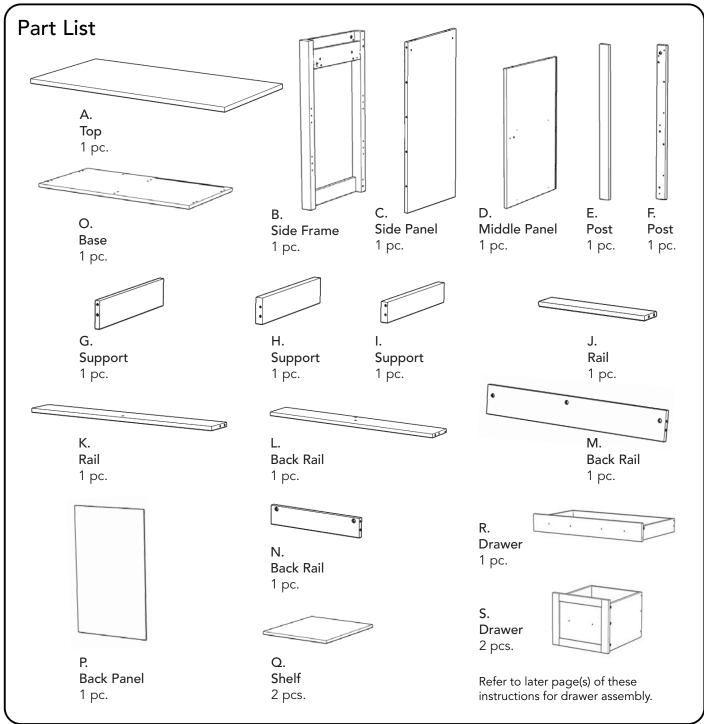

Tool(s) required for assembly: Phillips screwdriver

Assembly Instructions 2/10

Hardware List



Cam Lock Screw 44 pcs. (+4 extra)



Cam Lock 45 pcs. (+4 extra)



Cam Lock Screw (long) 1 pc. (+1 extra)



Insert 1 pc. (+1 extra)



Insert Cover 3 pcs. (+1 extra)



M7x10 Varianta Screw 12 pcs. (+1 extra)



Dowel 48 pcs. (+1 extra)



Cover 37 pcs. (+4 extra)



M7x50 Assembly Screw 10 pcs. (+1 extra)



M4x16 Caster Screw 16 pcs. (+1 extra)



M3.5x12 Wood Screw 12 pcs. (+1 extra)



M3.5x50 Flat Head Screw 16 pcs. (+1 extra)



M3.5x19 Plastic Clip Screw 10 pcs. (+1 extra)



Plastic Clip 10 pcs. (+1 extra)



 
Adjustable Pin 8 pcs. (+1 extra)



M4x12 Machine Screw 4 pcs.




M4x22 Machine Screw (long) 4 pcs.



Handle 4 pcs.



 
M6x25 Head Cap Bolt 4 pcs. (+1 extra)



Side Bar 2 pcs.



 Left Guide 3 pcs.



Right Guide 3 pcs.



Left Runner 3 pcs.



Right Runner 3 pcs.



Locking Caster 2 pcs.




Non-Locking Caster 2 pcs.

Assembly Instructions 3/10

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.

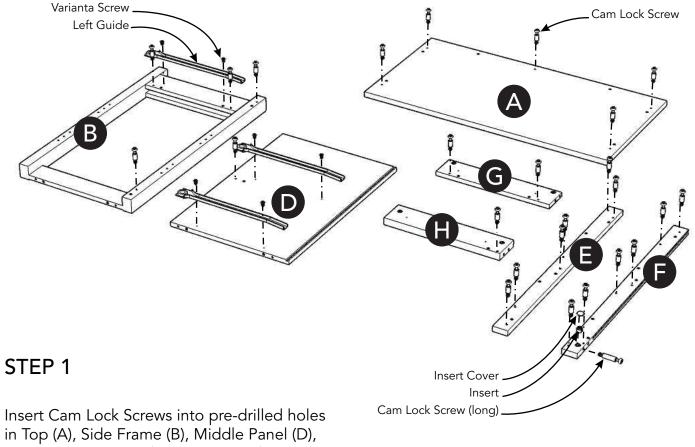

in Top (A), Side Frame (B), Middle Panel (D), Supports (G), (H) and Posts (E), (F), then tighten. (See Figure 1)

Attach Left Guides to Side Frame (B) and Middle Panel (D) with Varianta Screws. (See Figure 2)

Insert Insert into pre-drilled hole in Post (F), insert Cam Lock Screw (long) into Insert, then tighten. (See Figure 3)

Cover Insert with Insert Cover. (See Figure 4)

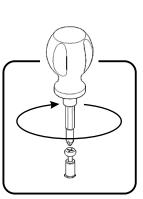


Figure 1

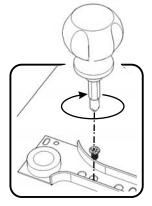


Figure 2

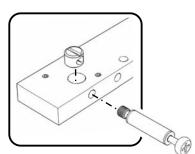


Figure 3


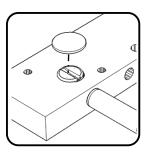


Figure 4

Assembly Instructions 4/10

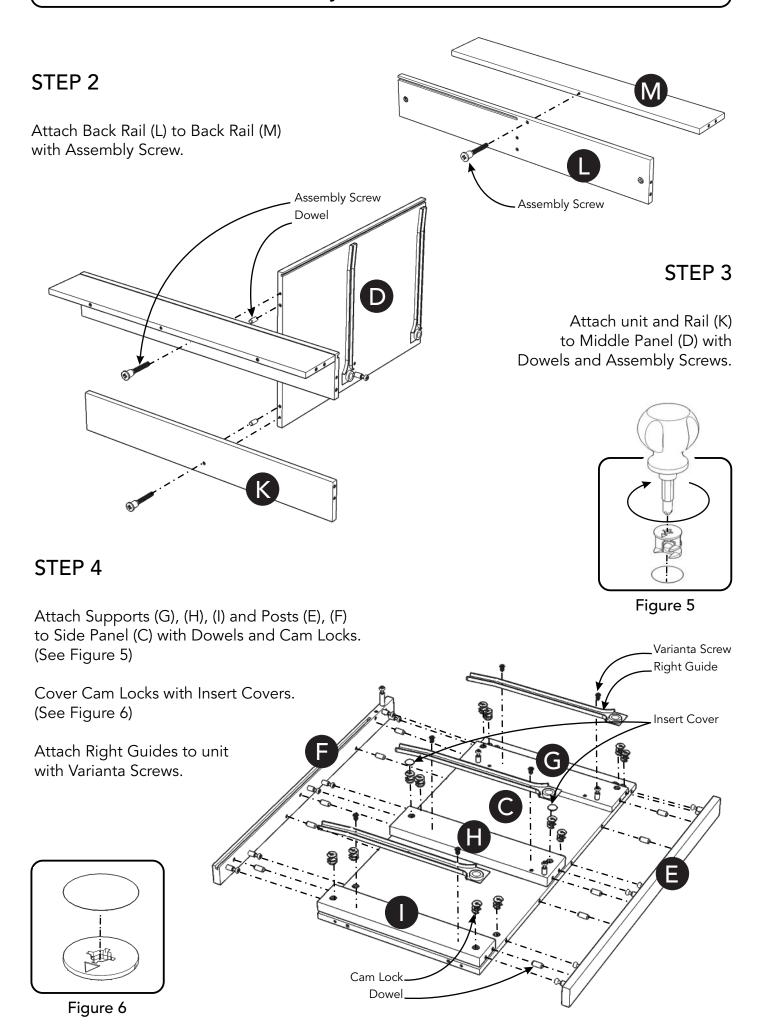

Assembly Instructions 5/10

STEP 5

Cover Cam Locks with Covers. (See Figure 7)



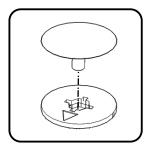


Figure 7

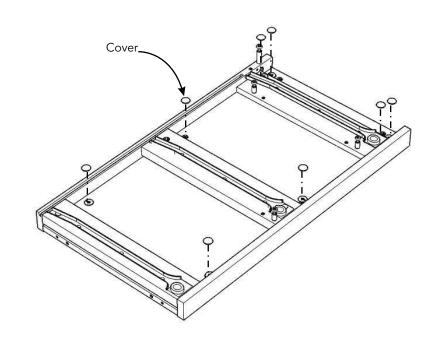

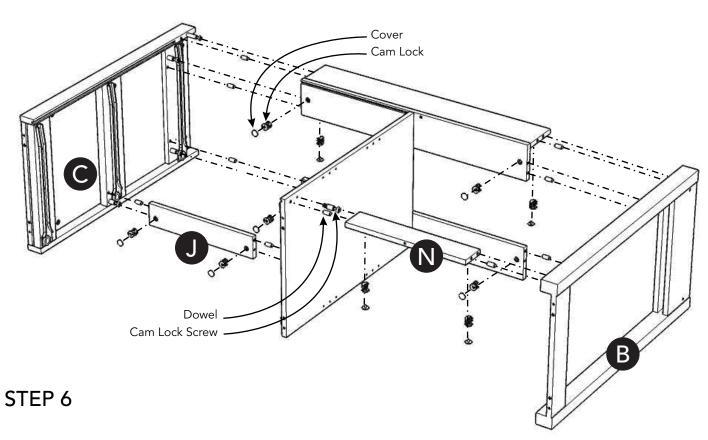


Attach Back Rail (N) and Side Frame (B) to unit from Step 3 with Cam Lock Screw, Dowels and Cam Locks.

Attach Rail (J) and Side Panel (C) to unit with Dowels and Cam Locks.

Cover Cam Locks with Covers.


Assembly Instructions 6/10

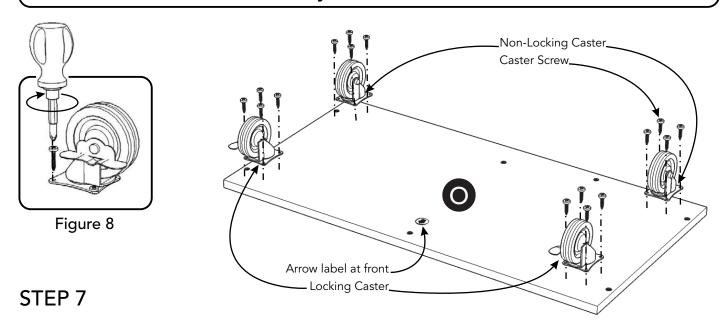

Place Base (O) upside down on a soft cloth.

Attach Casters to Base (O) with Caster Screws into pre-drilled holes, with Locking Casters at front. (See Figure 8)

Note: Arrow label indicates front of Base (O).

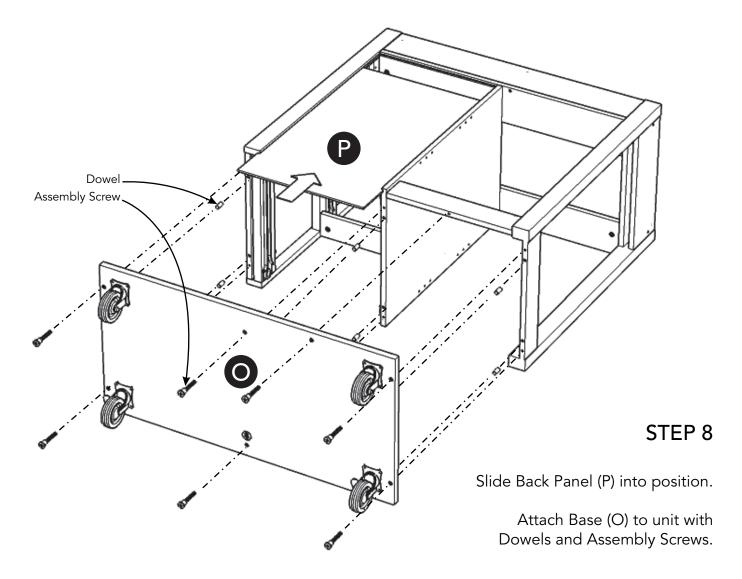

Assembly Instructions 7/10

STEP 9

Turn unit to its upright position.

Attach Side Bars to unit with Head Cap Bolts into pre-drilled holes.

Attach Plastic Clips to unit with Plastic Clip Screws. (See Figure 9)




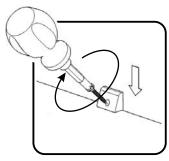


Figure 9

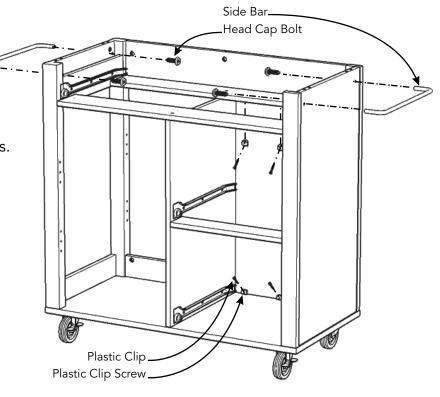

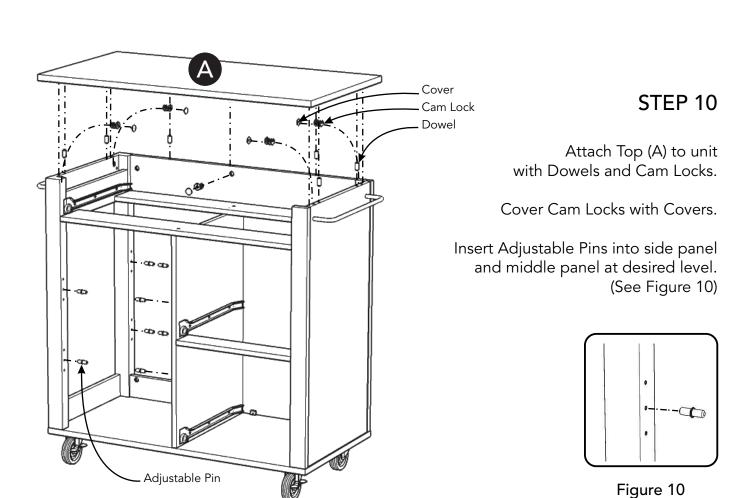


Assembly Instructions 8/10

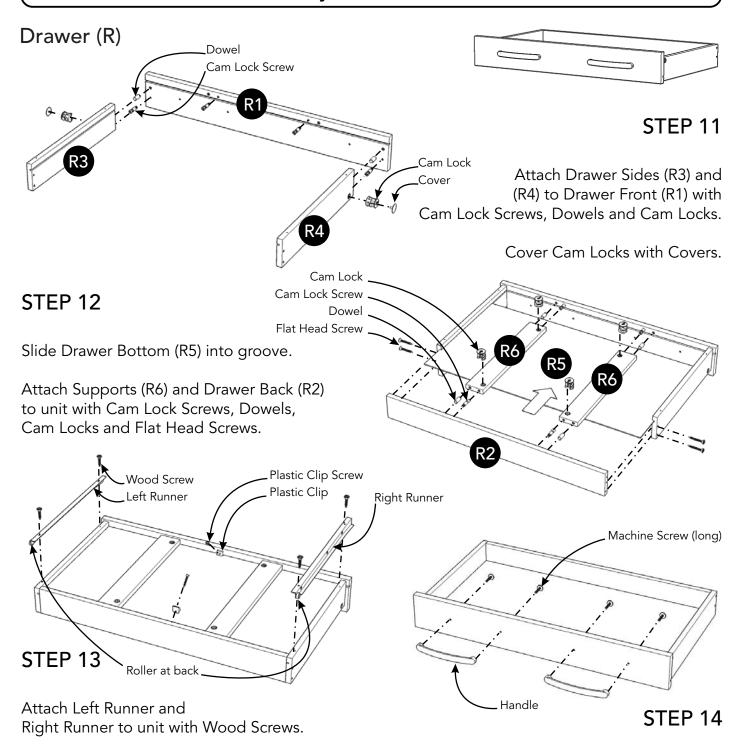


Attach Plastic Clips to unit with Plastic Clip Screws.

Attach Handles with Machine Screws (long).

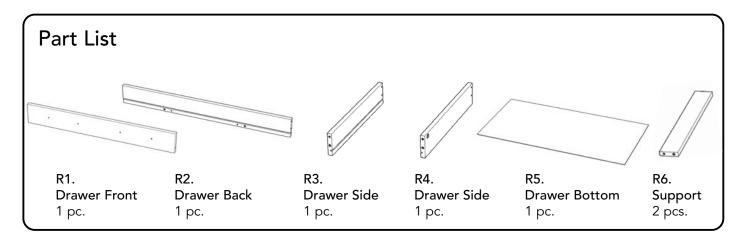


Assembly Instructions 9/10

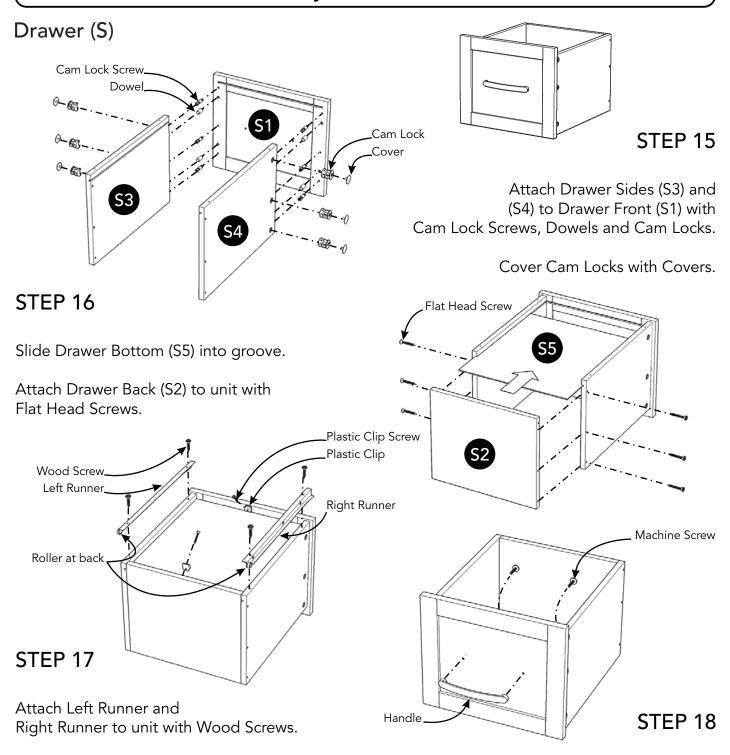


Attach Plastic Clips to unit with Plastic Clip Screws.

Attach Handle with Machine Screws.

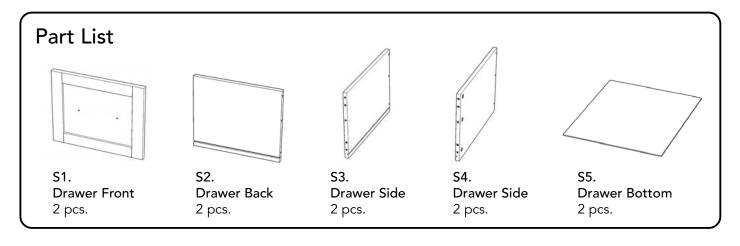

Assembly Instructions 10/10

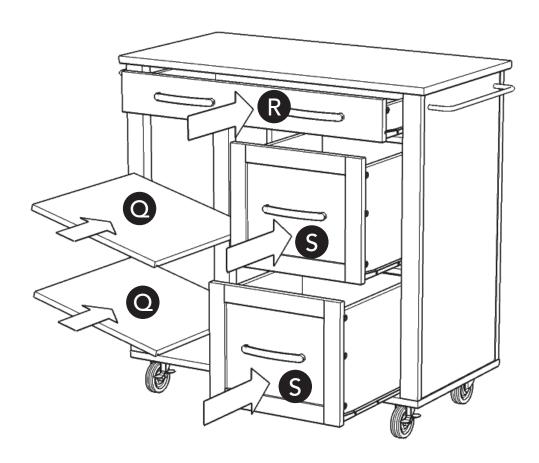

STEP 19

Place Shelves (Q) into position.

Slide Drawers (R) and (S) into position.

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319