

ITEM# 82385

Mission OAK 25" H, 46" W Corner TV Cart With Storage

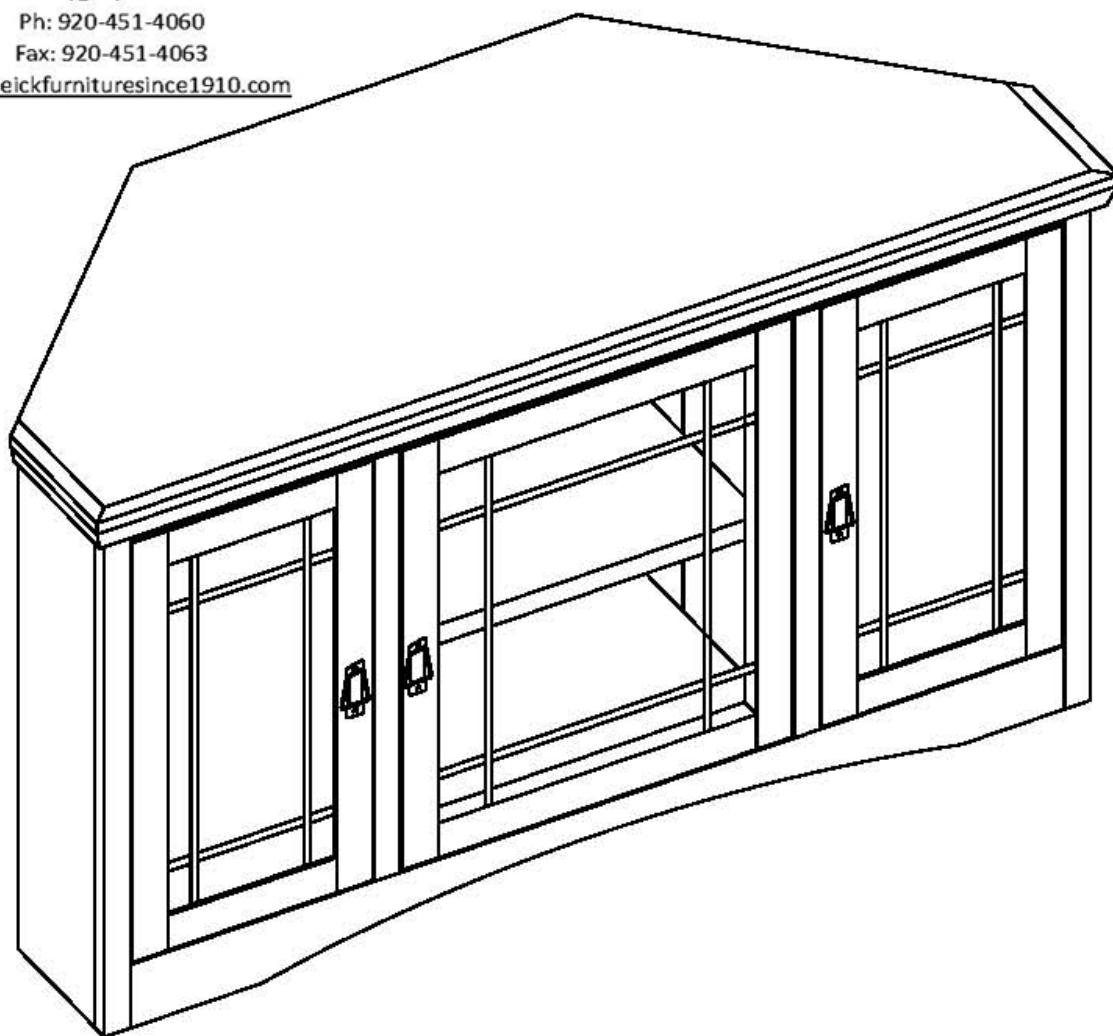 
Leick
Home
SINCE 1910

2219 S. 19th St.
Sheboygan, WI 53081


 
 
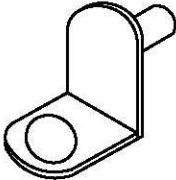 
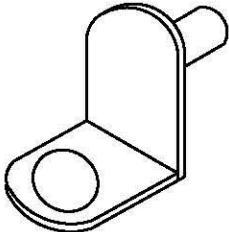 
 

Ph: 920-451-4060

Fax: 920-451-4063










info@leickfurnituresince1910.com



Hardware List

Item	Description	Qty
a	 Bolt 1/4" * 1-1/8"	3PCS
b	 Allen wrench	1PC
c	 Washer 1/4" * 12mm	3PCS
d	 Shelf metal clip	12PCS
e	 Bigger Shelf metal clip	2PCS
f	 Door Pull	3PCS
g	 Machine screw for Door pull 5/32" * 3/4"	6PCS

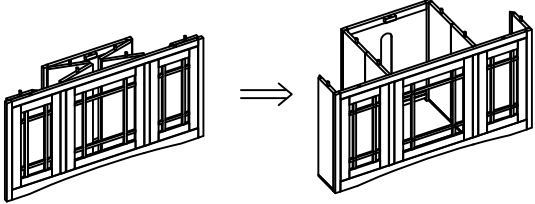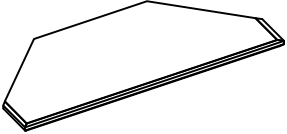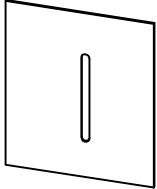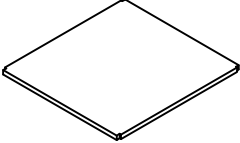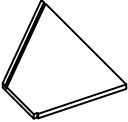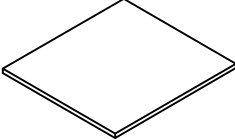        Parts List


Item	Description	Qty
A	 Cabinet	1PC
B	 Top Panel	1PC
C	 Side Back Panel	2PCS
D	 Middle Bottom Panel	1PC
E	 Left Side Bottom Panel	1PC
F	 Right Side Bottom Panel	1PC
G	 Middle Adjustable Shelf	1PC
H	 Left Side Adjustable Shelf	1PC
I	 Right Side Adjustable Shelf	1PC

Assembly Instructions

Two person assembly recommended.


step 1

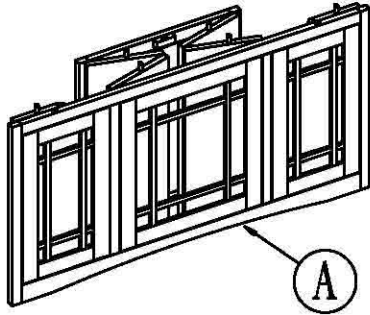 Unfold Cabinet.




step 2

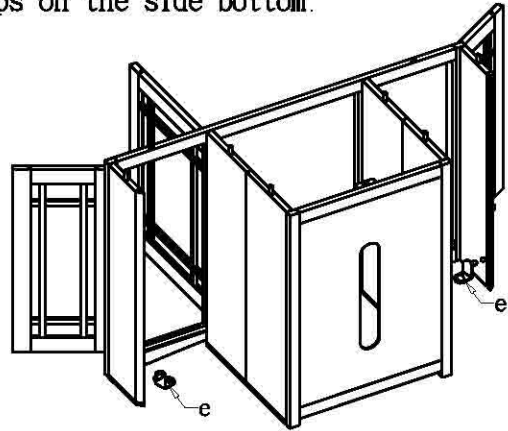 Install two bigger shelf clips on the side bottom.




step 3

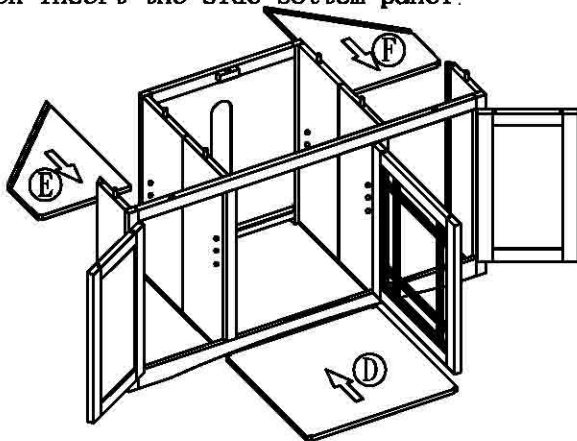 Insert the center bottom panel first, then insert the side bottom panel.




step 4

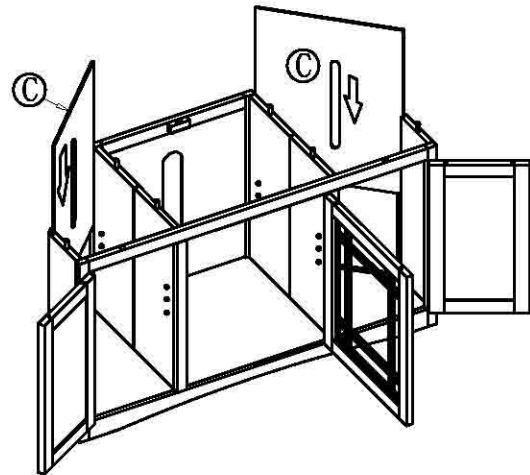 Insert two side back panels.



step 5

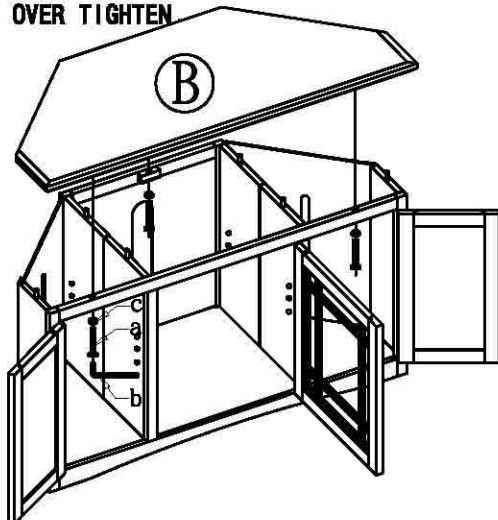 Bolt on top with 3 bolts.
DO NOT OVER TIGHTEN



step 6

Install shelf clips and insert shelves and door pulls.

